
IP NETWORK PAGING MICROPHONE

User Manual

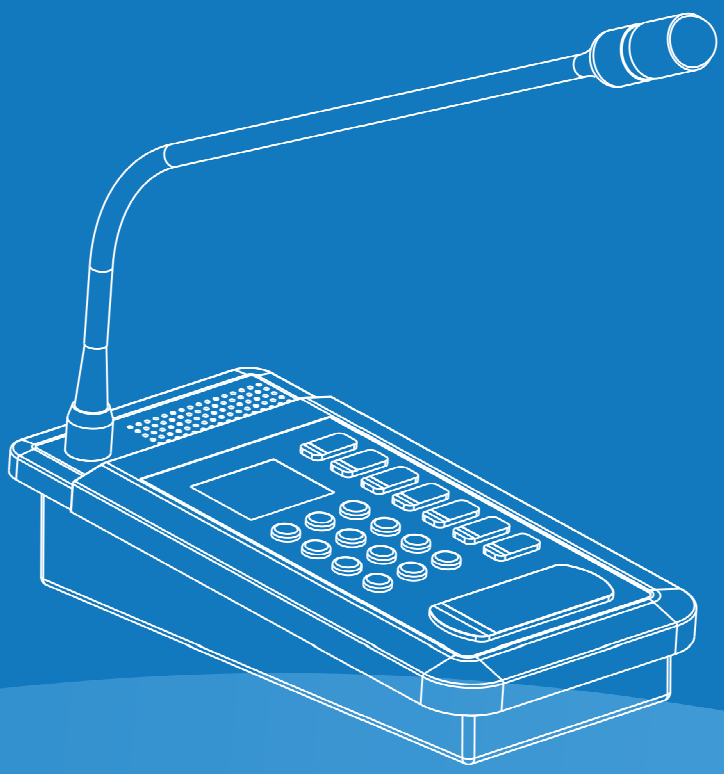

2015 Version

IP NETWORK PUBLIC ADDRESS SYSTEM

Contents

Summarize 1
Safety Precaution 1
Product Presentation 2
Hardware Interface Introduction 2
Introduction 3
Packing List 3
Connection Diagram 5
Interface Illustration 5
User-Define Terminal Parameters 6
Terminal Ip Setting Instructions 6
Language Settings 6
Basic Functions 7
Free Audio-On-Demand 7
Receiving Ring/Program/Ado/Alarm 7
Broadcasting Function 7
Monitor 10
Intercom Function 11
Offline Function 17
Firmware Upgrade 17
Password Setting 17
Malfunction Test 17
Copyright Announcement 18

Summarize

Safety precaution

Please abide by the warning and the relevant safety tips.

Please take this manual in convenient place after you reading the guide for future reference.

Warning

 **The sign means there is potential safety hazard, when operate wrong may result in death or serious injury.**

 **The sign is used to remind user of this equipment is attached the important data of operation and maintenance.**

Setting and Installation

（1）Avoid being wet with the water.

Don’t make the machine or exposed to rain water or other liquid contamination of the environment, or lead to fire or get an electric shock.

（2）Don’t use voltage outside of the designation

Using the marked voltage on the machine.

Using more than the logo of voltage could lead to fire or shock.

（3）Don’t scratch the power cord.

Don’t scratch the power cord or cut it.

Simultaneousl, keep the power line far way from heated objects, put heavy things on it will lead to fires or electric shock.

Using machine

（1）Once the anomalies

In use ,immediately cut off power supply when finding the abnormal phenomena, please connect with the agency.if you continue to use, it will likely fires or shock.

·The smoke or odor of the machine.

·The inside of the machine is flooded by water or foreign bodies intrusion.

·Machine falling or machine shell damage.

·The power cord damage(wire core is exposed of broken, etc)

·Fault (eg it can’t network, no sound ect)

（2）Don’t open the machine internal or modification of the machine.

Do not let foreign matters invade the machines internal.

Don’t let the metal items or inflammable objects inserting machine such as foreign inserting machines or throw into the vents machines internal, otherwise will likely cause fires or electric shock.

（3）Please do not touch it when thunder

To avoid electric shock, please do not touch the machine and the plug when lightning, etc.

（4）Please do not place containers with liquid or small metal objects on machine above.

If gets upset containers, and let the fluid inflow to the machine that will likely fires or cause shock.

（5）Do not open the machine internal or modification of the machine.

The machine internal contains high voltage parts, once the open cover, or modification of the machine, it will likely fires or cause shock. All about maintenance and other such matters within the machine to transform should be operated by professional personnel.

（6）Maintenance or the precautions when not in use for long time.

When Maintenance, if the machine not in use in 10 days or more than 10 days, in order to ensure the safe, please shut off power supply switch, and will power plug. If failure to comply with this provision, it will likely cause electric shock or fires.

Product Presentation


IP network paging microphone is embedded with the independent intellectual property rights IP Audio digital network audio technology. It`s equipped with the external line input ports, one channel stereo line output ports etc. IP paging microphone not only can be used as broadcast paging microphone, but also can realize two-way intercom function with other terminals.



- With the TFT true color LCD screen and control key.
- Adopting high speed industry-specific dual-core (ARM + DSP) chip, the starting time within 1 second.
- Audio line output connect the external amplifier to achieve the audio playing.
- Powerful remote real-time monitoring function .
- Accessing anywhere which the Ethernet is available

Hardware Interface Introduction

Front

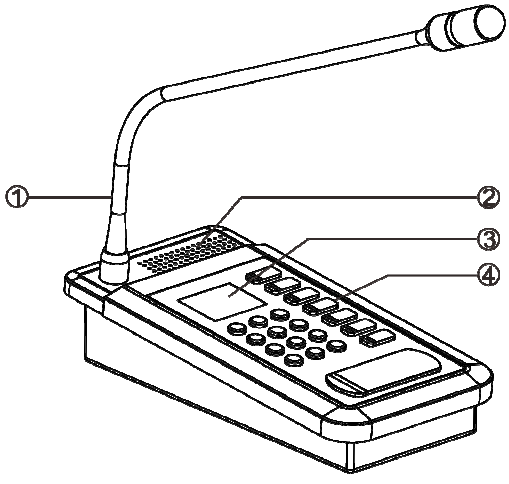

① Microphone pole: Collect the live voice.

②speaker: Restore the remote and local voice.


③ Keyboard: Input channel and accept the input command.

④LCD screen：Display the device login status, time, date, volume and terminal IP parameters...etc

Operate Keyboard

Button	Functional Description
SET	It can set the ID No.,terminal IP, voice, offline talking...etc.
【↑】	Press this key can turn to pageup.
【↓】	Press this key can turn to pagedown.
volume+	Press this key increase the volume.
volume-	Press this key decrease the volume.
monitor	Press this key enter the monitor state.
talkback	Press this key enter talkback state.
cancle	Press this key, cancel the present state or back to main interface.
OK	Press this key, save the settings and exit it.
【0-9】	It`s used for zone numbers enter.
broadcast	Press this key enter broadcast state.

Back

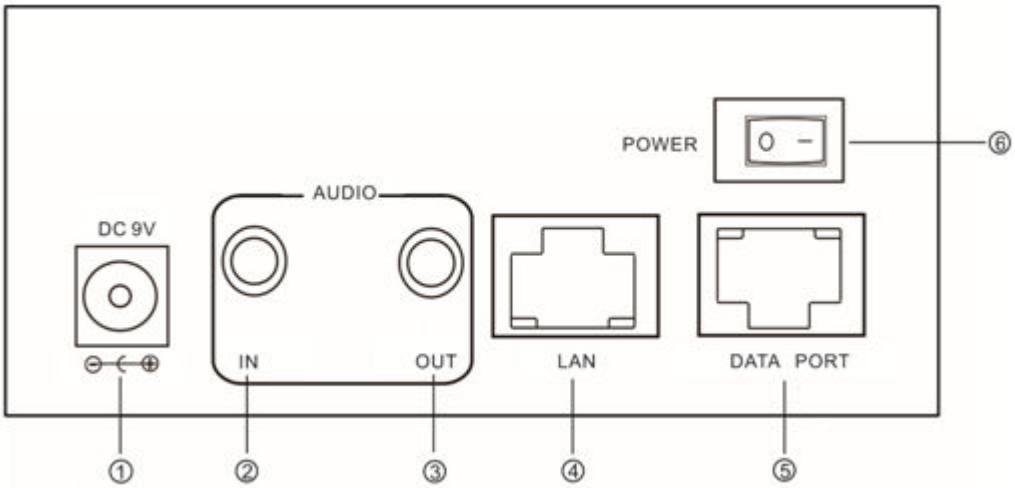

①Power input: Connect to DC 9V/2.5A power supply

②Line input port: The default is wireless input function, but it has broadcast prompt tone; it also can make customized version to have line input function and without broadcast prompt tone.

③Line output port: Output terminal audio signal.

④Network port: Through the Ethernet cable connect server and terminal

⑤Update port: For device update or download.


⑥Power switch: “O” means turn off the power, “—” means open the power

Introduction


Packing List

IP network paging microphone contains the following accessories. Before installation please check the accessories, if you find any missing, please contact your supplier.

（1）IP network paging microphone 1 pc

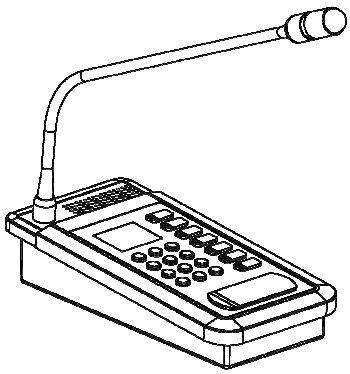


（2）AC adapter （DC9V/2.5A）1pc

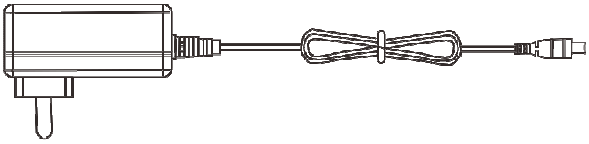


（3）Microphone rod 1PC




（4）spong suit 1pc

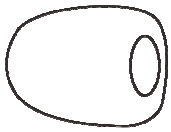

（5）Installation Instructions 1pc

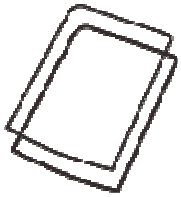

Connection diagram

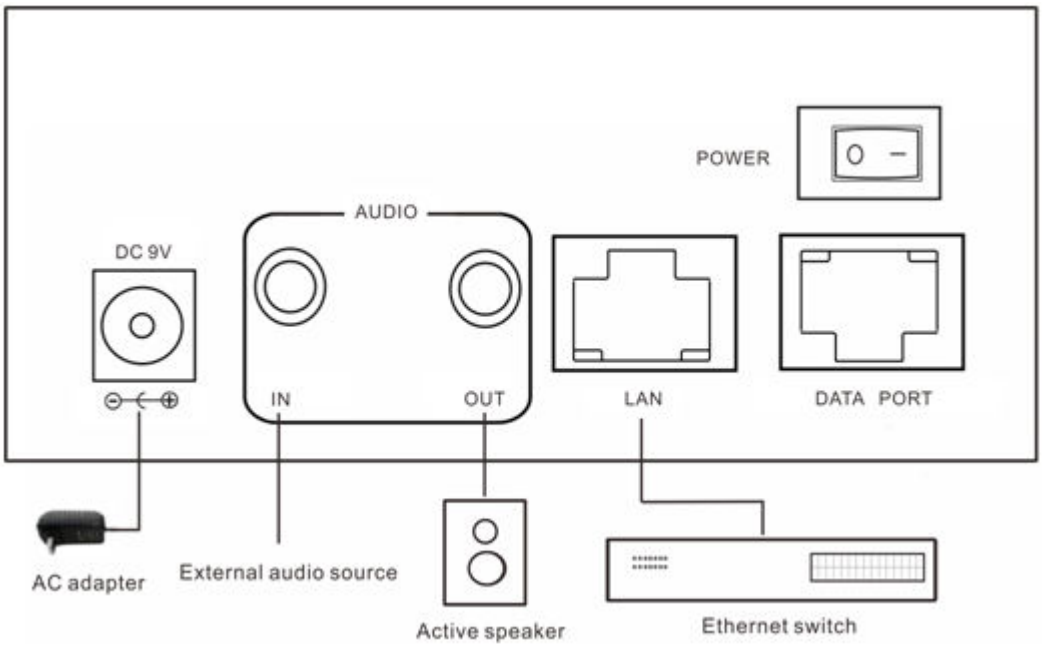

（1）Connect the power adapter one end to IP paging Mic DC9V port, another end connect to the power socket;

（2）Line input(IN) port can connect earphone, cellphone and MP3..etc external analog audio;


（3）Line output(OUT)port can connect the speaker audio line;

（4）Terminal ”LAN” port can connect with the switch network output port;

Note: Input cable must keep away from the output cable,it may cause interference if they comes too close.

Interface Illustration

With electricity, turn on the terminal will enter the home interface, there shows time, date, version and so on.

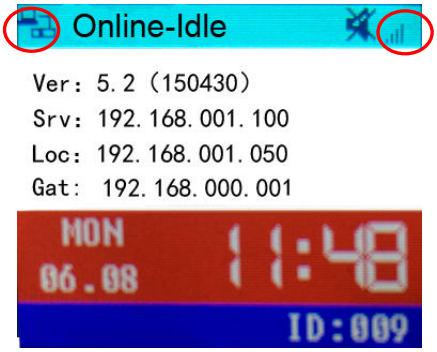

the home interface

①Terminal Status Illustration:

icon	terminal state
online-free	Terminal log in the server
offlinr	Terminal not log in the server

②Volume bar: IP network paging microphone output volume, generally the default value is 9 level.

User-Define Terminal Parameters

Terminal IP Setting Instructions

After entering IP setting, the respective revisable items: ID No., server IP, local IP, gateway IP. The items description as below:

ID Number : The only No. to identify terminal, it can`t repeat with others (e.g: there have 50 sets terminals, then the ID NO. is from 001 to 050.)

Server IP: the server's IP address, it`s usually the IP address of the installed software server. (e.g., 192.168.0.8)）

Local IP: the terminal IP address, it`s set according to the users demands. (e.g., 192.168.0.11)


Gateway IP: gateway's IP address. (e.g:192.168.0.1) it can set server IP as the gateway directly if no gateway exist.

The terminal IP Settings

Press 【Setting】key, enter the password input states:



Enter the default password "123456", press 【Ok】 to enter the interface:

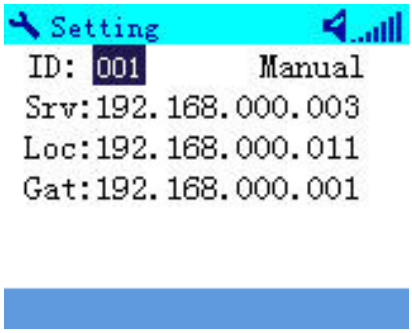

Press【↑】 or 【↓】 key can move cursor position, press【0】 -【9】 key can revise parameters.

After finishing setting, press【Ok】 key to exit and save it, press 【C】key will exit but not saved.


If set correctly, the terminal will login to server immediately, the LCD will show "online - free";

if set incorrect or haven`t start the server, the LCD will always show "off-line".

If it connected the expansion board, pressing 【Volume-】key from the setting interface to set the expansion board function; broadcast or intercom, the default is intercom.

Language Settings

Press 【Setting】 key, enter the password input states; press 【Broadcasting】,it will shift to English interface:

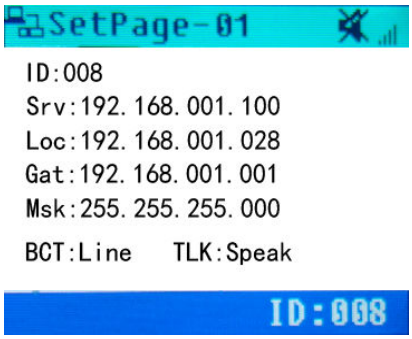


Press 【Broadcasting】 again will back to Chinese interface.

Press 【Ok】 key save current settings.

Basic Functions

Free Audio-on-demand

Under "online-free" state, press 【9】 key to enter "online-VOD" state, and it will display the AOD target.

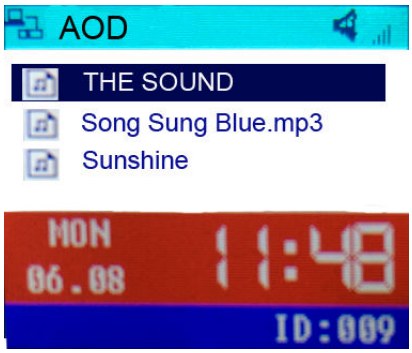

Press 【↑】and【↓】turn the menu, choose the program you need ,press OK to start, Press C will exit the ADO mode.

Note: music plays in order, do not support by circle mode.

Receiving ring/program/ADO/alarm

Automatic operate according to the server software's command, no need press. More specific operation please refer to service software Operational guidelines.

Broadcasting Function


(1) Enter the initiating broadcast status.

Under "online - free" status, pressing 【Broadcasting】key to enter "initiate broadcast" status as below:




(2) Zone selection

Pressing number keys 【1】－【0】 to choose target zone (eg: choose 1, 2, 3 zone for example), the selected zones will be highlighted displayed as below picture:

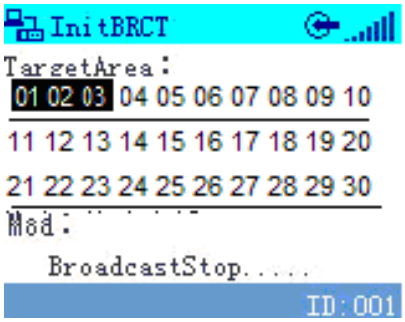


In the shown picture has chosen 01,02 and 03 this three zones at the same time. If you want to choose the 12th zone, then pressing 【↓】key to move the horizontal line to the second line, then pressing 【12】 key to choose it as below picture:

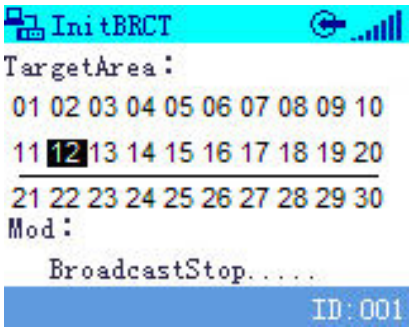

（3） Initiate all zone broadcast


If you need to choose all zones, please pressing Broadcast key again as below picture shown:

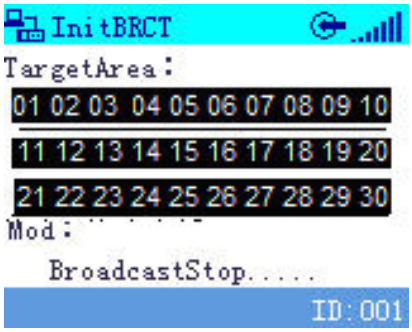

（4）Start broadcasting


Pressing 【Ok】button to start play the broadcast prompt tone as follow:

Note: advanced Settings of server can be set broadcasting prompt tone .

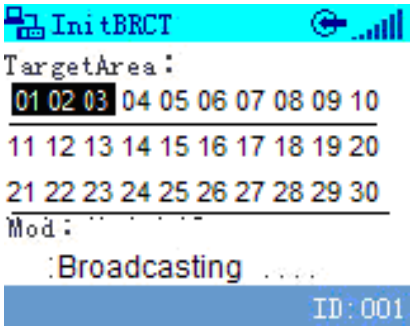


（5）Stop broadcasting

Pressing【C】key to stop broadcasting, and begin to play the finish broadcast prompt tone as follow:

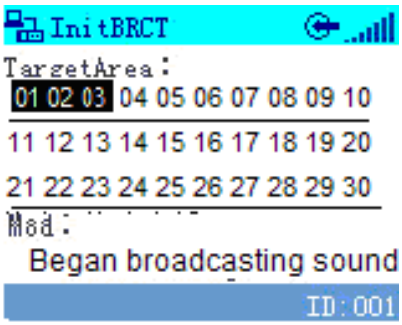


The broadcasting will be stopped after the prompt tone finished as follow:

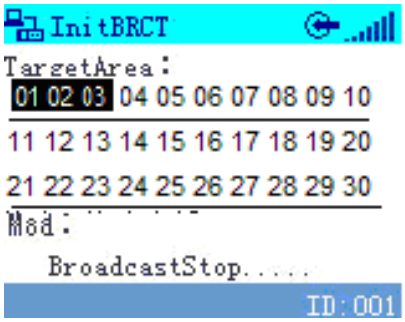


Terminal broadcasting

（1）Initiate terminal broadcasting

Under "online - free" status, pressing broadcasting key to enter 【initiate broadcast】status as below:

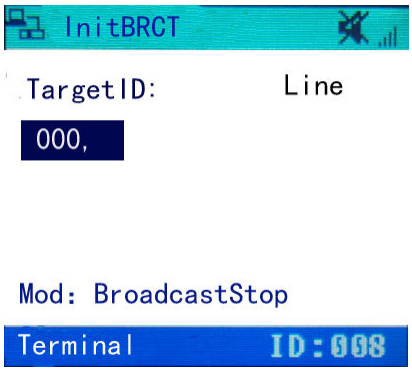


Press【Ok】can initiate terminal broadcast, as below:

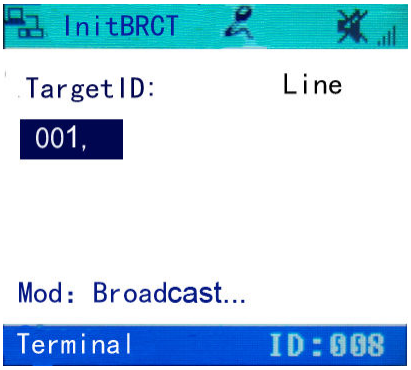

（2）Receiving terminal broadcast


If you accept the broadcast which is initiated by other terminals, terminal itself will enter the “Receiving terminal broadcast”

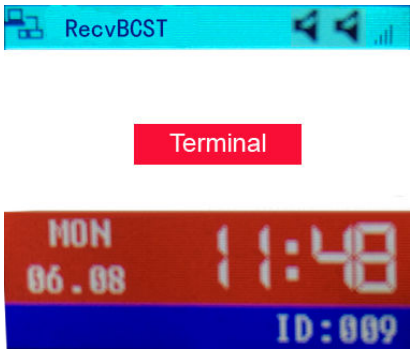

Offline broadcast

Under the “offline” status, press 【Setting】 key, input the password, next press the OK key.

Press【Volume+】Key, enter settings interface, input target terminal ID number and IP address, as below:

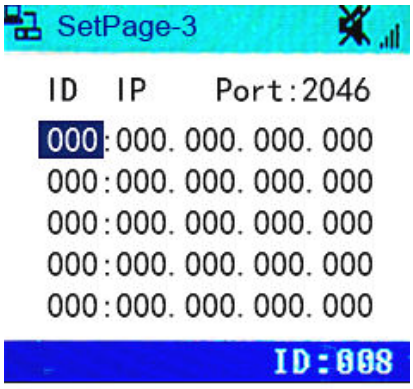

Finish setting press【Ok】key.

press 【Broadcast】 key, enter i “nitiate broadcast ” state, press【Ok】, can initiate offline broadcast. The screen shown as below:



channel switch

(1)set the interface: press 【↑】or【↓】key can shift outline, speaker output(only WAN);

Note: please refer to the server software operating manual for more details.

Monitor

Initiate monitor

Within “online-free” status, pressing 【Monitor】 button to enter “online-monitor” state .，Enter the target terminal ID number, as follow:



Press 【Ok】 button to monitor the target terminal .On screen ,we can see the current status and monitored terminal ID as follows:



Press【Cancel】button to stop monitoring.

Accept monitor

Accept other terminal's initial monitor, as below:



Note: (1).During the broadcasting, we can insert the monitor task, but the broadcasting will be stopped automatically.

(2).When it`s being monitoring ,it can't insert intercom task.

Broadcast and Intercom

(1)During the broadcasting, when we can insert the intercom task, then the broadcasting will be stopped automatically.

(2)During the intercom , when we can receive the broadcasting task, then the intercom will be interrupted.

Intercom Function

Two-way intercom

Under "online–free" status, press 【Intercom】 key to enter "online-talk" status as below picture:




（1）Choose the target terminal

Press number keys【1】－【0】to choose the target terminal ID No. as follows:




（2）Start conversation


Press 【Ok】 button to call the target terminal, the screen will show calling as below picture.

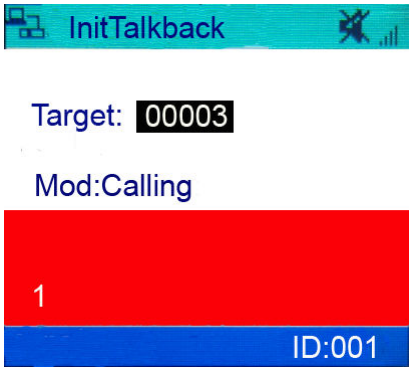


The target terminal will ring-down; press 【Ok】 button on target terminal will start the two-way conversation as below picture:

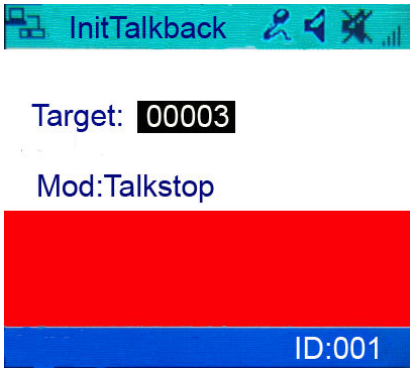

If there is no this target terminal or the network is abnormal, then it will shown as follows:

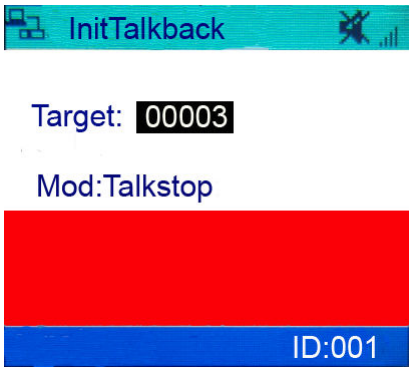

During the talking, either terminal pressed【Cancel】 key will stop the intercom, as below:

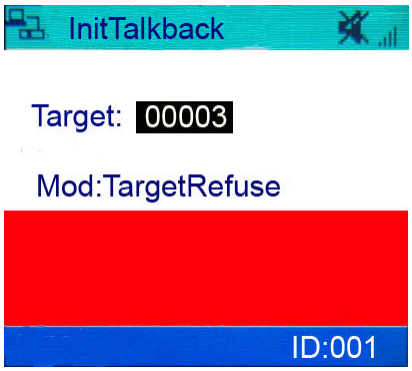


Call panel


Press【Intercom】 key, enter initiate intercom state, input terminal ID number be connected with call panel, press 【Ok】 key, as below:



Press【Broadcast 】key, input target panel ID, press 【Ok】 key can call the specified panel, as below:

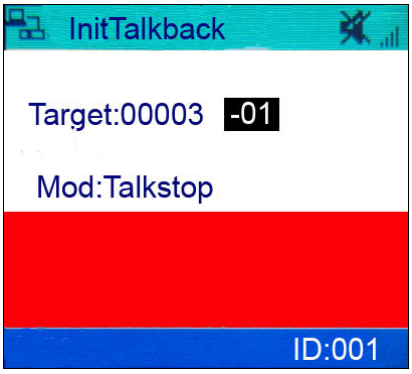

The target panel will ring, then it will start two-way talking, as below:

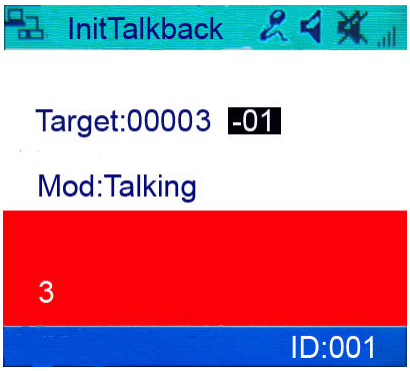


Call the specific phone number


Press 【Talk】 button to enter initiate intercom state, input target terminal ID number, press【Ok】key, as below:




Press 【Broadcast】 button to input target phone number (eg.6602), press【Ok】 key, screen showing: “calling”, as below:

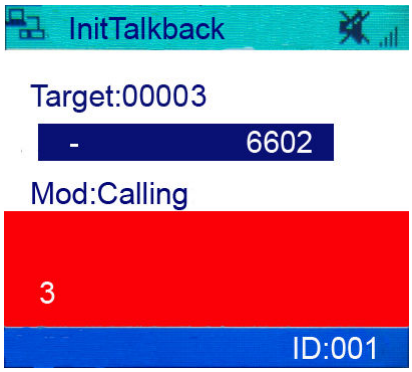

When the target answered the call, the screen will show: “talking ”， as below:

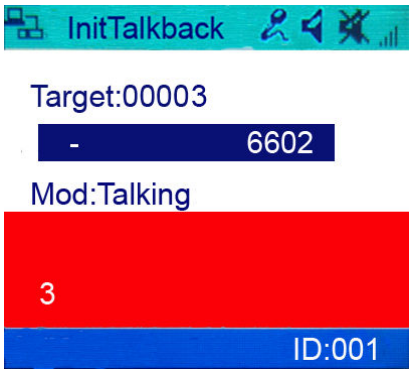

If the target terminal reject the call, the screen will show “target refuse”, as below:

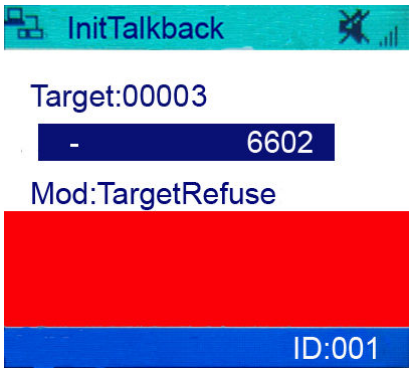


Offline Intercom:

Press 【Set】 button to enter input password state, after input password, press 【Ok】,as below:



Press【volume-】 turn to other page, enter setting interface press【0】~【9】 number to set target offline ID and IP network parameter, as below:

After set all, press【ok】key.

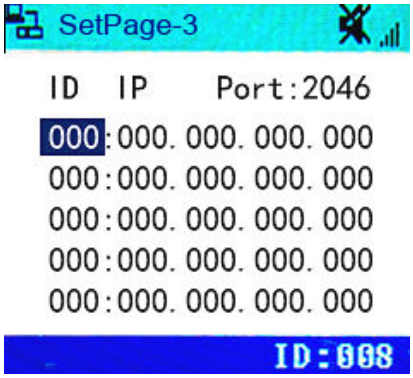


After the Server Software send the IP address, press 【Set】key, input password press【ok】key, it will enter the setting interface.


Note: please refer to the server software operation manual for more details.

Incoming transfer

During the talking process ,press【1】enter" incoming transfer "state, as below:

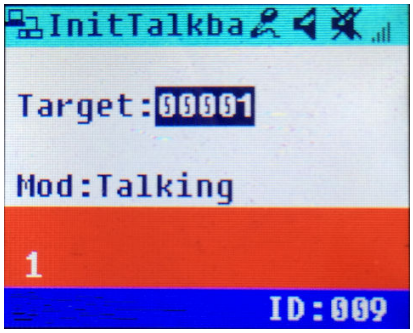

Input the target terminal ID number you required to transfer, press【OK】key, it will make Incoming transfer. As below:

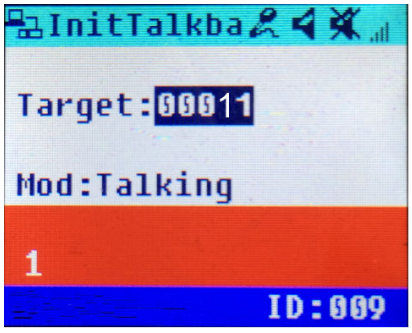

When it`s ringing, the opposite side reject to answer it, the screen will show as below:



Note: this function do not support transfer to the specified panel or other IP network paging microphone.


Trigger the intercom terminal short circuit output:

During the process, either side press【monitor】key can trigger intercom short circuit output.


Note: please refer to the server software operation manual for more details.

PTT intercom

During the talking, press 【broadcast】 key one time, only listen but talk.; press it twice, only talk but listen, as below:

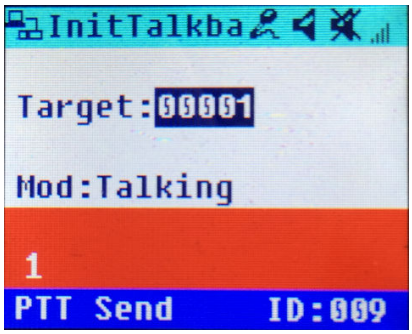

During the talking process, either side press the【cancel】will end the talking, as below:

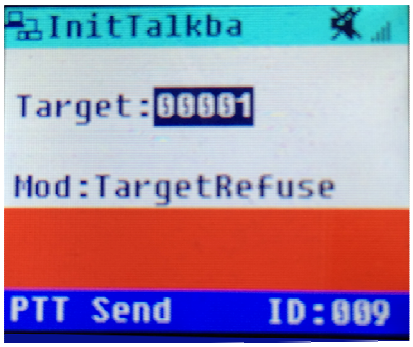

Offline function

From the IP paging Microphone【Setting】 intercom to press【Volume+】or【Volume-】to set other terminals ID and IP, and pressing 【OK】 button to save it after finish setting. IP network paging microphone can call to these preset terminals and make two-way conversation under off-line situation.

Firmware Upgrade

If your product want to have a firmware upgrade, please contact supplier.

Password setting

"Terminal server Settings" in the "advanced Settings" item can be modified in the terminal password, specific operati on software instructions please refer to the service.

malfunction test

Why it appear "terminal network services (UDP) start fail" warning in the process of start services software?

Appearing this warning information, it's usually the local server network connection has been disconnected, please connect the local network cable well and exit the software, then restart it.

Why the terminal always shows "offline"?

1.Check the software server and the main controller is normal opened or not. It`s required to close all firewall before open the software server (including system built-in firewall and other antivirus software firewall)

2.Check the network connection is normal or not. After the terminal powered on, the network port green light is norm on, meantime the orange light will be short and fast flash, it means the network cable connect normal. If the network port green light is not on, it means the network hardware connection problem , please check the network cable and switcher of terminal whether they work normal, damaged and disconnect or not etc.

3.Check the terminal's IP setting. Please check the terminal ID, sever IP, local IP, gateway IP etc parameters.

Copyright Announcement

Copyright

This manual`s copyright is belongs to our company , it`s prohibited to excerpt or copy it and can`t spread in any form if without our permission.

According to the law, copying includes translated into other languages or conversion to other formats.

When this document is spreading in the network media, our company allows for personal use download or print.

It`s prohibited to modify any part of the documents or used for commercial purposes, our company won`t take any responsibility for the damage or loss caused by the illegal modification or converting documents.

Warranty

About this manual information, it`s subject to change without any notice. This manual try to provide the most accurate statement, information and advice, it`s not guarantee for any express or hint. Users should take full responsibility for the application of products.

Our company won`t make any guarantee for this manual, including but not limited to the guarantee of marketability and specific purpose . our company won`t undertake any responsibility for any indirect or incidental losses which is caused by improper operation of this manual.

V1. 1B150921