
HEADLINER

Removal and Installation

To ESM

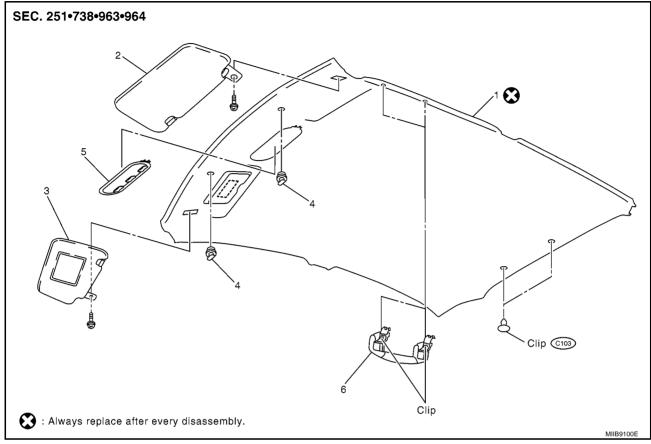

1. Headliner

4. Sunvisor holder


- 2. Sunvisor (LH)
- 5. Room lamp (with map lamp function)
- . Sunvisor (RH)
- 6. Assist grip (passenger seat)

REMOVAL

- 1. Remove front pillar garnish. Refer to EI-19, "BODY SIDE TRIM" in EI section on ESM.
- Remove back door weatherstrip.
- 3. Remove luggage side upper finishers (LH/RH). Refer to EI-26, "LUGGAGE FLOOR TRIM" in EI section on ESM.
- 4. Remove center pillar upper garnish (5-door vehicles) and lock pillar upper garnish (3-door vehicles). Refer to EI-19, "BODY SIDE TRIM" in EI section on ESM.
- Remove assist grip.

NOTE:

When removing assist grip, insert a thin screwdriver, etc., into the clip and move the clip outside.

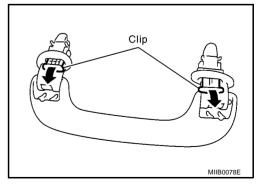


- 6. Remove sunvisors (LH/RH).
- 7. Remove room lamp (with map lamp function). Refer to LT-229, "Removal and Installation" in LT section on ESM.

HEADLINER

8. Remove sunvisor holder.

NOTE:


Insert a screwdriver into the cutout and rotate 90° to remove.

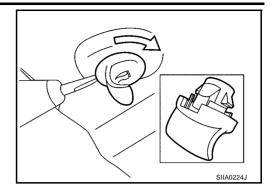

- 9. Remove vehicle rear clips.
- 10. Peel off headliner adhesive and remove headliner from back door opening.

CAUTION:


The roof panel could be deformed, so do not strongly pull the headliner.

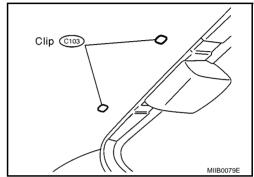

INSTALLATION

- 1. Remove any adhesive left on the vehicle side.
- 2. Apply adhesive to headliner.

Adhesive: Yokohama Rubber Hammer Tight YM-21

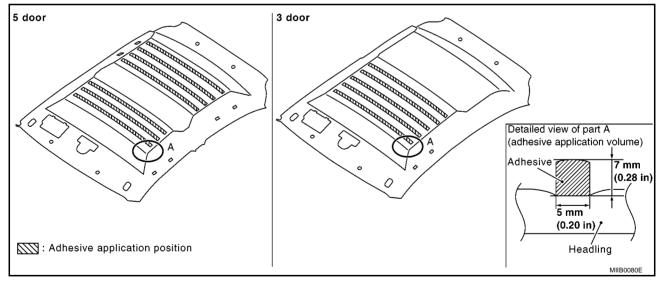

- 3. Move front seats (LH/RH) toward front of vehicle, and fix headrests (LH/RH) in top position.
- 4. Place the headliner front section on the headrest and fasten the headliner rear section with the clips.
- 5. After installing sunvisor holder, install in the reverse order of removal.

