

Troubleshooting Guide for Qube-Servo 3

Table of Contents

- [Unable to Run Virtual Files](#)
- [Simulink Scopes Are Not Updating Live](#)


Unable to Run Virtual Files

Error: When running files from a lab's `digital_twin/matlab` folder, you may see The 'Active during normal simulation' feature is not available.


Cause: The `digital_twin` folder is designed for users who *only* have the digital twin installed and do not have a QUARC license. On machines with a hardware setup, Quanser files cannot be run through Simulink's `Simulation` tab.

Fix: To run files in virtual mode on a machine that also supports hardware, use the hardware files and modify them for virtual by following these steps:


1. Open the Simulink model from the `hardware/matlab` folder instead.
2. Double-click the Qube-Servo 3 block and change the `Qube-Servo Setup` from `Hardware` to `Virtual`, then click `OK`.

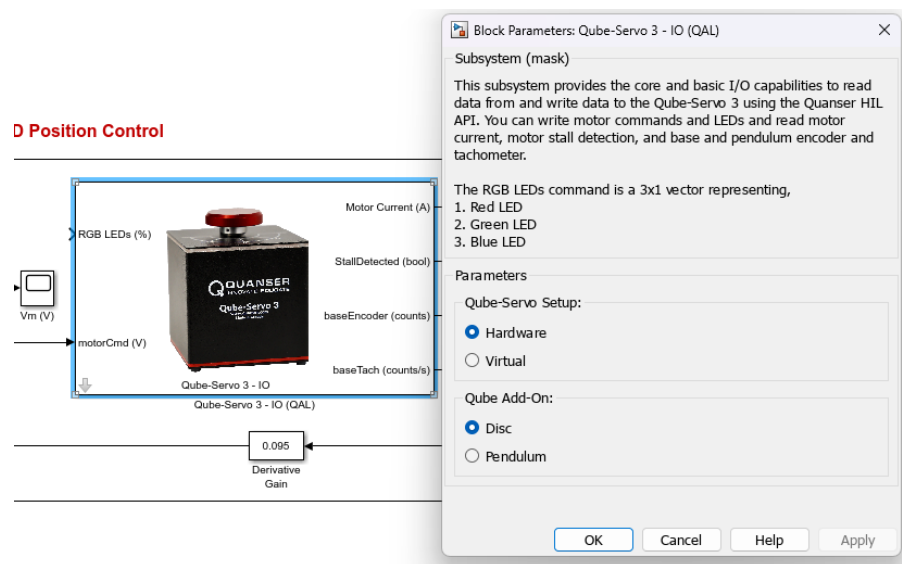

3. The block image should now display a virtual Qube, as shown below.

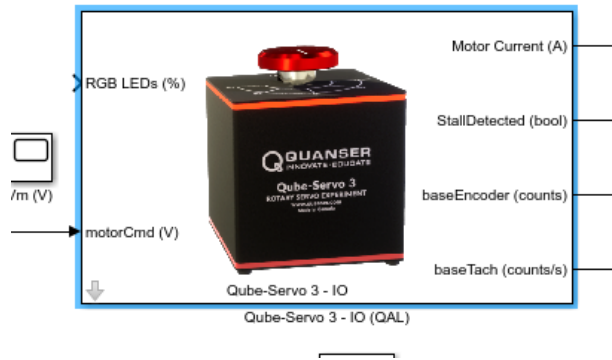

4. You can now run the model as usual using the **Monitor & Tune** button under the **Hardware** tab. The code will run on the virtual Qube.

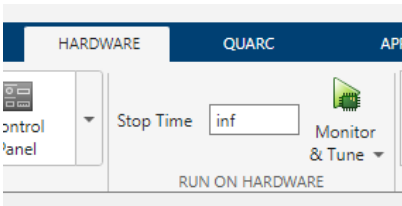


Simulink Scopes Are Not Updating Live

Error: Starting with MATLAB 2025a, a bug was introduced where scopes sometimes only refresh after the model is stopped, rather than updating during execution.


Cause: This is most likely triggered with the built-in "save to workspace" and "limit points" options on a scope block.

Fix: Delete and replace the affected scope(s) by following these steps:

- 1. If you want to keep the same scope name, copy it first, then delete the existing scope from the model.

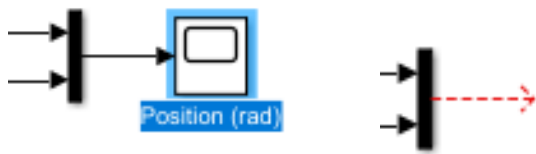

- 2. Double-click on an empty area in your model to open the search dialog, then search for and place a new **Scope** block.

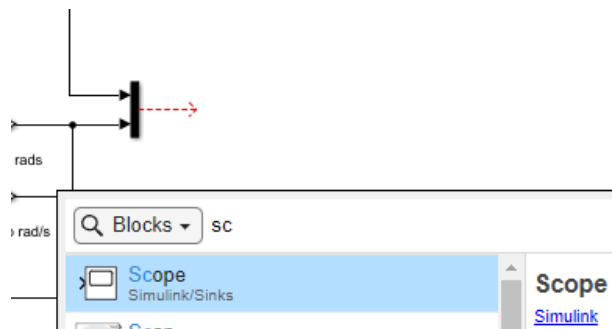

3. Connect the new scope to the signal and rename it if needed.
4. If you need to save data to the workspace, do **not** use the scope's built-in "save to workspace" option — this is what triggers the bug. Instead, add a **To Workspace** block and configure it to save the desired variable.

