


RP Fiber Power V7

a simulation and design software from **RP Photonics Consulting GmbH** www.rp-photonics.com

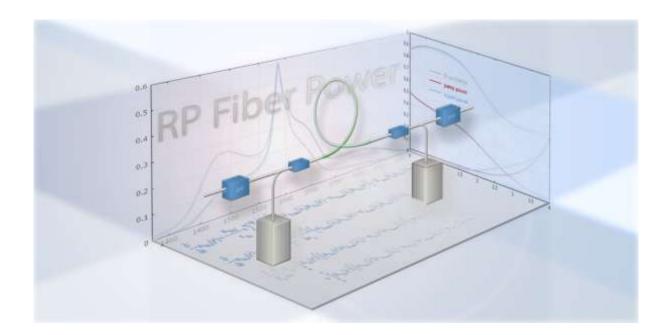

Version of this manual: 2018-06-19

Contents

1	Gen	neral Information	6
	1.1	What is "RP Fiber Power"?	6
	1.2	Copyright Information and Disclaimer	
	1.3	1. 6	
	1.0	1.3.1 Passive Edition	
		1.3.2 Version History	
		1.3.3 Upgrades and Updates	
	1.4	Installation of RP Fiber Power	
	1.5	Technical Support	
	1.6	11	
	1.7	Files belonging to RP Fiber Power	
2	Prir	nciples of the Model	. 10
	2.1	Basic Aspects of the Fiber; Numerical Step Sizes	. 10
		2.1.1 Longitudinal Dimension	. 10
		2.1.2 Transverse Dimensions: Rings and Azimuthal Segments	. 11
		2.1.3 Transverse Dimensions: Rectangular Grid	
	2.2	Laser-active Ions	
	2.3	Optical Absorption and Amplification	
	2.4	Optical Channels	
	2.5	Reflections and Laser Resonators	
	2.6	Dynamic Simulations	
	2.7	The Mode Solver	
	2.8	Beam Propagation	
		2.8.1 General Assumptions	
		2.8.2 Used Algorithm	
		2.8.3 Beam Propagation Devices	
		2.8.4 The Numerical Grid	
		2.8.5 The Optical Channels	
		2.8.6 Laser Amplification	
		2.8.7 Kerr Nonlinearity	
	2.9	Ultrashort Pulse Propagation	
		2.9.1 Initial State of the Fiber	
		2.9.2 Numerical Representation of an Ultrashort Pulse	
		2.9.3 Physical Effects Acting on the Pulses	
		2.9.4 The Current Pulse	
		2.9.5 Pulses Propagation through a Fiber	
		2.9.6 Pulse Properties	
	2.10	General Assumptions for Power Calculations	
3	Sno	ctroscopic Data	27
	-	•	
4	The	e User Interface	. 28
	4.1	Working with Forms or Scripts	. 28
	4.2	The Working Folder	. 30
	4.3	The Main Form	. 31
	4.4	Working with Interactive Forms	. 32
		4.4.1 Calculating Fiber Modes	. 33
		4.4.2 Beam Propagation	
		4.4.3 Defining the Parameters of an Active Fiber	
		4.4.4 Defining the Optical Channels	
		4.4.5 Additional Definitions	
		4.4.6 Defining the Graphical Output	
		4.4.7 Ultrashort pulses	
	4.5	Custom Forms	
		4.5.1 Working with Custom Forms	
		4.5.2 Creating Custom Forms	

	4.6	The Menus	49
		4.6.1 The File Menu	49
		4.6.2 The Edit Menu	49
		4.6.3 The View Menu	50
		4.6.4 The Execute Menu	51
		4.6.5 The Options Menu	51
		4.6.6 The Help Menu	52
	4.7	The Script Editors	52
	4.8	The Debugger	
		4.8.1 Debugging Commands	
		4.8.2 The Inspectors Tool	
		4.8.3 Debugging Expressions	
	4.9	The Log Area	
		The Output Area	
		The Graphics Windows	
		The Beam Profile Viewer	
		The Pulse Display Window	
		Command Line Parameters	
5	The	Script Language of RP Fiber Power	71
	5.1	General Remarks	71
	5.2	General Rules for Scripts	
	5.3	Defining Variables, Constants and User-defined Functions	
	5.4	Definitions of Units	74
	5.5	Performing Arithmetic Operations.	
	5.6	Control Structures	75
	5.7	Various Useful Commands	
	5.8	Keeping Results of the Previous Script Execution	
	5.9	Overview on the Definition of a Model	78
		Definition of Fiber Parameters.	
		Definition of Spectroscopic Data	
	5.11	5.11.1 Simple Level System	
		5.11.2 Extended Level System	
		5.11.3 Rules for Spectroscopic Data Files	
	5 12	Input and ASE Channels	
	3.12	5.12.1 Input Channels	
		5.12.2 ASE Channels	
		5.12.3 Reflections at the Fiber Ends.	
		5.12.4 Polarization Directions	
	5 12	Localized Internal and External Losses	
		Retrieving Calculated Results	
		Modifying Model Parameters	
		Switching Between Different Devices	
		Calculation of the Noise Figure	
		Using the Mode Solver	
		Simulating Beam Propagation	
		Dynamic Simulations Simulating Ultrashort Pulse Propagation Simulating Ultrashort Puls	
		Graphical Output of Results	
		Display of Numerical Results	
		Output of Results to a File	
	3.23	Overview on the Arithmetics	
		5.25.1 General Properties	
		5.25.2 Composite Expressions	
		5.25.3 Functions for Arithmetics	
		5.25.4 Arrays	
		5.25.5 Numerical Integration	
		5.25.6 Numerical Differentiation	
		5.25.7 Numerical Root Finding	122

3

		g of Strings	
		nd String Values	
		les	
		S	
		fying the Fiber Model	
		ated Results	
		Propagation	
		Dynamic Simulations	
	· ·	Pulse Simulations	
6	6 How to Achieve Certain Things		146
	6.1 How to Get Started with RP Fiber Powe	er	146
		CI	
	1 1 1	l Parameters	
		t Form	
		ces	
		er Laser	
_	č		
7	7 Demo Files		151
	7.1 Calculating Fiber Modes		151
	7.2 Step-index Fibers		152
	7.3 Fiber-to-Fiber Coupling		152
	7.4 Modes of a Germanosilicate Fiber		152
		er (Mode-based Simulations)	
		ber (with Beam Propagation)	
		er	
		lated Mode Profiles	
		LOLL La LOLLE M. L.	
		h Calculated Cladding Modes	
		ofile	
		Output)	
	* '	5	
		tic Wavelength Calculation	
		SE	
		uenching	
		ir-induced Quenching	
		tiple Signals	
		iser	
		Optimization	
	7 34 Actively O-switched Fiber Laser		163

7.35	Passively Q-switched Fiber Laser	163
7.36	Actively Q-switched Nd:YAG Laser	163
7.37	Actively Q-switched Nd:YAG Laser, with Beam Propagation	164
7.38	Passively Q-switched Nd:YAG Laser	164
7.39	Higher-order Soliton Pulses	165
7.40	Soliton Self-Frequency Shift	166
7.41	Parabolic Pulses in an Ytterbium-doped Fiber Amplifier	166
7.42	Stimulated Raman Scattering in Yb-doped Fiber Amplifier	167
	Raman Amplification in Multimode Fiber	
7.44	Nonlinear Loop Mirror	167
	Regenerative Amplifier	
7.46	Mode-locked Fiber Lasers	169
7.47	Chirped-pulse Amplifier System	169
	Soliton Self-frequency Shift	
7.49	Raman Amplifier for Picosecond Pulses	170
	Supercontinuum Generation	
7.51	Supercontinuum Generation with Nanosecond Pulses	171
7.52	Transmission of Telecom Signal	171
7.53	Fiber Amplifier with ASE, Output to html File	172