


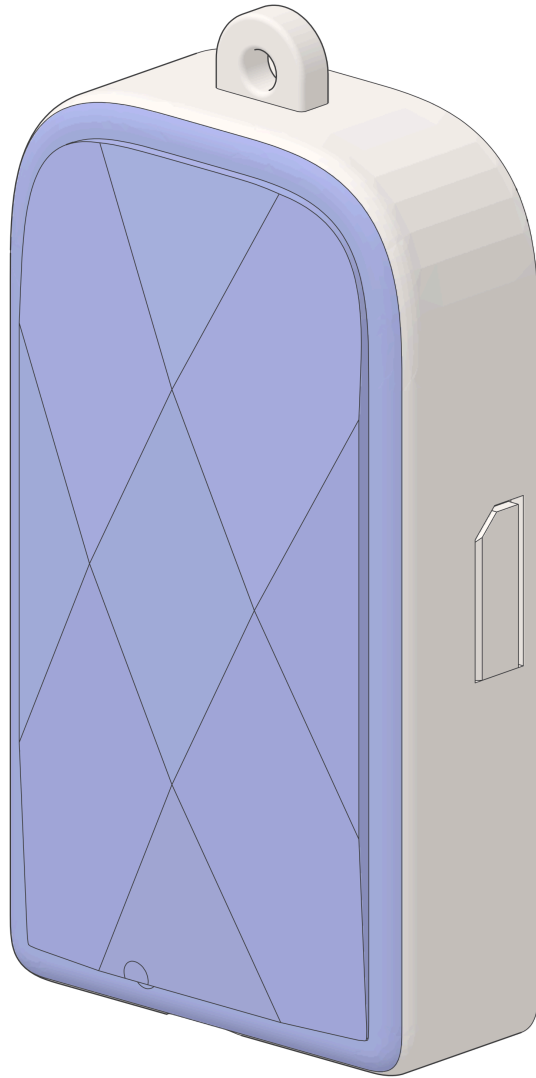


Raily Keyring


Build it, flash it, press it.




What's in the box

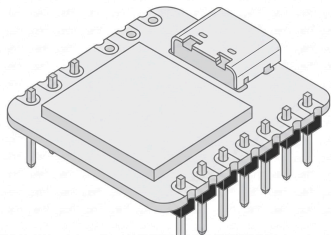


XIAO nRF52840 Sense,
pre-soldered

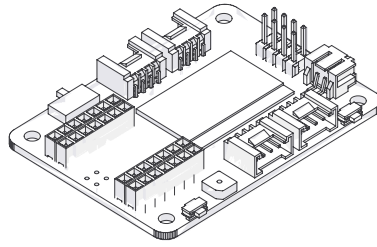


Expansion Board

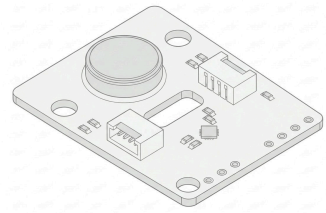


Haptic motor DA7280

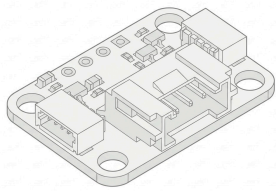


Grove-Qwiic hub

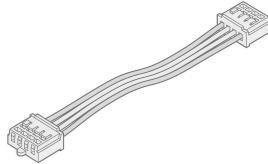

Grove cable, 5 cm

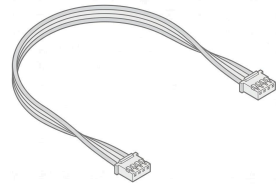

Qwiic cable, 50 mm

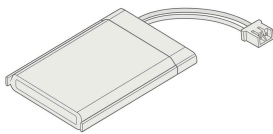


LiPo battery 602030




USB-C data cable




Printed case

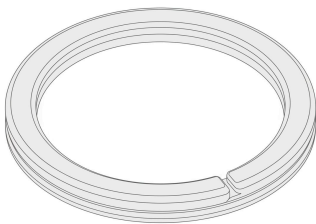

Split ring, 25 mm

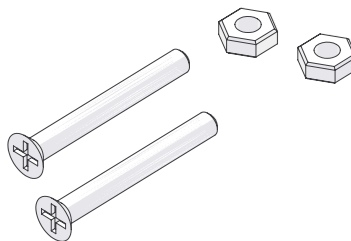


M2 × 16 countersunk screws
and nuts, 4 each

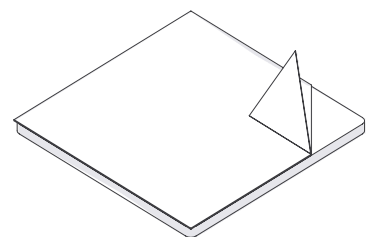

Double-sided foam tape

No soldering: the XIAO comes with its pins, and every cable plugs in. Parts not to scale.


What you're building

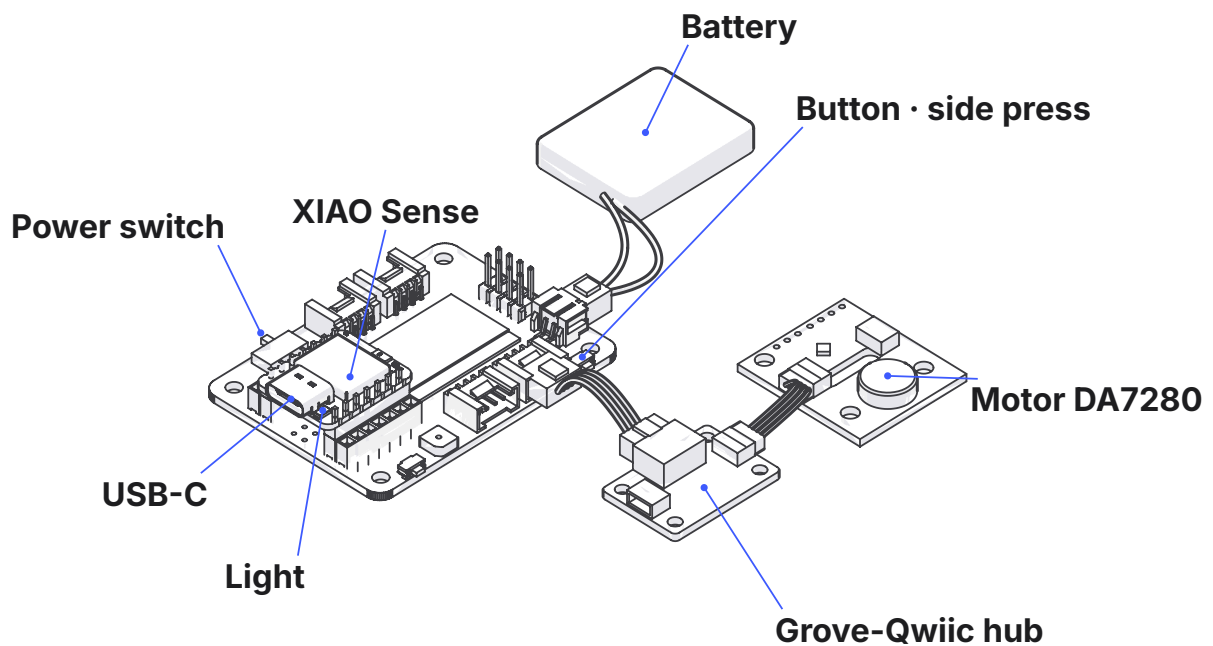


Everything connected on the bench, before it goes into the case.

The pages that follow build it in this order: board, motor, firmware, app, battery, case.

Onto the board

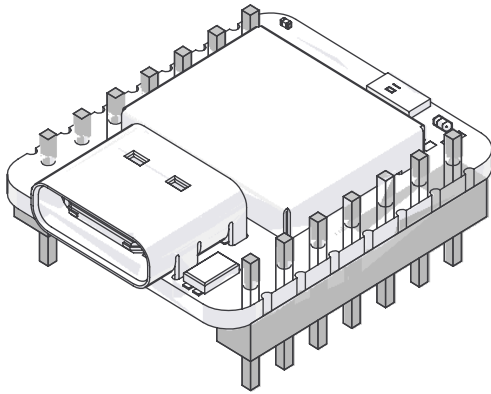


1
The XIAO Sense comes with its pins already soldered. There is no soldering in this build.

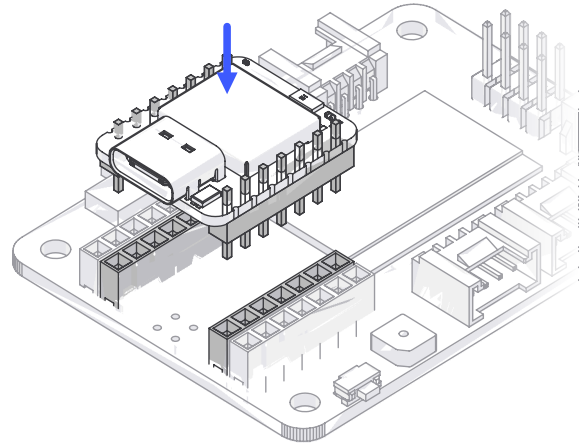

2
Push it into the two inner rows of sockets, all the way down. USB-C at the edge without the screen.

Before the cover goes on, the spring pins under the USB-C end lift the XIAO slightly. That is normal.


Motor and power

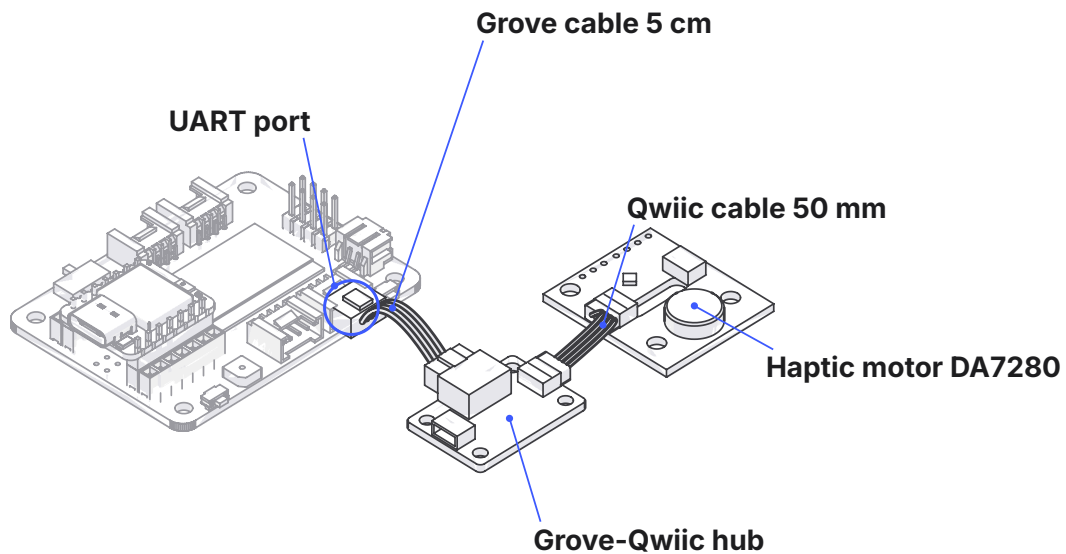

3

Plug the 5 cm Grove cable into the port marked UART and into the hub. Then the Qwiic cable from the hub into the motor.

Grove and Qwiic plugs fit one way only. On the bench the hub and the motor lie loose; in the case the hub sits on the screen and the motor on its shelf (see «Into the case»).

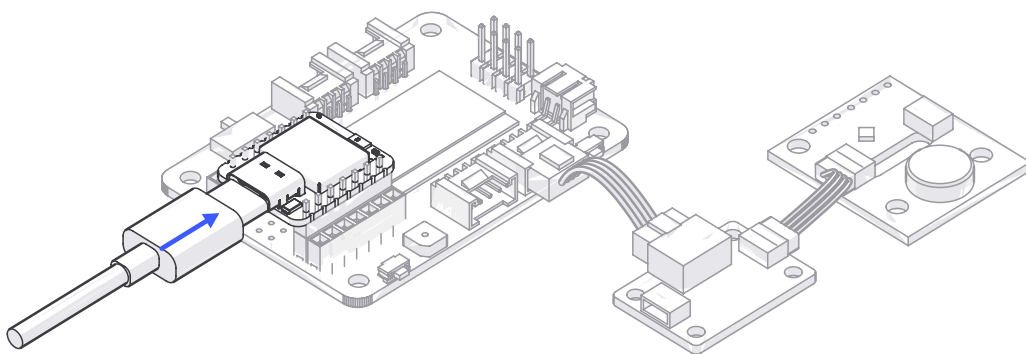

4

Connect USB-C to your computer. No battery yet.


Use a cable that carries data. The battery waits until page 8.

Flash

Open Claude Code, Codex or Cursor and paste:

Flash my Raily Pin using

<https://github.com/railyai/raily-pin>

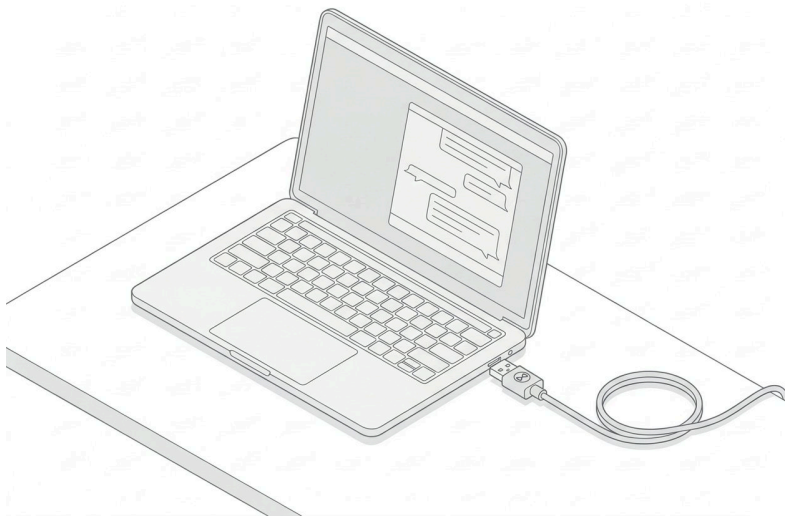


5

Your AI assistant installs the firmware and checks it.

It explains each step and asks before it writes to the board. No assistant?
See «Flash by hand» at the back.


Make it yours

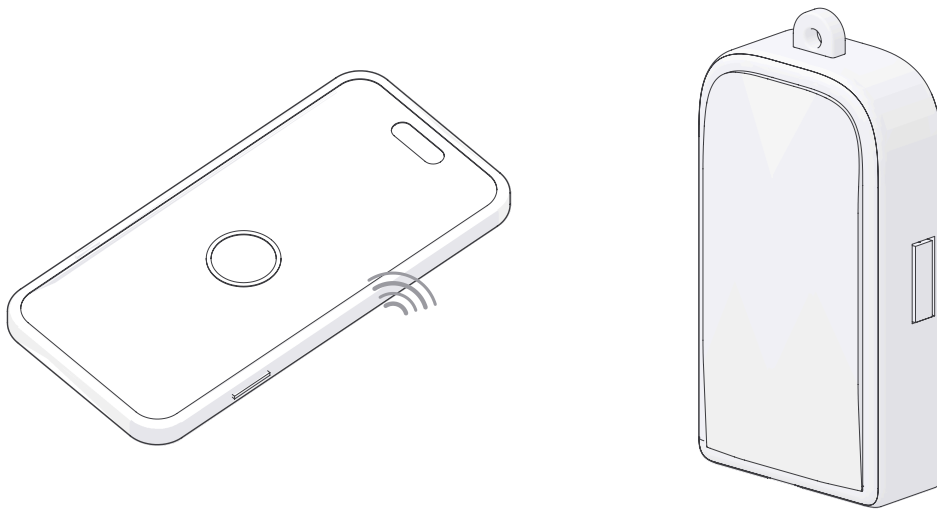

6

Install the Raily Device app and sign in.

Download link: atlas.railyai.com/build.

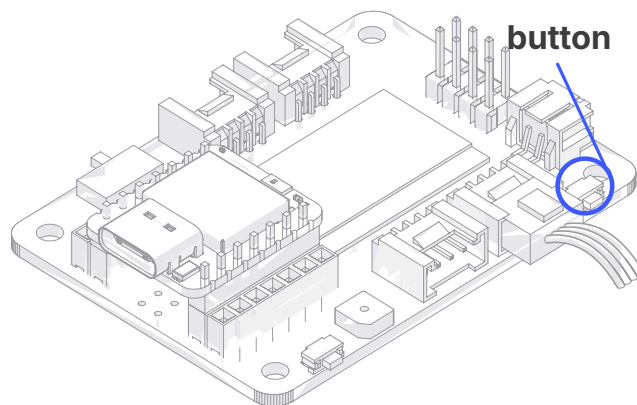


7

Press the button on the board edge. The app binds the keyring to you.

Then test on USB: each press shows up once, and the app finds the keyring from a metre away. The motor starts working with the firmware your agent installs.


Battery

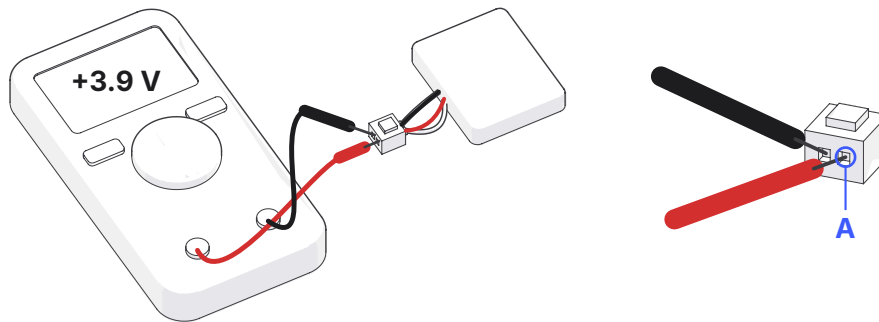

8

Check + with a multimeter first.

Red probe on contact A reads +3.9 V: A is plus. A must meet the + printed by the socket. Reads -3.9 V? The red probe is on minus: move it to the other contact and check for +3.9 V.

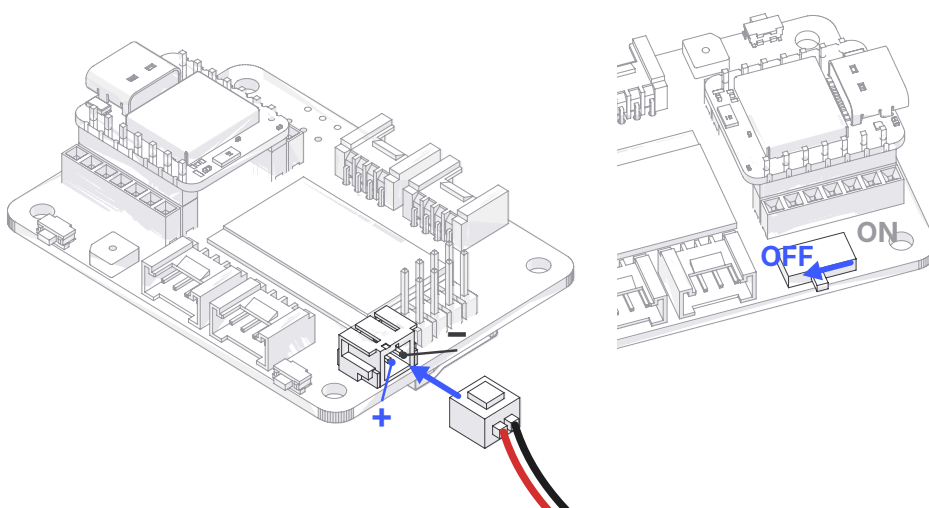


9

Switch OFF, plug in the battery, switch ON.

Red wire to +. Push the plug by its body, never by the wires.

First charge

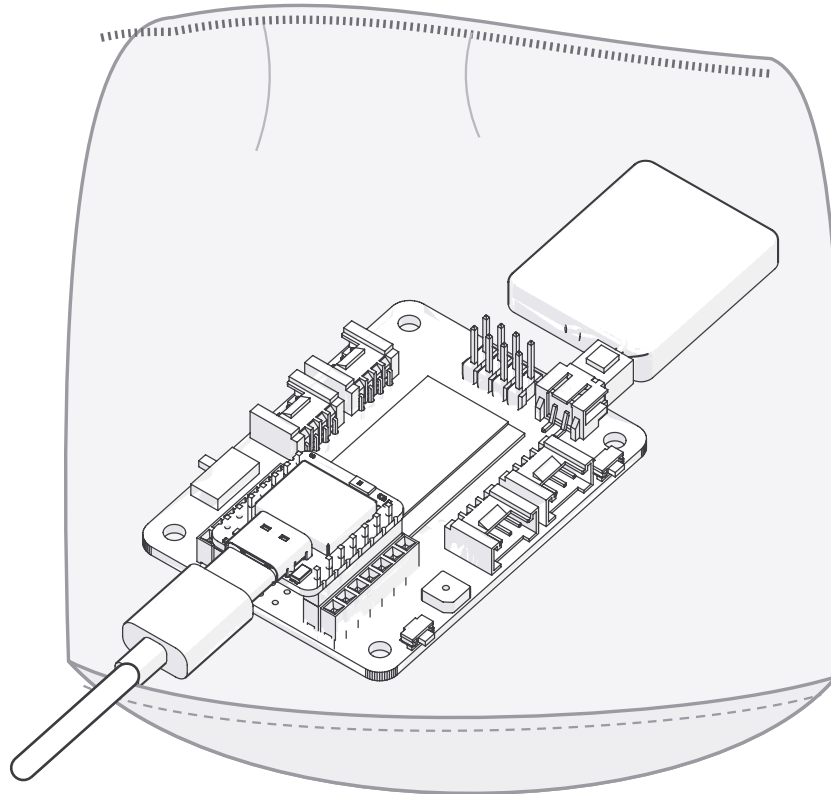


10

Watch the first charge for 30 minutes, outside the case.


Board and battery in a LiPo-safe bag, the USB-C cable in the XIAO. No smell, no swelling, no heat.

Print the case

Skip this page if your kit came with a printed case. Four plates: tray (loop and side button included); shelf; the cover plate: face (LED skin included), frame, dowels and the TEST pieces; and the dowel pusher. The pusher (Ø12 × 40 mm, one cup Ø3.4 × 1.5) is Pastel Periwinkle, like the cover plate: about 2.7 g, about 35 min. Print it once and reuse it for every cover.

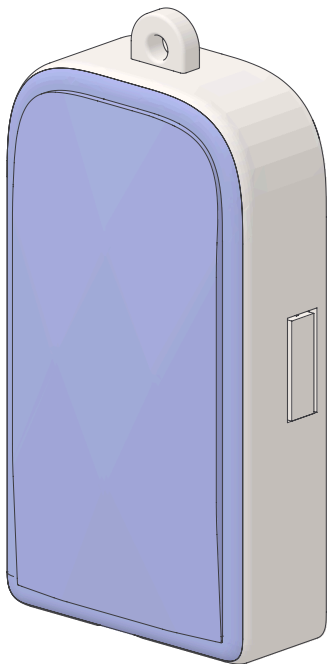

V1. Cotton White body, loop and button.
Pastel Periwinkle front.

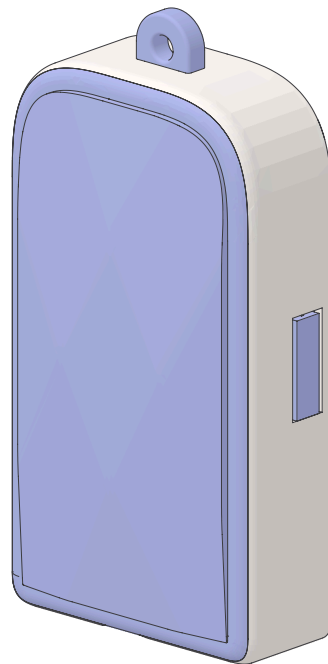



V5. Cotton White body. Pastel Periwinkle
front, loop and button.

Polymaker Panchroma Matte PLA, 1.75 mm	SKU	Per case
● Matte Cotton White	CA04016	about 21 g, with supports
● Matte Pastel Periwinkle	CA04036	about 20 g, dowels and pusher included

- V1: every plate is one colour: tray and shelf Cotton White, the cover plate Pastel Periwinkle. No colour changes.
- V5: the tray changes colour at the loop and the button, so it needs a two-colour printer.


The cover

Test one dowel first: press it into the TEST bar until it stops, then push the TEST plate on. It should hold firmly. Loose, or the plate will not go on? Stop and ask in GitHub Discussions before you assemble.

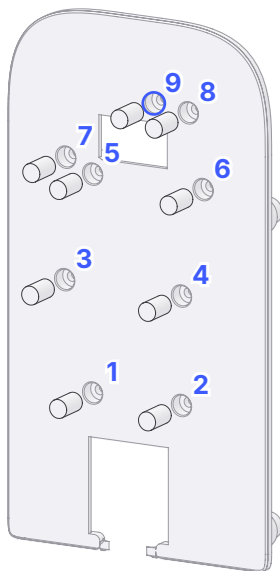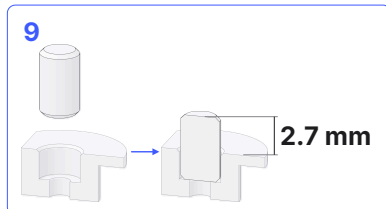


11

Frame face up: press a dowel into each hole 1–9 with the pusher until it stops. It stands about 2.7 mm proud. The plate has spare dowels; keep them.

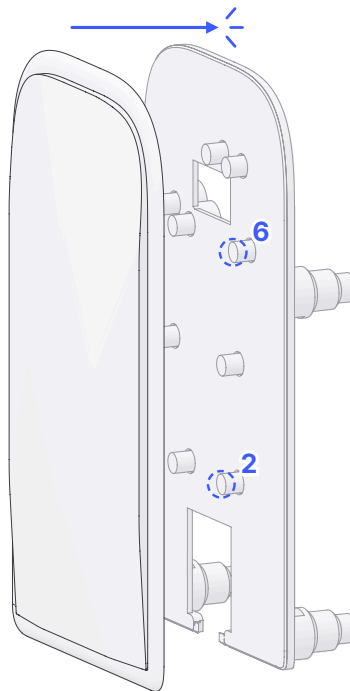

12

Face on: its two locator holes over dowels 2 and 6, loop end to loop end. Press with your palm over each dowel until it sits flat, with no gap at the loop end.

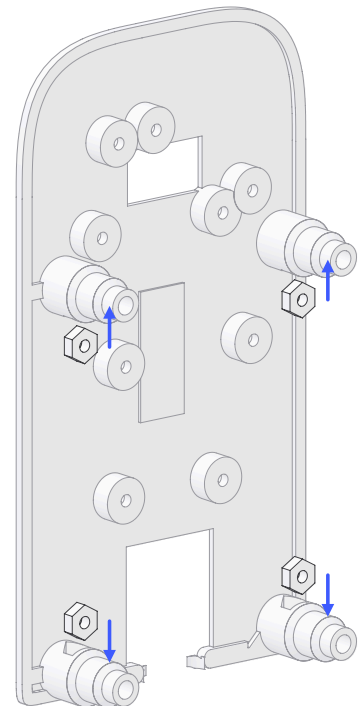


13

Turn the cover face down. Slide an M2 nut into the side slot of each of the four pillars until it lines up with the hole: check with a screw tip.


Into the case

Before you start: switch OFF, then unplug the battery, the Grove and the Qwiic cables.

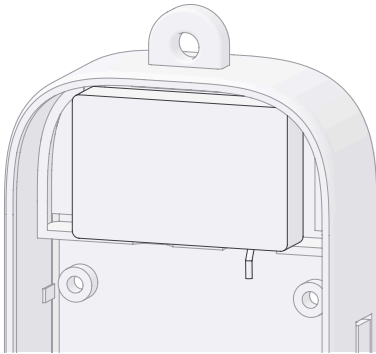


14

Battery into its bay, the lead up through the notch toward the board. Never clamp, tape or glue it: it must stay replaceable.

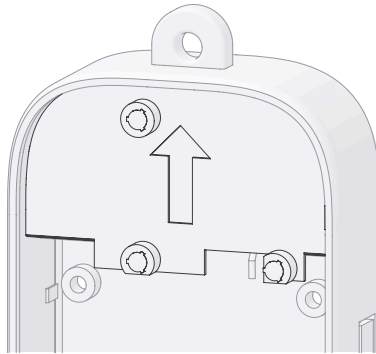

15


Shelf onto its ledges over the battery, its arrow toward the loop.

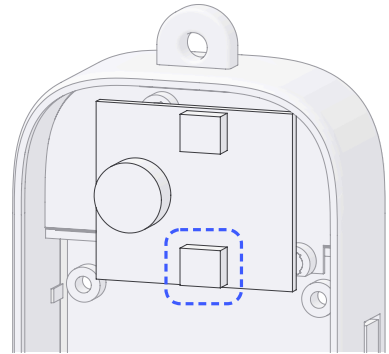


16

Motor board onto its seat on the shelf, the round motor up. The ringed socket takes the Qwiic cable.


Board, hub and cover

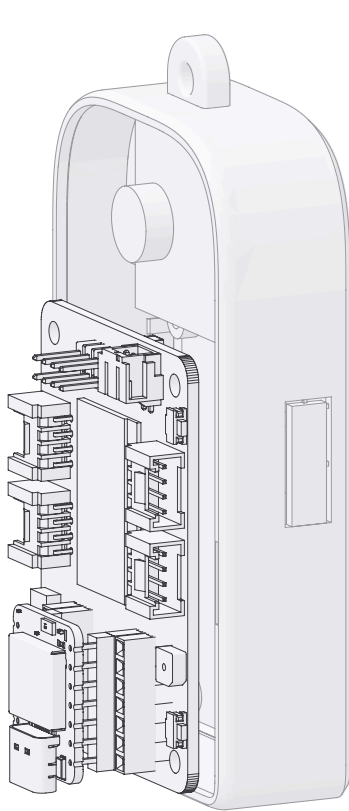

17
Board onto the four standoffs, USB-C in the end window. Plug in the battery lead, switch still OFF.

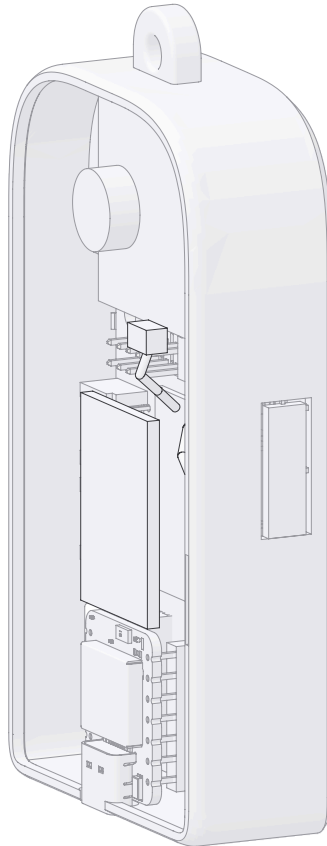


18
Hub onto the board's screen with a square of foam tape. Grove cable from the UART port into the hub, Qwiic cable from the hub into the motor board.

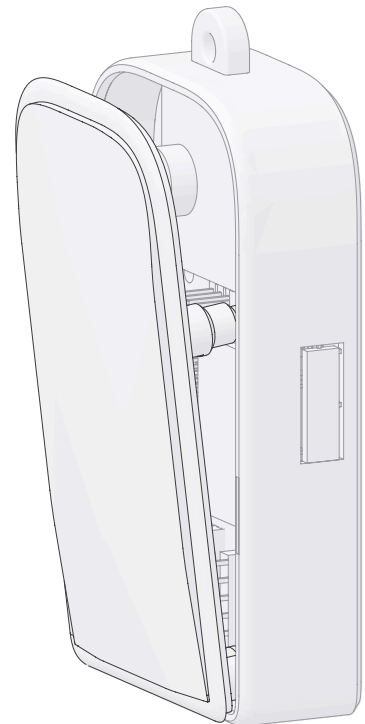

19
Turn the cover face up and set it on the tray: USB-C end first, then press the loop end down until the rim sits flush.

Screws and done

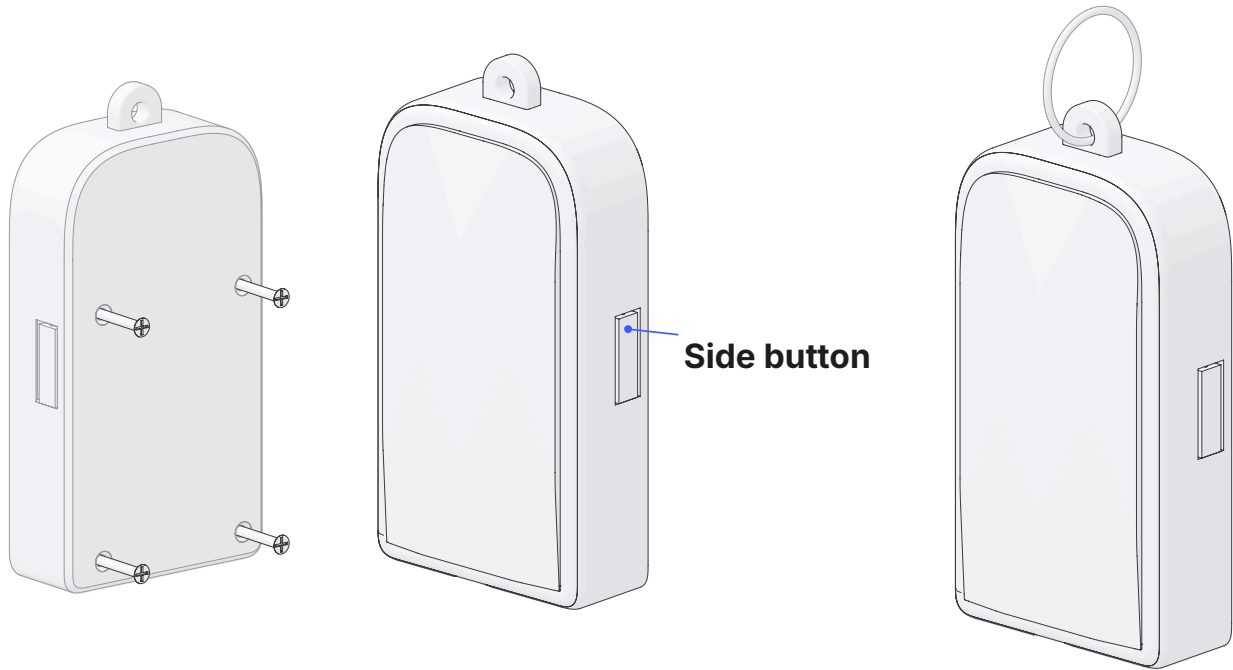

20

Turn it over: four M2 × 16 countersunk screws from the back into the pillar nuts. Snug, not tight.

Switch ON with a pen tip through the slot on the other long side. Press the side button to use it. The status light shines through the face near the USB-C end.

21

Thread the split ring through the loop.

Important information

Battery polarity

Sellers wire JST-PH plugs differently, so the red wire is not proof. Set the multimeter to V DC and touch the two plug contacts. A positive reading means the red probe is on plus. That contact must line up with the + printed by the board socket. If it does not, stop and do not plug it in. A negative reading means the probes are swapped.

Charging

Buy the 602030 cell only from a seller that provides its UN38.3 test summary. Charge through USB-C from a CE-marked 5 V charger, never unattended, in a bed or in a pocket. Regular charging only after the charge current is confirmed for your board revision and the cell's datasheet; until then, charge only while you watch. Hot, swollen or smelly? Unplug it and let it cool somewhere safe.

Never

- A battery on the Expansion Board and on the XIAO's battery pads at the same time.
- A swollen or damaged cell.
- A clamped, screwed-down, taped or glued cell.
- A first charge inside the case.
- Soldering onto the battery.

Using it

Not a toy; keep it from children. Not waterproof. Not an emergency or medical device. At the end of its life, take it to an electrical waste or battery collection point.

Print settings

Polymaker Panchroma Matte PLA, 0.4 mm nozzle; sliced for a Bambu Lab A1 mini. Tray: bottom on the bed, 0.16 mm layers, grid support under the key loop only, about 1 h. Shelf: fence on the bed with a 5 mm brim, 0.16 mm, grid support under the plate and the ledge, about 20 min. Cover plate, no supports, about 1 h 50 min: the face on its flat back at 0.08 mm with the top ironed; the frame parting face down and the dowels standing on their sprue, both at 0.16 mm. Pusher: standing upright, cup end up, 0.16 mm, no supports, about 35 min. Case 49.6 × 89.5 mm, 24.0 mm thick over the front (20.3 at the rim), 97.8 mm long with the loop.

Important information

Flash by hand

Download the firmware and the start-up program update for your board from download.railyai.com/pins (links in the README at github.com/railyai/raily-pin). Check each file's SHA-256 against `releases.json` in that repository before you copy it. Press reset twice quickly; a drive appears: XIAO-SENSE on the Sense board, XIAO-BOOT on the plain one. If the first line of `INFO_UF2.TXT` does not start with «UF2 Bootloader 0.9.2-OTAFIX2.3», copy the update, wait for the drive to return and check again; keep the cable in. Then copy the firmware (.uf2). Full steps: the README at github.com/railyai/raily-pin.

Help

Questions and build photos: GitHub Discussions in [railyai/raily-pin](https://github.com/railyai/raily-pin). Firmware bugs: Issues in the same repository. Your account: Help in the app. Never post your device ID (it starts with `rp1-`).

Licences

This guide and the shell models: CC BY-NC-SA 4.0. Firmware and flashing tools: Apache License 2.0. Board drawings derived from Seeed Studio 3D models (CC BY-SA 4.0). © 2026 Raily LLC. «Raily» and the Raily logo are trademarks of Raily LLC and are not covered by these licences.