





# Raily Keyring


Build it, flash it, press it.

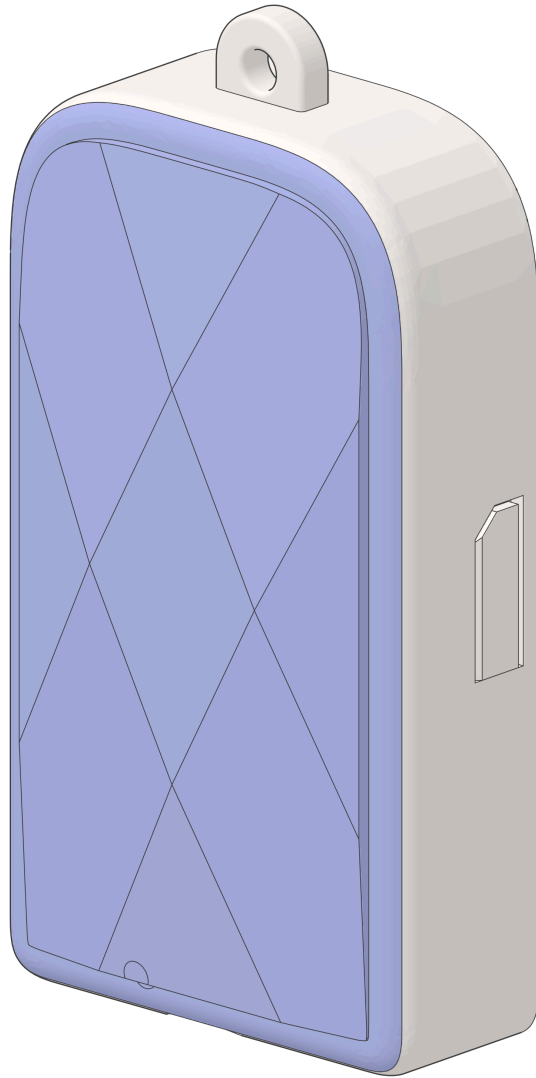


# What's in the box

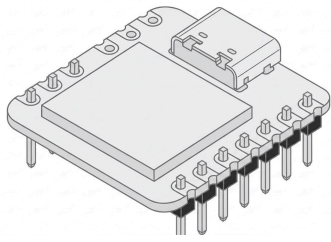


XIAO nRF52840 Sense,  
pre-soldered

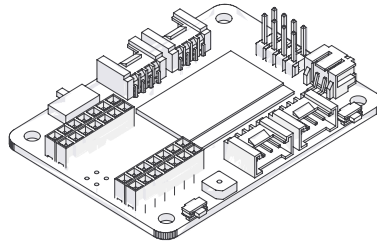


Expansion Board

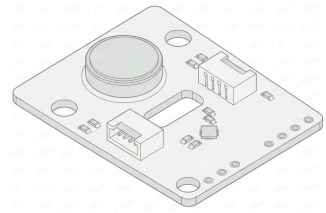


Haptic motor DA7280

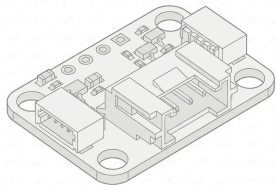


Grove-Qwiic hub

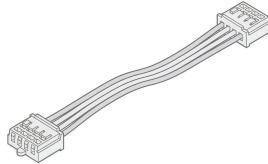

Grove cable, 5 cm

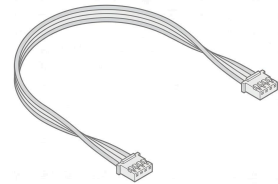

Qwiic cable, 50 mm

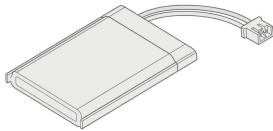


LiPo battery 602030




USB-C data cable




Printed case

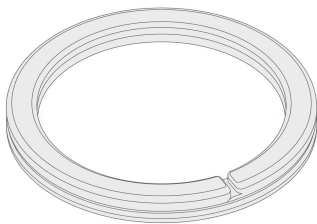

Split ring, 25 mm

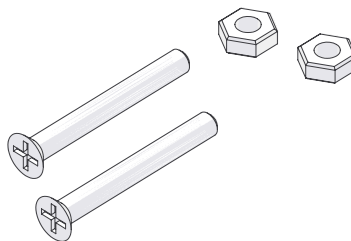


M2 × 16 countersunk screws  
and nuts, 4 each

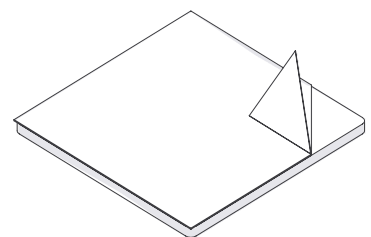

Double-sided foam tape

No soldering: the XIAO comes with its pins, and every cable plugs in. Parts not to scale.


# What you're building

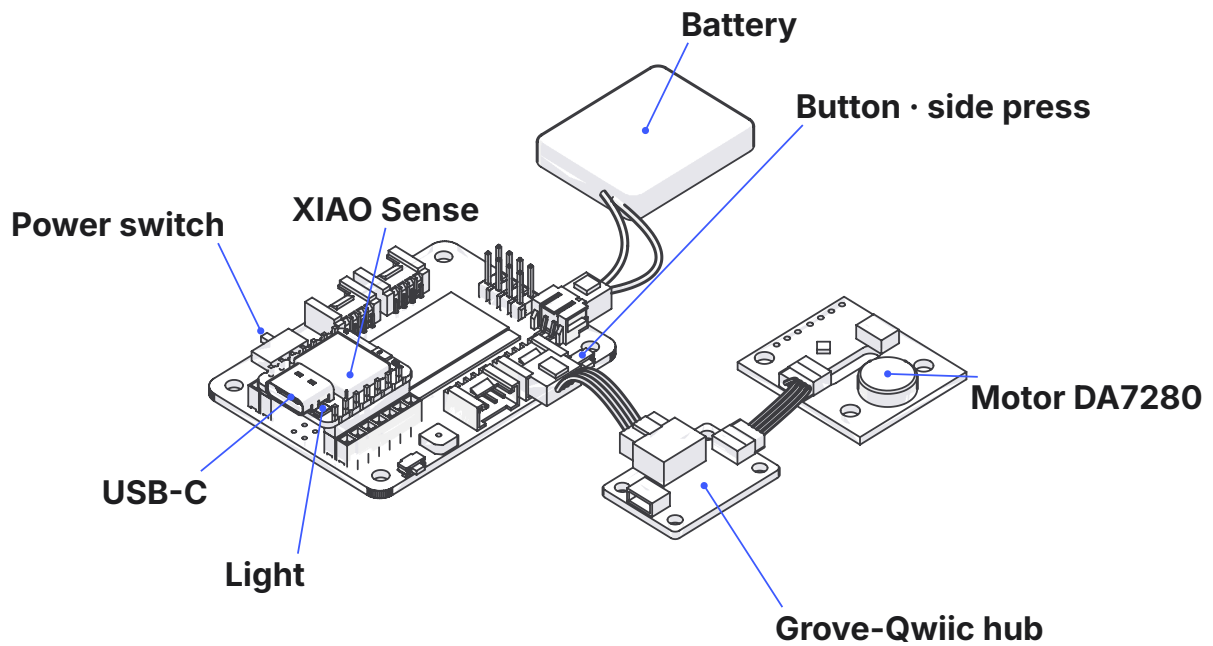


Everything connected on the bench, before it goes into the case.

The pages that follow build it in this order: board, motor, firmware, app, battery, case.

# Onto the board

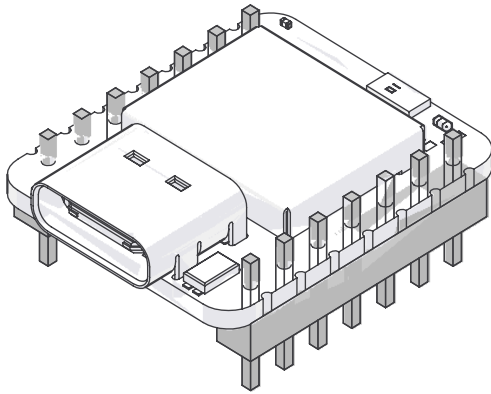


1  
The XIAO Sense comes with its pins already soldered. There is no soldering in this build.

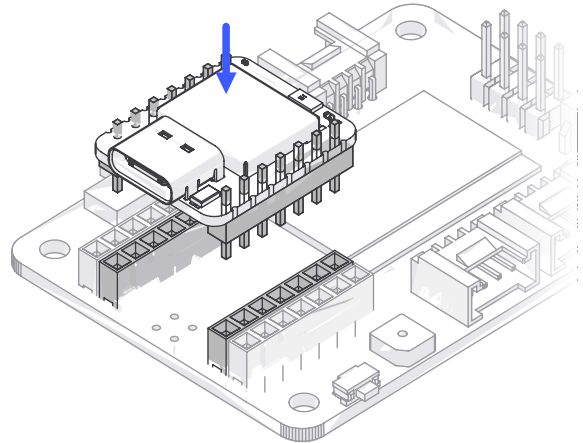

2  
Push it into the two inner rows of sockets, all the way down. USB-C at the edge without the screen.

Before the cover goes on, the spring pins under the USB-C end lift the XIAO slightly. That is normal.


# Motor and power

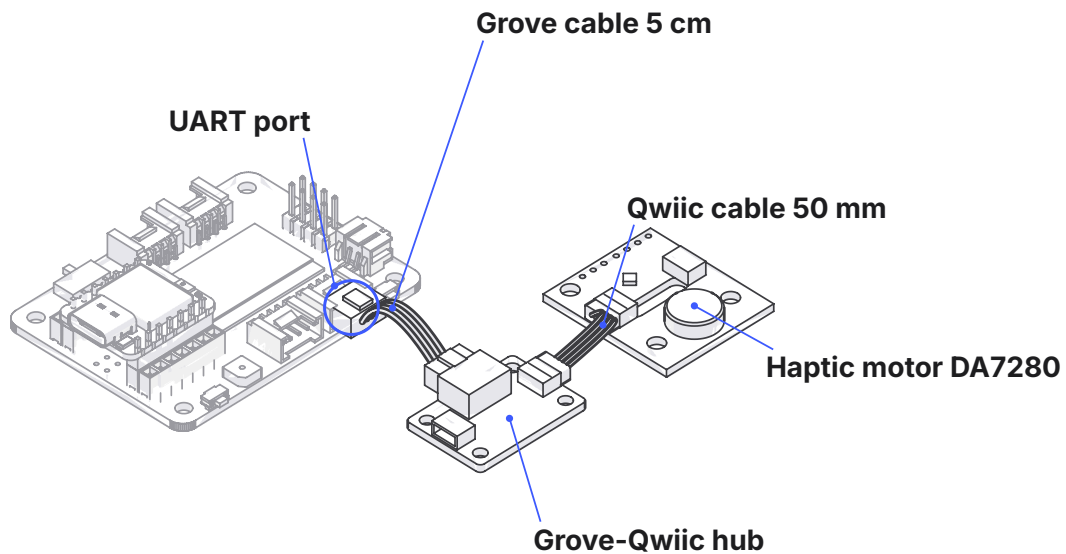

3

Plug the 5 cm Grove cable into the port marked UART and into the hub. Then the Qwiic cable from the hub into the motor.

Grove and Qwiic plugs fit one way only. On the bench the hub and the motor lie loose; in the case the hub sits on the screen and the motor on its shelf (see «Into the case»).

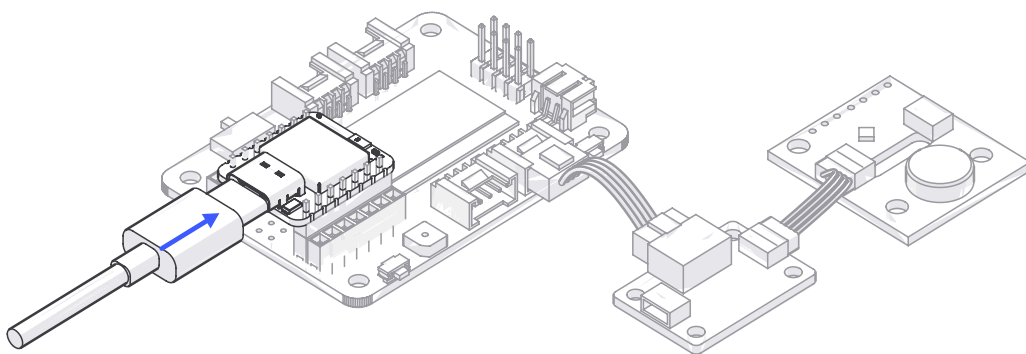

4

Connect USB-C to your computer. No battery yet.


Use a cable that carries data. The battery waits until page 8.

# Flash

Open Claude Code, Codex or Cursor and paste:

**Flash my Raily Pin using**

<https://github.com/railyai/raily-pin>

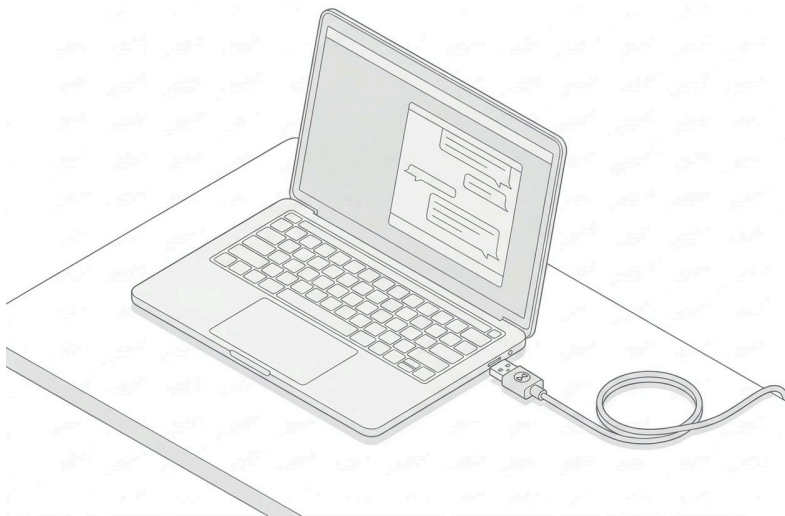


5

Your AI assistant installs the firmware and checks it.

It explains each step and asks before it writes to the board. No assistant?  
See «Flash by hand» at the back.


# Make it yours

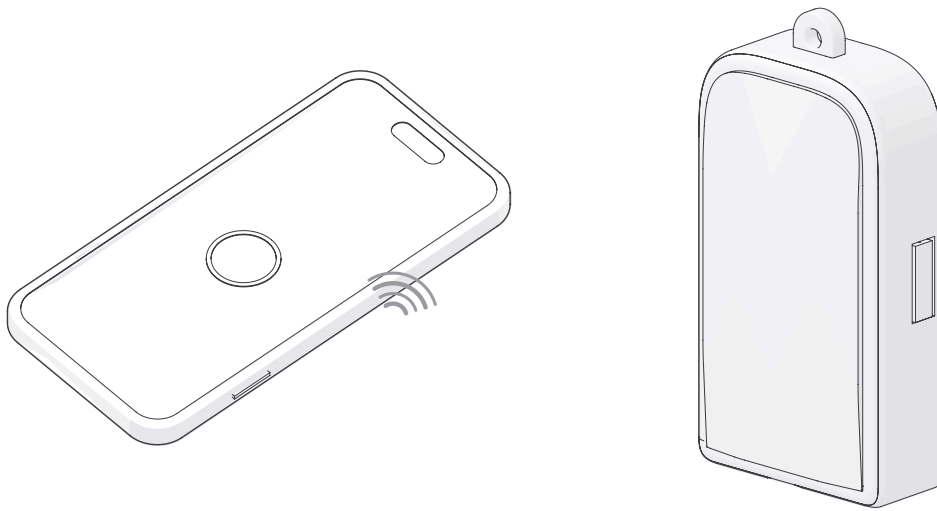

6

Install the Raily Device app and sign in.

Download link: [devices.railyai.com/build](https://devices.railyai.com/build).

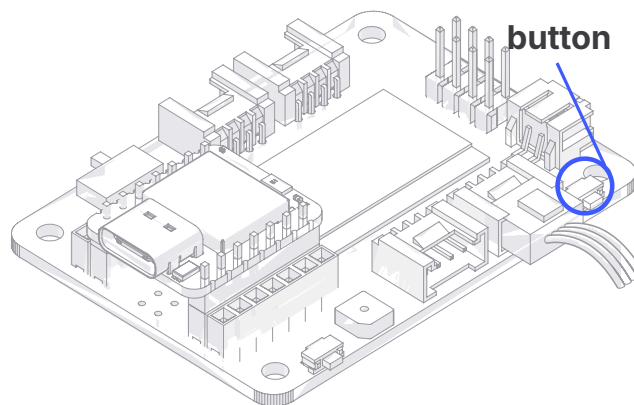


7

Press the button on the board edge. The app binds the keyring to you.

Then tap Pair in the app and confirm on the iPhone: without it, presses do not reach the phone. Test on USB: each press shows up once. The motor starts working with the firmware your agent installs.


# Battery

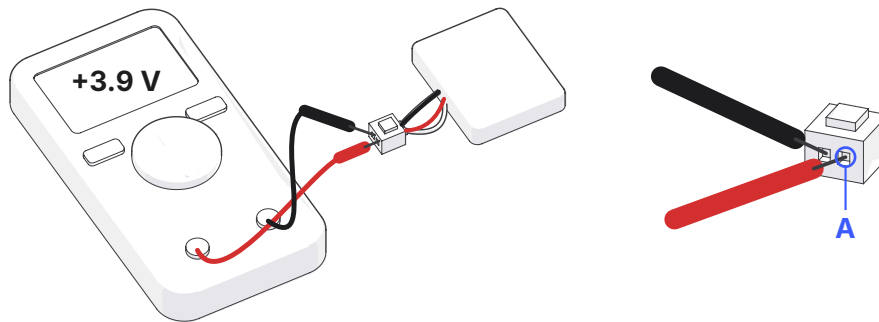

8

Check + with a multimeter first.

Red probe on contact A reads +3.9 V: A is plus. A must meet the + printed by the socket. Reads -3.9 V? The red probe is on minus: move it to the other contact and check for +3.9 V.

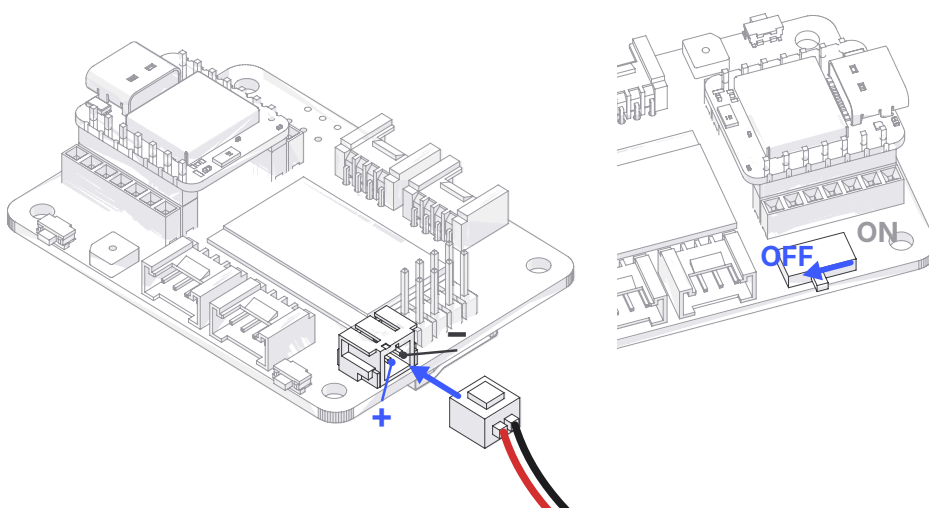


9

Switch OFF, plug in the battery, switch ON.

Red wire to +. Push the plug by its body, never by the wires.

## First charge

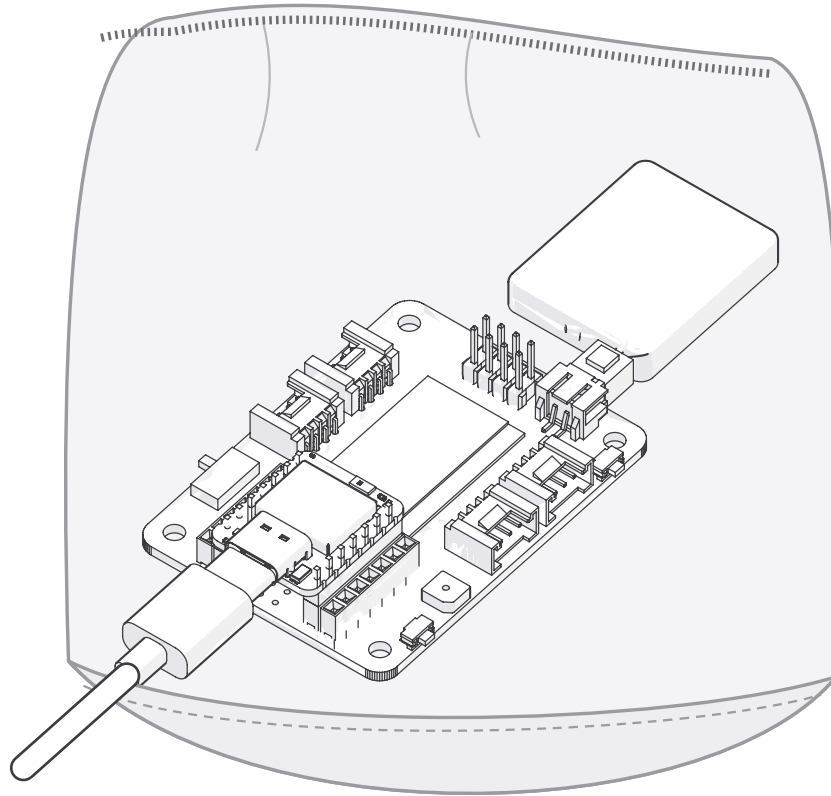


10

Watch the first charge for 30 minutes, outside the case.


Board and battery in a LiPo-safe bag, the USB-C cable in the XIAO. No smell, no swelling, no heat.

# Print the case

Skip this page if your kit came with a printed case. Four plates: tray (loop and side button included); shelf; the cover plate: face (LED skin included), frame and a dowel rack in three sizes, S, M and L; and the dowel pusher. The pusher (Ø12 × 40 mm, one cup Ø3.4 × 1.5) is an optional helper for pressing the dowels into the face. It is Pastel Periwinkle, like the cover plate: about 2.7 g, about 35 min. Print it once and reuse it for every cover.

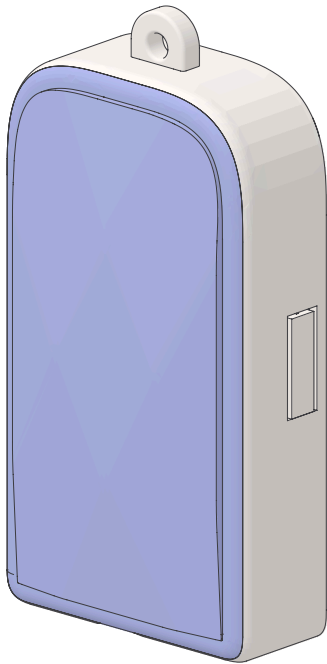

**V1.** Cotton White body, loop and button.  
Pastel Periwinkle front.

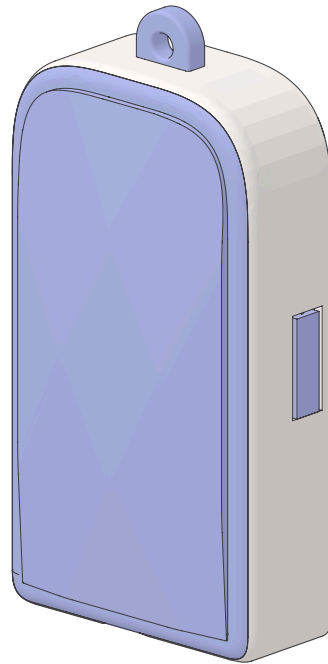



**V5.** Cotton White body. Pastel Periwinkle  
front, loop and button.

| Polymaker Panchroma Matte PLA, 1.75 mm | SKU     | Per case                               |
|----------------------------------------|---------|----------------------------------------|
| ● Matte Cotton White                   | CA04016 | about 21 g, with supports              |
| ● Matte Pastel Periwinkle              | CA04036 | about 20 g, dowels and pusher included |

- V1: every plate is one colour: tray and shelf Cotton White, the cover plate Pastel Periwinkle. No colour changes.
- V5: the tray changes colour at the loop and the button, so it needs a two-colour printer.


# The cover

The dowels come on one rack in three sizes: S 3.00, M 3.05 and L 3.10 mm, ten of each. Start with S. A dowel that feels loose: swap it for the next size up, M, then L. Dowels always go into the face first: pushed into the frame first, they crack it. Holes 2 and 6 only locate the face: their dowels may sit loose until the frame is on. That is normal; do not swap sizes there.

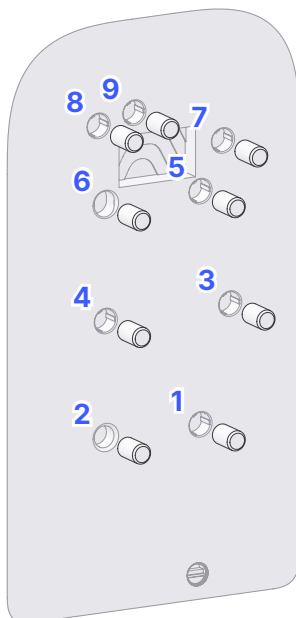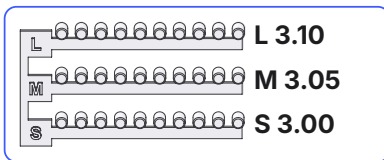


11

Face down, its back up: twist a dowel off the rack and press it into each hole 1–9 until it stops. Your thumb is enough; the pusher can help. Keep the spare dowels.

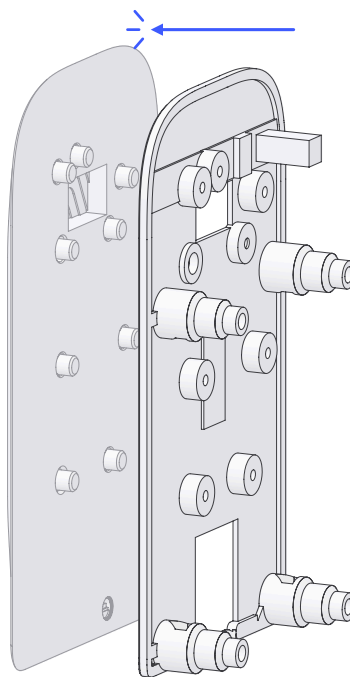

12

Frame on, its pillars up, loop end to loop end: its holes over the nine dowels. Press with your palm over each dowel until it sits flat, with no gap at the loop end.

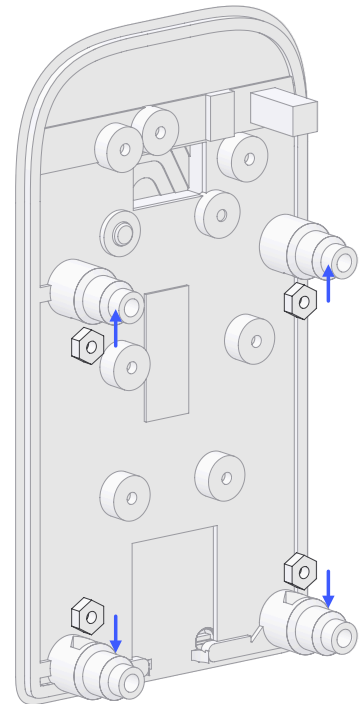


13


Leave the cover face down. Slide an M2 nut into the side slot of each of the four pillars until it lines up with the hole: check with a screw tip.

# Into the case


Before you start: switch OFF, then unplug the battery, the Grove and the Qwiic cables.

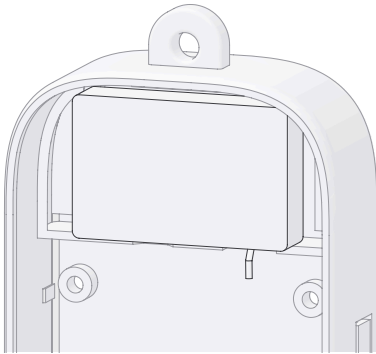

14  
Battery into its bay, the lead up through the notch toward the board. Never clamp, tape or glue it: it must stay replaceable.

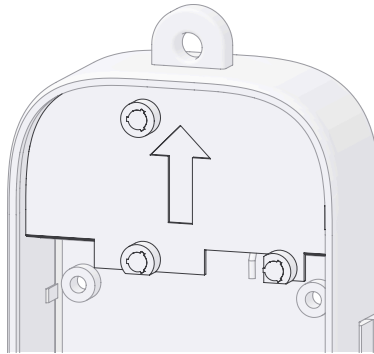


15  
Shelf onto its ledges over the battery, its arrow toward the loop.

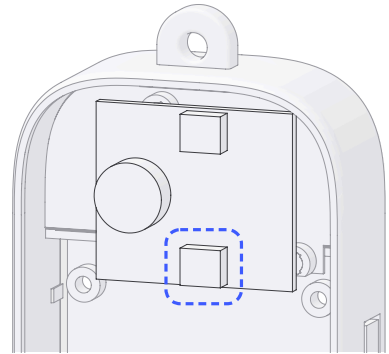


16  
Motor board onto its seat on the shelf, the round motor up. The ringed socket takes the Qwiic cable.

## Board, hub and cover

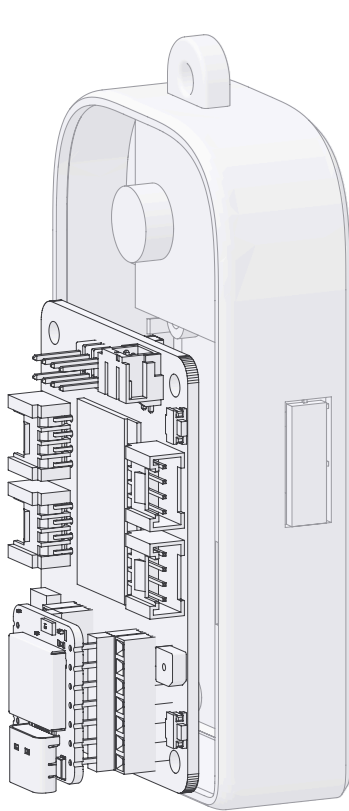


17

Board onto the four standoffs, USB-C in the end window. Plug in the battery lead, switch still OFF.

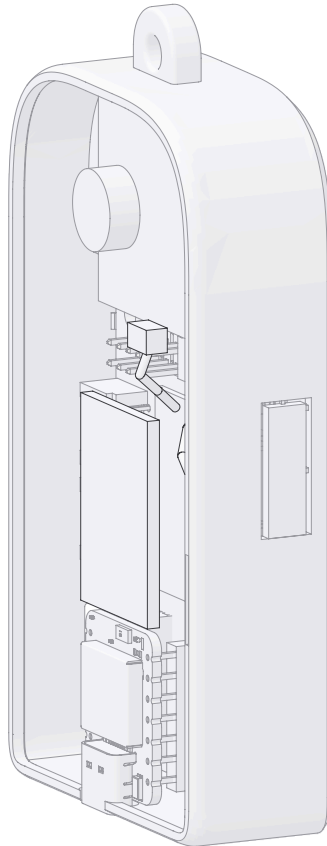

18


Hub onto the board's screen with a square of foam tape. Grove cable from the UART port into the hub, Qwiic cable from the hub into the motor board.

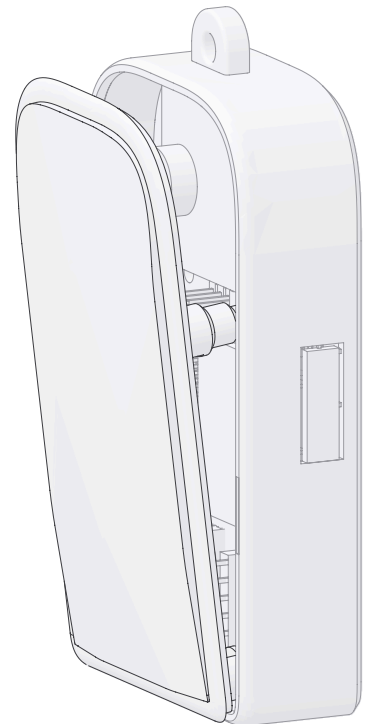

19

Turn the cover face up and set it on the tray: USB-C end first, then press the loop end down until the rim sits flush.

## Screws and done

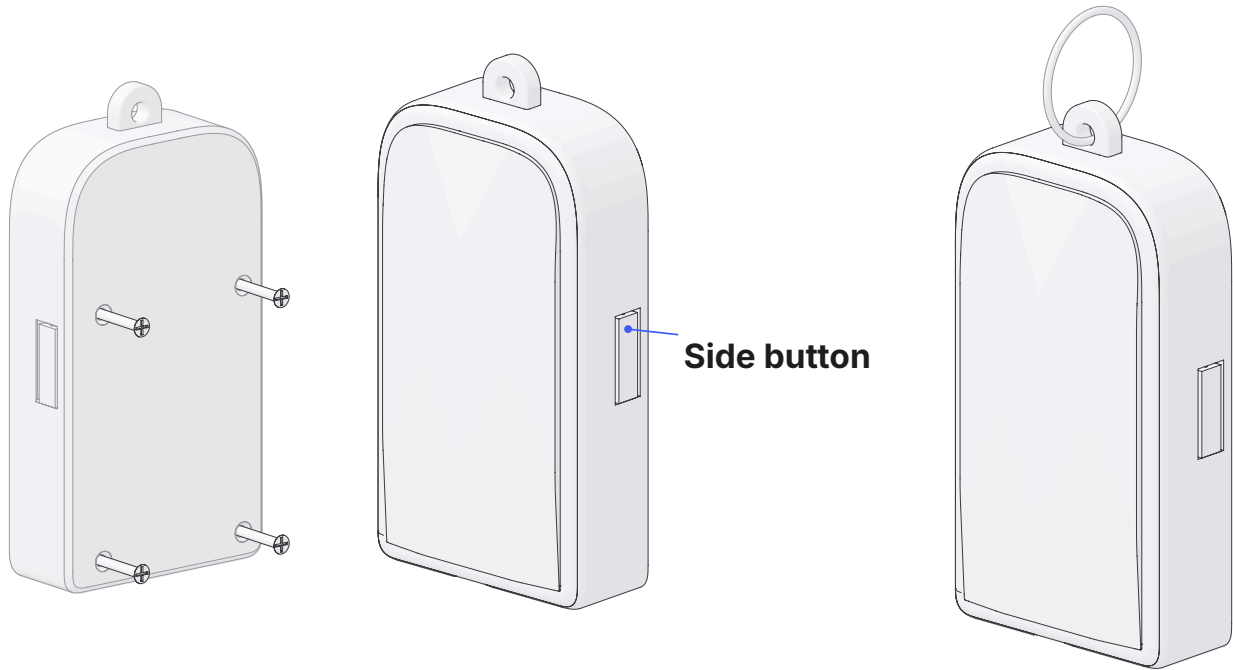

20

Turn it over: four M2 × 16 countersunk screws from the back into the pillar nuts. Snug, not tight.

Switch ON with a pen tip through the slot on the other long side. Press the side button to use it. The status light shines through the face near the USB-C end.

21

Thread the split ring through the loop.

# Important information

## Battery polarity

Sellers wire JST-PH plugs differently, so the red wire is not proof. Set the multimeter to V DC and touch the two plug contacts. A positive reading means the red probe is on plus. That contact must line up with the + printed by the board socket. If it does not, stop and do not plug it in. A negative reading means the probes are swapped.

## Charging

Buy the 602030 cell only from a seller that provides its UN38.3 test summary. Charge through USB-C from a CE-marked 5 V charger, never unattended, in a bed or in a pocket. Regular charging only after the charge current is confirmed for your board revision and the cell's datasheet; until then, charge only while you watch. Hot, swollen or smelly? Unplug it and let it cool somewhere safe.

## Never

- A battery on the Expansion Board and on the XIAO's battery pads at the same time.
- A swollen or damaged cell.
- A clamped, screwed-down, taped or glued cell.
- A first charge inside the case.
- Soldering onto the battery.

## Using it

Not a toy; keep it from children. Not waterproof. Not an emergency or medical device. At the end of its life, take it to an electrical waste or battery collection point.

## Print settings

Polymaker Panchroma Matte PLA, 0.4 mm nozzle; sliced for a Bambu Lab A1 mini. Tray: bottom on the bed, 0.16 mm layers, grid support under the key loop only, about 1 h. Shelf: fence on the bed with a 5 mm brim, 0.16 mm, grid support under the plate and the ledge, about 20 min. Cover plate, no supports, about 1 h 55 min: the face on its flat back at 0.08 mm with the top ironed; the frame parting face down and the dowels standing on their rack, both at 0.16 mm. Pusher: standing upright, cup end up, 0.16 mm, no supports, about 35 min. Case 49.6 × 89.5 mm, 24.0 mm thick over the front (20.3 at the rim), 97.8 mm long with the loop.

# Important information

## Flash by hand

Download the firmware and the start-up program update for your board from [download.railyai.com/pins](https://download.railyai.com/pins) (links in the README at [github.com/railyai/raily-pin](https://github.com/railyai/raily-pin)). Check each file's SHA-256 against `releases.json` in that repository before you copy it. Press reset twice quickly; a drive appears: XIAO-SENSE on the Sense board, XIAO-BOOT on the plain one. If the first line of `INFO_UF2.TXT` does not start with «UF2 Bootloader 0.9.2-OTAFIX2.3», copy the update, wait for the drive to return and check again; keep the cable in. Then copy the firmware (.uf2). Full steps: the README at [github.com/railyai/raily-pin](https://github.com/railyai/raily-pin).

## Help

Questions and build photos: GitHub Discussions in [railyai/raily-pin](https://github.com/railyai/raily-pin). Firmware bugs: Issues in the same repository. Your account: Help in the app. Never post your device ID (it starts with `rp1-`).

## Licences

This guide and the shell models: CC BY-NC-SA 4.0. Firmware and flashing tools: Apache License 2.0. Board drawings derived from Seeed Studio 3D models (CC BY-SA 4.0). © 2026 Raily LLC. «Raily» and the Raily logo are trademarks of Raily LLC and are not covered by these licences.