

Ultra Kill

2-in-1 Ultrasonic Cleaner & Ultraviolet-C Disinfector



Non-Toxic



Eco-Friendly



Please Read Before Use

Package Contents

- 1 - UltraKill
- 1 - Strap Holder
- 1 - Cleaning basket
- 1 - User Manual



Specifications

- Model No: iG - KF240
Product Dimension: 8" x 5.2" x 5.1" (L x W x H)
Tank Dimension: 6.7" x 3.9" x 2.2" (L x W x H)
Product Weight: 1 Kg
Germicidal Lamp: 1x 5.3 W UV-C bulb
UV-C Wavelength: 253.7 nm (Ozone free)
Power Supply: AC 220 V / 60 Hz


IMPORTANT SAFETY INSTRUCTIONS

WARNING – When using electric appliances, basic precautions should always be followed, including the following:

1. Read all the instructions before using the appliance.
2. To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
3. Do not touch moving parts.
4. Only use attachments recommended or sold by the manufacturer.
5. Do not use outdoors.
6. To disconnect, turn all controls to the off ("O") position, then remove plug from outlet.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Unplug from outlet when not in use and before servicing or cleaning.
9. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
10. To reduce the risk of electrical shock, do not put the appliance in water or other liquid. Do not place or store appliance where it can fall or be pulled into a tub or sink.
11. Only use machine for its intended purpose as described by this manual.
12. Never leave the machine unattended while it is plugged in.
13. Always unplug machine immediately after using.
14. Supervision required when used in close vicinity to children.
15. Please put at least 7oz of clean water before plugging the power plug. Do not fill past the max mark in the container.
16. Place the device on a flat level surface while using.
17. Do not use or store the device near water or where might be in danger of falling into water.
18. Do not try to repair or disassemble the device on your own.
19. Do not use the power over 120V.
20. Do not move the device while plugged in or operating the device.
21. Do not place object on the power cord. Keep the cord away from hot surfaces.
22. Do not use the device if the power cord is extremely hot. Please unplug the power.
23. Do not use the device in high temperature surroundings or under sunlight.
24. Do not use boiling or steaming hot water in the tank.
25. Do not fully submerge the machine in water while trying to clean it. Clean with damp towel and dry with soft towel.
26. Do not use attachments not recommended by the manufacturer.
27. Do not operate this machine if its cord or plug is damaged, or if it has fallen into water.
28. This appliance has a polarized plug (one blade is wider than the other). For your safety, if the plug does not fit in the outlet reverse the plug. If it is still does not fit, contact a qualified electrician. Do not attempt to alter this plug or outlet to get it to fit.

SAVE THESE INSTRUCTIONS

UV-C / Ultrasonic Cleaner Diagram

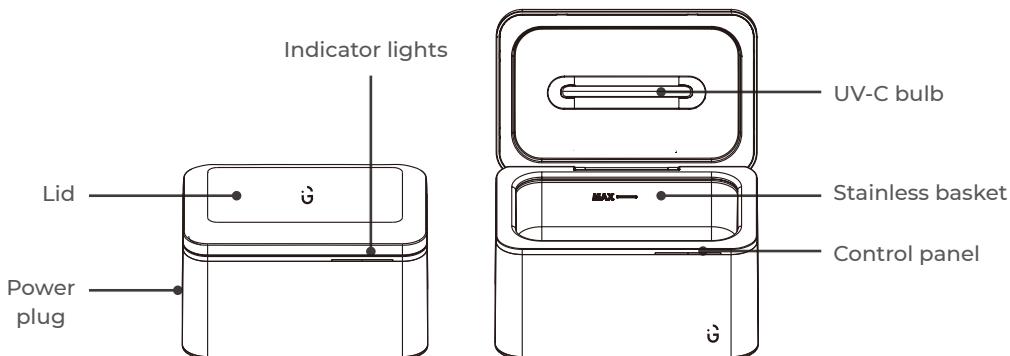

UV-C / Ultrasonic Cleaner Operating Instructions

The UV-C and ultrasonic functions on this unit can be used independently or together making it perfect for a wide variety of uses. We suggest using the UV-C light for disinfection unless the product is not suitable or cannot be exposed to UV light. Ultrasonic cleaning is usually best for items with hard to reach places that cannot be easily accessed.

Please note - For ultrasonic cleaning, please put at least 7oz of clean water before plugging the power plug.

1. Make sure the items are safe to use with ultrasonic cleaning.
2. Use a container to fill the water tank. Do not directly fill water from a sink.
3. Do not fill water over the max mark in the container.
4. If the object is greasy or oily please add ultrasonic cleaning detergent or dishwashing liquid and use warm water.
5. Place the object into the basket and lower slowly into machine.
6. Select the desired mode. Ultrasonic cleaning starts immediately. For your safety, the UV-C light will only function once the lid is closed.

UV-C	UV-C only	5 mins	
Clean	Ultrasonic only	3 mins	
UV-C	Operating both	5 mins	

7. For watches, we only recommend cleaning the watch band only.
8. After ultrasonic cleaning please rinse the item(s) with clean water. If the object is still dirty, repeat cleaning again.
9. After cleaning, unplug the power, and pour out the dirty water.
10. Wipe the device and container with a dry towel and store in a dry place.

Examples of Usage by Mode

Please note that UV-C light may cause discoloration or yellowing of plastics and other materials. Please take this into account when using the UV-C. Below are some general guidelines for frequently cleaned household products.

Jewellery - Earrings, Necklaces, Rings, and Bracelets	UV-C + Ultrasonic
Watches (submerge watch band only) - Exposure of watch dial to UV-C may cause discoloration	Ultrasonic only
Shaving razor blades and electric trimmers/shavers (blade part only)	UV-C + Ultrasonic
Dental - Dentures, Mouth Guards, and Toothbrushes	UV-C + Ultrasonic or UV-C only
Beauty - Brushes, Combs, Make-up brushes, and pads	UV-C only
Eye Care - Eyeglasses, sunglasses, and contact lens accessories	Ultrasonic only
Baby Products - Pacifiers, Baby Bottles, and Toys	UV-C only
Metal Products like keys, Coins, Scissors, Knives, & tools	UV-C only
Hearing aids, Phones, Electronics	UV-C only

Application area

Designed for personal use to clean and disinfect everyday household items.

- Jewellery - Earrings, watches, necklaces, rings, and bracelets
- Shaving razor blades and electric trimmers/shavers
- Dental - Dentures, mouth guards, and toothbrushes
- Beauty - Brushes, combs, make-up brushes, and pads
- Eye care - Eyeglasses, sunglasses, and contact lens accessories
- Baby Products - Pacifiers, baby bottles, and toys
- Metal products like keys, coins, and tools
- Hearing aids, phones, keys, and much more

User - Maintenance Instruction

- For watches please only clean watch bands. Do not submerge watches in water using the ultrasonic function. It may permanently damage the watch.
 - Do not use boiling or steaming hot water in the tank.
 - Please make sure to unplug the unit before draining the water.
 - Empty the water tank after every use.
 - Never submerge the unit in water. Use a soft damp cloth to clean the exterior of the unit.
 - Do not clean with organic solvents or abrasives. Use water only.
 - Make sure unit is dry before storage and store in a cool dry place.
 - All repairs should be performed by an authorized service center.
- Please do not try to repair the unit yourself.