
LuminaCAD User Guide

LuminaCAD 1.0.1 for Windows and Linux · Parametric 3D-printable lamp shade & lithophane designer · Guide revision 1.1, 25 October 2026

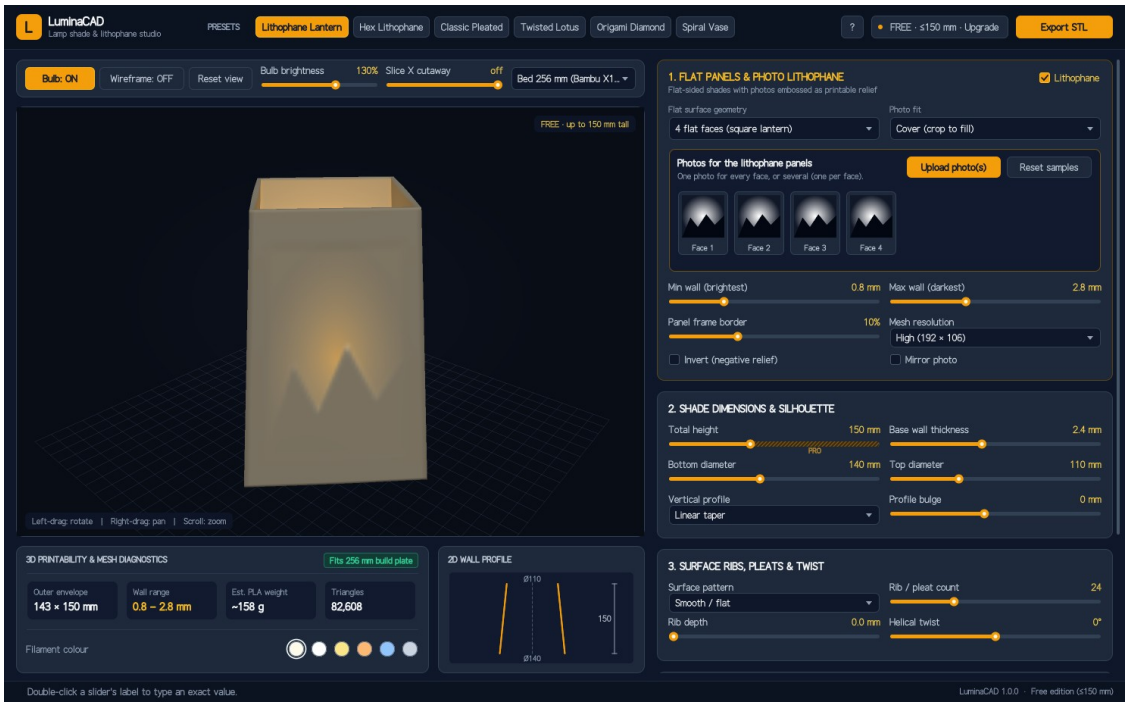

Contents

Part 1: Getting started 1. What LuminaCAD is 2. Safety first 3. What you need 4. Installing LuminaCAD 5. A tour of the window 6. Your first lamp shade, step by step 7. Printing the shade

Part 2: Everyday use 8. Presets 9. Section 1: Flat panels & photo lithophane 10. Section 2: Shade dimensions & silhouette 11. Section 3: Surface ribs, pleats & twist 12. Section 4: Lamp socket ring (fitter) 13. The 3D view and its toolbar 14. Diagnostics and the 2D profile 15. Exporting the STL

Part 3: Free and Pro editions 16. What the editions are 17. Buying and installing a Pro licence 18. Moving, backing up or removing a licence

Part 4: Getting the best results 19. Choosing and preparing photos 20. Lithophane tuning 21. Designing for the printer

Part 5: Troubleshooting 22. Problems and fixes 23. Messages explained 24. Self-test and diagnostics

Part 6: Expert reference - A. Parameter reference - B. Geometry in detail - C. The STL file - D. Command line - E. Files and folders - F. Licence file format - G. Mouse and keyboard - H. Glossary

---

Part 1: Getting started

1. What LuminaCAD is

LuminaCAD designs lamp shades for 3D printing, on Windows and Linux. You choose a shape (round, or with 3 to 8 flat sides) and set its height and diameters. You can add ribs, pleats or a twist. A **lithophane** can also be pressed into the flat sides.

A lithophane is a photo made of thickness instead of ink. Where the plastic is thin, light from the bulb shines through brightly. Where it is thick, it shines through dimly. Switched off, the lamp looks like plain white plastic with a faint relief. Switched on, the photo appears.

LuminaCAD shows the shade in 3D as you change it, lit from inside by a virtual bulb, so you see roughly how the printed lamp will glow. When you are happy, you **export an STL file**. Your slicer (PrusaSlicer, Bambu Studio, OrcaSlicer, Cura and so on) turns that file into printer instructions.

LuminaCAD includes a **socket ring** (the “fitter” or “spider”): a ring with spokes that holds the shade on a standard E27 or E14 lamp holder.

2. Safety first

A lamp combines mains electricity, heat and plastic. Please read this before you light your first shade.

- **Use LED bulbs only.** PLA, the usual printing plastic, softens at about 55–60 °C. A filament (incandescent) or halogen bulb gets hot enough to warp or melt a PLA shade and is a fire risk. A household LED bulb of about 9 W or less (the “60 W equivalent” type) is the right choice.
- **Keep the bulb away from the wall.** Leave at least 25 mm between the bulb and the shade wall on every side. The 3D view shows the bulb as a 28 mm sphere at mid-height so you can check this. Use the Slice X cutaway (§13) to look inside.
- **Use a certified lamp holder and cable.** The printed part is only a shade. It must never carry or insulate mains wiring. Buy a complete, certified pendant or table-lamp fitting and fit the shade to it. Have mains wiring done by a qualified person.
- **PETG or ASA for warm places.** For enclosed fittings, warm rooms or long running times, print in PETG or ASA, which tolerate more heat than PLA.

- **Do not leave a new lamp unattended** the first few times it is used. Check after an hour that the shade is cool enough to touch comfortably near the bulb.

3. What you need

Item	Notes
A computer	Windows 10 or 11 (64-bit), or Linux with a desktop (Ubuntu 22.04+, Debian 12+, Fedora 36+, Mint 21+; X11 or Wayland)
LuminaCAD	Free edition: download and run
A slicer	Any slicer that reads STL
A 3D printer	Most beds of 180 mm and up; see “Fits bed” in §14
Filament	White or natural PLA for lithophanes; any colour for patterned shades
A lamp fitting	E27 or E14 holder with cord or pendant, certified for your country
An LED bulb	About 9 W or less (see §2)

4. Installing LuminaCAD

Both downloads are on the **Releases** page of the LuminaCAD GitHub repository (github.com/rajivtctech/LuminaCAD). Windows and Linux run the same program, with the same features and the same licence files.

4.1 Windows 10 and 11

1. Download luminacad-1.0.1-windows-x64.zip.
2. Right-click the zip, choose **Extract All…**, and extract it somewhere permanent, for example Documents\LuminaCAD. Don’t run it from inside the zip.
3. Open the extracted folder and double-click **luminacad.exe**.
4. The first time, Windows may show **“Windows protected your PC”**. This appears for any new program that is not yet widely downloaded. Click **More info**, then **Run anyway**. Windows remembers your choice.
5. *Optional:* make a desktop shortcut. Right-click luminacad.exe → **Show more options** → **Send to** → **Desktop (create shortcut)**. To pin it, right-click LuminaCAD’s taskbar button while it is running and choose **Pin to taskbar**.

The folder also holds **luminacad-cli.exe**. It is the same program for the Command Prompt or PowerShell, used for the commands in Appendix D. For example:

luminacad-cli.exe --selftest

To remove LuminaCAD: delete the folder, and the shortcut if you made one. Your licence, if you installed one, stays in %APPDATA%\LuminaCAD until you delete that folder too.

4.2 Linux

1. Download luminacad-1.0.1-linux-x86_64.tar.gz.
2. Unpack it and run the installer. Open a terminal and type:

   ```
   tar xzf luminacad-1.0.1-linux-x86_64.tar.gz
   cd luminacad-1.0.1-linux-x86_64
   ./install.sh
   ```

   This copies the program to ~/.local/bin, adds **LuminaCAD** to your application menu under **Graphics**, and runs the built-in self-test. It needs no administrator rights.
3. Start LuminaCAD from the menu, or by typing luminacad in a terminal.

The Linux version needs glibc 2.35 or newer: Ubuntu 22.04 and later, Debian 12, Fedora 36, Linux Mint 21 and their successors. It draws through X11. On a Wayland desktop (Ubuntu's default, KDE Plasma 6, GNOME) it runs through XWayland, which every mainstream Wayland desktop provides, so you need do nothing.

To remove LuminaCAD: run ./install.sh --remove from the unpacked folder. Your licence stays in ~/.config/LuminaCAD until you delete it.

4.3 Checking the download

Each download has a .sha256 file beside it on the release page. To confirm a download is complete and unaltered:

- **Windows (PowerShell):**

  ```
  Get-FileHash luminacad-1.0.1-windows-x64.zip
  ```

  Compare the hash it prints with the one in the .sha256 file.
- **Linux:** run the following in the folder that holds both files. It should print OK.


  ```
  sha256sum -c luminacad-1.0.1-linux-x86_64.tar.gz.sha256
  ```

4.4 Screen size

LuminaCAD needs a window of at least 1000 × 620 pixels. On small screens (1024 × 768, 1366 × 768) it rearranges itself: - the presets become a drop-down list; - the view toolbar takes two rows; - the settings column scrolls.

On Windows with display scaling above 100 % (common on laptops), Windows enlarges LuminaCAD to the right size, so it may look slightly soft. That is expected.

5. A tour of the window

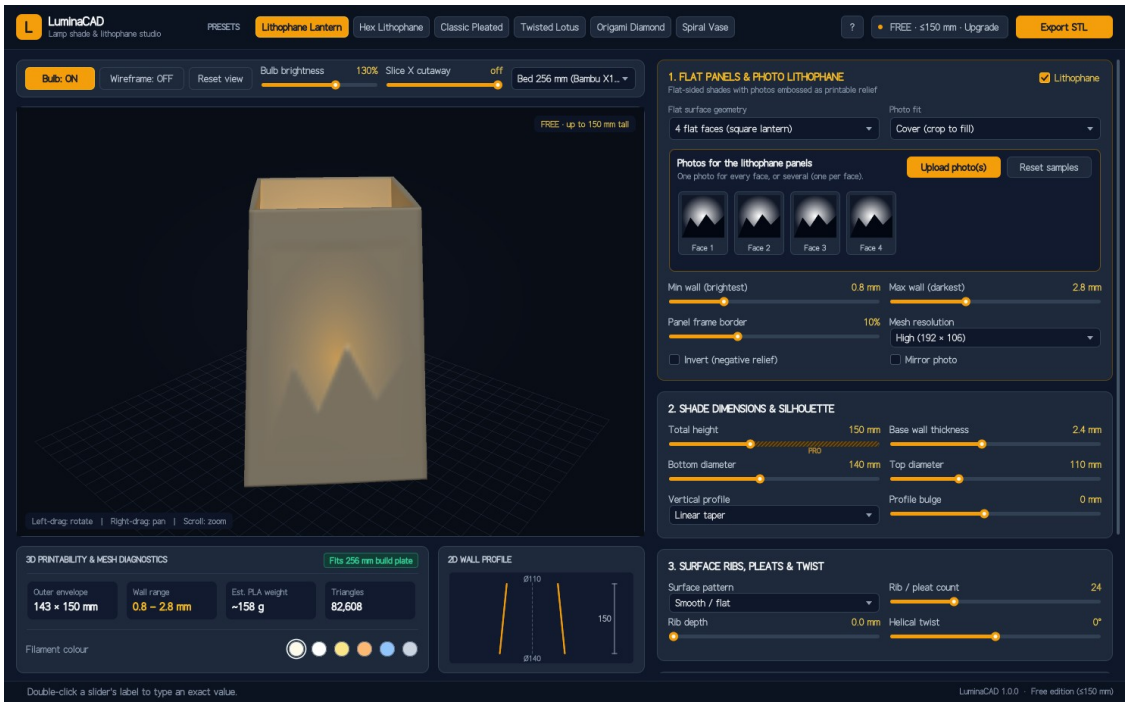

Header (top bar), left to right:

- **LuminaCAD logo and name.**
- **Presets:** six ready-made designs. One click loads one; you can then change anything. See §8.
- **?:** the About box, with the version and edition.
- **Licence button:** shows FREE · ≤150 mm · Upgrade in the free edition and PRO · Licensed in Pro. Click it to see or install a licence.
- **Export STL:** saves the current design as an STL file for your slicer.

Left column:

- **View toolbar:** turn the bulb on or off, show the wireframe (the triangles the shape is made of), reset the view, set the bulb's brightness, cut the shade open with **Slice X cutaway**, and choose your printer's bed size.
- **3D view:** drag with the left mouse button to turn the shade, drag with the right button to move the view up or down, and use the wheel to zoom. The badge at the top right shows your edition's height limit.
- **3D printability & mesh diagnostics:** the overall size, wall thickness, estimated weight of plastic, triangle count and whether the shade fits your bed. Below them are **filament colour** swatches, which change the preview colour only.
- **2D wall profile:** the shade's outline from the side, with its height and top and bottom diameters.

Right column (scroll with the mouse wheel):

1. **Flat panels & photo lithophane:** the number of flat sides, photos and lithophane settings.
2. **Shade dimensions & silhouette:** height, wall, diameters and side profile.
3. **Surface ribs, pleats & twist:** surface patterns.
4. **Lamp socket ring (fitter):** the ring that sits on the lamp holder.
5. **Edition card:** your edition, and the **Enter licence…** button in the free edition.

Status bar (bottom): messages appear here on the left, for example “Saved … (82,608 triangles)”. Your version and edition are on the right.


6. Your first lamp shade, step by step

This walk-through makes a four-sided photo lantern with a different photo on each face.

1. **Start LuminaCAD.** It opens with the **Lithophane Lantern** preset: a four-sided lantern with sample mountain pictures.

2. **Look around.** Drag in the 3D view to turn the lantern. The panels glow warm where the plastic is thin.

3. **Choose your photos.** In section 1, click **Upload photo(s)**. A file window opens:

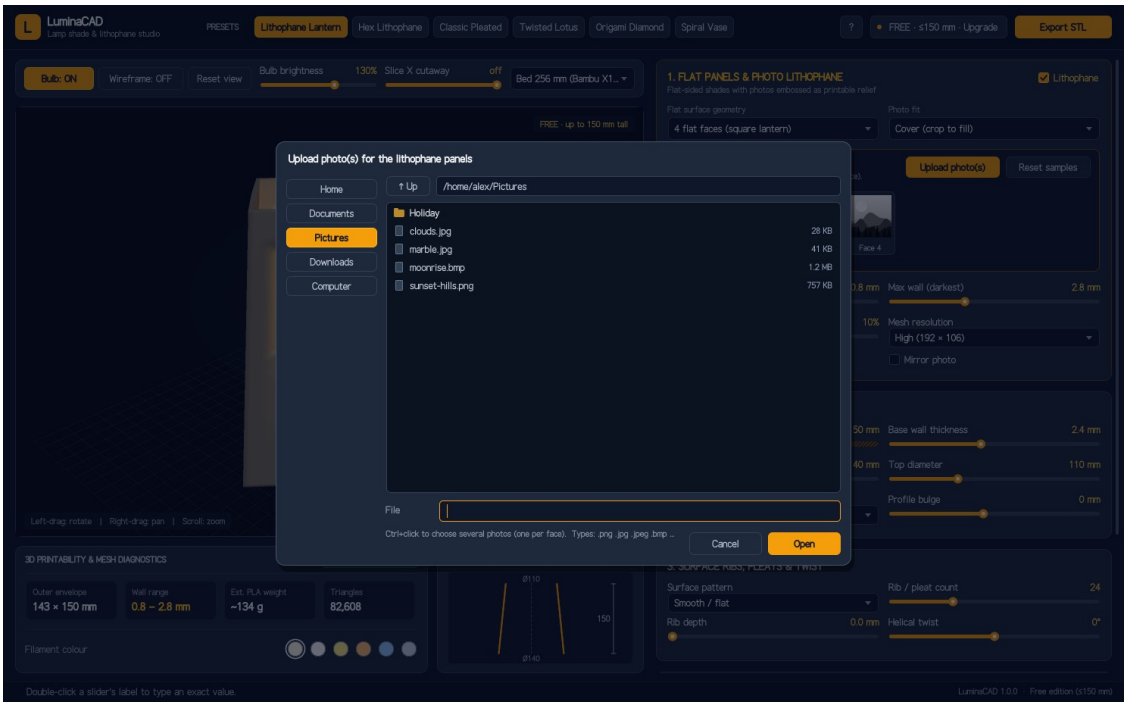

   - To use **one photo on every face**, click it and press **Open**.
   - To use a **different photo on each face**, hold **Ctrl** and click four photos, then press **Open**. They fill Face 1 to Face 4 in the order they are listed.

    - To change one face later, click its thumbnail (Face 1, Face 2 …) and pick a photo.
4. **Check the faces.** The thumbnails show the part of each photo that will be used. If heads are cut off, change **Photo fit** to **Contain whole photo** (§9.2).
5. **Set the size.** In section 2, drag **Total height**, or **double-click the words "Total height"** and type a number, then press Enter. The free edition goes up to 150 mm. Set the bottom and top diameters the same way.
6. **Choose the socket.** In section 4, click **E27 40.5** for a standard large screw bulb holder, or **E14 28.5** for a small one. Measure your holder if unsure: the hole must slip over the threaded part (§12).
7. **Check the fit.** In the diagnostics, the badge should say **Fits … build plate**. If it says **Exceeds … bed!**, choose your printer in the toolbar's bed list, then reduce the diameters or height.
8. **Export.** Click **Export STL** (top right), choose a folder, keep or change the name, and press **Save**.
9. **Print it**, as described next.

7. Printing the shade

7.1 Lithophane shades

Slicer setting	Recommended	Why
Filament	White or natural PLA (PETG for warmth)	Light must pass through evenly
Layer height	0.12–0.16 mm	Finer layers give smoother shading
Infill	**100 %**	Any gap shows as a dark speck in the picture
Walls / perimeters	3 or more	With 100 % infill the walls are solid anyway
Orientation	Upright, as exported (bottom ring on the bed)	Layers run around the shade, so the picture keeps its detail
Supports	Off	The shapes are designed to print without them
Seam	Aligned or rear	Keeps the seam on one corner
Speed	Slow outer walls (≤ 40	Cleaner surface

Slicer setting	Recommended	Why
	mm/s)	

7.2 Patterned shades without photos

Use 2–3 walls and 15–20 % infill. The **Spiral Vase** preset has no fitter and a thin 1.2 mm wall, made for your slicer's *spiral vase* (or *vase mode*) setting. In vase mode the slicer prints only the outside skin as one continuous spiral.


7.3 Fitting the shade

The socket ring is part of the shade, so there is nothing to glue. Unscrew the lamp holder's shade ring, drop the shade's ring over the threaded sleeve, and screw the shade ring back on to clamp it.

Part 2: Everyday use

8. Presets

Preset	What it is	Notable settings
Lithophane Lantern	Four flat photo panels, tapered	4 faces, 170 mm (150 mm in Free), Ø140 → Ø110, bottom spider
Hex Lithophane	Six photo panels	6 faces, 175 mm (150 in Free), Ø160 → Ø130
Classic Pleated	Accordion-pleated round shade	36 pleats 6.5 mm deep, Ø180 → Ø110, 165 mm (150 in Free)
Twisted Lotus	Bulging round shade with twisted flutes	Bulbous profile, 20 scallops, 95° twist
Origami Diamond	Six-sided hourglass with diamond facets	Origami pattern, 30° twist, top pendant spider
Spiral Vase	Tulip-shaped, ribbed, open	Sine ribs, 60° twist, 1.2 mm wall, no fitter

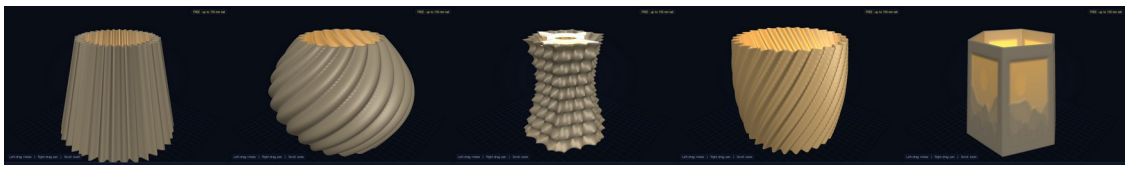

A preset changes only the settings listed for it; anything else you set stays as it was. In the free edition, presets designed taller than 150 mm are built at 150 mm, and the status bar says so.

9. Section 1: Flat panels & photo lithophane

9.1 Flat surface geometry

Choice	Result
Round (no flat faces)	A round shade. A lithophane wraps all the way round as one 360° picture.
3, 4, 5, 6 or 8 flat faces	A lantern with that many flat panels. Each panel takes its own photo.

The faces are truly flat between the corners, which is what you want for a lithophane: the picture is not curved.

9.2 Photo fit

Choice	What happens	Use when
Cover (crop to fill)	The photo fills the panel; edges that don't fit are cut off	Most photos
Contain whole photo	The whole photo is shown; empty areas become light grey (thin, bright plastic)	Everything in the picture must show
Stretch to panel	The photo is squashed to fit exactly	Patterns and textures where distortion doesn't matter

9.3 Photos and slots

- **Upload photo(s):** one photo is used on every face. Several photos (Ctrl+click) fill faces 1, 2, 3 … in order.
- **Click a face thumbnail** to replace that face's photo only.
- **Reset samples** brings back the built-in mountain pictures.
- **Lithophane** (tick box, top right of the section): untick it for a plain shade of even thickness. Your photos are kept.

9.4 Lithophane settings

Setting	Meaning
Min wall (brightest)	Plastic thickness where the photo is

Setting	Meaning
	white. Thinner gives brighter highlights but a more fragile wall. 0.8 mm is a good start.
Max wall (darkest)	Thickness where the photo is black. Thicker gives deeper shadows. 2.8 mm is a good start.
Panel frame border	A solid frame around each picture, as a percentage of the panel. It strengthens the panel and its edges.
Mesh resolution	How finely the shape is divided. **High** suits most shades. **Ultra** gives sharper lithophane detail (about twice the triangles). **Draft** is for quick experiments.
Invert (negative relief)	Swaps thick and thin, for a photo-negative effect.
Mirror photo	Flips each photo left to right, for example to correct a mirrored scan or text.

10. Section 2: Shade dimensions & silhouette

Setting	Meaning
Total height	70 mm up to 150 mm (Free) or 280 mm (Pro). In the free edition the part of the slider above 150 mm is hatched and marked **PRO**.
Base wall thickness	Thickness of the wall where there is no lithophane (and of the whole wall when the lithophane is off).
Bottom / top diameter	Across the shade, at the bottom and top, measured to the corners on a flat-sided shade.
Vertical profile	The side outline: **Linear taper** (straight), **Classic bell**, **Hourglass waist**, **Bulbous lantern**, **Tulip blossom**, **Pagoda tiered**. Watch the 2D profile change.
Profile bulge	How strongly the profile curves outward

Setting	Meaning
	(positive) or inward (negative).

For a lithophane, keep **Linear taper** with **bulge 0**, so the panels stay flat from top to bottom.

11. Section 3: Surface ribs, pleats & twist

Setting	Meaning
Surface pattern	**Smooth / flat**, **Sinusoidal ribs** (soft waves), **Accordion pleats** (sharp folds), **Fluted scallops** (rounded flutes), **Origami facets** (diamond pattern).
Rib / pleat count	Number of ribs round the shade (4–72).
Rib depth	How far the ribs stand out, in mm. 0 switches the pattern off.
Helical twist	Rotates the pattern from bottom to top, up to ±180°, giving a spiral look.

Patterns and lithophanes can be combined, but a photo on a ribbed panel is hard to read. Patterns look best on round shades.


12. Section 4: Lamp socket ring (fitter)

Setting	Meaning
E27 40.5 / E14 28.5 / Harp 11	Quick choices for the hole size: E27 (large Edison screw), E14 (small Edison screw), and a harp or threaded-rod fitting.
Fitter placement	**Bottom socket spider** for table lamps with the bulb pointing up. **Top pendant spider** for ceiling pendants. **Recessed spider** sits 25 mm below the top, hiding the holder. **None** gives an open shade or vase.
Socket hole diameter	The hole in the ring. Measure your lamp holder's threaded sleeve and add about 0.5 mm.
Support spokes	3 to 6 arms from the ring to the wall.
Ring & spoke height	Thickness of the ring and spokes. 5 mm

Setting	Meaning
	is strong enough for most shades; use 6–8 mm for heavy or tall shades.

13. The 3D view and its toolbar

Control	Action
Left-drag in the view	Turn the shade round and tilt the view
Right-drag (or Shift + left-drag)	Move the view up and down
Mouse wheel	Zoom in and out
Reset view	Back to the starting view
Bulb: ON / OFF	Lights the shade from inside or shows it unlit
Bulb brightness	Brighter or dimmer virtual bulb (preview only)
Wireframe	Shows the triangles that make the shape
Slice X cutaway	Cuts the shade open so you can see the wall thickness, the bulb and the spider. Slide fully right to switch it off.
Bed list	Your printer’s bed size, for the grid and the “Fits bed” check

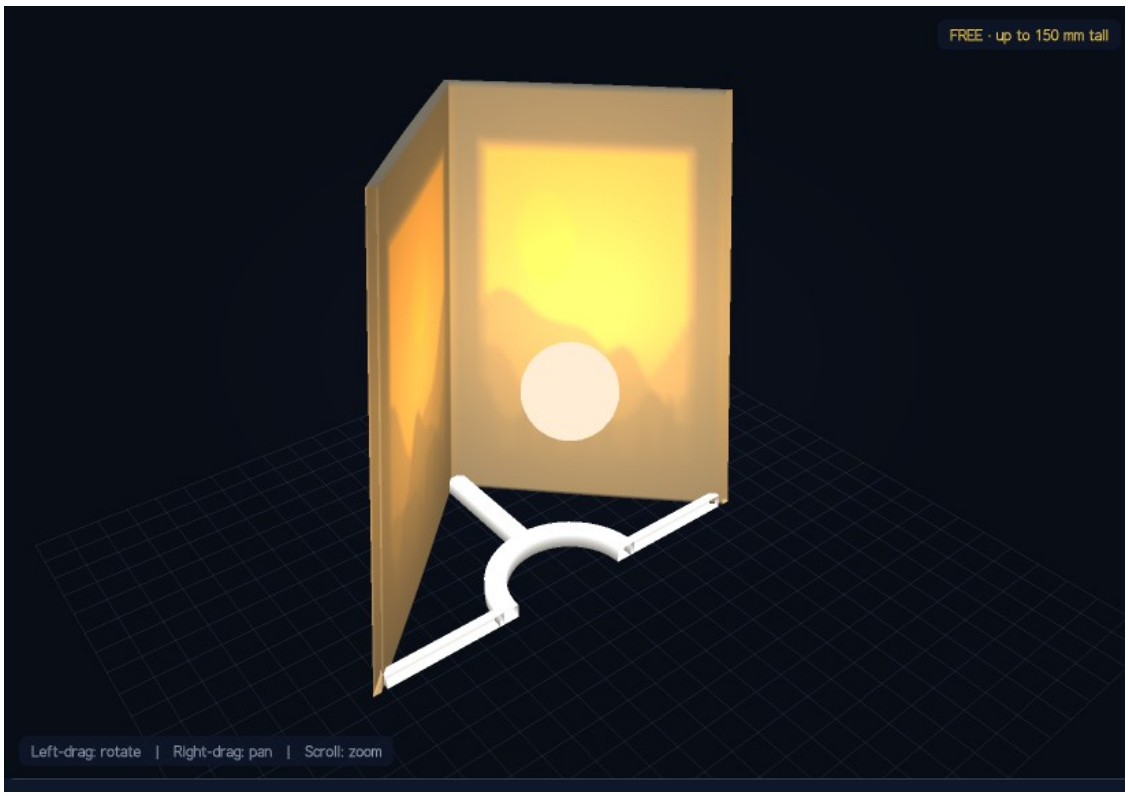

The picture sharpens a moment after you stop dragging. While you drag, LuminaCAD draws a quicker preview so it stays smooth.

14. Diagnostics and the 2D profile

Reading	Meaning
Outer envelope	Widest diameter × height, in mm. This is the space the shade needs on the bed.
Wall range	Thinnest to thickest wall (with the lithophane on), or the single wall thickness.
Est. PLA weight	Plastic needed at 100 % infill, from the exact volume of the shape. With less infill it will use less.
Triangles	Size of the 3D model. Most slicers handle a million or more.
Fits / Exceeds bed	Green when the shade fits the bed chosen in the toolbar, red when not.

15. Exporting the STL

Click **Export STL**. In the save window:

- Choose a folder from the list on the left (Home, Documents …) or double-click folders.
- Type a name; .stl is added if you leave it off.
- If the file already exists, LuminaCAD asks you to press **Replace** to confirm.

The status bar then reports the file name and triangle count. The STL is in millimetres, standing upright on the bed, ready for the slicer.

Part 3: Free and Pro editions


16. What the editions are

	Free	Pro
Price	Free	Paid licence
Shade height	70–**150 mm**	70–**280 mm**
All shapes, patterns, lithophanes, fitters, presets, export	✓	✓
Program	Same	Same, with a licence file loaded


There is only one program. The Pro edition is the free program with a licence file installed. You never reinstall.

17. Buying and installing a Pro licence

1. Buy a Pro licence (see **?** → About, or the edition card, for where). You receive a small file named like LC-2026-0001.lic by e-mail.
2. Save the file anywhere, for example in Downloads.
3. In LuminaCAD, click the **FREE · ≤150 mm · Upgrade** button (top right), or **Enter licence…** at the bottom of the right column.

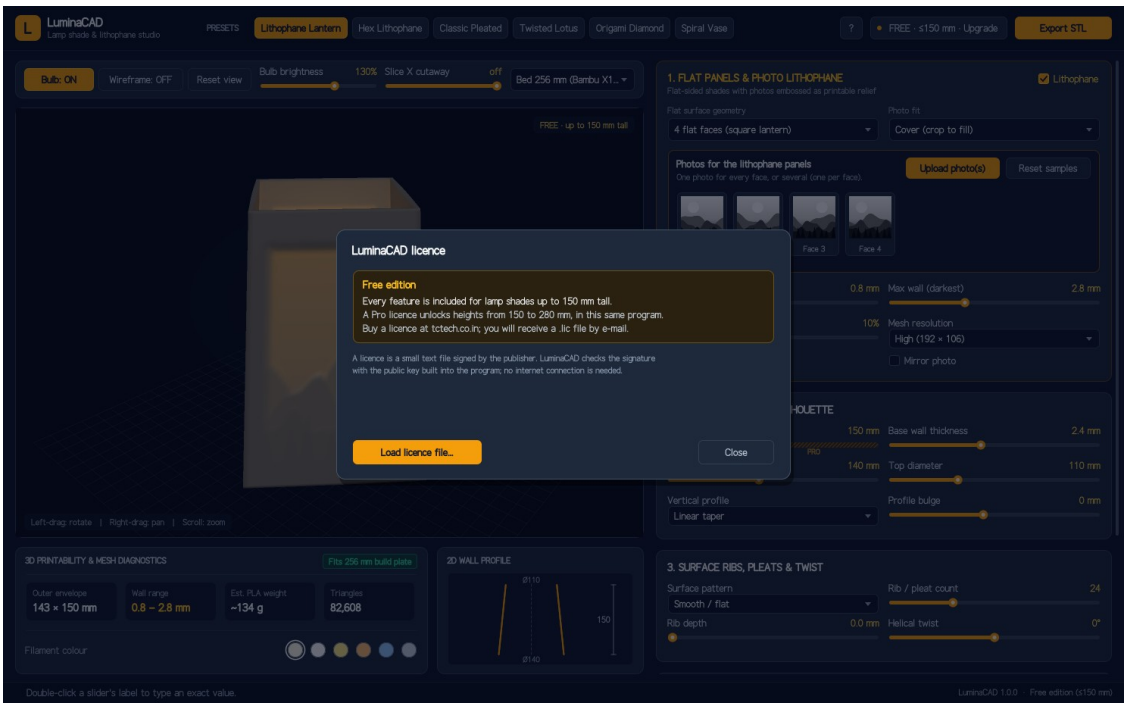

4. Click **Load licence file...**, select the .lic file and press **Open**.
5. The window turns green and shows your name and serial. The height slider now goes to 280 mm.

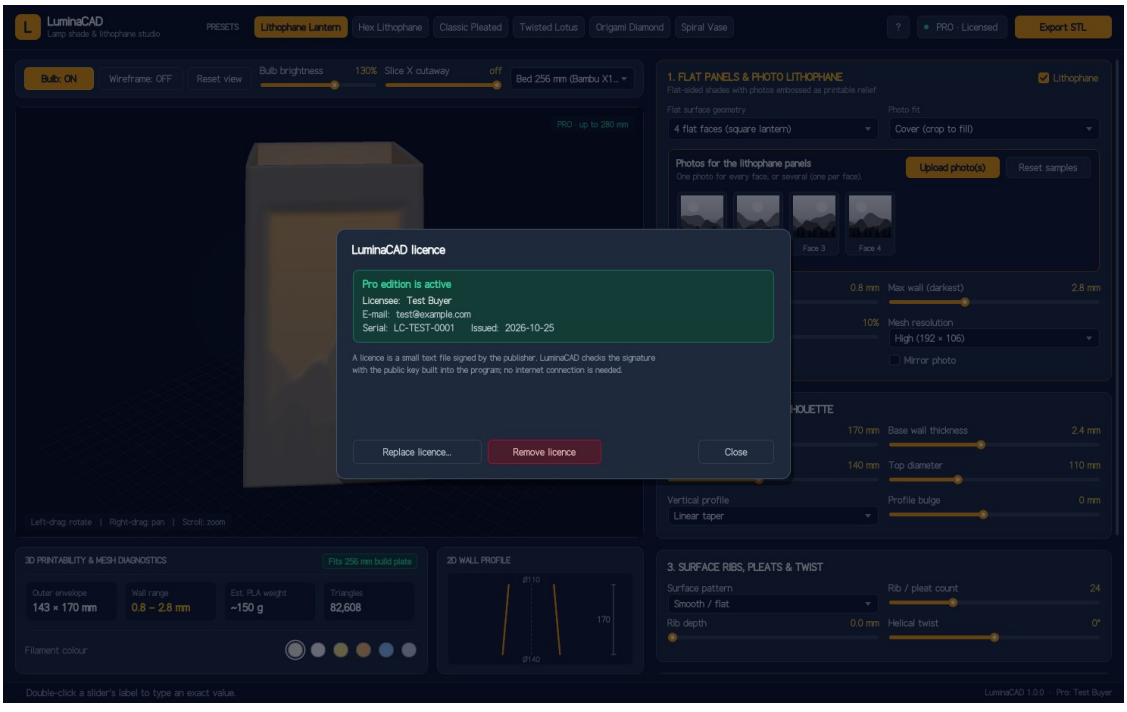

No internet connection is needed: the licence is checked inside the program.

From a terminal, the same is done with:

luminacad --install-license ~/Downloads/LC-2026-0001.lic (Linux)
luminacad-cli.exe --install-license %USERPROFILE%\Downloads\LC-2026-0001.lic

(Windows)
luminacad --license-status

18. Moving, backing up or removing a licence

- **Back up** the .lic file you received, with your other important documents.
- **New computer:** install LuminaCAD and load the same .lic file. The same licence file works on Windows and on Linux.
- **Remove:** open the licence window and click **Remove licence**, or run luminacad --remove-license. LuminaCAD returns to the free edition. Designs taller than 150 mm are brought back to 150 mm.
- **Never edit the licence file.** Changing even one letter, or a space, makes it invalid. If you have edited it, use the original from the e-mail.

Part 4: Getting the best results

19. Choosing and preparing photos

- **Good photos:** strong contrast, a clear subject, not too much fine detail. Portraits, pets, landscapes with a bright sky, silhouettes and architecture work well.
- **Difficult photos:** very dark photos (the panel becomes thick and dim), very busy photos, and small text.
- **Shape:** the panels are taller than they are wide on most lanterns. Portrait-format photos usually fill them best with **Cover**.
- **Formats:** PNG, JPEG, BMP and PPM/PGM. A phone's sideways photo is turned upright automatically (EXIF orientation).
- **Not supported:** CMYK JPEGs from print workflows, and arithmetic-coded JPEGs. Re-save them as ordinary RGB JPEG or PNG in any image editor.
- **Resolution:** each panel uses a 128 × 128 grid. Large photos are fine: they are reduced on loading.

20. Lithophane tuning

Want	Change
Brighter highlights	Lower **Min wall** (no less than 0.6 mm on most printers)
Deeper shadows, more contrast	Raise **Max wall** (3.0–3.5 mm)
More detail	**Mesh resolution: Ultra**, and print at 0.12 mm layers
Less fragile panels	Raise **Min wall** to 1.0 mm and the **Panel frame border** to 12–15 %

Want	Change
A picture that reads correctly from outside	Leave **Mirror photo** off (LuminaCAD puts the relief on the outside, so pictures read correctly)

Turn **Bulb: ON** and lower the **Bulb brightness** to judge the picture as it will look in a dim room.

21. Designing for the printer

- **Overhangs:** most printers manage outward slopes up to about 45° without support. Very strong **Bulbous** or **Pagoda** profiles with large bulge values can exceed that near the bottom.
- **Thin walls:** keep the wall at least two nozzle widths thick (0.8 mm for a 0.4 mm nozzle).
- **Tall shades** (Pro): print slowly near the top and use a brim if the base is narrow.
- **Bed size:** check **Fits bed**. If a shade is too wide, reduce the diameters, or the rib depth on ribbed shades.

Part 5: Troubleshooting

22. Problems and fixes

Problem	Cause and fix
Windows: “Windows protected your PC”	Click **More info**, then **Run anyway** (§4.1).
Windows: nothing happens when starting it from inside the zip	Extract the zip first, then run luminacad.exe from the extracted folder.
Windows: a command such as luminacad.exe --selftest prints nothing	Use luminacad-cli.exe for commands; luminacad.exe is the windowed program.
Linux: LuminaCAD doesn’t start; the terminal says “cannot open the X display”	It was started without a desktop (for example over SSH). Start it from the desktop, or use ssh -X.
Linux: “needs a 24-bit TrueColor display”	Very old or remote display settings. Use a normal desktop session.
The height slider stops at 150 mm	This is the free edition’s limit. See Part 3.
“Preset height … reduced to 150 mm”	The preset was designed taller; the free edition builds it at 150 mm.

Problem	Cause and fix
A photo won't load	See the message in §23. Re-save the photo as PNG or RGB JPEG.
The photo is upside down or sideways	Some editors strip the orientation tag. Rotate the photo in an editor and save it again.
The picture is too dark when printed	Use a brighter photo, lower **Max wall**, or use whiter filament.
The picture is faint	Raise **Max wall**; print at 100 % infill; use a brighter bulb.
Dark specks in the printed picture	Infill below 100 %, or gaps between walls. Use 100 % infill.
"Exceeds … bed!"	Choose your printer's bed in the toolbar, then reduce the diameters or height.
The 3D view is slow	Use **Mesh resolution: High** or **Draft** while designing; switch to Ultra before exporting.
The ring doesn't fit the lamp holder	Measure the threaded sleeve and set **Socket hole diameter** to that plus 0.5 mm.

23. Messages explained

Message	Meaning
Free edition: lamp shades up to 150 mm tall…	You tried to go above the free limit.
Export refused: this shade is … mm tall; the free edition exports up to 150 mm	A last safety check; should not normally appear.
Could not load the photo. … not a PNG, JPEG, BMP or PPM image	The file is another format (HEIC, WebP, TIFF …). Convert it.
… lossless or arithmetic-coded JPEG is not supported	A rare JPEG type. Re-save as a normal JPEG.
… unsupported JPEG (needs 1 or 3 colour components)	A CMYK JPEG. Re-save as RGB.
… corrupt compressed data / truncated	The file is damaged or incompletely downloaded.
Licence not accepted: licence signature	The file was edited, damaged, or is not a

Message	Meaning
does not match	LuminaCAD licence. Use the original file.
Licence not accepted: not a LuminaCAD licence file	A different file was chosen.
Licence is valid but could not be saved	The settings folder is not writable; check ~/.config.

24. Self-test and diagnostics

Run luminacad --selftest in a terminal (on Windows: luminacad-cli.exe --selftest in the Command Prompt or PowerShell, from the LuminaCAD folder). It checks:

- the signature code against the official test values;
- that unsigned or altered licences are refused;
- the free height limit, at both the settings and the export stage;
- that every shape option produces a closed (watertight) shell;
- the image decoder.

It ends with self-test: all checks passed. If you report a problem, include that line and the output of luminacad --version and luminacad --license-status.

Part 6: Expert reference

A. Parameter reference

Parameter	Range	Step	Default
Total height	70–150 mm (Free); 70–280 mm (Pro)	1	150
Base wall	0.8–4.5 mm	0.1	2.4
Bottom diameter	50–260 mm	2	140
Top diameter	40–260 mm	2	110
Profile bulge	−40 to 50 mm	1	0
Rib count	4–72	1	24
Rib depth	0–18 mm	0.5	0
Twist	−180° to 180°	5	0
Min wall	0.4–2.0 mm	0.1	0.8

Parameter	Range	Step	Default
Max wall	1.6–5.0 mm	0.1	2.8
Frame border	3–25 %	1	10
Socket hole	10–65 mm	0.5	40.5
Spokes	3–6	1	4
Ring height	3–12 mm	0.5	5
Bulb brightness (view)	0–200 %	1	130
Slice X (view)	−150 to 160 mm (≥158 = off)	1	off

Slider steps apply when dragging. A typed value is used as typed (within the range), so you can enter, say, 123.5 mm.

B. Geometry in detail

B.1 Coordinates

In the program the shade stands on the Y axis (Y up), from y = 0 to y = height. Radii are measured from the axis. On export, Y becomes Z.

B.2 Profile

With v = y / height, r_b = bottom diameter / 2 and r_t = top diameter / 2, the base radius is $r = r_b + (r_t - r_b)\cdot v$, plus:

Profile	Added term
Linear	$\text{bulge} \cdot \sin(\pi v)$
Bell	$\sin(\pi v) \cdot (\text{bulge} - 10\cdot\cos(\pi v))$
Hourglass	$-\sin(\pi v) \cdot (20 - \text{bulge}/2)$
Bulbous	$\sin(\pi v) \cdot (24 + \text{bulge})$
Tulip	$18\cdot\sin(0.85\pi v) + 14\cdot v^3$
Pagoda	$6\cdot\sin(3\pi v) + \text{bulge}\cdot\sin(\pi v)$

The result is never less than 15 mm.

B.3 Flat faces

For n faces, a point at angle θ lies in sector $k = \lfloor \theta / (2\pi/n) \rfloor$. With half-sector $\alpha = \pi/n$ and local angle $\varphi = \theta - k\cdot 2\pi/n$, the radius is multiplied by $\cos\alpha / \cos(\varphi - \alpha)$. This

makes each face a straight chord: the corners lie at the profile radius, and face centres sit at cos α of it.

The lithophane's horizontal coordinate on a face is u = ½ + tan(φ − α) / (2·tan α). This is linear along the flat face, so the photo is not distorted.

B.4 Patterns

With phase p = (2πu + twist·v)·ribs, where u is the angle fraction round the shade and twist is in radians, the radial offset is:

Pattern	Offset
Sine	depth · sin p
Pleats	depth · tri(p), where tri is a triangle wave from −1 to 1
Scallop	depth · |sin(p/2)|
Origami	depth · tri(p/2 + 8πv) · tri(p/2 − 8πv)

B.5 Wall and lithophane

- **Inner and outer radius.** Inner radius = max(8, profile·face factor + pattern − base wall/2). Outer radius = inner radius + local wall.
- **Local wall.** In the frame border it is max(base wall, max wall). Inside the picture it is min + (1 − L)·(max − min), where L is the luminance (0–1) sampled bilinearly from the 128 × 128 map. With Invert, it uses L instead of (1 − L). Within 4 % of the picture edge it blends linearly towards max wall.

B.6 Mesh

- **Grid size.** There are segV = round(0.55·R) rings of segU columns. For a round shade segU = R; for n faces it is R rounded up to a multiple of n. R is the mesh resolution: 120, 192 or 264.
- **Vertices.** Each grid point has an outer and an inner vertex. The columns wrap round, so the seam is closed. The top and bottom rims join the inner and outer walls.
- **Triangles.** The count is 4·segU·segV + 4·segU, plus 384 for the ring and 12 per spoke.

C. The STL file

Property	Value
Format	Binary STL, little-endian, 50 bytes per triangle
Units	Millimetres

Property	Value
Axes	Z up; the shade stands on Z = 0, centred on X = Y = 0
Header	LuminaCAD binary STL (mm, Z up)
Normals	Per facet, pointing out of the solid
Bodies	The shade is one closed shell. The ring and each spoke are further closed bodies overlapping it; slicers merge them.

D. Command line

On Windows use luminacad-cli.exe in place of luminacad for every command below. luminacad.exe is the windowed program and has no console of its own.

```
luminacad                              open the designer
luminacad --export-stl OUT.stl [options]     export without opening a window
   --preset lithophane|hex-litho|pleated|lotus|origami|vase
   --height MM                         limited to the edition maximum
   --photo FILE [FILE ...]                one photo for all faces, or one per face
luminacad --install-license FILE.lic
luminacad --remove-license
luminacad --license-status
luminacad --selftest
luminacad --screenshot OUT.ppm [--size WxH] [--preset P] [--height MM]
        [--orbit THETA,PHI,RADIUS] [--slice X] [--dialog license|about|photos]
luminacad --version | --help
```

Exit codes: 0 success; 1 failure (bad photo, licence refused, self-test failed); 2 export refused; 64 bad command line.

Example (batch export of a photo lantern):

```
luminacad --export-stl lantern.stl --preset lithophane --height 140 --photo a.jpg b.jpg c.jpg d.jpg
```

E. Files and folders

What	Where
Program (Windows)	Wherever you extracted the zip: luminacad.exe, luminacad-cli.exe
Installed licence (Windows)	%APPDATA%\LuminaCAD\license.lic (usually C:\Users\<you>\AppData\Roaming\LuminaCAD)

What	Where
Program (Linux)	~/.local/bin/luminacad (after ./install.sh)
Menu entry, icon (Linux)	~/.local/share/applications/luminacad.desktop, ~/.local/share/icons/hicolor/scalable/apps/luminacad.svg
Installed licence (Linux)	~/.config/LuminaCAD/license.lic (or $XDG_CONFIG_HOME/LuminaCAD/)
Designs	LuminaCAD 1.0 does not save design files; export the STL.

F. Licence file format

A licence is UTF-8 text with one key=value per line:

Key	Content
product	LuminaCAD
edition	Pro
licensee	Buyer's name
email	Buyer's e-mail
serial	LC-YYYY-NNNN
issued	Date, YYYY-MM-DD
signature	128 hexadecimal digits (64 bytes)

- **Signature.** An Ed25519 signature (RFC 8032) over every line except signature, in file order, each as key=value followed by a newline. Leading and trailing spaces are trimmed. Lines starting with # are comments and are not signed.
- **Verification.** LuminaCAD holds the publisher's public key and verifies offline. It accepts the licence only if the signature verifies, the product is LuminaCAD and the edition is Pro.

G. Mouse and keyboard

Input	Action
Left-drag in the 3D view	Orbit
Right-drag, or Shift + left-drag	Move the view up and down
Wheel over the 3D view	Zoom
Wheel over the right column	Scroll the settings

Input	Action
Wheel over an open list	Scroll the list
Double-click a slider’s label	Type an exact value; the typing replaces the old value
Enter / Tab	Apply a typed value
Esc	Cancel typing; close a list, dialog or the file window
↑ / ↓ in the file window	Move the selection
Ctrl + click in the photo window	Choose several photos
Double-click in the file window	Open a folder, or choose a file

H. Glossary

Term	Meaning
Lithophane	A picture formed by varying the thickness of a translucent material, seen with light behind it.
Fitter / spider	The ring and spokes that hold a shade on the lamp holder.
E27 / E14	Edison screw lamp holders with 27 mm and 14 mm bulb threads. The holder sleeves are about 40 mm and 28 mm across.
STL	A 3D model file made of triangles, read by every slicer.
Slicer	The program that converts a 3D model into printer instructions (G-code).
Infill	The inside filling of a printed part, as a percentage.
Vase mode	A slicer setting that prints one continuous spiral outer wall.
Watertight	A model whose surface is fully closed, so slicers can tell inside from outside.
Ed25519	A modern digital-signature method, used to sign Pro licences.