
BIOBUZZ DRIVER CARD

Team 37102 · REV gamepad · BioBuzz TeleOp

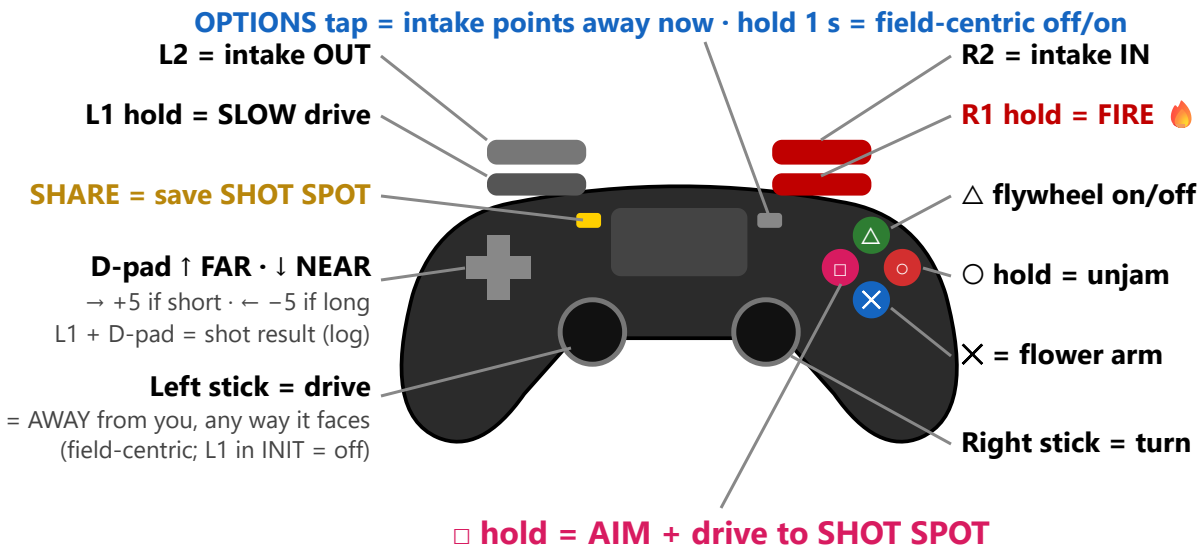

BEFORE THE MATCH

1. Gamepad on: **OPTIONS** + ✕
2. AUTO: pick **AUTO RED** or **AUTO BLUE**
3. 4 balls, **one per pocket**
4. TeleOp → INIT → read **Alliance** line. Wrong? ○ = **RED** ✕ = **BLUE** **Drive: FIELD-CENTRIC** (L1 = off) · don't move the robot in INIT
5. Battery ≥ **12.5 V**

HOW WE SCORE (every time)

1 **DRIVE CLOSE**
launcher toward our goal
tap △ to spin up

2 **HOLD SQUARE**
robot aims + drives
to the spot by itself

3 **FEEL THE BUZZ**
screen says
ON SPOT - FIRE

4 **KEEP □ + HOLD R1**
one ball every
half second

5 **LET GO, DRIVE OFF**
go get more balls

NO BUZZ = NO SHOT. Never shoot while moving. Last 20 s (3 buzzes) → PARK!

🔧 PIT CREW: SET THE SHOT SPOT (5 min)

do this once per event – the robot remembers it

1

📍

PARK ON YOUR BEST SPOT

where shots go in
launcher facing the goal

2

⚡

CHECK THE SPEED

camera sets it (AUTO)
→ / ← until balls land IN

3

□

HOLD □, LET GO

robot squares up
to the goal

4

💾

PRESS SHARE

buzz + screen:
SHOT SPOT saved

Test it: drive away, hold □ → the robot comes back, buzzes, fire 4 balls. Most go in? **Done!** Not good? Move a little, fix the speed, press SHARE again (it replaces the old spot).

🛠️ FIX IT FAST

Balls land SHORT	D-pad → (+5) one press at a time
Balls go LONG	D-pad ← (−5)
Left / right misses	That's aim, not speed → hold □ until the buzz
□ does nothing	Wrong alliance (`no BLUE CELL tags`): restart TeleOp, ○ / ✕
SHARE: "Can't save"	Turn the launcher toward our goal's tags
Always the same side	**BioBuzz Tune**: D-pad ← / →, SHARE saves
Balls stay in robot	**BioBuzz Tune**: D-pad ↑ = longer pause, SHARE saves
Windmill stuck	Hold ○ (unjam) 1 s, then R1 again
R1 waits: `FIRE HELD`	Screen says why → hold □; fires anyway after 1.5 s
Buttons don't work	Gamepad not connected → OPTIONS + ✕
Stick goes the wrong way	Intake away from you → tap **OPTIONS**. Still wrong: **hold OPTIONS 1 s** = robot-centric
Practice: teach speeds	**L1 + D-pad** after each ball: ↑ IN · ↓ short · → long · ← side

📺 READ THE SCREEN

Alliance	must match your bumper colour
Shot speed	`AUTO 41 in 1465 +0` = camera picked it `MANUAL` after D-pad ↑ / ↓ → □ = AUTO again
Launcher	**READY** = ok to fire
HIVE aim	tags seen + distance to the goal
Shot spot	`now 58 in (+6)` = 6 in too far **ON SPOT - FIRE** = go!
Drive	`FIELD-CENTRIC, intake +35 deg` = ok `NO HEADING` = robot-centric now