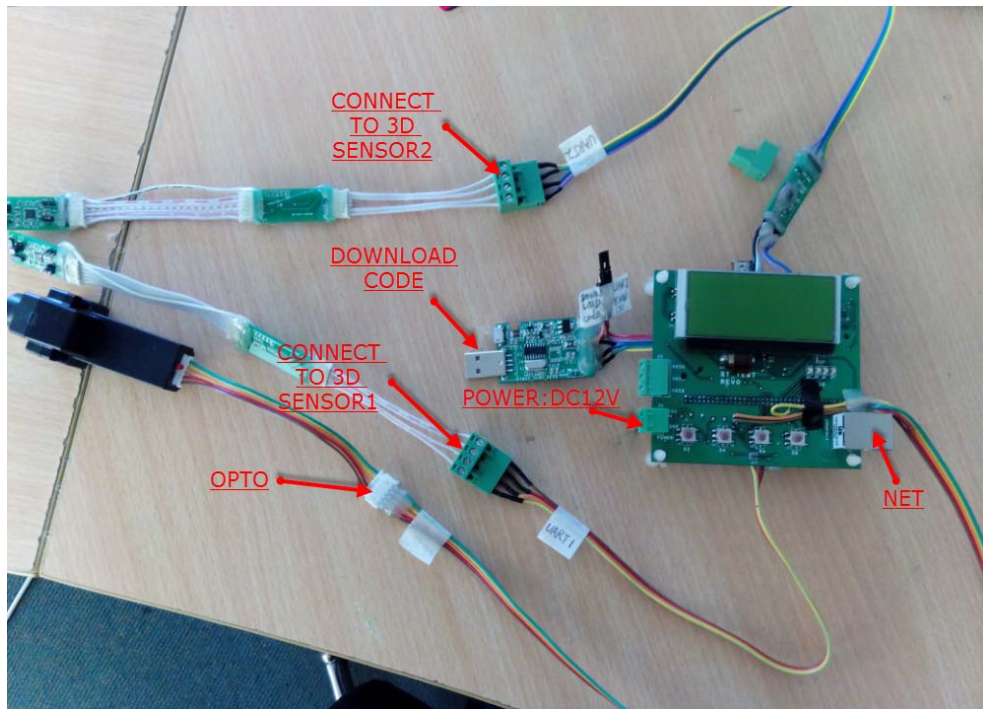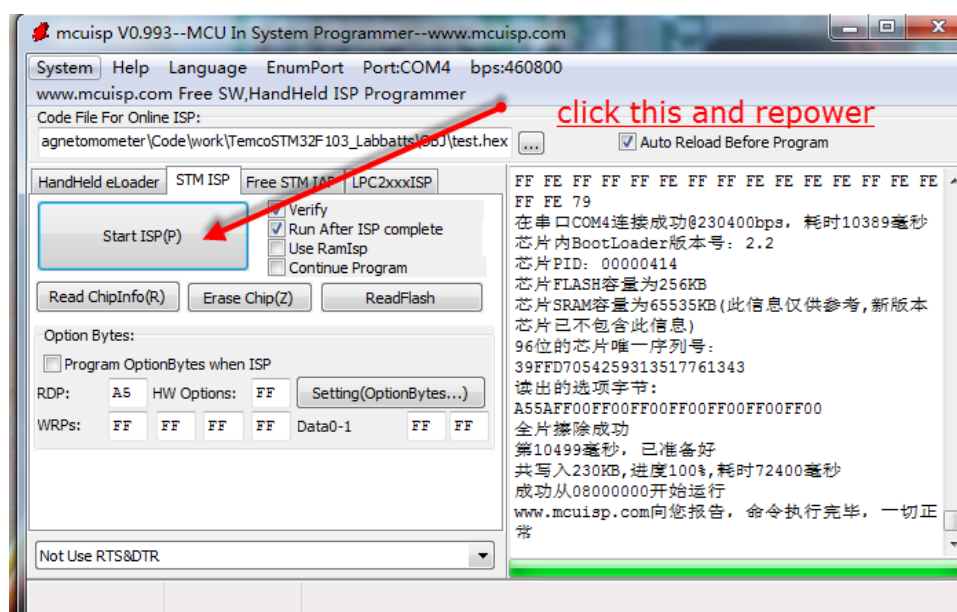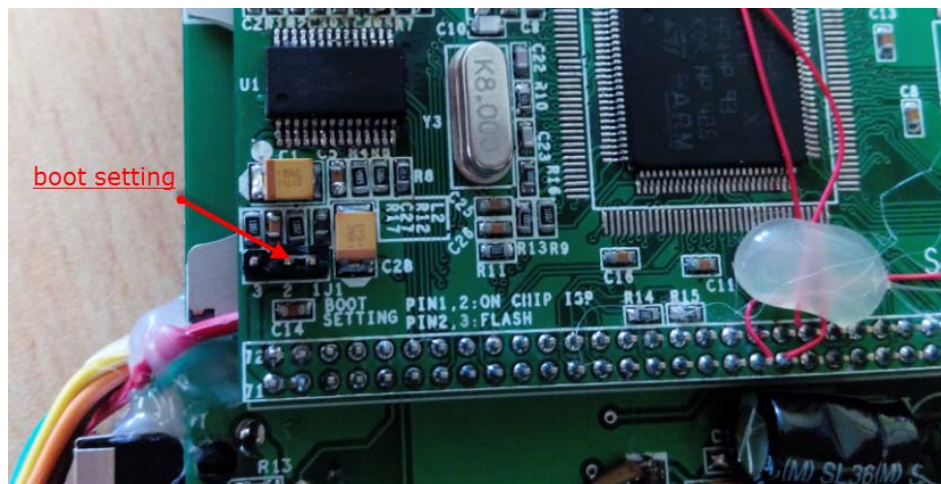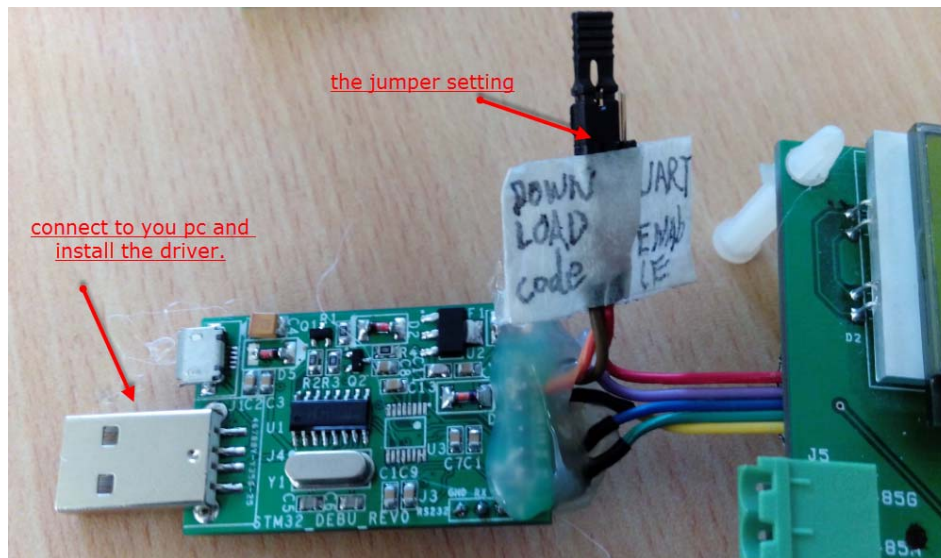1. Introduction.

2. DOWLAOD FIRMWARE.

When you have to update the latest firmware, you have operate as the below setting.

the jumper setting

connect to you pc and install the driver.

boot setting

click this and repower

3. When the firmware has been updated, we should reset the jumpers.