
ARM products / GPS Trip Meter

ARM G-Trip Compact

User Manual

Please read this manual before use and keep it for future reference.

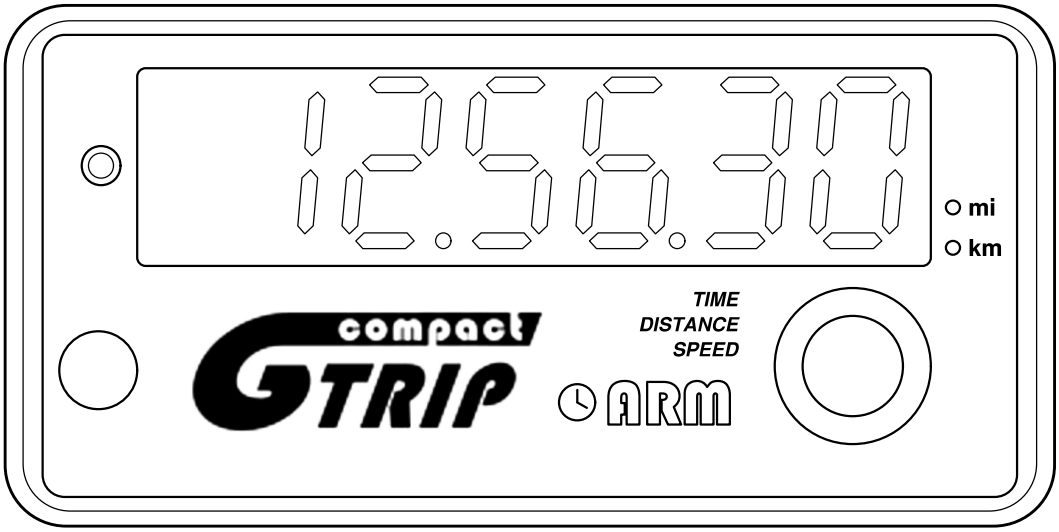

Contents

01	Safety precautions
02	Parts
03	Switching on
04	Switching screens
05	Clock: time hold
06	Time offset
07	Resetting the trip
08	Direction F / N / R
09	Distance calibration
10	Speed alert
11	Setting the speed limit
12	km / miles
13	Trip display format
14	Remote button
15	Automatic brightness
16	Specifications
17	Quick reference

CHAPTER 01

Safety precautions

▲ Power supply
Power is supplied through the USB-C socket (5 V) at the end of the cable on the right side. When using the vehicle's 12 V, use a USB power adapter. Never connect 12 V directly.

▲ Operating while driving
All operation while driving should be done by the co-driver. The driver must concentrate on driving.

▲ GPS start-up time
The first time you use the unit, or after it has been switched off for a long time, it may take several minutes before GPS measurement starts. Switch it on well before the event or drive.

GPS reception
Distance and speed are measured by GPS. Reception may not be possible under a roof or in tunnels. After switching on, check GPS reception (the display stops blinking) in an open area before use.

Mounting location
Do not use or store the unit where it can get wet or hot (e.g. in direct sunlight on the dashboard). Do not cover the light sensor.

CHAPTER 02

Parts



No.	Name	Function
1	Display	6-digit LED display. Shows the clock, trip distance and speed.
2	White button	Reset, time hold, changing settings and more.
3	Red button	Switches screens and enters / leaves the settings.
4	Light sensor	Adjusts the display brightness to the surroundings automatically.
5	mi / km lamps	Distance unit. The mi lamp lights when miles are selected.

Left side: 3.5 mm jack for the remote button.

Right side: power cable. Connect 5 V to the USB-C socket (female) at its end.

CHAPTER 03

Switching on

1. Connect 5 V to the USB-C socket at the end of the power cable. The unit switches on automatically; there is no power switch.
2. While searching for GPS, the display blinks.
3. When GPS is received, the blinking stops and the correct time is shown.



After GPS reception (clock)

What is kept
The last screen, trip distance, calibration, time offset, speed limit, km / miles and the trip display format are kept when the power is off.

At start-up the direction is forward (F) and the speed alert is OFF.

CHAPTER 04

Switching screens

Each short press of the red button switches clock → trip → speed → clock …

Screen	Display	Example
Clock	GPS time (h.mm.ss)	12.56.30
Trip	“t” (forward) followed by the distance driven (km)	t12.340
Speed	“SP” followed by the current speed (km/h)	SP 64

CHAPTER 05

Clock: time hold

1. On the clock screen, a short press of the white button shows the time at the moment you pressed.
2. It is held for 5 seconds. The separator dots blink while the time is held.
3. After 5 seconds, the current time is shown again.

Useful for checking splits during practice runs. The remote button does the same.

CHAPTER 06

Time offset

1. On the clock screen, long press the red button to set the time offset. “Utc 9” means UTC+9 (Japan).
2. Each short press of the white button adds 1 hour. After +14 it goes back to −12.
3. A long press of the white button returns to +9.
4. Press the red button to return to the clock. The setting is saved immediately.



Time offset (e.g. France, winter)

CHAPTER 07

Resetting the trip

1. Switch to the trip screen. The leading “t” shows forward direction.
2. A short press of the white button resets the trip to 0.
3. Counting restarts from 0. The reset value is saved immediately.



Before reset



After reset

CHAPTER 08

Direction F / N / R

Each long press of the white button switches the direction F → N → R → F. It works on the clock, trip and speed screens.

Direction	Action	Display
F (forward)	Counts distance.	Trip starts with “t”
N (stop)	Does not count distance.	Leading “n” blinks on the trip screen
R (reverse)	Subtracts the distance driven (never below 0).	Leading “r” blinks on the trip screen



Shown when switched



Trip screen in N

In N or R, the dot on the left also blinks on the clock and speed screens. To return to F, long press twice more (N → R → F).

CHAPTER 09

Distance calibration

When the displayed distance does not match the road book, adjust it with the calibration factor. Example: a 10.00 km section in the road book shows 10.200 km.

1. On the trip screen, long press the red button to enter calibration (C).
2. The white button adds 1 to the blinking digit; a short press of the red button moves to the next digit.
3. Set 10.200 ÷ 10.00 = 1.020. A long press of the white button returns to 1.000.
4. Long press the red button to save and return to the trip screen. The display now shows 10.000 km.

How to calculate
Calibration factor = G-Trip displayed distance ÷ road book distance



Calibration screen



Set to 1.020

The factor can be set from 0.500 to 2.000. It also applies to the speed display.

CHAPTER 10

Speed alert

1. On the speed screen, a short press of the white button turns the speed alert ON. “A” blinks while it is ON.
2. At or above the speed limit (60 by default) the whole display blinks fast. The alert also works on the clock and trip screens.
3. Below the limit the blinking stops.
4. To turn it OFF, press the white button briefly again on the speed screen.



Alert OFF



Alert ON (A blinks)

After switching the power on again, the speed alert starts OFF.

CHAPTER 11

Setting the speed limit

1. On the speed screen, long press the red button to set the speed limit.
2. Each short press of the white button adds 10. The range is 30–90; after 90 it goes back to 30.
3. Long press the red button to save and return to the speed screen.



Speed limit setting

CHAPTER 12

km / miles

1. Switch the power on (connect USB-C) while holding the red button to toggle between km and miles.
2. With miles, the mi lamp to the right of the display lights. Speed is shown in mph.
3. Do the same to return to km.

CHAPTER 13

Trip display format

There are two trip display formats. Switch the power on (connect USB-C) while holding the white button to toggle them. Do the same to return.

Format	Display	Maximum
Recce mode	3 decimals (12.340)	99.990 km
Normal mode	2 decimals (12.34)	999.99 km



Recce mode



Normal mode

CHAPTER 14

Remote button

Connect the supplied remote button (1 button) to the 3.5 mm jack on the left side to operate the unit from your hand.

Screen	Short press	Long press
Clock	Time hold	Switches the direction
Trip	Resets the trip	Switches the direction (same as a long press of the white button)

CHAPTER 15

Automatic brightness

The small round window at the top left of the display is the light sensor. When it gets dark, the display dims automatically so it does not dazzle at night. When it gets bright again, the display returns to normal brightness.

CHAPTER 16

Specifications

Item	Details
Dimensions	W 100 × H 50 × D 16.8 mm (excluding buttons, cable and other protrusions)
Power	USB-C (5 V), female socket at the end of the power cable on the right side
Display	6-digit LED (clock, trip, speed), mi / km lamps, automatic brightness by light sensor
Distance / speed	Measured by GPS. Calibration factor 0.500–2.000
Memory	Last screen, trip distance, calibration, time offset, speed limit, km / miles, trip display format
Connections	3.5 mm jack (remote button)
Supplied accessory	Remote button (1 button)

CHAPTER 17

Quick reference

Screen	White short	White long	Red short	Red long
Clock	Time hold	Direction F / N / R	To trip	Time offset
Trip	Reset	Direction	To speed	Calibration
Speed	Speed alert ON / OFF	Direction	To clock	Speed limit

Setting screen	White short	White long	Red short	Red long
Calibration (C)	+1 on the blinking digit	Back to 1.000	Next digit	Save, back to trip
Time offset (Utc)	+1 hour	Back to +9	Back to clock	—
Speed limit	+10 (30–90)	—	—	Save, back to speed

At power-on	Effect
Hold the red button	km ⇔ miles
Hold the white button	Recce mode ⇔ normal mode

An animated manual is also available: manual.rally-arm.com