

Accelerometer


Accelerometer's interrupt is configured to active low mode in default. The inverter inverts the signal.

Micro-USB-B + ESD Protection

LEDs (uC + GSM)

VLMS1300-GS08 Super red (Vf typical 2V0) VLMO1300-GS08 Soft orange (Vf typical 2V0) VLMG1300-GS08 Yellow green (Vf typical 2V0)

_USB_DP

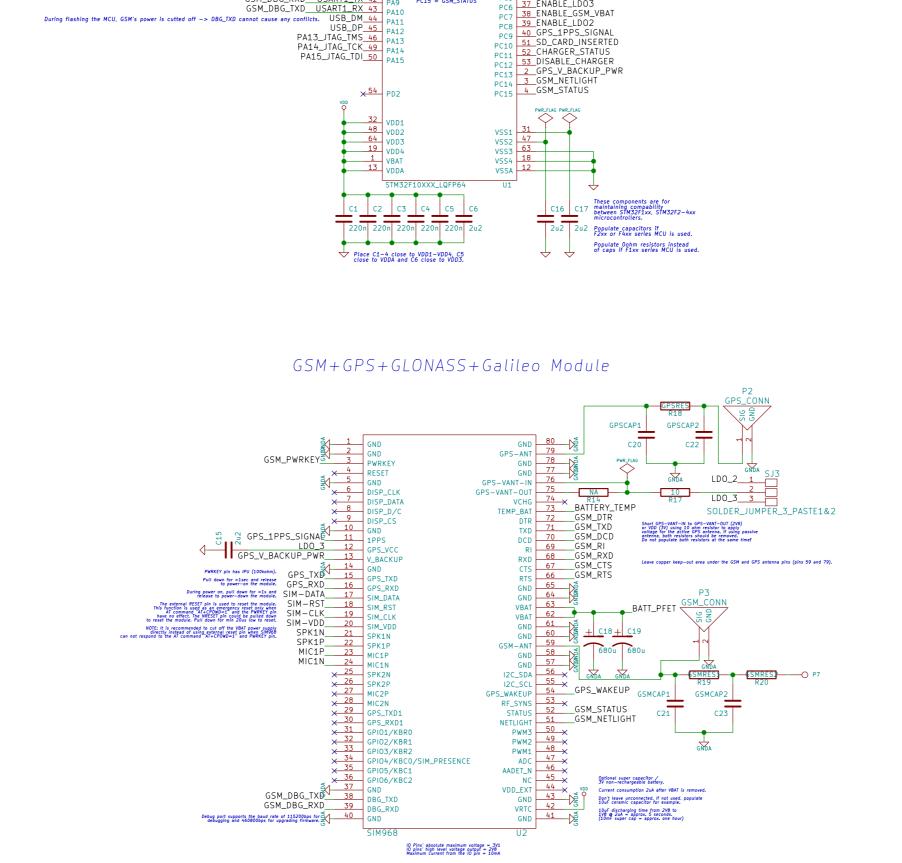

RuuviTracker

Rev.C2

ARM Cortex-M3/M4

P17 O B00T0

