

102 LAND CRUISER (Cont. next page)

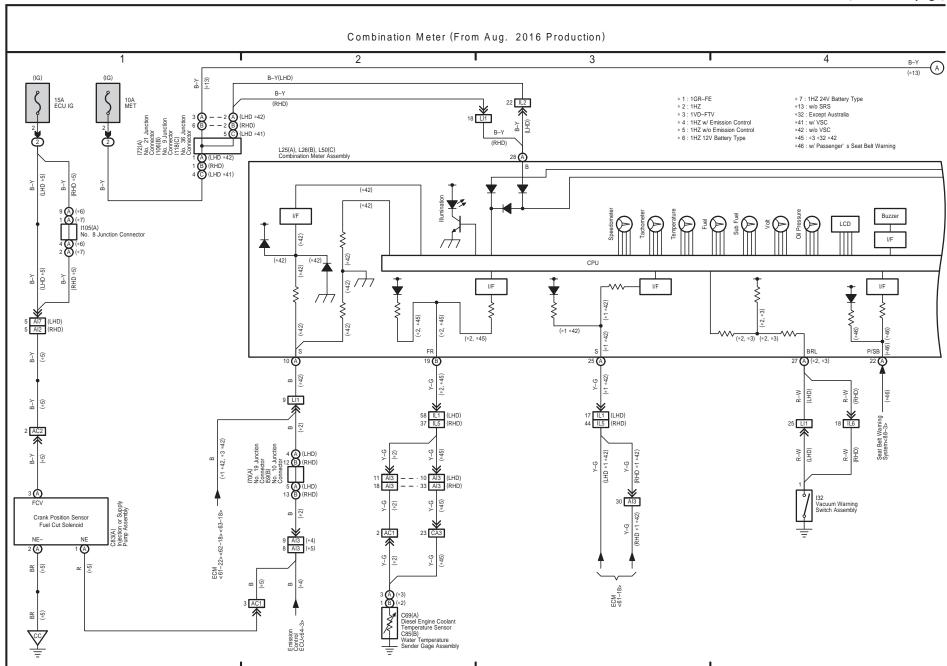

Combination Meter (From Aug. 2016 Production) 5 6 8 (*13) *16 : 1GR-FR, 1VD-FTV, 1HZ 12V Battery Type *17 : 12V Battery Type *19 : RHD 1GR-FE, RHD 1VD-FTV * 1 : 1GR-FE * 2 : 1HZ * 3 : 1VD-FTV * 4 : 1HZ w/ Emission Control *20 : w/ ABS (w/o VSC) * 6 : 1HZ 12V Battery Type * 7 : 1HZ 24V Battery Type *21 : w/o ABS *22 : LHD 1GR-FE w/o ABS *13 : w/o SRS *23 : 1HZ w/o ABS *31 : Australia *44 : w/ Tire Pressure Warning System L25(A), L26(B), L50(C) Combination Meter Assembly 4 IL2 (LHD) 14 IL6 (RHD) 47 IL1 (LHD) 57 IL5 (RHD) (*16) G (*17) BR (*3, *6) 3 IC3 21 Al3 8 (LHD) 15 (C) (RHD) 45 Al3 (LHD *2) 22 Al3 (RHD *2) 55 Al3 (RHD *3) 13 Al3 (LHD *3) 11 AI7 (LHD) 12 AI2 (RHD) Brake Actuator Assembly<86-4> --- 10 (A) (LHD) 18 (C) - 17 (C) (RHD) Brake Actuator Assembly< 106-4 g + 9 IC2 (LHD) 9 AC5 (RHD) 17 CA4 AI3 BR 1 AC1 *2 BR C96 Speedometer Sensor

Combination Meter (From Aug. 2016 Production) 9 10 11 12 (*13) * 2 : 1HZ * 3 : 1VD-FTV *24 : 1GR-FE w/ Oil Pressure Gage *31 : Australia *32 : Except Australia * 6 : 1HZ 12V Battery Type * 7 : 1HZ 24V Battery Type *41 : w/ VSC *44 : w/ Tire Pressure Warning System *13 : w/o SRS L25(A), L26(B), L50(C) Combination Meter Assembly I/F //H(*2, *3) (*32 *3) OIL 🗐 I66 No. 15 Junction Connector 25 IL1 (LHD) 28 IL5 (RHD) C71 Engine Oil Level Sensor 7 AI7 (LHD) 22 CA3 8 AI2 (RHD) 15 IL1 (LHD) 46 IL5 (RHD) LVL 28 Al3 (LHD) 7 Al3 (RHD) 13 CA4 FCHK M-W (42*) 1 AC8 (RHD) AC8 A23(A) No. 2 Junction No. 2 Junction Cornector (-2, +3) (-2, +3) (-2, +3) (-2, +3) C105 Oil Pressure Sender Gage Assembly

Combination Meter (From Aug. 2016 Production)

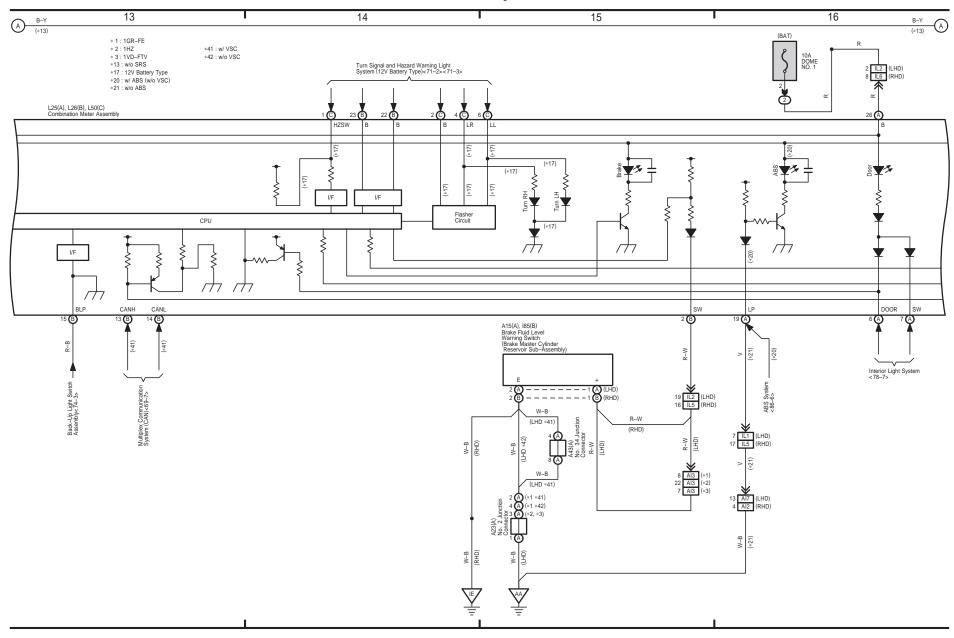

Combination Meter (From Aug. 2016 Production) 17 18 19 20 * 2 : 1HZ * 3 : 1VD-FTV * 13 : wlo SRS * 25 : wl SRS wlo VSC * 26 : wl Oil Pressure Gage * 27 : wl Oil Pressure Warning Light * 28 : 1GR-FE wl Oil Pressure Warning Light SRS System __ <87-6> *42 : w/o VSC L25(A), L26(B), L50(C) Combination Meter Assembly FRSW RRSW CHG-4WD System <94-5> Fuel Tank Changeover System<61-23><66-5> Charging System <57-3> < 58-3> < 59-3 L36(A) No. 28 Junction Connector L35(B) No. 27 Junction Connector (*2, *3) Engine Control System<61-23>< 12 Al3 (*2) 24 Al3 (LHD *3) 58 Al3 (RHD *3) 11 IC2 (LHD) 4 AC5 (RHD) 1 (a) (w/o Sub Tank *3) 1 (b) (w/ Sub Tank *3) 1 (c) (w/o Sub Tank *2) (D) (w/ Sub Tank *2) C74(A), C87(C) Oil Pressure Sender Gage Assembly C30(B), C88(D)

