


- L1 Front No. 1 Speaker Assembly LH
- L2 Radio Receiver Assembly
- L3 Radio Receiver Assembly
- L4 Center Differential Lock Switch
- L5 Front No. 1 Speaker Assembly RH
- L6 Idle Up Switch
- L7 Rear Window Defogger Switch Assembly
- L8 Fuel Control Switch Assembly
- L9 Clock Assembly
- L10 Ashtray Receptacle Light
- L11 Cigarette Lighter Assembly
- L12 Cigarette Lighter Assembly
- L13 Antenna Switch Assembly
- L14 Hazard Warning Signal Switch Assembly
- L16 Outer Mirror Switch Assembly
- L17 Transmission Control Switch
- L18 Door Control Switch Assembly
- L19 Cigarette Lighter Illumination (Cigarette Lighter Bezel Stay)
- L20 Un-Lock Warning Switch Assembly
- L41 Front No. 1 Speaker Assembly LH
- L42 Radio Receiver Assembly
- L43 Radio Receiver Assembly
- L44 Front No. 1 Speaker Assembly RH
- L45 Antenna Switch Assembly
- L46 Door Control Switch Assembly

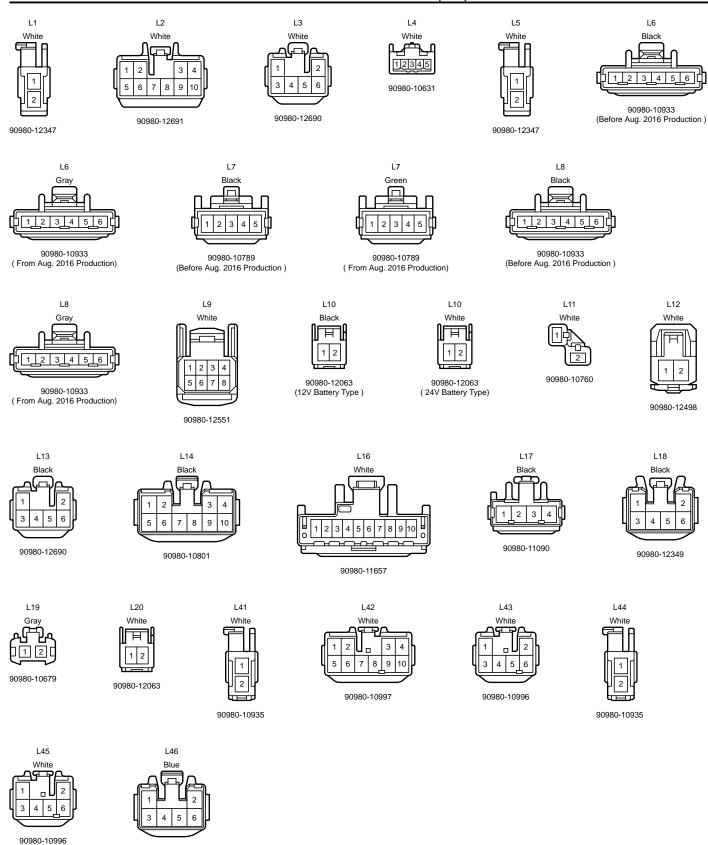

90980-10797