PT MERDEKA TSINGSHAN INDONESIA

STANDARD OPERATING PROCEDURE

MIXED MATERIAL POST

混料岗位

MTI-CHP-CPM-SOP-011_Rev. 000

Information Security Classification
B – Business Information

Rev.	Revision Status	Date	Prepared by	Reviewed by	Approved by
0	Issued for Use	24-APR-2024	*Approval as attached*	*Approval as attached*	*Approval as attached*
C0	Issued for Approval	24-APR-2024	Song Yuhua	Li Jianjun	Clark Wu
B0	Issued for Review	24-APR-2024	Song Yuhua	Li Jianjun	
A0	Issued for Internal Discipline Review	24-APR-2024	Song Yuhua		

This publication may not be reproduced, stored in the system, transferred in any form by any means, electronic, mechanical, photocopying, recorded, or otherwise without the permission of PT. Merdeka Tsingshan Indonesia.

DOCUMENT CHANGE STATUS

No.	Page	Section	Change Log	Revision by	Revision date	Revision version
1.						
2.						
3.						

This publication may not be reproduced, stored in the system, transferred in any form by any means, electronic, mechanical, photocopying, recorded, or otherwise without the permission of PT. Merdeka Tsingshan Indonesia.

Table of Contents

DOCUMENT CHANGE STATUS 2
Table of Contents 3
1. Purpose 目的 4
2. Functional Description 功能说明 4
3. References 参考 4
4. PPE 个人保护装备 4
5. Hazards & Control 危害与控制 5
6. Equipment 工具/ 设备 6
7. Procedure 程序 6
8. Mixed Material Post 混料岗位 Questionnaire 17
9. Appendix 18

This publication may not be reproduced, stored in the system, transferred in any form by any means, electronic, mechanical, photocopying, recorded, or otherwise without the permission of PT. Merdeka Tsingshan Indonesia.

1. Purpose 目的

This procedure covers the operator's responsibility for visual inspection, start up and shutdown of the mixed material post under complete closure.

此程序涵盖操作员对完全关闭下的混料岗位进行目视操作前检查、启动运行和停车的责任。

2. Functional Description 功能说明

It is the responsibility of the operator to ensure that the mixed material post is visually inspected before and after each shift to determine whether it can start and operate safely, or whether other activities (such as maintenance and repair or other operator tasks) must be performed before starting, to determine the sequential operation method of the mixed material post and smooth operation, Stop order of normal stops and emergency stops.

操作员有责任确保在从停机启动之前和每个班次开始时对混料岗位进行目视检查，确定是否可以启动并安全运行，或者是否必须在开始启动之前执行其他活动(例如维护修理或其他操作员任务)，确定混料岗位的按照顺序启动的操作方法及平稳运行，正常停车和紧急停车的停止顺序。


3. References 参考

- MTI-CP-SOP-Post Technical Operation Procedures. MTI-CP-SOP岗位操作规程
- Bag Filter(4301-DUC-001/002). 布袋除尘器 (4301-DUC-001/002)
- Quantitative Belt Feeder(4301-QFB-001/002/003/004,4502-QFB-001/002). 定量皮带给料机 (4301-QFB-001/002/003/004,4502-QFB-001/002)
- Bake Sand Bin(4301-BIN-001/002). 精矿仓 (4301-BIN-001/002)
- Bentonite Bin(4502-BIN-001). 膨润土仓 (4502-BIN-001)
- Return Bin(4301-BIN-003). 返料仓 (4301-BIN-003)
- Calcium Chloride Delivery Pump(4505-PSO-003/004). 氯化钙输送泵 (4505-PSO-003/004)
- Dust Humidifier (4301-DHF-001/002). 粉尘增湿机 (4301-DHF-001/002)
- Belt Conveyors(4301-BCV-001/002). 胶带机 (4301-BCV-001/002)

4. PPE 个人保护装备



This publication may not be reproduced, stored in the system, transferred in any form by any means, electronic, mechanical, photocopying, recorded, or otherwise without the permission of PT. Merdeka Tsingshan Indonesia.

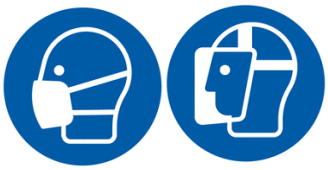

防尘口罩　　半面罩

5. Hazards & Control 危害与控制

Description of Hazard / Environmental Issue 危害	Control Strategy 控制
1. Mechanical injury; 2. Dust; 3. Electric shock; 4. Slippery conditions and a trip to the danger; 5. Asphyxia; 6. Solution corrosion; 7. Object falling from high altitudes; 8. Noise. 1. 机械伤害； 2. 灰尘； 3. 触电； 4. 湿滑的条件，绊倒危险； 5. 窒息； 6. 溶液腐蚀； 7. 高空坠物； 8. 噪音。	1. Install a protective cover on the rotating part of the equipment; 2. Wear dust mask as required and mask; 3. Do not contact the electrical switch with wet hands during operation, Regular inspection of the equipment leakage protection device is complete, effective; 4. Please hold the handrail up and down the stairs; 5. Clear clearance or maintenance operations; 6. Wear good labor protection goods, and spare a large amount of clean water on site; 7. Wear labor protection goods and check the safety of stacking items on the operation platform and a single beam crane falling objects; 8. Wear earplugs to protect your hearing. 1. 设备的转动部位安装防护罩； 2. 按要求佩戴防尘口罩和面罩； 3. 操作时不要湿手接触电器开关，定期检查设备漏电保护装置齐全、有效； 4. 上下楼梯请扶好扶手； 5. 清仓或维修作业执行审批程序； 6. 穿戴好劳保护品，现场备用大量清水； 7. 穿戴好劳保护品，检查各平台的物品堆放安全性和单梁起重机坠物； 8. 佩戴好耳塞，保护听力。

This publication may not be reproduced, stored in the system, transferred in any form by any means, electronic, mechanical, photocopying, recorded, or otherwise without the permission of PT. Merdeka Tsingshan Indonesia.

6. Equipment 工具/ 设备

4505-TNK-002	Calcium Chloride Solution Storage Tank氯化钙溶液储槽
4301-ROD-001/002/003/004/005/006, 4502-ROD-001/002	Bar Valve棒条阀
4301-CHE-001/002, 4301-CHE-003/004/005, 4301-CHE-006/007	Chute溜槽
	Clean the site tools清扫现场工具

7. Procedure 程序

№	Stage	Key Points
1	General Check 普查	1. Confirm the pre-job technical training; 2. Wear suitable labor protection products, check and confirm that there is no unsafe state or safety risks on the site; 3. Check and clean the equipment and the site sanitation; 4. Contact with the process before and after, and give clear instructions. 1. 确认经过岗前技术培训; 2. 穿戴好适合的劳保护品，检查确认现场没有存在不安全状态或安全隐患; 3. 检查并打扫设备、现场卫生; 4. 与前后工序取得联系，并发出明确指令。
2	Inspect Dust Humidifier (4301-DHF-001/002) 检查粉尘增湿机(4301-DHF-001/002)	1. Check whether all the parts are complete, whether the fasteners are tightened, and whether the sealing parts are tight; 2. Check the lubrication and sealing of all bearings, and the oil level of the reducer is appropriate; 3. Check whether there is any debris in the humidifier, especially the blockage in the middle of the spiral body, to avoid the blockage failure; 4. The top cover of the humidifier must be strictly covered to prevent external items from entering, or even have safety accidents; 5. Check whether the spiral blade is deformed; 6. Check whether the calcium chloride solution pipeline and sprinkler head system are normal; 7. Before driving, it should be determined whether the rotation direction of the motor meets the work requirements. 1. 检查所有零件是否齐全，紧固件是否拧紧，密封部位是否严密; 2. 检查各部轴承润滑与封闭良好，减速机油位适当;

This publication may not be reproduced, stored in the system, transferred in any form by any means, electronic, mechanical, photocopying, recorded, or otherwise without the permission of PT. Merdeka Tsingshan Indonesia.

№	Stage	Key Points
		3. 检查增湿机内有无杂物，特别是螺旋体中间的堵塞物，以免发生堵塞故障； 4. 增湿机的顶盖必须盖严，以防止外界物品进入，甚至发生安全事故； 5. 检查螺旋叶片是否变形； 6. 检查氯化钙溶液管路及喷头系统是否正常； 7. 开车前应判明电机旋转方向是否符合工作要求。
3	Inspect Bag Filter(4301-DUC-001/002) 检查布袋除尘器(4301-DUC-001/002)	1. Whether the electrical high and low voltage system and PLC control are normal; 2. Whether the inlet valve of the filter chamber of each unit is open; 3. Whether all the solenoid pulse valves are normal and the action sequence is correct; 4. All measurement circuits are normal and signal; 5. All control valves are in the automatic mode and in the desired position; 6. Open all inspection entrances and doors to check whether the equipment moving parts are stuck in dust or external objects; after inspection, close all inspection population and doors and check all pipes and equipment inspection holes for closure; 7. Whether the sealing strip of the air chamber is sealed, and whether the fastening bolt of air box sealing cover is in good condition; 8. Connect the pressure measuring device to the pressure measuring port of the bag filter; 9. Check whether the bag back blowing pressure is 0.4MPa~0.5MPa; 10. Check whether the compressed air ball valve (25BA) is normal; Start the fan, observe the air load running resistance, and measure the air volume of the inlet and outlet; 11. Check whether the water drain trap is normal; 12. Check whether the bag dust bag falls off and whether there is ash phenomenon at the fan outlet. 1. 电气高低压系统、PLC控制是否正常； 2. 除尘器各单元过滤室的进口阀门是否都打开； 3. 所有电磁脉冲阀是否正常，动作顺序正确； 4. 所有测量回路是否正常、有信号； 5. 所有提升阀处于自动模式和需要的位置； 6. 打开所有检查入口、门，检查设备运动部件是否被灰尘或外来物卡住；检查后，关闭所有检查人口、门，并检查所有管道和设备检查孔是否关闭；

This publication may not be reproduced, stored in the system, transferred in any form by any means, electronic, mechanical, photocopying, recorded, or otherwise without the permission of PT. Merdeka Tsingshan Indonesia.

№	Stage	Key Points
		7. 反吹风气室密封条是否是密封完好，气箱密封盖紧固螺栓是否完好； 8. 接通测压装置到布袋除尘器的测压口； 9. 检查布袋反吹风压力是否是0.4MPa ~ 0.5MPa； 10. 检查压缩空气球阀(25BA)是否正常；启动风机，观察空负荷运行阻力，测量进出风口的风量； 11. 检查疏水阀是否正常； 12. 检查布袋除尘器布袋是否脱落，风机出口是否有冒灰现象。
4	Inspect Quantitative Belt Feeder(4301-QFB-001/002/003/004,4502-QFB-001/002) 检查定量皮带给料机(4301-QFB-001/002/003/004，4502-QFB-001/002)	1. Each bearing is well lubricated and closed, the oil level of the reducer is appropriate, the upper and lower roller lubrication is good, the operation is flexible, whether the wear of the first and tail wheels and the belt are sandwiched with materials, and whether the cleaning device of the first and tail wheels is in good condition; 2. Check whether each part of the conveyor is intact, whether the tension of the conveyor belt is appropriate, and whether the corresponding belt tightening device and dust prevention facilities are in good condition; 3. Whether the electrical facilities and control system are intact, whether the protective device is firm, and whether the funnel baffle and liner are damaged; 4. Check whether the cushion rollers of the impact load parts are intact; 5. Check the installation of belt sweeper; 6. Clean the dust debris between the pressure head of the quantitative belt scale weighing sensor, loosen the maintenance bolt on the support to make the load-bearing screw in good contact with the sensor; 7. Whether the installed electrical facilities and signal devices are intact and responsive; 8. Turn on the power supply and check the Q value of the quantitative belt scale instrument: apply a load to the weighing frame, the Q value should rise. If the Q value falls, the signal input is reversed, and two signal lines of the sensor should be changed; 9. Place the field control box in the manual position, press the start button, slowly rotate the potentiometer, watch whether the running direction of the belt is correct and whether the belt can deviate 10. After checking and contacting the post, press the start button;

This publication may not be reproduced, stored in the system, transferred in any form by any means, electronic, mechanical, photocopying, recorded, or otherwise without the permission of PT. Merdeka Tsingshan Indonesia.

№	Stage	Key Points
		11. During operation, check whether the emergency stop device of quantitative belt feeder and belt correction are controlled and sensitive. 1. 各部轴承润滑与封闭良好，减速机油位适当，上下托滚润滑良好，运转灵活，首、尾轮磨损情况与皮带间是否夹有物料，首、尾轮的清扫装置是否完好； 2. 全面检查输送机各部分是否完好无损，输送带的张紧度是否合适，相应的皮带拉紧装置及防尘设施是否完好； 3. 电器设施和控制系统是否完好，防护装置是否牢固，漏斗挡板和衬板是否损坏； 4. 检查承受冲击载荷部位的缓冲托辊是否完好； 5. 检查皮带清扫器安装是否正常； 6. 将定量皮带秤称重传感器压头间粉尘杂物清扫干净，松开支架上的维护螺栓，使承重螺杆与传感器良好接触； 7. 装设的电器设施及信号装置是否完好和反应灵敏； 8. 接通电源，查看定量皮带秤仪表Q值：稍给称量框架施加负载，Q值应上升，若Q值降落，则阐明信号输入接反，应对换传感器的两根信号线； 9. 将现场控制盒置于手动位置，按一下启动按钮，迟缓旋动电位器，观看定量皮带秤皮带运转方向能否正确，皮带是否跑偏； 10. 检查无误并与前后岗位联系后，按下启动按钮； 11. 运转过程中，检查定量皮带给料机急停装置、皮带纠偏是否控制灵敏。
5	Inspect Calcium Chloride Delivery Pump(4505-PSO-003/004) 检查氯化钙输送泵(4505-PSO-003/004)	1. Check whether the pump inlet pipeline and auxiliary pipeline, flange and valve installation meet the requirements, whether the anchor bolts and ground wire are good, and whether the coupling is installed; 2. Turn the pump shaft 3 times, should be flexible without block; 3. Check whether the lubricating oil level is normal. The oil level should be between 1/2 and 2/3 of the oil lens; 4. Check the sealing condition of the pump is normal; 5. Point to move to confirm the correct steering; 6. Check whether the pump control cabinet voltmeter, signal lights and other instrument indicators are normal; 7. Check whether there is air in the pump unit, if it

This publication may not be reproduced, stored in the system, transferred in any form by any means, electronic, mechanical, photocopying, recorded, or otherwise without the permission of PT. Merdeka Tsingshan Indonesia.

№	Stage	Key Points
		should be excluded; 8. Check that the pump head is at the level of the calcium chloride solution storage tank (4505-TNK-002); 9. Check that the conveying pump is in the normal condition, and that the inlet valve (40BF) and the outlet valve (50BF) are temporarily closed after opening flexibly; 10. Check the backup pump outlet valve closed. 1. 检查泵出入口管线及附属管线，法兰、阀门安装是否符合要求，地脚螺栓及地线是否良好，联轴器及防护罩是否装好； 2. 手转动泵轴3圈，应灵活无阻滞； 3. 检查润滑油油位是否正常，油位应在油镜的1/2～2/3之间； 4. 检查泵的密封状况是否正常； 5. 点动确认转向正确； 6. 检查泵控制柜电压表、信号灯等仪表指示是否正常； 7. 检查泵机组是否有空气，如有应予以排除； 8. 检查泵头是否处于氯化钙溶液储槽(4505-TNK-002)液位下； 9. 检查输送泵处于正常状态，进口阀门(40BF)、出口阀门(50BF)开启灵活后暂时处于关闭状态； 10. 检查备用泵进出口阀关闭状态。
6	Inspect Belt Conveyors(4301-BCV-001/002) 检查胶带机(4301-BCV-001/002)	1. Each bearing is well lubrication and closed, the reducer oil level is appropriate, the upper and lower roller lubrication is good, the operation is flexible, whether the wear of the first and tail wheels and the tape are filled with materials, and whether the cleaning device of the first and tail wheels is in good condition; 2. Comprehensively check whether all parts of the belt conveyors are intact, whether the tension of the tape is appropriate, and whether the corresponding tape tightening device and dust-proof facilities are in good condition; 3. Whether the electrical facilities and control system are intact, whether the protective device is firm, and whether the funnel baffle and liner are damaged; 4. Check whether the cushion rollers of the impact load parts are intact; 5. Check the installation of belt sweeper;

This publication may not be reproduced, stored in the system, transferred in any form by any means, electronic, mechanical, photocopying, recorded, or otherwise without the permission of PT. Merdeka Tsingshan Indonesia.

№	Stage	Key Points
		6. Whether the installed electrical facilities and signal devices are intact and responsive; 7. Place the field control box in the manual position, press the start button, slowly rotate the potentiometer, and watch whether the running direction of the tape is correct, and whether the belt can run away; 8. After checking and contacting the post, press the start button; 9. During the operation process, check whether the tape machine emergency stop device, belt deviation correction and speed measuring sensor are in good condition. 1. 各部轴承润滑与封闭良好，减速机油位适当，上下托滚润滑良好，运转灵活，首、尾轮磨损情况与胶带间是否夹有物料，首、尾轮的清扫装置是否完好； 2. 全面检查胶带机各部分是否完好无损，胶带的张紧度是否合适，相应的胶带拉紧装置及防尘设施是否完好； 3. 电器设施和控制系统是否完好，防护装置是否牢固，漏斗挡板和衬板是否损坏； 4. 检查承受冲击载荷部位的缓冲托辊是否完好； 5. 检查胶带机清扫器安装是否正常； 6. 装设的电器设施及信号装置是否完好和反应灵敏； 7. 将现场控制盒置于手动位置，按一下启动按钮，迟缓旋动电位器，观看胶带运转方向能否正确，皮带是否跑偏； 8. 检查无误并与前后岗位联系后，按下启动按钮； 9. 运转过程中，检查胶带机急停装置、皮带纠偏和测速传感器是否控制灵敏。
7	Check Bake Sand Bin (4301-BIN-001/002), Bentonite Bin (4502-BIN-001), Return Bin (4301-BIN-003) 精矿仓(4301-BIN-001/002)、膨润土仓(4502-BIN-001)、返料仓(4301-BIN-003)	1. Check whether the inlet and outlet pipes and auxiliary pipes and flanges of each warehouse meet the requirements, and whether the seal of each warehouse is in good condition; 2. Check the material level control assembly for normal operation. 1. 检查各仓出入口管路及附属管路、法兰是否符合要求，各仓密封是否完好； 2. 检查料位控制组件是否正常。

This publication may not be reproduced, stored in the system, transferred in any form by any means, electronic, mechanical, photocopying, recorded, or otherwise without the permission of PT. Merdeka Tsingshan Indonesia.

№	Stage	Key Points
8	Check the other Equipment and Facilities 检查其它设备设施	1. Bar Valve(4301-ROD-001/002/003/004/005/006,4502-ROD-001/002) a. Whether the frame installation direction is correct, whether the connecting bolts between the frame and the bin are fastened, and whether the material leaks between the frame and the bin; b. Whether the spot check of the rod bar is flexible; c. Whether the bar valve is closed. 1. 棒条阀(4301-ROD-001/002/003/004/005/006,4502-ROD-001/002) a. 框架安装方向是否正确，框架与料仓之间的连接螺栓是否紧固，框架与料仓之间是否漏料； b. 棒条的抽查是否灵活； c. 棒条阀是否处于关闭状态。 2. Bar valve(4301-ROD-001/002) (4301-CHE-001/002), quantitative belt feeder(4502-QFB-001/002,4301-QFB-004)(4301-CHE-003/004/005),humidifier (4301-DHF-001/002) (4301-CHE-006/007). a. Check whether the feeding chute is in good condition; b. Check whether the blocking detection switch of the feeding chute is normal. 2. 棒条阀(4301-ROD-001/002)下料溜槽(4301-CHE-001/002)、定量皮带秤(4502-QFB-001/002,4301-QFB-004)下料溜槽(4301-CHE-003/004/005)、增湿机(4301-DHF-001/002)下料溜槽(4301-CHE-006/007)。 a. 检查各下料溜槽是否完好； b. 检查下料溜槽的堵料检测开关是否正常。 3. Calcium Chloride Solution Storage Tank (4505-TNK-002) a. Check whether the inlet and outlet pipelines and auxiliary pipelines, whether the installation of flange and valve (40BF,50BF,FCV001,FCV002) meet the requirements, and whether the storage tank leaks liquid; b. Check the level control assembly is normal. 3. 氯化钙溶液储槽(4505-TNK-002) a. 检查出入口管线及附属管线，法兰、阀门(40BF,50BF,FCV001,FCV002)安装是否符合要求，

This publication may not be reproduced, stored in the system, transferred in any form by any means, electronic, mechanical, photocopying, recorded, or otherwise without the permission of PT. Merdeka Tsingshan Indonesia.

№	Stage	Key Points
		储槽是否漏液； b. 检查液位控制组件是否正常。 4. Valve a. Whether the compressed air inlet (25BA, 25BA) of the bag filter (4301-DUC-001/002) is normal and flexible. 4. 阀门 a. 布袋除尘器(4301-DUC-001/002)的压缩空气入口球阀(25BA,25BA)是否正常灵活。
9	Inspect Materials Level 检查物料料位	1. Check each warehouse position to ensure sufficient material(4301-BIN-001/002,4502-BIN-001,4301-BIN-003); 2. Check whether the material is stored on the quantitative belt feeder (4301-QFB-001/002/003/004,4502-QFB-001/002), with no adhesion deposit on the head and tail wheel surface and the belt joint; 3. Check the reservoir level to ensure adequate calcium chloride solution(4505-TNK-002); 4. Check whether the material is stored on the tape machine (4301-BCV-001/002), and there is no adhesive deposit on the surface of the head and tail wheel and the belt; 5. Check whether the material is stored in the dust humidifier(4301-DHF-001/002); 6. Check whether the bag dust collector (4301-DUC-001/002) has ash. 1. 检查各仓料位，确保物料充足(4301-BIN-001/002、4502-BIN-001、4301-BIN-003)； 2. 检查定量皮带给料机(4301-QFB-001/002/003/004，4502-QFB-001/002)上是否存料，首尾轮表面与皮带结合部无黏附积矿存在； 3. 检查储槽液位，确保氯化钙溶液充足(4505-TNK-002)； 4. 检查胶带机(4301-BCV-001/002)上是否存料，首尾轮表面与皮带结合部无黏附积矿存在； 5. 检查粉尘增湿机 (4301-DHF-001/002)内是否存料； 6. 检查布袋除尘器(4301-DUC-001/002)是否存灰。

This publication may not be reproduced, stored in the system, transferred in any form by any means, electronic, mechanical, photocopying, recorded, or otherwise without the permission of PT. Merdeka Tsingshan Indonesia.

№	Stage	Key Points
10	Start-Up Of The Mixed Material Post 混料岗位开机	1. No-load start should be guaranteed when starting; 2. The driving sequence is along the material direction, from back to front that is the reverse drive, Each equipment needs to be switched on later;At the same time, confirm that the process behind the mixing post has been started and has the feeding conditions: Turn on the belt conveyors(4301-BCV-001/002) ⟹ Turn on the dust humidifier(4301-DHF-001/002) ⟹ Open the outlet valve (50BF) of the calcium chloride delivery pump (4505-PSO-003/004), open the calcium chloride delivery pump (4505-PSO-003/004), and open the calcium chloride delivery pump (4505-PSO-003/004) inlet valve (40BF) ⟹ Open the quantitative belt feeder(4301-QFB-001/002/003/004,4502-QFB-001/002) ⟹ Turn on the bar valve(4301-ROD-001/002/003/004/005/006,4502-ROD-001/002) ⟹ Open the bag filter (4301-DUC-001/002) ball valve (25BA) and start the dust collector (4301-DUC-001/002). 1. 启动时应保证空载启动； 2. 开车顺序为沿物料走向，从后往前开即逆向开车，各设备都需要延时开启；同时，确认混 料岗位后面的工序已经开车并具备给料条件： 开启胶带机(4301-BCV-001/002) ⟹ 开启粉尘增湿机(4301-DHF-001/002) ⟹ 打开氯化钙输送泵(4505-PSO-003/004)出口阀门(50BF)，开启氯化钙输送泵(4505-PSO-003/004)，打开氯化钙输送泵(4505-PSO-003/004)进口阀门(40BF) ⟹ 开启定量皮带给料机(4301-QFB-001/002/003/004,4502-QFB-001/002) ⟹ 开启棒条阀(4301-ROD-001/002/003/004/005/006,4502-ROD-001/002) ⟹ 打开布袋除尘器(4301-DUC-001/002)球阀(25BA)，启动除尘器(4301-DUC-001/002)。
11	The Mixed Material Post Stops 混料岗位停机	1. Orderly shutdown a. The materials in the standby machine should be discharged before stopping; b. Stop in the reverse order of driving order, each equipment needs to stop: Stop the filter (4301-DUC-001/002) and close the bag filter (4301-DUC-001/002) ball valve (25BA) ⟹ Close the bar valve(4301-ROD-001/002/003/004/005/006,4502-ROD-001/002)

This publication may not be reproduced, stored in the system, transferred in any form by any means, electronic, mechanical, photocopying, recorded, or otherwise without the permission of PT. Merdeka Tsingshan Indonesia.

№	Stage	Key Points
		⟹Stop the quantitative belt feeder(4301-QFB-001/002/003/004,4502-QFB-001/002)⟹Stop the calcium chloride delivery pump (4505-PSO-003/004); after the pump stops, open the outlet valve (50BF), drain the liquid in the pump outlet pipe (50BF) and close the inlet valve (50BF);Close the gate valve (FCV001, FCV002)⟹Stop the dust humidifier(4301-DHF-001/002)⟹Stop the belt conveyors(4301-BCV-001/002)⟹Clean the site for hygiene. 1. 正常停车 a. 停车时应待机内物料排净后再停车； b. 按照开车顺序逆序停车，各设备都需要延时停止： 停止除尘器(4301-DUC-001/002)，关闭布袋除尘器(4301-DUC-001/002)球阀(25BA)⟹关闭棒条阀(4301-ROD-001/002/003/004/005/006,4502-ROD-001/002)⟹停止定量皮带给料机(4301-QFB-001/002/003/004,4502-QFB-001/002)⟹停止氯化钙输送泵(4505-PSO-003/004)；泵停稳后，稍开出口阀(50BF)，待泵出口管道中的液体放净，全关出口阀(50BF)后全关进口阀(40BF)； 关闭闸阀(FCV001,FCV002)⟹停止粉尘增湿机(4301-DHF-001/002)⟹停止胶带机(4301-BCV-001/002)⟹打扫现场卫生。 2. Emergency Stop a. When an emergency occurs, Stop the quantitative belt feeder(4301-QFB-001/002/003/004,4502-QFB-001/002),Stop the belt conveyors(4301-BCV-001/002), Stop the dust humidifier(4301-DHF-001/002),Stop the calcium chloride delivery pump (4505-PSO-003/004),Stop the quantitative belt feeder(4301-QFB-001/002/003/004,4502-QFB-001/002),After all stop operation, check whether the start/stop button of each equipment is in the stop state, close the inlet and outlet valve of calcium chloride delivery pump (40BF,50BF), at the same time, the upper level of equipment all need to stop; b. After the accident, the equipment is restored to normal. If production still needs to be conducted, and the operation shall be restarted in the driving

This publication may not be reproduced, stored in the system, transferred in any form by any means, electronic, mechanical, photocopying, recorded, or otherwise without the permission of PT. Merdeka Tsingshan Indonesia.

№	Stage	Key Points
		sequence; c. After the accident treatment, the equipment returns to normal. If the production is not necessary, operate according to the normal parking order. 2. 紧急停车 a. 当出现紧急事故，关闭棒条阀(4301-ROD-001/002/003/004/005/006,4502-ROD-001/002)、胶带机(4301-BCV-001/002)、粉尘增湿机(4301-DHF-001/002)、氯化钙输送泵(4505-PSO-003/004)、定量皮带给料机(4301-QFB-001/002/003/004,4502-QFB-001/002)，全部停止运行后，检查各设备的启动/停止按钮是否处于停止状态，关闭氯化钙输送泵进出口阀门(40BF、50BF)，同时，上一级设备均需停车； b. 事故处理后，设备恢复正常，如仍需要进行生产，按照开车顺序重新启动操作； c. 事故处理后，设备恢复正常，如不需要进行生产，按照正常停车顺序进行操作。
12	Permits &Isolation Sheets 许可证和隔离表	1. Only authorized isolators can sign off and cancel permits and registration sheets. 1. 只有经过授权的隔离者才能签署和取消许可证和登记表。

This publication may not be reproduced, stored in the system, transferred in any form by any means, electronic, mechanical, photocopying, recorded, or otherwise without the permission of PT. Merdeka Tsingshan Indonesia.

8. Mixed Material Post 混料岗位 Questionnaire

Declaration of Understanding

I (_____Learner_____) have completed the theory assessment and had all my valid, reliable, and consistent with my level of knowledge in the assessment task.

Signature
Date:

I (_____Assessor_____) have witnessed the above learner complete the theory assessment and believe the assessment has provided a valid, reliable, and consistent result.

Signature
Date:

This publication may not be reproduced, stored in the system, transferred in any form by any means, electronic, mechanical, photocopying, recorded, or otherwise without the permission of PT. Merdeka Tsingshan Indonesia.

9. Appendix

This publication may not be reproduced, stored in the system, transferred in any form by any means, electronic, mechanical, photocopying, recorded, or otherwise without the permission of PT. Merdeka Tsingshan Indonesia.

Standard Operating Procedure
标准操作程序

Mixing posts in the chloride plant
CP 混料岗位

SOP Details 程序明细

Processing Department 氯化厂	Procedure Level 程序级别: **3**	Revision Number 修订编号: 0
Date Approved 审批日期:	Date Issued 颁布日期:	Next Review Date 下次审核日期:
Details of Revision 修订明细:		

Revision Details 修订明细

Rev. No 版本号	Date 日期	Section 章节	Page 页码	Revision Description 修订说明	Reviewed By 审核人
1					
2					
3					

Approvals 批准

Document Owner 程序持有人	Song Yuhua 宋裕华	Date: 日期: 2024. 4. 24	Signature 签字	
Processing Superintendent 氯化高级副经理	Cao Guibin 曹桂宾	Date: 日期: 2024. 4. 24	Signature 签字	
Processing Senior Manager 氯化高级经理	Li Jianjun 李建军	Date: 日期: 2024.04.24	Signature 签字	
Safety Department Manager 安全部经理	Airlangga Putra R.J	Date: 日期: 24.04.24	Signature 签字	
Deputy General Manager 副总经理	Li Xinhua 李新华	Date: 日期 2024.4.24	Signature 签字	
General Manager 总经理	Clark Wu 吴迎林	Date: 日期: 2024.4.24	Signature 签字	