

POTATO HARVESTER USER MANUAL



Honour Your Trust

Index

Sr. No.	Contents	Page No.
1.	Introduction	1
2.	Technical Specifications	3
3.	Safety Instructions	4
4.	Do's and Don'ts	6
5.	Operating Instructions	7
6.	Field Precautions	8
7.	Part List	9
8.	Warranty Policy	24

Introduction

Potato Harvester harvest the potatoes very finely and forms equal level soil bed, with this efficiency of farmers will increase and they can harvest large fields in short time without any breakage. Potatoes harvested by **Potato Harvester** are very much clear and without cuts. Farmer can collect the potatoes easily from the field.

Potato Harvesting Machine:

Potato harvesters are designed for potato harvesting. This machine can finish mining, soil and potato separation in one time and can harvest the potato with the potato stems. It is a multifunctional machine which can be used for variety kinds of root crops and vegetables such as peanut, carrot, onion, etc.

Working Principle of Potato Harvesting Machine:

The potato harvester dig the potatoes by the digger blade and then lift them to the cage assembly. The machine harvest the potatoes by lifting the potatoes from the blade to the cage assembly. Then soil and potatoes are transferred onto a series of rods (cage Assembly) where the soil and the potatoes are sieved out and the potatoes are separated from the soil.

Remarkable Features of Potato Harvester Machine

1. **Multifunctional:** This potato harvester machine can be used for harvesting varieties of root crops and vegetables.
2. **High efficient:** This machine can harvest 0.27 hectare field per hour and the feed capacity is about 180kg/s.
3. **Wide working width:** Compared with other potato harvester, this potato harvesting machine has a wider working width about 1210mm & 1310mm, respectively.
4. **Low loss rate:** The loss rate of this machine is less than 0.1%.
5. **Wide adaptation:** The machine is suitable for all kinds of soil, such as sandy soil, clayey soil and Loam.
6. **Good performance:** This potato harvesting equipment can harvest the potatoes without hurting the peel of the potatoes and harvest the potatoes with the potato vine.
7. **Easy operation:** The machine is with simple and compact structure and can connect with the tractors easily.

Widely Application of Potato Harvesting Machinery:

This potato harvesting machine has a wide application range which can be used for the harvesting of potato, peanut, sweet potato, carrot, garlic, onion and other root crops.

Maintenance & Repair Tips:

1. The soil should be cleaned after each operation.
2. Check out the fastener of the machine and make sure there isn't any loose.
3. The machine should be prevented from the rain and acidic materials, the gear of the machine should be oiled when not using.

Potato Harvesting Machine Market:

Potatoes are planted almost all over the world and are welcomed by people all over the world. However, since the potatoes are grown underground and the soil are often sandy soil or clayey soil, it is hard to harvest. The traditional way of potato harvesting is low efficient and labour oriented. While by using this multi-functional potato harvester, it can harvest the plants efficient and also save labour. So the market of this potato harvester is vast.

Technical Specifications

Potato Harvester is designed to meet the needs of Indian Farmers. All Models are available with tool kit as well as options of side disc.

Sr. No.	DESCRIPTION	Model 52"
1	NO. OF ROWS	2
2	WORKING DEPTH	130-200 mm
3	WORKING WIDTH	1320 mm
4	POWERED BY	Gear Drive
5	CAGE TYPE	Belt Type
6	REQUIRED POWER	40-60 hp
7	HARVESTING CAPACITY	1 acre / hour
8	TOTAL LENGTH	2200 mm
9	TOTAL WIDTH	1400mm
10	TOTAL HEIGHT	1150 mm
11	TOTAL WEIGHT UNLADEN WEIGHT	645/605 kg
12	ROLLER FOR BED PREPRATION	Yes

Safety Instructions

Maintenance Safety:

1. Follow all the operating maintenance and safety information in the manual.
2. Support the machine with blocks or safety stands when working beneath it.
3. Follow good work shop practices:
 - Keep service area clean and dry.
 - Use adequate light for the job in hand.
4. Use tools, jacks and hoists of sufficient capacity for the job.
5. Make sure all guards are in place and properly secured when maintenance work is completed.
6. Never wear loose fitting, baggy or frayed clothing when working around or on any of the drive system components.
7. Keep hands, feet, hair and clothing away from moving or rotating parts.
8. Clear the area of bystanders, especially small children, when carrying out maintenance and repairs or making any adjustments

Transport Safety:

1. Review transport safety instructions in tractor manual before moving.
2. Always travel at a safe speed
3. Always use hazard warning flashers on tractor when transporting unless prohibited by law.
4. Do not exceed speed 20km/h during transport.

Safety Instructions

General Safety:

1. First aid kit should be available and learn to use the same in case of emergency.
2. Fire extinguisher should be available and learn to use the same in case of emergency.
3. Wear appropriate protective equipment's. This list includes but not limited to :
 - a) A hard hat.
 - b) Protective shoes with slip resistant soles.
 - c) Protective glasses and goggles.
 - d) Heavy Gloves.
 - e) Hearing Protection.
 - f) Respirator or filter mask.
 - g) Wear suitable ear protection for prolonged exposure to excessive noise.

Storage Safety:

1. Store the unit in an area away from human activity.
2. Do not permit children to play on or around the stored machine.
3. Support frame should be on stands and blocks to provide a secure base.
4. Thoroughly wash the machine and apply rust prevent oil, when not in use for a long time.

Safety Signs:

1. Keep safety signs clean and legible at all time.
2. Replace safety signs that are missing.
3. Install safety features on repaired parts as earlier.

Do's and Don'ts

1. Check all parts of the machine every day whenever you intend to put it in the field.
2. Make sure that parking stand is up while operating in field.
3. Check and tight all bolts and nuts daily.
4. Beware of bystanders while operating the Potato Harvester.
5. Do not allow anyone to stand or sit on the implement while it is transported or operated.
6. Do not leave the tractor seat until the engine is off, brakes locked, and the Potato Harvester lowered to the ground.
7. Do not allow children to play in field or to sit on tractor while operation.
8. Always be sure that any new operator should has thoroughly understanding of the implement and should follow the safety precautions.
9. Keep your machine in good working condition. Always contact your dealer for repairs.
10. Never attempt to adjust or perform maintenance on this machine while it is being operated.

Operating Instructions

1. Read and understand the operator's manual and all safety signs before operating, servicing, adjusting, repairing and unplugging.
2. Install and secure all guards and shields before starting or operating.
3. Keep hands, feet, hair and clothing away from moving parts.
4. Lower implement to the ground, place all controls in neutral, stop engine, engage parking brake, remove ignition key. Ensure all moving parts should stop before service, repair, and any adjustment, connect or disconnect.
5. Put all tractor and machine controls in neutral position before starting.
6. Never start or operate the machine unless you are not sitting on tractor seat.
7. Do not operate machine inside a building unless there is adequate ventilation.
8. Do not put hands or feet under machine while tractor engine or machine is running.
9. Always know what you are planting. Never operate Harvester in an area that has hidden obstacles. Remove sticks, stone, roots, wire and other objects from working area before starting.
10. Clean reflectors, SMV emblem and lights before transporting.
11. Use hazard flashers on tractor while transporting.
12. Review safety instructions with all operators annually or seasonally.

Safety Precautions:


1. While mounting Potato Harvester to the tractor ensure that there should no downward pressure from the tractor hydraulic system on the Potato Harvester, also do not add up any external weight on Potato Harvester.
2. Adjust the tractor top link length and attach to top most in such a way that the main frame of Potato Harvester remains parallel to ground.
3. Lower implement to the ground, place all controls in neutral, stop engine, engage parking brake, remove ignition key. Ensure all moving Parts should stop before service, repair, and any adjustment, connect or disconnect.
4. Keep hands, feet, hair and clothing away from moving, rotating parts. Do not wear loose clothes as entanglement with rotating parts may cause serious injury or even death.
5. Do not make sharp turn while Harvester is in the ground, lower position or working.
6. Do not carry passengers while operating machines.

Field Precautions

ENSURE THAT AFTER FITMENT OF BLADE THE CENTRE TIP OF BLADE TOUCHES THE GROUND IN RESTING POSITION OF MACHINE.

Advantages:

1. It will increase working efficiency of machine.
2. It will attain adequate depth for harvesting potatoes.

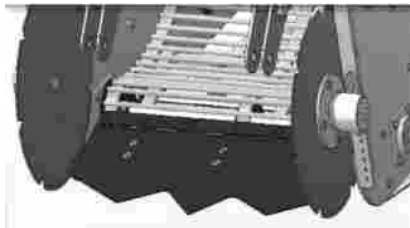

USE HINGE TYPE BLADE ONLY

Advantages:

1. It will ensure the smooth movement of cage.
2. It will overcome obstacles of hard soilstones.




ALWAYS USE BIG FLANGE AXLE DIA 180MM FOR SIDE DISC.

Advantages:

1. Increased axle diameter will give side disc more holding strength to avoid breakage.
2. Increase axle diameter will uniformly take the load of disc in hard and light soil conditions.




Gear Box Assembly

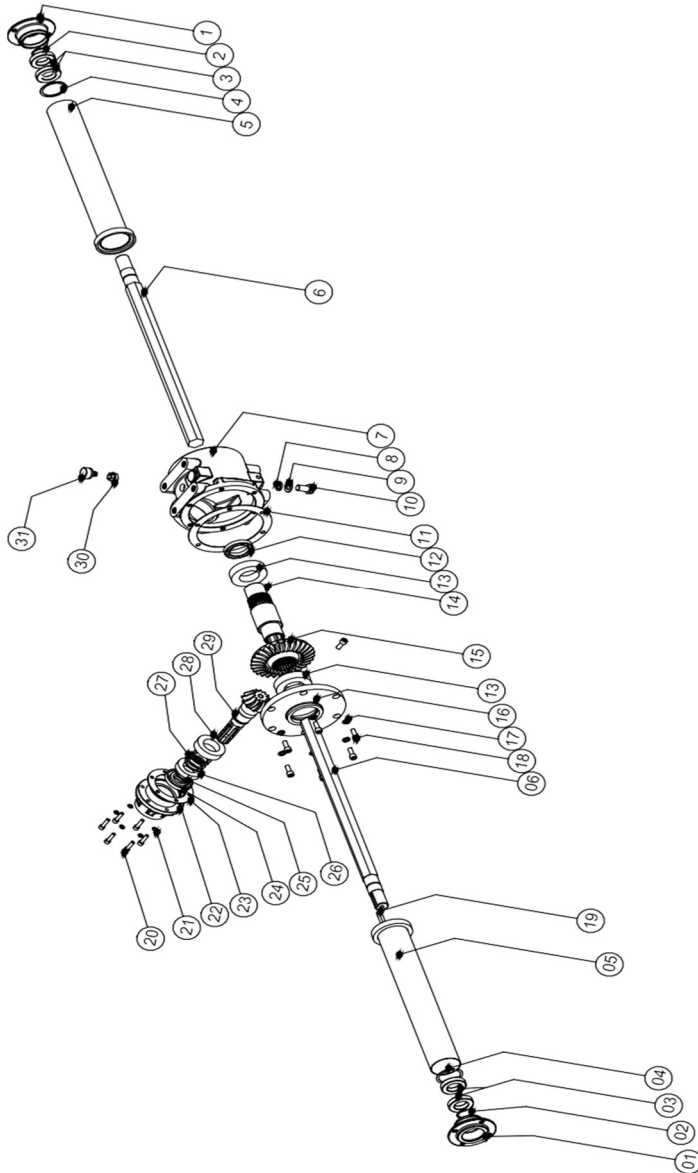

Gear Box Assembly

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	ROUND FLANGE DIA 120	PH2070012AA	2
2	CIRCLIP 35X2.5H IS:3075 (PART 1)	RT2010029AA	2
3	BALL BEARINGZZ 6007ZZ	PH9000006AA	4
4	CIRCLIP 62X2N IS:3075 (PART 2)	PH9010016AA	2
5	PIPE 76X72 L-490	PC9010004AA	2
6	HEX BAR A/F 36	PC2050001AA	2
7	GEAR BOX HOUSING	PH2070001AA	1
8	M8 VULCANISED FIBRE WASHERS THICK-2MM	PH9010065AA	1
9	SPRING WASHER M10	RT2010016AA	1
10	HEX BOLT M10X25 F/T ,GRADE 8.8	RT9010056AA	1
11	GASKET FOR FLANGE RH	PH9010009AA	1
12	OIL SEAL 48-72-10	PH9080002AA	1
13	TAPER ROLLER BEARING 30210	RT2000002AA	2
14	SPLINE HOLLOW SHAFT	PH2050003AA	1
15	CROWN Z-29	PH2050002AA	1
16	BIG FLANGE	PH2070027AA	1
17	SPRING WASHER M10	RT2010016AA	6
18	ALLEN BOLT M10X25 F/T GRADE12.9	PH9010007AA	6
19	KEY 10X8X40	PC9010006AA	2
20	ALLEN BOLT M8X30 F/T GRADE 12.9	PH9010006AA	6
21	SPRING WASHER M8	RT9010017AA	6
22	TAIL PINION HOUSING	PH2070002AA	1
23	GASKET FOR TAIL PINION HOUSING	PH9010008AA	1
24	OIL SEAL 35-72-10	RT2080004AA	1
25	CIRCLIP 40X1.75N IS:3075 (PART 1)	PH9010010AA	1
26	TAPER ROLLER BEARING32008	PH9000005AA	1
27	SHIM ID40, OD50	PH9010012AA	According to Adjustment
28	TAPER ROLLER BEARING 32009	PH9000004AA	1
29	TAIL PINION Z-12	PH2050001AA	1
30	AIR BREATHER NUT M22X1.5	PH9010066AA	1
31	AIR BREATHER	RT2010006AA	1


Mounting Bracket for Towing

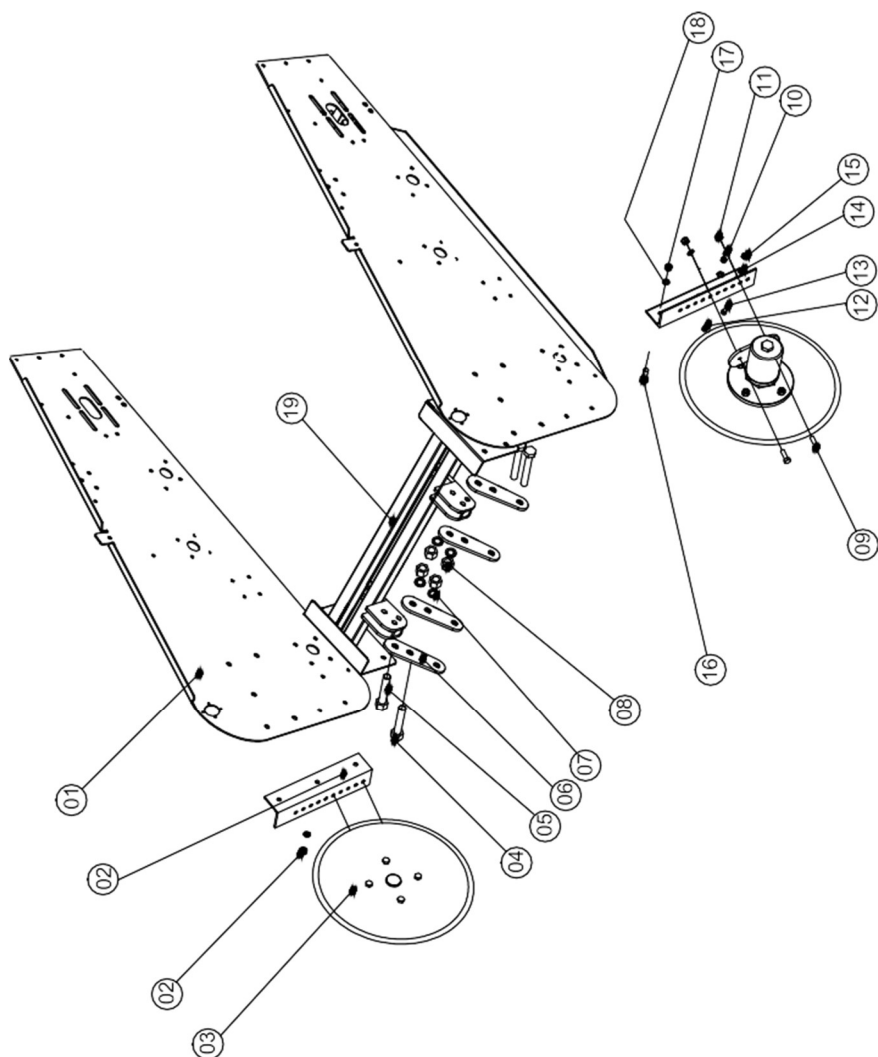

Mounting Bracket for Towing

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	SIDE PLATE RH T-5MM	PH9020002AA	1
2	ANGLE 100X65X6 LH	PH9010002AA	1
3	DISC ASSEMBLY	PH9110027AA	2
4	HEX BOLT M22X120 H/T,(GRADE 10.9)	PH9010015AA	2
5	HEX BOLT M22X130 H/T,(GRADE 10.9)	PH9010060AA	2
6	LOWER LINK ADJUSTMENT PLATE T-12	PH9020016AA	4
7	SPRING WASHER M22	PH9010017AA	4
8	HEX PLAIN NUT M22,(GRADE 10)	PH9010016AA	4
9	HEX BOLT M10X35 F/T,(GRADE 8.8)	PH9010057AA	4
10	SPRING WASHER M10	RT2010016AA	4
11	NYLOCK NUT M10 ,GRADE 10	RT9010007AA	4
12	HEX BOLT M12X30 F/T GRADE 8.8	PH9010003AA	2
13	HEX BOLT M12X25 F/T GRADE 8.8	PH9010062AA	2
14	SPRING WASHER M12	RT9010032AA	4
15	NYLOCK NUT M12 GRADE 8	RT9010031AA	4
16	HEX BOLT M16X40 H/T,(GRADE 10.9)	PH9010059AA	4
17	NYLOCK NUT M16 ,(GRADE 10)	RT9010028AA	4
18	SPRING WASHER M16	RT9010029AA	4
19	GEAR BOX FOUNDATION ASSEMBLY	PH9110016AA	1


Roller Assembly and Outer Accessories

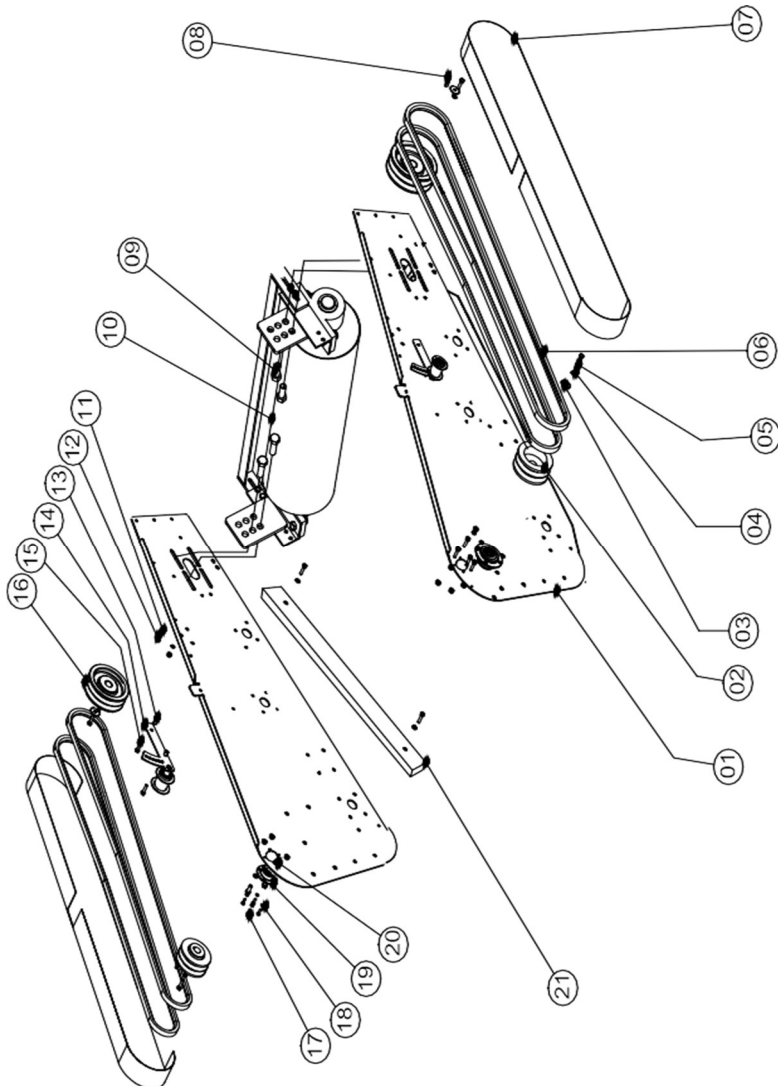

Roller Assembly and Outer Accessories


SR. NO.	DESCRIPTION	PART NO.	QTY.
1	SIDE PLATE LH T-5MM	PH9020001AA	2
2	2 C PULLEY 6"	PH2070004AA	2
3	PLAIN WASHER ID11,OD45 THICK 3	PH9010058AA	4
4	SPRING WASHER M10	RT2010016AA	4
5	HEX BOLT M10X35 F/T,(GRADE 8.8)	PH9010057AA	4
6	BELT C134	PH9080001AA	4
7	BELT COVER ASSY LH	PH9030016AA	2
8	KEY 10X8X40	PH9010056AA	4
9	BIG ROLLER ASSEMBLY	PH9110012AA	1
10	HEX BOLT M16X35 H/T, (GRADE 10.9)	RT9010134AA	4
11	SPRING WASHER M16	RT9010029AA	4
12	NYLOCK NUT M16,(GRADE 10)	RT9010028AA	4
13	SPACER OD 16 ID 11 L16	PH9010046AA	4
14	BELT ADJUSTER ASSEMBLY	PH9110002AA	2
15	HEX BOLT M10X35 F/T,(GRADE 8.8)	PH9010057AA	2
16	2 C PULLEY 8"	PH2070006AA	2
17	HEX BOLT M10X25 F/T ,GRADE 8.8	RT9010056AA	8
18	SPRING WASHER M10	RT2010016AA	8
19	ROUND FLANGE DIA 120	PH2070012AA	2
20	NYLOCK NUT M10 ,GRADE 8	RT9010007AA	8
21	WOODEN STRIP RH	PH9010054AA	1

Gear Box Side Flange

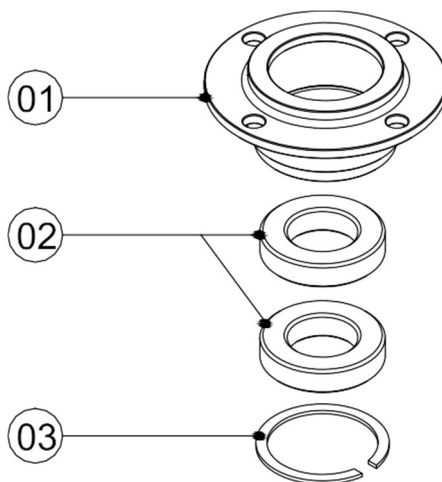


SR. NO.	DESCRIPTION	PART NO.	QTY.
1	ROUND FLANGE DIA 120	PH2070012AA	1
2	BALL BEARINGZZ 6007ZZ	PH9000006AA	2
3	CIRCLIP 62X2N IS:3075 (PART 2)	PH9010016AA	2

Cage Assembly

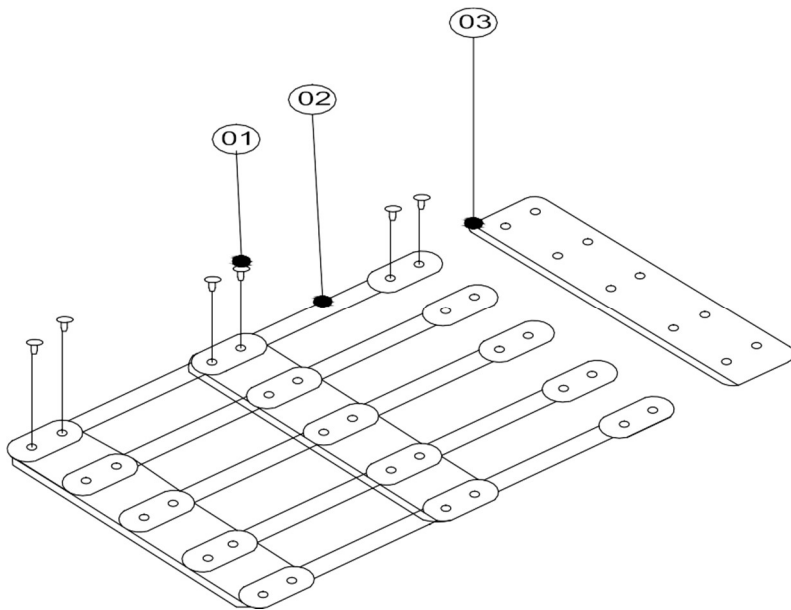

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	RIVETS 6X25	PH9010021AA	80
2	ROD DIA 13	PH9010032AA	468
3	FLAT BELT WITH WOVEN 8X55X3200	PH9080003AA	3


Blade Mounting Assembly

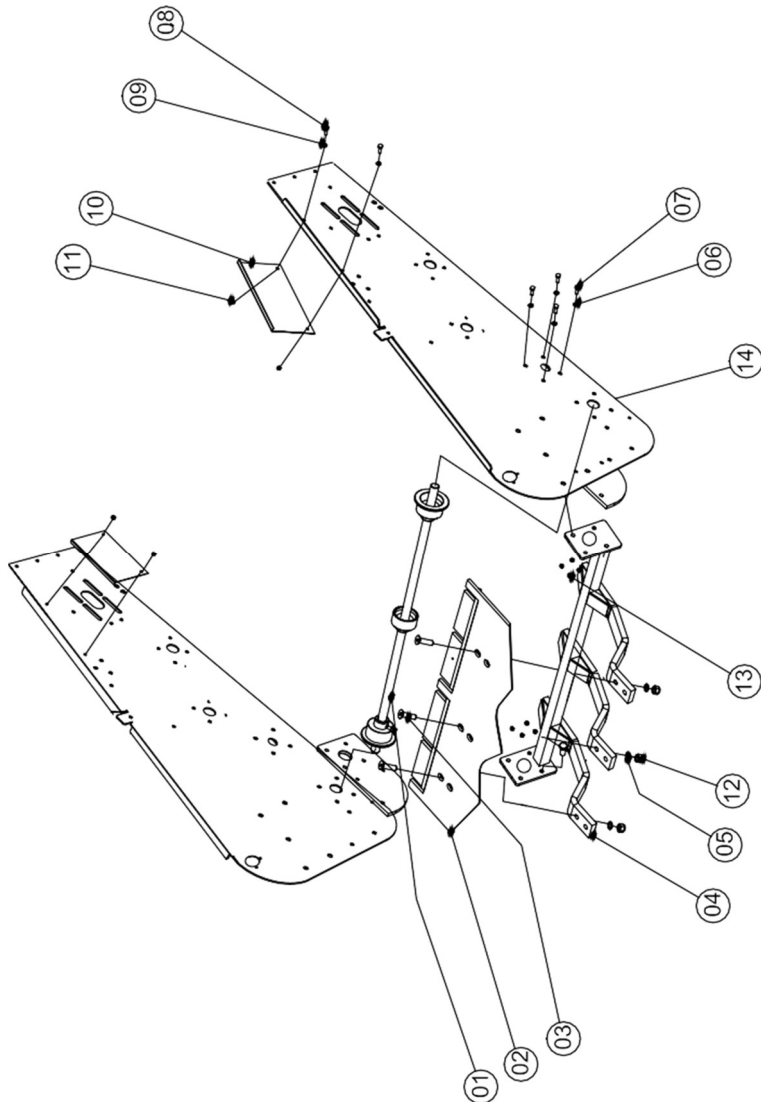

Blade Mounting Assembly

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	FRONT SHAFT ROLLER ASSY	PH9110011AA	1
2	BLADE	PH9020023AA	1
3	CSK BOLT M16X45 H/T (GRADE 10.9)	PH9010061AA	6
4	BLADE MOUNTING ASSY.	PH9030011AA	1
5	SPRING WASHER 16.2	RT9010029AA	6
6	SPRING WASHER M12	RT9010032AA	8
7	HEX BOLT M12X35 H/T,(GRADE 10.9)	RT9010030AA	8
8	HEX BOLT M8X20 F/T, (GRADE 8.8)	PH9020005AA	4
9	SPRING WASHER M8	RT9010017AA	4
10	UPPER FLAPPER T-2	PH9020005AA	2
11	NYLOCK NUT M8 ,(GRADE 8.8)	RT9010254AA	4
12	NYLON NUT M16, (GRADE 10.9)	RT9010028AA	6
13	NYLOCK NUT M12,(GRADE 10.9)	RT9010031AA	8
14	SIDE PLATE LH T-5MM	PH9020001AA	1


Side Attachment and Middle Drive Assembly

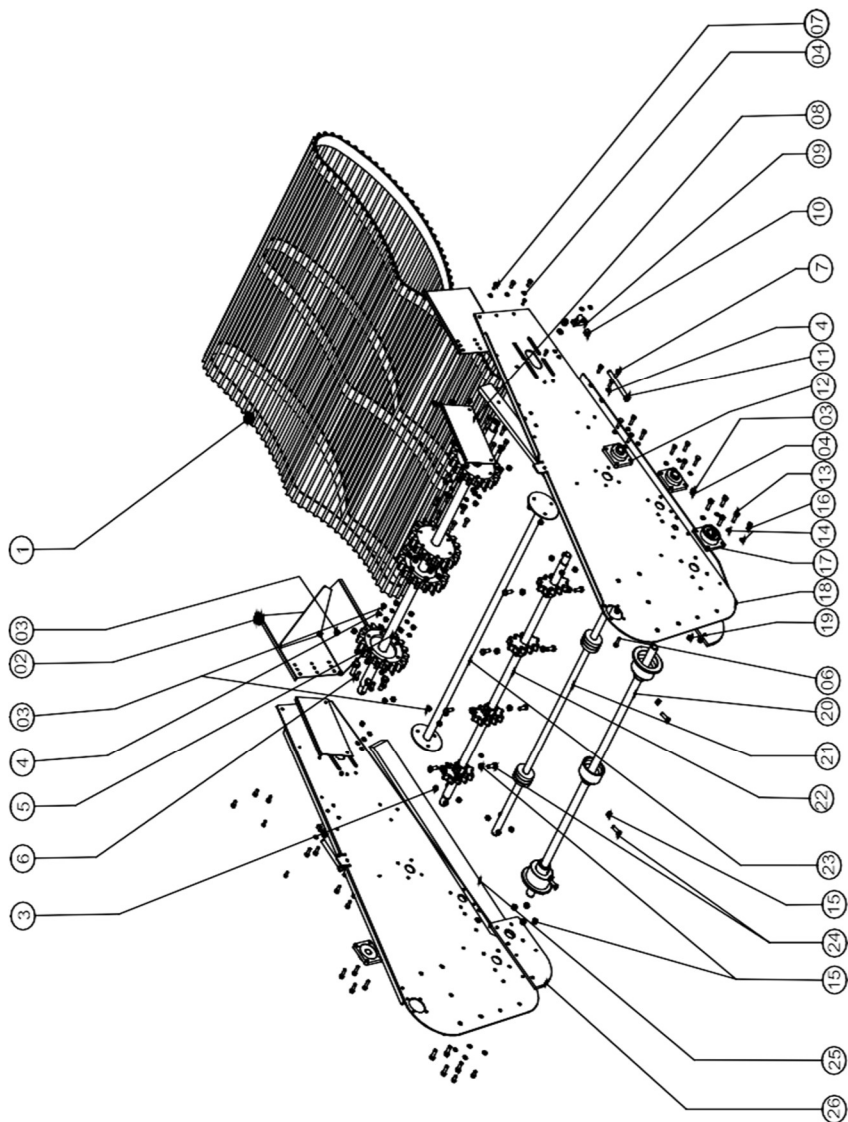

Side Attachment and Middle Drive Assembly


SR. NO.	DESCRIPTION	PART NO.	QTY.
1	CAGE ASSEMBLY	PH9110020AA	1
2	REAR FLAPPER ASSY LH/RH	PH9110021AA	2
3	NYLOCK NUT M10, (GRADE 8.8)	RT9010007AA	25
4	SPRING WASHER M10	RT2010016AA	25
5	DRIVE ASSEMBLY	PH9110006AA	1
6	HEX BOLT M10X35 F/T,(GRADE 8.8)	PH9010057AA	19
7	HEX BOLT M10X25 F/T ,GRADE 8.8	RT9010056AA	8
8	UPPER FLAPPER T-2	PH9020005AA	2
9	BRACKET	PH2070007AA	2
10	HEX PLAIN NUT M16,(GRADE 10.9)	RT9010028AA	1
11	HEX BOLT M16X150 F/T,(GRADE 10.9)	RT9010071AA	1
12	BEARING ASSEMBLY UCF-206	PH9000001AA	4
13	HEX BOLT M12X30 F/T,(GRADE 8.8)	PH9010003AA	8
14	SPRING WASHER M12	RT9010032AA	8
15	PLAIN NUT M12	PP9010009AA	19
16	HEX BOLT M12X20 F/T GRADE 8.8	PH9010004AA	2
17	BEARING ASSEMBLY UCF-207	PH9000002AA	2
18	SIDE PLATE LH T-5MM	PH9020001AA	1
19	NYLOCK NUT M12 GRADE 8.8	RT9010031AA	2
20	FRONT ROLLER SHAFT ASSEMBLY	PH9110011AA	1
21	HELPER SHAFT ASSEMBLY	PH9030003AA	1
22	JUMPER SHAFT ASSEMBLY	PH9110008AA	1
23	CENTER SUPPORT ASSY	PH9030019AA	1
24	HEX BOLT M12X30 F/T,(GRADE 8.8)	PH9010003AA	11
25	WOODEN SUPPORT LH	PH9010005AA	1
26	FRONT SUPPORT PLATE T-12	PH9020004AA	1

Disc Assembly

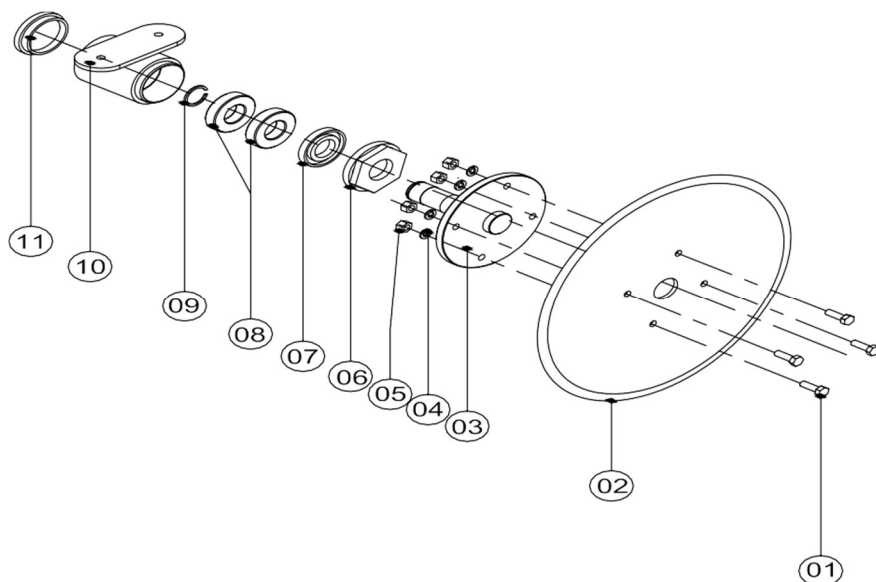


SR. NO.	DESCRIPTION	PART NO.	QTY.
1	HEX BOLT M10X30 F/T,(GRADE 8.8)	RT2010015AA	4
2	FLAT DISC 17"	PC9020027AA	1
3	AXLE	PH2070011AA	1
4	SPRING WASHER M10	RT2010016AA	4
5	HEX PLAIN NUT M10,(GRADE 8.8)	RT9010057AA	4
6	HEX COVER NUT	RT9070004AA	1
7	SEAL 40-72-10	RT9080004AA	1
8	BEARING 6207ZZ	RT2000007AA	2
9	CIRCLIP 35X1.5N	RT2010029AA	1
10	HUB	RT9010053AA	1
11	COVER NUT	RT9070003AA	1

Adjustment Roller Assembly

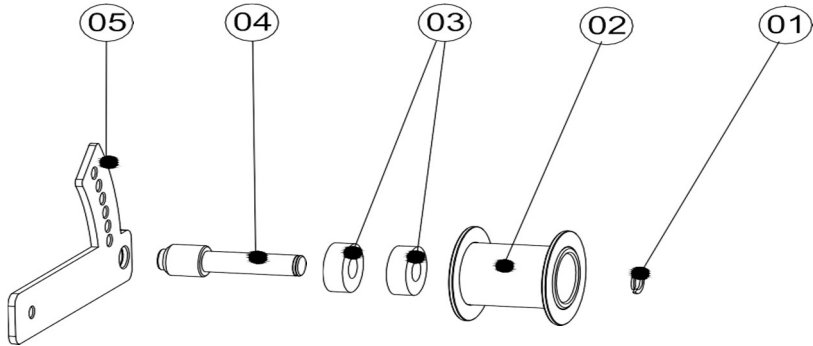

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	CIRCLIP 20X1.75H IS:3075	PH9020028AA	2
2	FLAT ROLLER ASSY	PH9030015AA	2
3	BEARING 6204ZZ	PH9000003AA	4
4	IDEL PIN DIA 30MM	PH9040002AA	2
5	ADJUSTMENT STRIP T=5MM	PH9020027AA	2

Roller Assembly

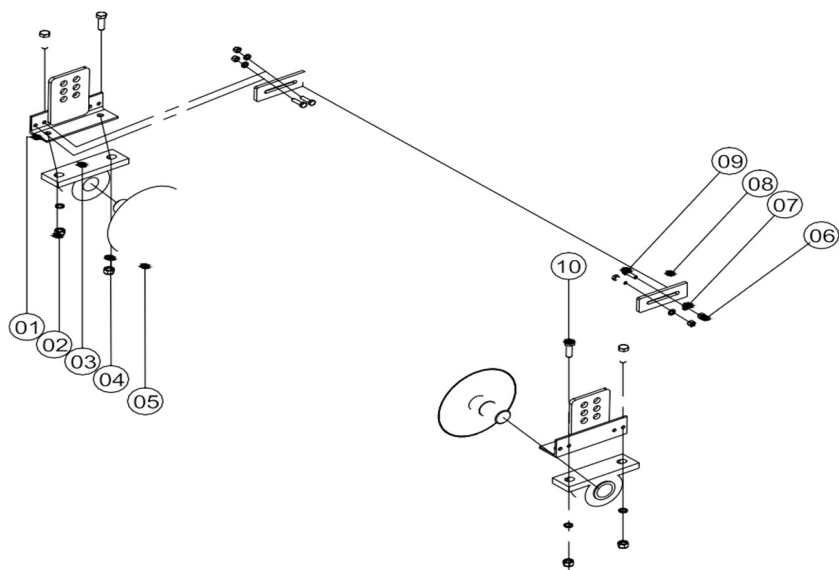

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	ROLLER MOUNTING ASSY.	PC9030019AA	1
2	NYLOCK NUT M16	RT9010028AA	2
3	BEARING UCP-208	PP9000008AA	1
4	PLAIN WASHER M16	RT9010029AA	2
5	ROLLER PIPE ASSY	PC9030018AA	1
6	NYLOCK NUT M12	RT9010031AA	2
7	PLAIN WASHER M12	RT9010158AA	2
8	SCRAPER SUB ASSY	PC9030020AA	1
9	HEX BOLT M12X40 H/T,(GRADE 8.8)	RT9010134AA	2
10	HEX BOLT M16X35 H/T,(GRADE 10.9)	RT9010043AA	2

Warranty Policy

Farmworld products are warranted to be free of defects in material or workmanship. Farmworld has traditionally followed a generous warranty policy as below:

1. Warranty Period:

Farmworld gives 12 months warranty for export, for the Farmworld products.

2. Warranty Conditions:

2.1 The Company's/seller liability will be limited to the repair or replacement of the part, proven defective within the period of 12 month (for export only) from the date of delivery of new product.

2.2 Parts under warranty policy:

- 2.2.1 Gearbox Housing, Drive shaft, Pinion shaft Transmission shaft Gears, Sprockets, etc.
- 2.2.2 Main frame, 3-Point Linkage.
- 2.2.3 Transmission parts, Draw bar, Hook, Latch lock, U-clamps.
- 2.2.4 Hydraulic Cylinder, Ring Hitch, Spindle, Bearings, Bearing hub.
- 2.2.5 Tines, Furrow, Turn-buckle, Auger, Disc (Only Breakage).
- 2.2.6 Peeling of Paint, Welding Part Failure.

2.3 The parts/materials that are not covered by the warranty are as below:

- 2.3.1 All wearable parts blades, bar point, Shoe, Shovels, Bearings etc.
- 2.3.2 Oil seals, Gaskets and Gearbox, Side Chain/Gear drive oils, Air breather.
- 2.3.3 Reflector or indicator, stickers.
- 2.3.4 All fasteners nut & bolt, pins, Hard Liners etc.
- 2.3.5 Wires, Hose Pipes.
- 2.3.6 P.T.O shaft and its parts.

2.4 The claim due to below circumstances will not apply:

- 2.4.1 Accident/wrong application / misuse / wrong handling / improper maintenance.
- 2.4.2 Repair or replacement improperly done by person other than company's authorized representative.
- 2.4.3 Modification in product / part without consulting with the Manufacturer.
- 2.4.4 Damage from the external influence as environment condition, heavy stones, fires disaster and any act of God.
- 2.4.5 Usage of the product with replacement part that has not been manufactured or supplied by the Company will nullify this warranty claim.

3. Compensation Policy:

- 3.1 The warranty is automatically terminate on expiry of 12 months from date of delivery, even if the implements may not be in use for any time during the warranty tenure for any reason.
- 3.2 Company's employees or its Authorized representatives have no authority to vary the warranty terms/period.
- 3.3 Company will not cover any delivery costs for claim parts.

The warranty shall not cover or include any duty or taxes incurred by the Buyer in relation to the product under warranty policy. All proceeding relating to any dispute arising between the company and the Buyer on the liability of the company under this warranty shall be taken in civil court having JURISDICTION Actions.

Warranty Registration Form

(Customer Copy)

CUSTOMER'S NAME:	
ADDRESS :	
CONTACT NO. : (1)	(2).
SERIAL NO. :	MACHINE MODEL :
INVOICE NO. :	TRACTOR MODEL :
DATE OF SALE :	HP :
EXPLAINED THE FOLLOWING:	YES / NO
LUBRICATION REQUIRED PARTS	
ADJUSTMENT AND CHECKING REQUIRED PARTS	
ROUTINE MAINTENANCE TIPS AND SCHEDULE	
WARRANTY / TERMS IN DETAIL	
SPARES CATALOGUE & RECOGNISING PARTS EASILY	
EMERGENCY CONTACT NUMBER OF DEALER PERSON	
INSTALLATION OF MACHINE AND TRAINING	
RECEIVED MACHINE WITH:	
NO SHORTAGES	
NO DAMAGES	
ALL ITEMS IN TOOL KIT	
CORRECTED PROPELLER SHAFT (PROPERLY LENGTH CUT)	
I UNDERSTOOD COMPLETE OPERATING PROCEDURE AND RECEIVED MACHINE IN PERFECT CONDITION WITH PROPER INSTALLATION	
CUSTOMER'S SIGNATURE	DEALER SIGNATURE WITH SEAL



Honour Your Trust

Warranty Registration Form

(Dealer Copy)

CUSTOMER'S NAME:	
ADDRESS :	
CONTACT NO. : (1)	(2).
SERIAL NO. :	MACHINE MODEL :
INVOICE NO. :	TRACTOR MODEL :
DATE OF SALE :	HP :
EXPLAINED THE FOLLOWING:	YES / NO
LUBRICATION REQUIRED PARTS	
ADJUSTMENT AND CHECKING REQUIRED PARTS	
ROUTINE MAINTENANCE TIPS AND SCHEDULE	
WARRANTY / TERMS IN DETAIL	
SPARES CATALOGUE & RECOGNISING PARTS EASILY	
EMERGENCY CONTACT NUMBER OF DEALER PERSON	
INSTALLATION OF MACHINE AND TRAINING	
RECEIVED MACHINE WITH:	
NO SHORTAGES	
NO DAMAGES	
ALL ITEMS IN TOOL KIT	
CORRECTED PROPELLER SHAFT (PROPERLY LENGTH CUT)	
I UNDERSTOOD COMPLETE OPERATING PROCEDURE AND RECEIVED MACHINE IN PERFECT CONDITION WITH PROPER INSTALLATION	
CUSTOMER'S SIGNATURE	DEALER SIGNATURE WITH SEAL



Honour Your Trust



Honour Your Trust

Warranty Registration Form

(Manufacturer Copy)

CUSTOMER'S NAME:	
ADDRESS :	
CONTACT NO. : (1)	(2).
SERIAL NO. :	MACHINE MODEL :
INVOICE NO. :	TRACTOR MODEL :
DATE OF SALE :	HP :
EXPLAINED THE FOLLOWING:	YES / NO
LUBRICATION REQUIRED PARTS	
ADJUSTMENT AND CHECKING REQUIRED PARTS	
ROUTINE MAINTENANCE TIPS AND SCHEDULE	
WARRANTY / TERMS IN DETAIL	
SPARES CATALOGUE & RECOGNISING PARTS EASILY	
EMERGENCY CONTACT NUMBER OF DEALER PERSON	
INSTALLATION OF MACHINE AND TRAINING	
RECEIVED MACHINE WITH:	
NO SHORTAGES	
NO DAMAGES	
ALL ITEMS IN TOOL KIT	
CORRECTED PROPELLER SHAFT (PROPERLY LENGTH CUT)	
I UNDERSTOOD COMPLETE OPERATING PROCEDURE AND RECEIVED MACHINE IN PERFECT CONDITION WITH PROPER INSTALLATION	
CUSTOMER'S SIGNATURE	DEALER SIGNATURE WITH SEAL



Honour Your Trust



Honour Your Trust

FARMWORLD AGROTECH PRIVATE LIMITED

Office Address:- Plot No. 373, Road-U, Khirasara Industrial Estate, Khirasara,
Taluka – Lodhika, District – Rajkot, 360021 (Gujarat) India.

Email: customercare@farmworld.in | Website: www.farmworld.in