


MINI TILLER - FWMT 210P

PARTS CATALOGUE



Honour Your Trust


01. GEAR BOX ASSEMBLY

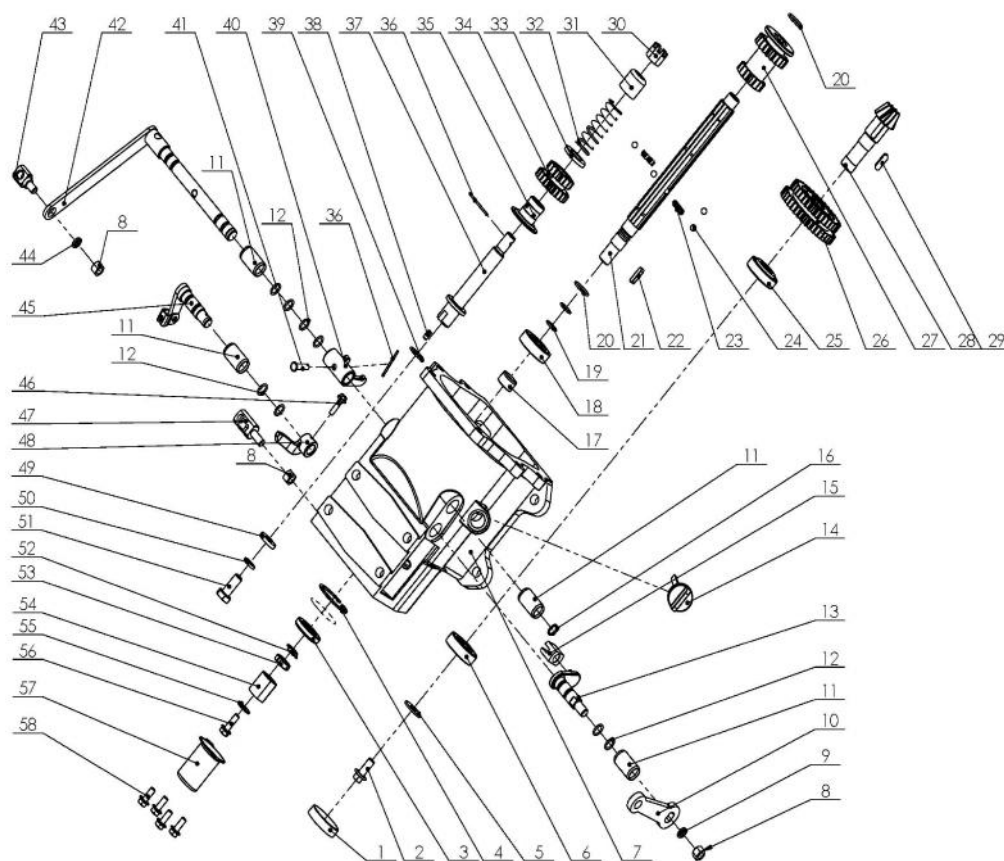

REF. No.	PART CODE	DESCRIPTION	QTY.
1	3037010001040	gearbox cover oil seal 40×7	1
2	3037001008048	bolt M8×20	1
3	3037010001038	oil seal 40×20×7	1
4	3037005010004	internal circlip 40	1
5	3037005027002	washer A class 8×2	1
6	3037009001007	ball bearing 6203	1
7	W1101T0300000	transmission box casing	1
8	3037004001038	nut M8	3
9	3037005004036	spring washer 8×2.1	1
10	W1309T0301000	shifting lever sheath	1
11	W1314T0301000	fork axle sheath	4
12	3037010002061	O-ring 11×2	8
13	W1308T0301000	shifting fork axle	1
14	W1801T0002000	dipstick M20/50	1
15	W1306T0301000	shifting fork	1
16	3037005009006	external circlip A 14	1
17	W1301T0301000	main shaft sheath	1
18	3037009001007	ball bearing 6203	1


19	3037010002061	O-ring 11×2	2
20	3037005014002	steel circlip 20	2
21	W1201T0301000	main shaft	1
22	3037008001008	key A 5×18	1
23	W1501T0001000	shifting spring	2
24	3037011007003	ball S Φ6.35	4
25	3037009005001	roller bearing 30203	1
26	W1204T0301000	driven double gear	1
27	W1202T0301000	driving double gear	1
28	W1203T0301000	counter shaft	1
29	3037008001039	key A 6×6×20	1
30	3037004027002	slotted nut M12	1
31	W1304T0001000	reverse gear stop sheath	1
32	W1502T0001000	reverse gear spring	1
33	3037005005002	washer 17*28*2.5	1
34	W1209T0301000	reverse gear double gear	1
35	W1208T0501000	reverse gear push plate	1
36	3037007003005	cotter pin A 2×30	2
37	W1207T0301000	reverse gear axle	1
38	3037007001015	pin A 5×10	1
39	3037010002060	O-ring 18×1.8	1
40	W1315T0301000	clutch fork	1
41	3037007002021	pin B 6×25	1
42	W1316T0301000	clutch fork axle	1
43	W1318T0001000	clutch cable pedestal	1
44	3037005004036	spring washer 8×2.1	1
45	W1313T0301000	reverse gear fork axle	1
46	3037001006049	bolt M5×30	1
47	W1317T0002000	reverse gear cable pedestal	1
48	W1312T0301000	reverse gear fork	1
49	3037011023003	thin washer 18.2×22×4	1
50	3037005004035	spring washer 10×2.6	1
51	3037001003116	bolt M10×25	1
52	3037005029001	stop washer 16×1	1
53	3037004026001	nut M16×1.5	1
54	W1333T0501000	key sheath	1
55	3037005027001	washer 6×18×1.6	1
56	3037001008016	bolt M6×20	1
57	W1327T0301000	main shaft cover	1
58	3037001008012	bolt M6×16	4

02. DRIVING BOX ASSEMBLY

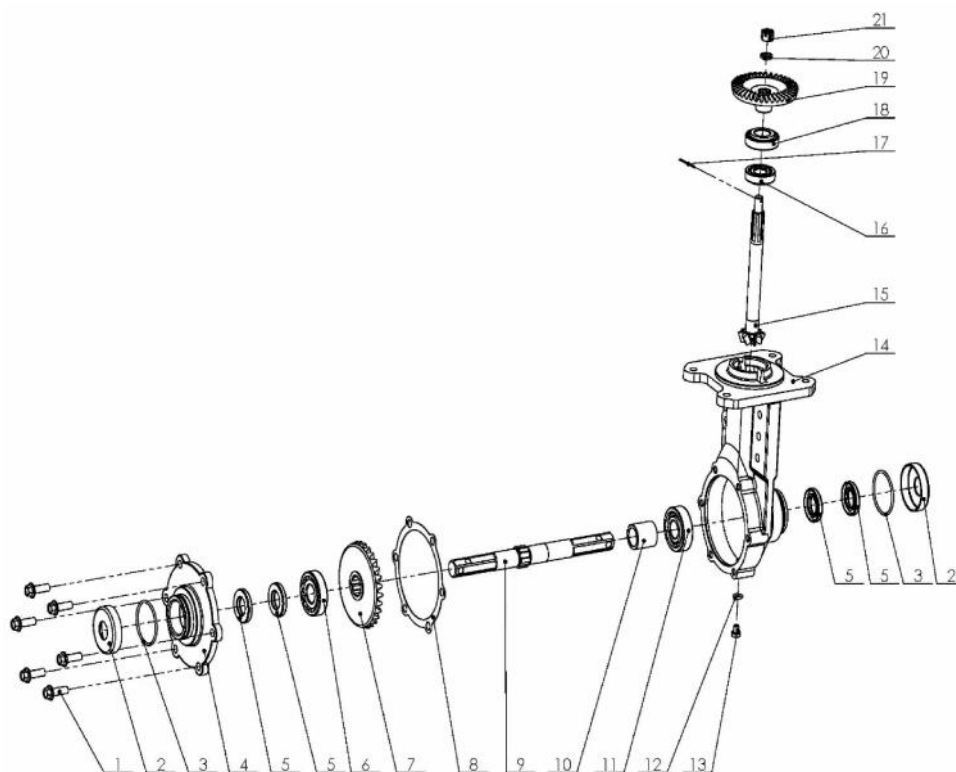


REF. No.	PART CODE	DESCRIPTION	QTY.
1	3037001008061	bolt M10×25	6
2	W1329T0301000	dust proof cover	2
3	3037010002062	O-ring 58.5×3	2
4	W1103T0300000	driving box side cover	1
5	3037010001039	oil seal 25×47×7	4
6	3037009005005	roller bearing 30305	1
7	W1217T0301000	transmission bevel gear	1
8	W1401T0301000	side cover gasket	1
9	W1221T0301000	hexagon output shaft	1
10	W1305T0301000	output shaft sleeve	1
11	3037009001056	ball bearing 6305	1
12	3037010002004	O-ring 11.2×2.65	1
13	3037001013008	draining plug M12×1.25×15	1
14	W1102T0300000	driving box casing	1
15	W1216T0301000	bevel gear shaft	1
16	3037009005002	roller bearing 30204	1
17	3037007003015	cotter pin 2.5×30	1
18	3037009005003	roller bearing 30305	1
19	W1215T0301000	driven bevel gear	1
20	3037005004027	spring washer 12×3.1	1
21	3037004027002	slotted nut M12	1

03. TRANSMISSION BOX ASSEMBLY

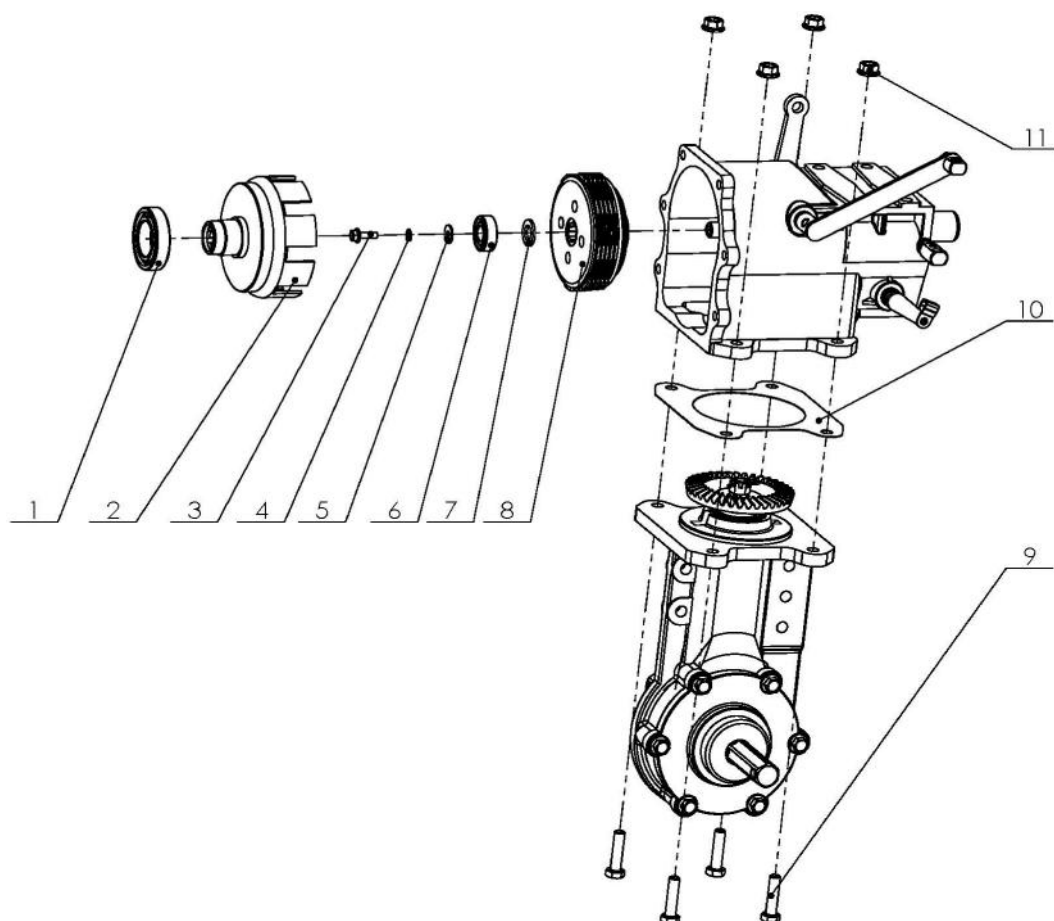

REF. No.	PART CODE	DESCRIPTION	QTY.
1	3037009001054	ball bearing 6007	1
2	W1631T0002000	clutch cover assy	1
3	3037001003010	bolt M6×20	1
4	3037005006002	sawtooth fasten washer 6×0.6	1
5	3037005027001	washer 6×18×1.6	1
6	3037009001004	ball bearing 6202	1
7	W1632T0000000	clutch gasket 26×15.3×2.7	1
8	W1610T0002000	clutch core assy	1
9	3037001003119	bolt M10×40	4
10	W1402T0301000	gearbox gasket	1
11	3037004016017	nut M10	4


04. HANDLE ASSEMBLY & HANDLE PEDESTAL

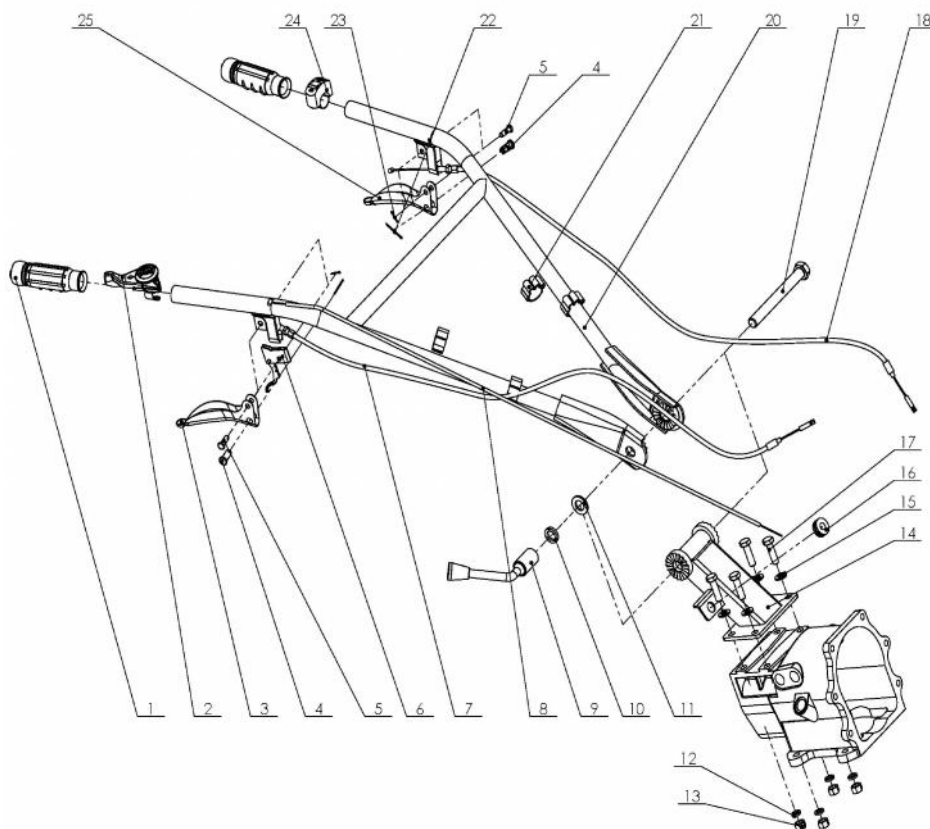

REF. No.	PART CODE	DESCRIPTION	QTY.
1	W4504T0001000	hand grip 25	2
2	W4106T0004000	throttle switch 25	1
3	W4103T0000000	reverse gear handle	1
4	3037011020001	cable pedestal, handle	2
5	3037007002014	pin 6.8×24	2
6	W4102T0000000	reverse gear lock	1
7	W4401T0300000	reverse gear cable	1
8	W4403T0004000	throttle cable 1400	1
9	W4020T0000000	handle locking bar	1
10	3037005004037	spring washer 16	1
11	3037005019022	washer A class 16×3	1
12	3037005004035	spring washer 10×2.6	4
13	3037004001036	nut A M10	4
14	W4008T0302000	handle pedestal	1
15	3037005019021	washer A class 10×2	4
16	W4609T0000000	shifting lever grip	1


17	3037001003118	bolt M10×35	4
18	W4402T0300000	clutch cable	1
19	3037001001055	bolt M16×150	1
20	W4108T0300000	handle bar	1
21	W4503T0001000	cable clip 25	4
22	3037007003005	cotter pin 2×30	2
23	3037007003003	cotter pin 1.6×20	2
24	W4405T0002000	on/off switch 1200/25(cable)	1
25	W4104T0000000	clutch handle	1

05. POWER ASSEMBLY

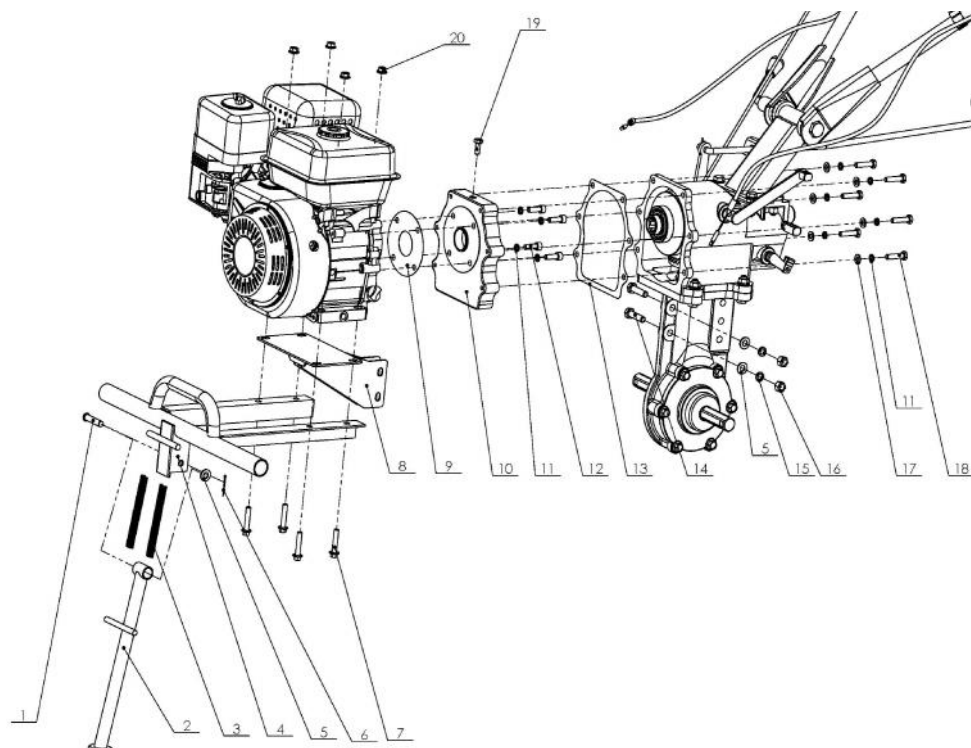


REF. No.	PART CODE	DESCRIPTION	QTY.
1	3037007002019	pin B 10×45	1
2	W3202T0000000	front stand	1
3	W3302T0000000	front stand spring	2
4	W3201T0300000	bumper	1
5	3037005019021	washer A class 10×2	3
6	3037007003005	cotter pin 2×30	3
7	3037001008050	bolt M8×40	4
8	W3101T0300000	engine bracket	1
9	W1406T0300000	engine gasket, gasoline	1
10	W1701T0300000	engine flange plate, gasoline	1
11	3037005004036	spring washer 8×2.1	10
12	3037002001010	socket cap bolt M8x25	4
13	W1404T0300000	flange plate gasket	1
14	3037001003119	bolt M10×40	2
15	3037005004035	spring washer 10×2.6	2
16	3037004001036	nut A M10	2
17	3037005019020	washer A class 8×1.6	6
18	3037001003115	bolt M8×35	6
19	3037011019001	hollow bolt M12×1.25×20	1
20	3037004016016	nut M8	4

06. DRAGGING ASSEMBLY

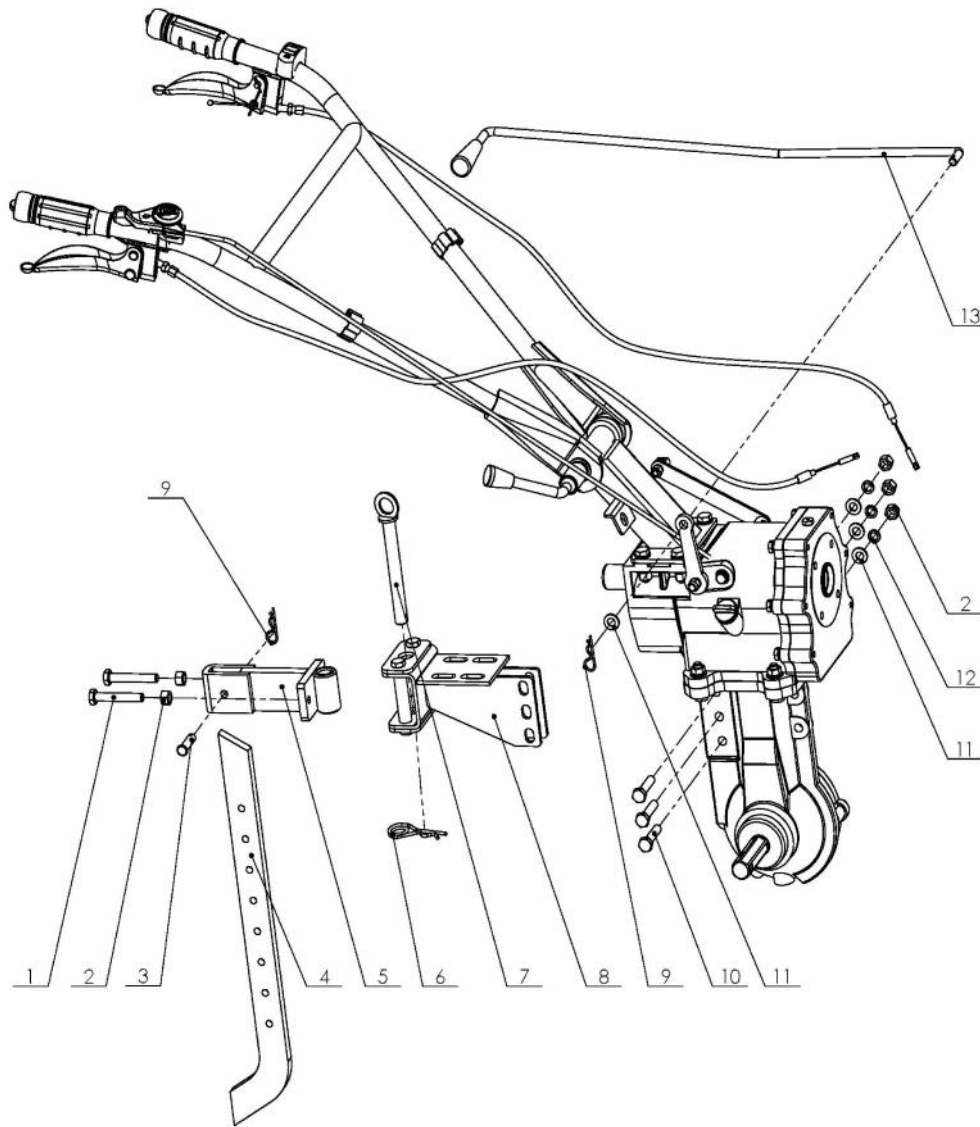


REF. No.	PART CODE	DESCRIPTION	QTY.
1	3037001003121	bolt M10×65	2
2	3037004001036	nut A M10	5
3	3037007002018	pin B 10×40	1
4	W3003T0000000	resistance rod	1
5	W3002T0300000	connection bracket	1
6	3037007008004	pin clip 3.2×60	1
7	W3004T0000000	pin 16	1
8	W3001T0300000	dragging assy	1
9	3037007008003	pin clip 2×40	2
10	3037001003120	bolt M10×45	3
11	3037005019021	washer A class 10×2	4
12	3037005004035	spring washer 10×2.6	3
13	W4200T0300000	shifting lever	1

07. FENDER ASSEMBLY

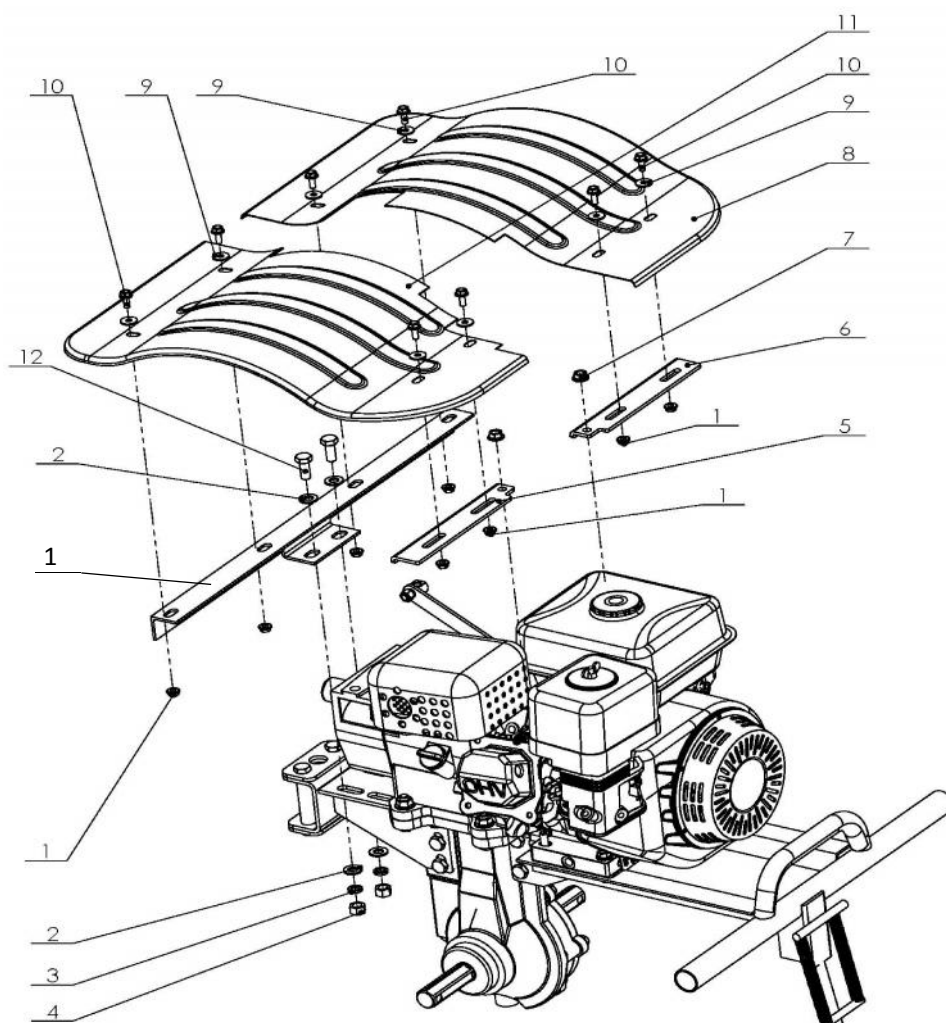


REF. No.	PART CODE	DESCRIPTION	QTY.
1	3037004016015	nut M6	8
2	3037005019021	washer A class 10×2	4
3	3037005004035	spring washer 10×2.6	2
4	3037004001036	nut A M10	2
5	W5103T0300000	right fender bracket	1
6	W5102T0300000	left fender bracket	1
7	3037004016016	nut M8	4
8	W5003T0300000	left fender	1
9	3037005027001	washer 6×18×1.6	8
10	3037001007133	bolt M6×16	8
11	W5004T0300000	right fender	1
12	3037001003116	bolt M10×25	2
13	W5201T0300000	rear fender bracket	1

08. WHEEL 4.0-8

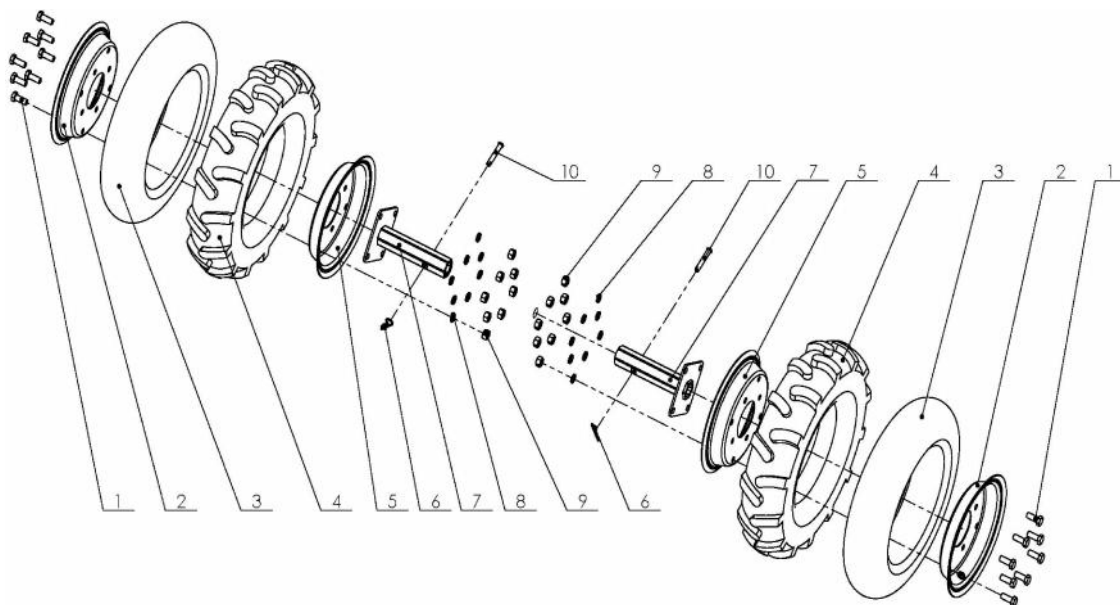

REF. No.	PART CODE	DESCRIPTION	QTY.
1	3037001003116	bolt M10×25	16
2	W6004T0001000	outer tire rim 4.0-8	2
3	W6002T0001000	inner tube 4.0-8	2
4	W6001T0001000	V-shape tire 4.0-8	2
5	W6003T0001000	inner tire rim 4.0-8	2
6	3037007008003	pin clip 2×40	2
7	W6005T0001000	wheel shaft ϕ 23 170	2
8	3037005004035	spring washer 10×2.6	16
9	3037004001036	nut A M10	16
10	3037007002017	pin 8×50	2

09. ROTARY BALDES

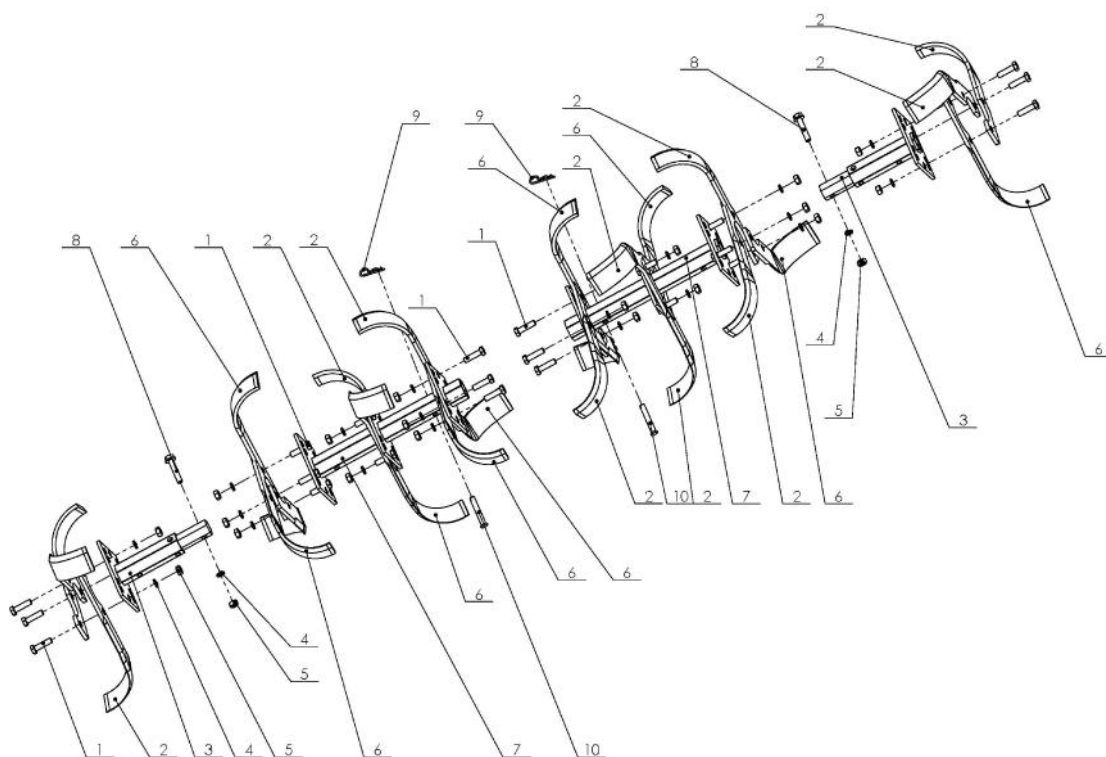

REF. No.	PART CODE	DESCRIPTION	QTY.
1	3037001003115	bolt M8×35	24
2	W7601T0000000	left dry land blade	13
3	W7501T0001000	vice blade shaft 23 3+1	2
4	3037005004036	spring washer 8×2.1	26
5	3037004001038	nut A M10	26
6	W7701T0000000	right dry land blade	14
7	W7502T0000000	main blade shaft 23 3+1	2
8	3037001008050	bolt M8×40	2
9	3037007008003	pin clip 2×40	2
10	3037007002017	pin 8×50	2



Honour Your Trust

FARMWORLD AGROTECH PRIVATE LIMITED

Office Address:- Plot No. 373, Road-U, Khirasara Industrial Estate, Khirasara,

Taluka – Lodhika, District – Rajkot, 360021 (Gujarat) India.

Email: customercare@farmworld.in | Website: www.farmworld.in