



MINI TILLER - FWMT 310D ENGINE PARTS CATALOGUE



Honour Your Trust


www.farmworld.in

01. Crankcase Housing Assembly

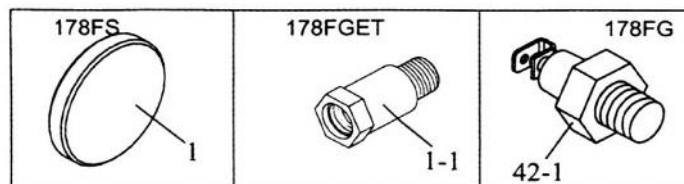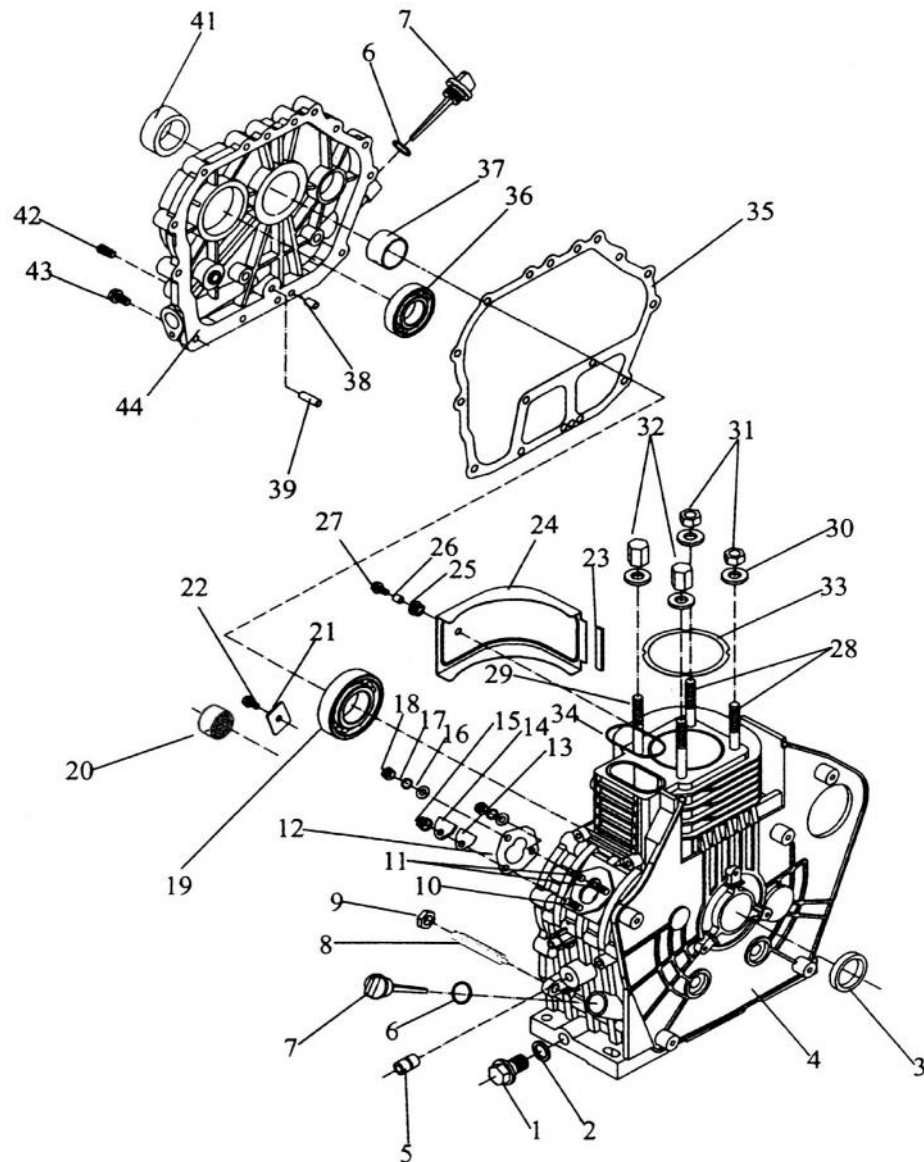


Sr. No.	Part Code	Description	Qty.
1	12.020.002.0001	Drain Plug	1
2	11.005.035.7001	Oil Plug Seal Assy	1
3	3037010001020	Oil Seal Sg30*45*8	1
4	11.005.022.7201	Cylinder Block. (Hand Start)	1
	11.005.022.7202	Cylinder Block. (Electric Start)	1
5	12.009.002.0400	Needle Bearing/Hk081410	2
6	3037010002009	O-Ring 24*2.4	2
7	11.005.009.7201	Oil Filler Gap	2
8/9	11.012.022.7201	Fuel Controller	1
10	12.004.004.0040	Stud AM6*30	1
11	12.004.004.0050	Stud AM6*40	2
12	3049010102400	Fuel Injection Pump Gasket	On demand
13	3049010102500	Seal Gasket	1
14	3049010102600	Seal Plate	1
15	12.001.005.0023	Nut M6	3
16	12.006.014.0090	Washer 6	2
17	12.006.008.0022	Spring Washer 6	2
19	12.009.001.0290	Ball Bearing 6307/P5	1
20	12.009.002.0500	Needle Bearing HM1512	1
21	11.005.023.7201	Retainer	1
22	12.002.013.0481	Bolt M8*16	1
23	11.010.014.7201	Cushion Blocking	1
24	11.010.013.7201	Air deflector	1
25	11.010.015.7001	Vibration Isolation Cushion Block	1
26	11.010.016.7201	Air deflector cushion bushing	1
27	12.002.013.0171	Bolt M6*20	1
28	11.003.020.0101	Cylinder Head Stud/M9*87	2
29	11.003.020.0001	Cylinder Head Stud/M9*104.5	2
30	11.003.021.0001	Washer	4
31	11.003.019.0001	Cylinder Head Nut (Short)	2
32	11.003.019.0002	Cylinder Head Nut (Long)	2
33	11.003.010.7200	Cylinder Head Shim	1
34	11.003.008.7201	Cylinder Head Ring	1
35	11.005.019.7201	Crank Case Gasket	1
36	12.009.001.0200	Ball Bearing 6206/P5	1
37	11.005.031.7201	Main Bearing	1
38	12.019.001.0100	Pin 8*12	2
39	11.011.007.7201	Oil Indicator	1
41	3037010001014	Oil Seal SG30*45*10	1
42	12.015.012.0001	Plug	1
42-1	11.011.006.7001	Oil Pressure Sensor	1
43	12.002.013.0520	Bolt M8 * 33.5	15
44	11.005.018.7201	Crank Case Cover	1
1	11.005.038.7201	Crankshaft Plug	1

02. Cylinder Head Assembly

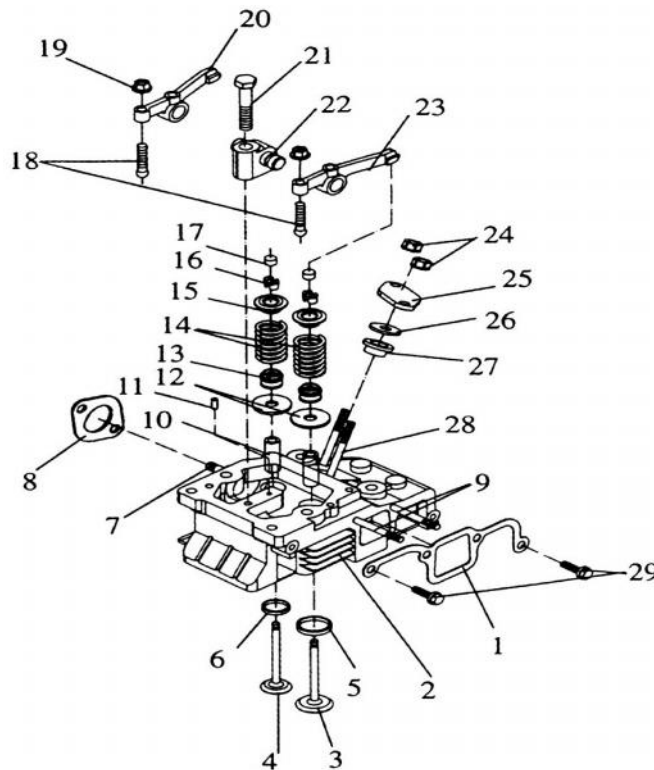


Sr. No.	Part Code	Description	Qty.
1	11.001.007.7201	Air Intake Gasket	1
2/5/6/10	11.003.009.7202	Cylinder Head	1
3	3049020200300	Intake Valve	1
4	3049020200400	Exhaust Valve	1
7	12.004.003.0030	Stud AM8*32	2
8	11.002.004.7001	Silencer Gasket	1
9	12.004.004.0080	Stud AM6*72	2
11	12.019.001.0020	Pin 4*8	1
12	11.004.010.7201	Valve Spring Washer	2
13	11.004.001.7201	Valve Conduit Oil Seal	2
14	11.004.009.7201	Spring Retainer	2
15	11.004.012.7201	Rock Arm Assy	2
16	11.004.014.7201	Cotter	4
17	11.004.013.7201	Valve Adjusting Plate	2
18	11.004.023.7201	Arm Assy	1
21	12.002.013.0581	Bolt M8*45	1
24	12.001.005.0023	Nut M6	2
25	11.009.014.7001	Nozzle Retainer	1
26	3049011300100	Spacer Washer	On demand
27	3049011300601	Spacer	1
28	12.004.004.0060	Stud AM6*60	2
29	12.002.013.0191	Bolt M6*25	2

03. Cylinder Head Cover Assembly

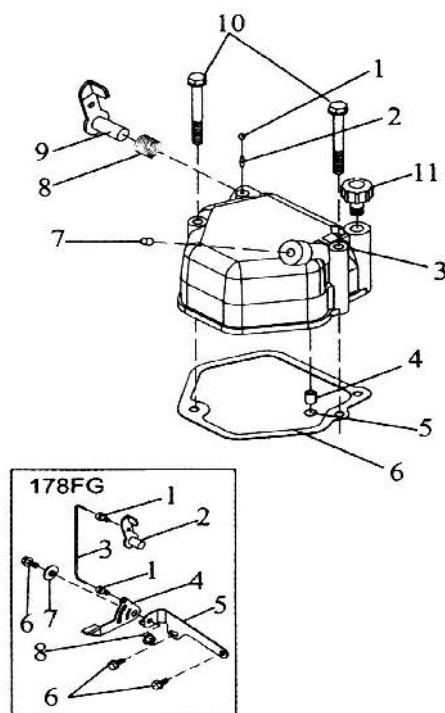


Sr. No.	Part Code	Description	Qty.
3	11.003.011.7002	Bonnet Assy	1
6	3049010300101	Bonner Gasket	1
10	12.002.013.0300	Bolt M6*55	2
(Generator Power)			
3	11.003.006.7001	Decompression Wire Sheath	1
5	11.003.007.7001	Decompression External Handle Parts	1
6	12.002.013.0151	Bolt M6*55/M6*14	2

04. Piston Connecting Rod Assembly

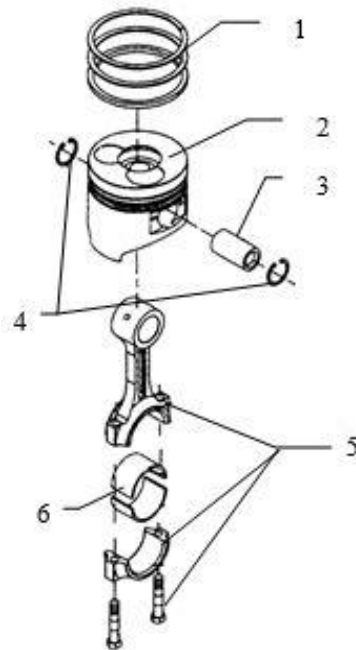


Sr. No.	Part Code	Description	Qty.
1	3049020400100	Ring Set	1
2	3049020400500	Piston	1
3	11.006.005.7201	Piston Pin	1
4	11.006.006.0301	Washer 21	2
5	3049020400800	Connecting Rod Assy	1
6	3049020400700	Crank Pin Bearing	2

05. Crankshaft Flywheel Assembly

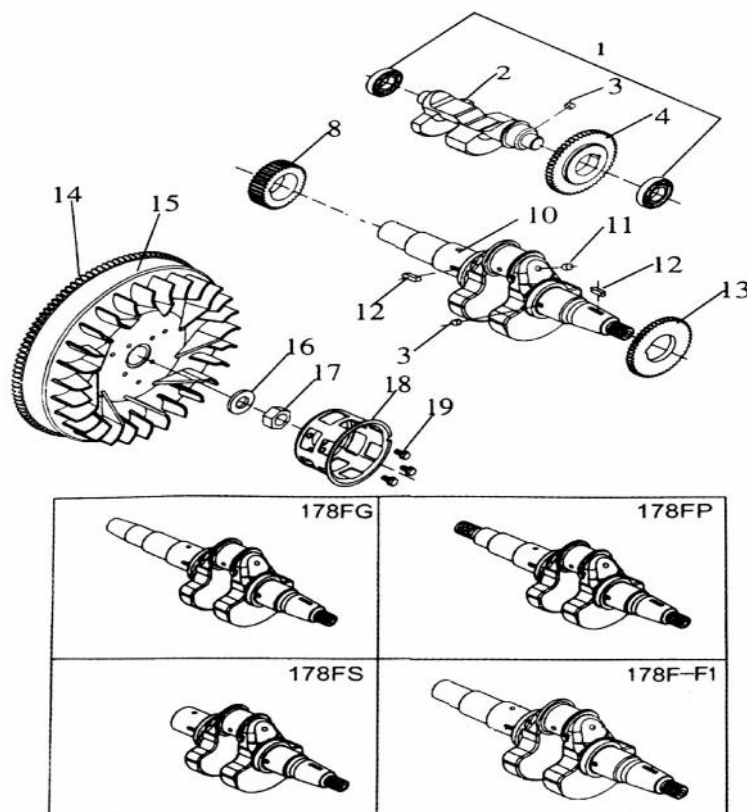


Sr. No.	Part Code	Description	Qty.
1	3037009001006	Ball Bearing 6202/P5	2
2	3049020500500	Balancer Shaft	1
3	12.014.002.0120	Key 5×7	2
4	11.006.012.7201	Timing Gear Of Balance Shaft	1
8	11.006.015.7201	Crankshaft Timing Gear	1
10	11.006.013.7209	Crank Shaft	1
	11.006.013.7202	Crank Shaft	1
	11.006.013.7201	Crank Shaft	1
	11.006.013.7205	Crank Shaft	1
11	12.010.001.0020	Steel Ball	1
12	12.014.002.0120	Key 5×12	2
13	11.006.011.7201	Drive Gear of Balance Shaft	1
14	11.007.004.7202	Flywheel Ring Gear	2
15	11.008.007.7202	Fly Wheel	1
16	12.015.027.0009	Fly Wheel Nut Washer	1
17	12.001.005.0092	Fly Wheel Nut	1
18	3049020500100	Starter Pulley	1
19	12.002.013.0143	Bolt M6*12	3

06. Camshaft Assembly

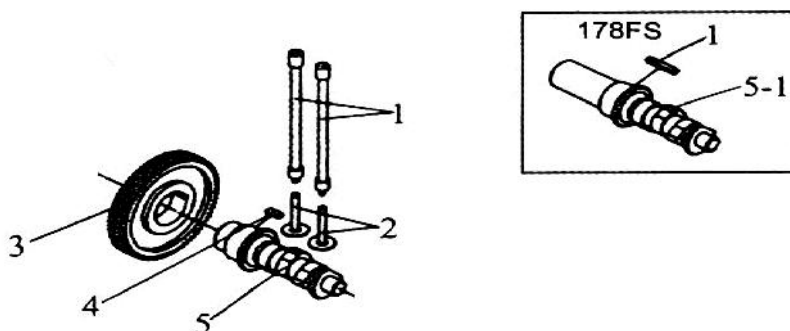


Sr. No.	Part Code	Description	Qty.
1	11.004.021.7202	Valve Rod Assy	2
2	11.004.015.7201	Valve Tappet	2
3	11.004.018.7201	Camshaft Timing Gear	1
4	12.014.002.0010	Key 5*14	1
5	3049020600103	Camshaft	1
5-1	11.004.020.7205	Camshaft (cam output)	1

07. Air Hood Assembly

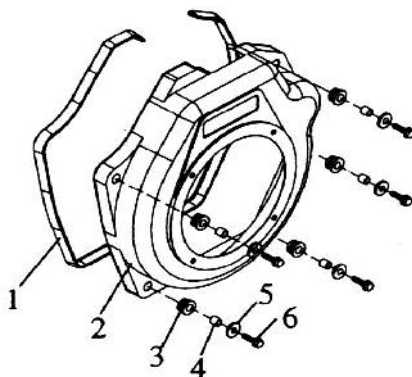


Sr. No.	Part Code	Description	Qty.
1	11.010.010.7101	Shock Absorber Seat	1
2	11.010.003.7201	Fan Case Welded Assy	1
3	11.010.002.7201	Shock Absorber	5
4	11.010.004.7201	Collar10*10	5
5	12.006.012.0020	Washer 6	5
6	12.002.013.0191	Bolt M6*25	5

08. Muffler Assembly

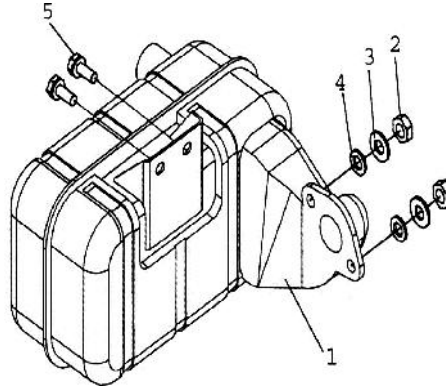


Sr. No.	Part Code	Description	Qty.
1	11.002.011.7202	Silencer Assy	1
2	12.001.001.0024	Nut 8	2
3	12.006.008.0032	Spring Washer 6	2
4	12.006.014.0180	Washer 8	2
5	12.002.013.0151	Bolt M6*14	2

09. Starter Motor Assembly

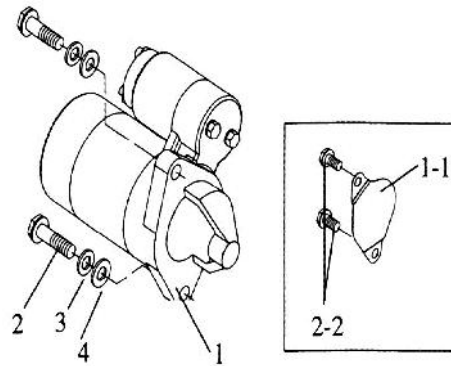


Sr. No.	Part Code	Description	Qty.
1	11.007.013.7201	Start Motor	1
1-1	11.005.016.7201	Starter Seat Cover	1
2	12.002.009.0440	Bolt M10*35	2
2-2	12.002.009.0396	Bolt M10*20	2
3	12.006.008.0041	Spring Washer 6	2
4	12.006.014.0200	Washer 10	2

10. Lubrication System

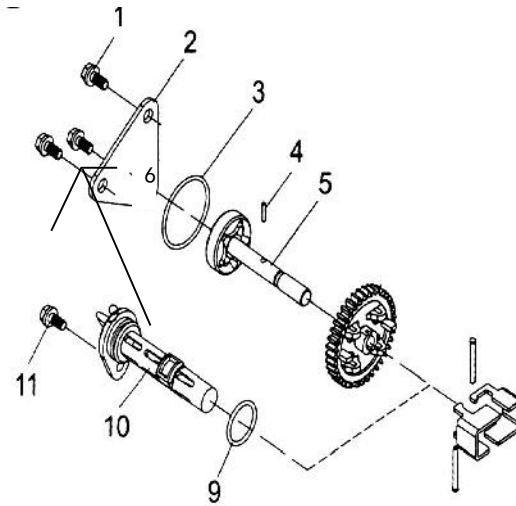


Sr. No.	Part Code	Description	Qty.
1	12.002.013.0143	Bolt M6*12	3
2	11.011.002.7201	Oil Pump Cover	1
3	12.008.001.0430	O-Ring 34.8*1.8	1
4	12.019.001.0010	Pin 3*16	1
5	11.011.001.7201	Oil Pump Assy	1
6	11.012.009.7201	Oil Pump Gear	1
9	12.008.001.0400	O-Ring 242.4	1
10	11.011.004.7201	Oil Filter Assy	1
11	12.002.013.0151	Bolt M6*14	1

11. Fuel System

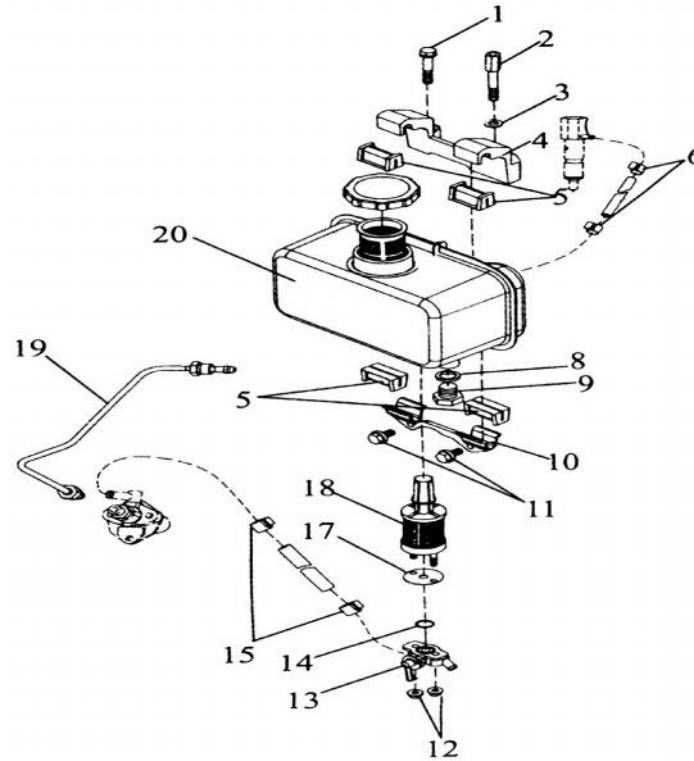


Sr. No.	Part Code	Description	Qty.
1	12.002.013.0581	Bolt M8×45	1
2	11.009.037.0001	Upper Stay Bolt	1
3	12.006.014.0180	Washer 8	1
4	11.009.032.7201	Upper Stay	1
5	11.009.029.7201	Fuel Tank Damper	4
6	11.009.007.7201	Fuel Return Pipe Assy	1
8	12.015.027.0011	Fuel Tank Plug Seat	1
9	12.020.001.0001	Fuel Tank Plug	1
10	11.009.033.7201	Lower Stay Assy	1
11	12.002.013.0151	Bolt M6*14	2
12	12.001.005.0023	Nut 6	2
13	3049011000800	Fuel Tank switch Assy	1
14	3037010002006	O-Ring 13.2*1.8	1
15	11.009.021.0001	Fuel Pipe Assy	1
17	11.009.002.7201	Fuel Filter Gasket	1
18	3049021000200	Fuel Filter Assy	1
19	11.009.004.7201	Fuel Injection Pipe Assy	1
20	11.009.034.7201	Fuel Tank Assy	1
21	11.009.034.9006	Fuel Tank Gap Assy	1

12. Flywheel Generator Assembly

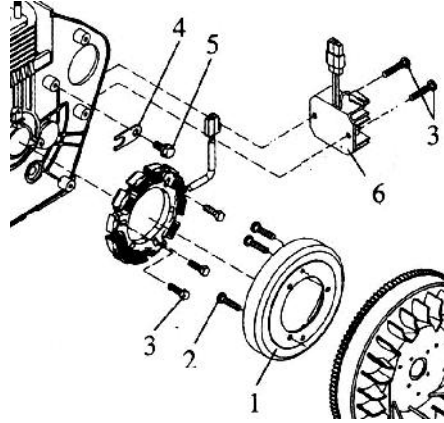

Sr. No.	Part Code	Description	Qty.
1	11.008.008.7201	Fly Wheel Alternator	1
2	12.003.010.0020	Screw Bolt M6*8	3
3	12.002.013.0171	Bolt M6*20	5
4	11.008.012.0001	Wire Clamp	1
5	12.002.013.0143	Bolt M6*12	1
6	11.008.006.7201	Regulator	1


13. Speed Control And Steering Combination

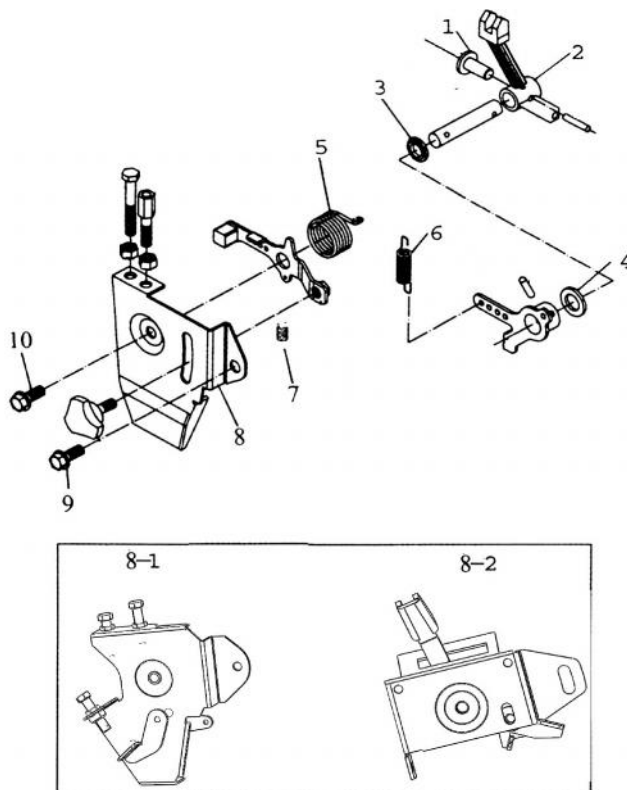

Sr. No.	Part Code	Description	Qty.
1	11.012.012.7201	Tappet 25.5	1
2	11.012.001.7201	Lever Fork	1
3	3037010001002	Oil Seal 8×14×4	1
4	11.012.025.7001	Lever Washer	2
5	11.012.016.7201	Return Spring	1
6	11.012.010.7202	Governor Spring	1
7	11.012.020.7201	Fine Spring	1
8	11.012.006.7202	Control Lever Assy.	1
8-1	11.012.006.7204	Control Lever Assy.	1
8-2	11.012.006.7203	Control Lever Assy.	1
9	12.002.013.0143	Nut M6×12	1
10	12.002.013.0191	Nut M6×25	1


14. Intake System

Pure Power:

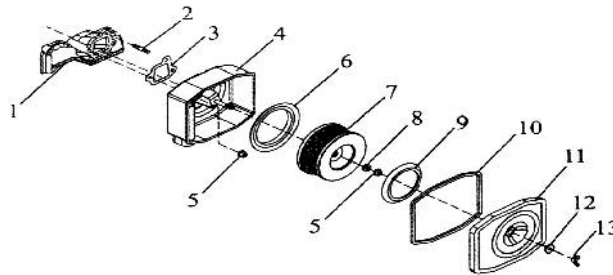


Sr. No.	Part Code	Description	Qty.
1	11.001.007.7201	Intake Pipe	1
2	12.002.013.0143	Nut M6×12	1
3	11.001.012.7001	Air Cleaner Gasket	1
5	12.001.005.0023	Flange Nut M6	2
4	11.001.016.7001	Air Cleaner Case Assy	1
6		Shock Absorber Washer 2	1
7		Air Cleaner Element Assy	1
8		Element Shock Absorber	1
9		Shock Absorber Washer 1	1
10		Case Ring	1
11		Cover Assy	1
12		Case Shock Absorber	1
13		Nut M6	1

Tiller Power:

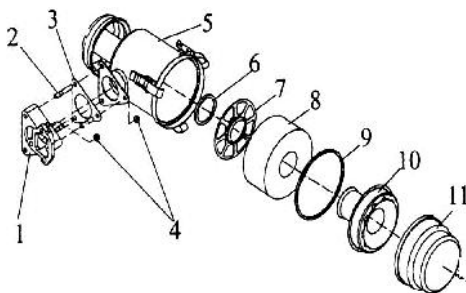


Sr. No.	Part Code	Description	Qty.
1	11.001.006.7202	Intake Pipe/Integration	1
2	12.002.013.0143	Nut M6×12	3
3	11.001.012.7001	Air Cleaner Gasket	1
5	3049010700605	Air Filter Connecting Disc	1
6		Tightening Bolt Of Air Cleaner	1
7		Washer I	1
8		Air Filter Case	1
9		O-Ring	1
10		Air Cleaner Element Assy	1
11		Air filter oil pan	1

15. Injector Unit (Whole Part)

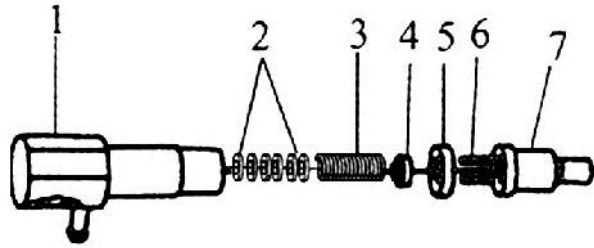


Sr. No.	Part Code	Description	Qty.
1	11.009.012.9003	Fuel Injection Valve Block	1
2	11.009.012.9004	Washer	1
3	11.009.012.9005	Volt-Adjustment Spring	1
4	11.009.012.9006	Mandril	1
5	11.009.012.9007	Intermediate Block	1
6	11.009.012.9008	Locating Pin	2
7	11.009.012.9002	Nozzle	1
1 to 7	3049011300200	Injector Unit (whole part)	1

16. Fuel Injection Pump Part (Whole Part)

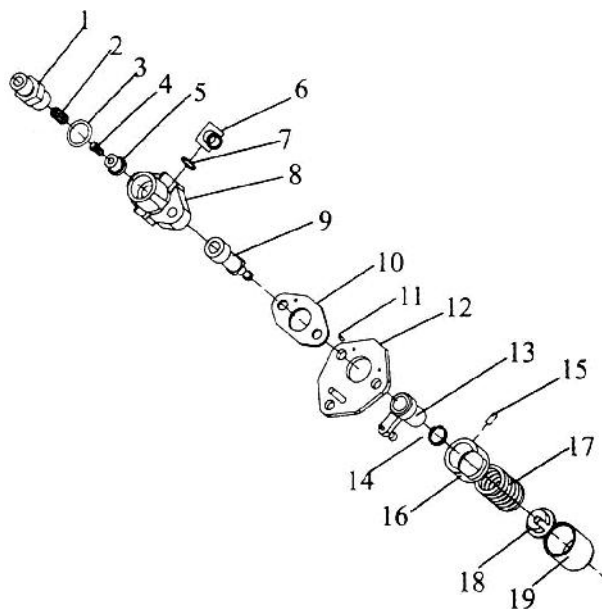

Sr. No.	Part Code	Description	Qty.
1	11.009.008.9004	Fuel delivery Valve Forcing Holder	1
2	11.009.008.9005	Fuel delivery Valve Spring	1
3	11.009.008.9006	Fuel delivery Valve Sheet Gasket	1
4	11.009.008.9007	Fuel Delivery Valve Core	1
5	11.009.008.9008	Fuel Delivery Valve Seat	1
6	11.009.008.9009	Fuel Pipe Welding Assy.	1
7	11.009.008.9010	O-Ring	1
8	11.009.008.9011	Pump Block	1
9	11.009.008.9001	Plunger	1
10	11.009.008.9012	Washer	On demand
11	11.009.008.9013	Pin2x6	2
12	11.009.008.9014	Pump Connecting Plate	1
13	11.009.008.9016	Fuel Limiting Sheath Welding Assy	1
14	11.009.008.9017	Steel Clip	1
15	11.009.008.9018	Pin3x8	1
16	11.009.008.9019	Support	1
17	11.009.008.9020	Spring	1
18	11.009.008.9021	Spring Holder	1
19	11.009.008.9022	Tappet	1
1 to 19	3049011200100	Fuel Injection Pump (whole part)	1

17. Hand Starter

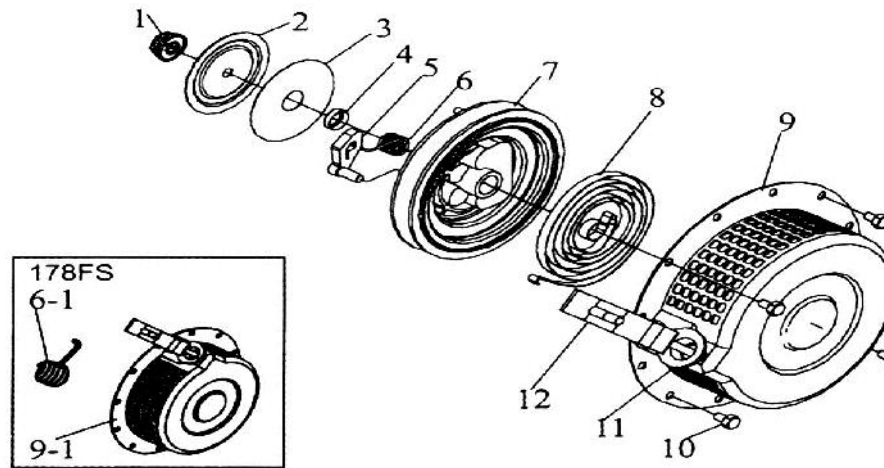

Sr. No.	Part Code	Description	Qty.
1	11.007.016.9006	Nut M8	1
2	11.007.016.9007	Friction Reel	1
3	11.007.016.9008	Friction Plate	1
4	11.007.016.9009	Spring Cover	1
5	11.007.016.9010	Ratchet	1
6	11.007.016.9011	Return Spring	1
7	11.007.016.9012	Starter Reel	1
8	11.007.016.9013	Spiral Spring	1
9	11.007.016.9014	Outer Case Assy	1
10	12.002.013.0121	Bolt M6 X8	4
11	3049021400200	Starter Rope	1
12	11.007.016.9016	Starter Handle	1
1 to 12	2010000024000	Hand Starter Full Assy	1



Honour Your Trust

FARMWORLD AGROTECH PRIVATE LIMITED

Office Address:- Plot No. 373, Road-U, Khirasara Industrial Estate, Khirsara,
Taluka – Lodhika, District – Rajkot, 360021 (Gujarat) India.

Email: customercare@farmworld.in | Website: www.farmworld.in