




Honour Your Trust

MULTIFUNCTIONAL GASOLINE TILLER MACHINE OWNER'S MANUAL

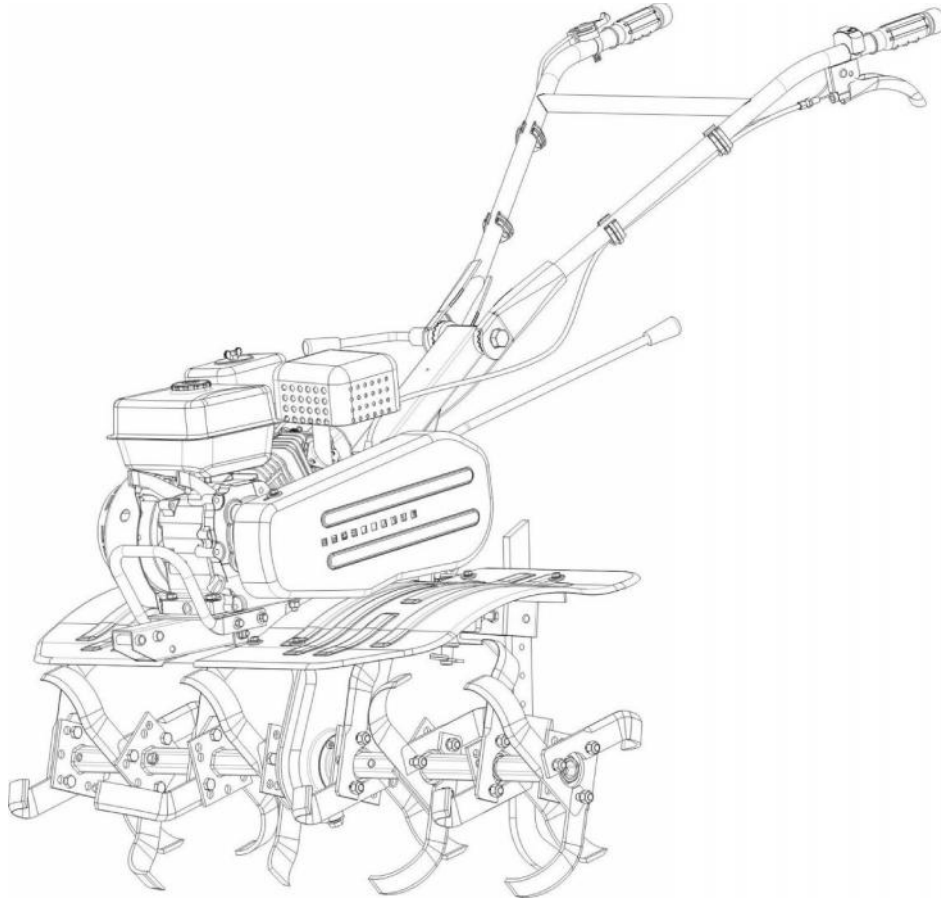

Honour Your Trust

WWW.FARMWORLD.IN

WWW.FARMWORLD.IN



Honour Your Trust



Honour Your Trust

Content

1. FOREWORD.....	01
2. INSTALLATION INSTRUCTIONS.....	02
3. SAFETY INSTRUCTIONS.....	06
4. SAFETY LABEL LOCATIONS.....	09
5. SPECIFICATIONS.....	10
6. APPLICABLE SCOPE.....	11
7. COMPONENT IDENTIFICATION.....	12
8. PRE-OPERATION CHECK.....	13
9. STARTING THE ENGINE.....	17
10.TILLER OPERATION.....	20
11.MAINTENANCE.....	25
12.TRANSPORTING/STORAGE.....	32
13.TROUBLESHOOTING.....	33
Warranty Period and Warranty Policy Guide Lines	34

1. Foreword

Thank you for purchasing Farmworld tiller.

This manual contains information on operation and maintenance of the tiller, which is based on the most recent product information available at the time of approval for printing. We reserve the right to make amendments without advance notice and without incurring any obligation for sequences.

No part of this publication may be reproduced without written permission.

This manual should be considered a permanent part of the tiller and remain with it if it is resold

Pay special attention to statements preceded by the following words:

 **WARNING** Indicates a strong possibility of severe personal injury or death if instructions are not followed.

 **CAUTION** Indicates a possibility of personal injury or equipment damage if instructions are not followed.

NOTE: Gives helpful information.


If a problem arises, or you have any question about the tiller. Please consult an authorized dealer.






 **WARNING** The tiller is designed to give safe and dependable service if operated according to instructions. Read and understand the Owner's Manual before operating the tiller. Failure to do so could result in personal injury or equipment damage.





The illustration may be varied with different type.







2. Installation Instructions

Model FWMT210PB Installation Instructions

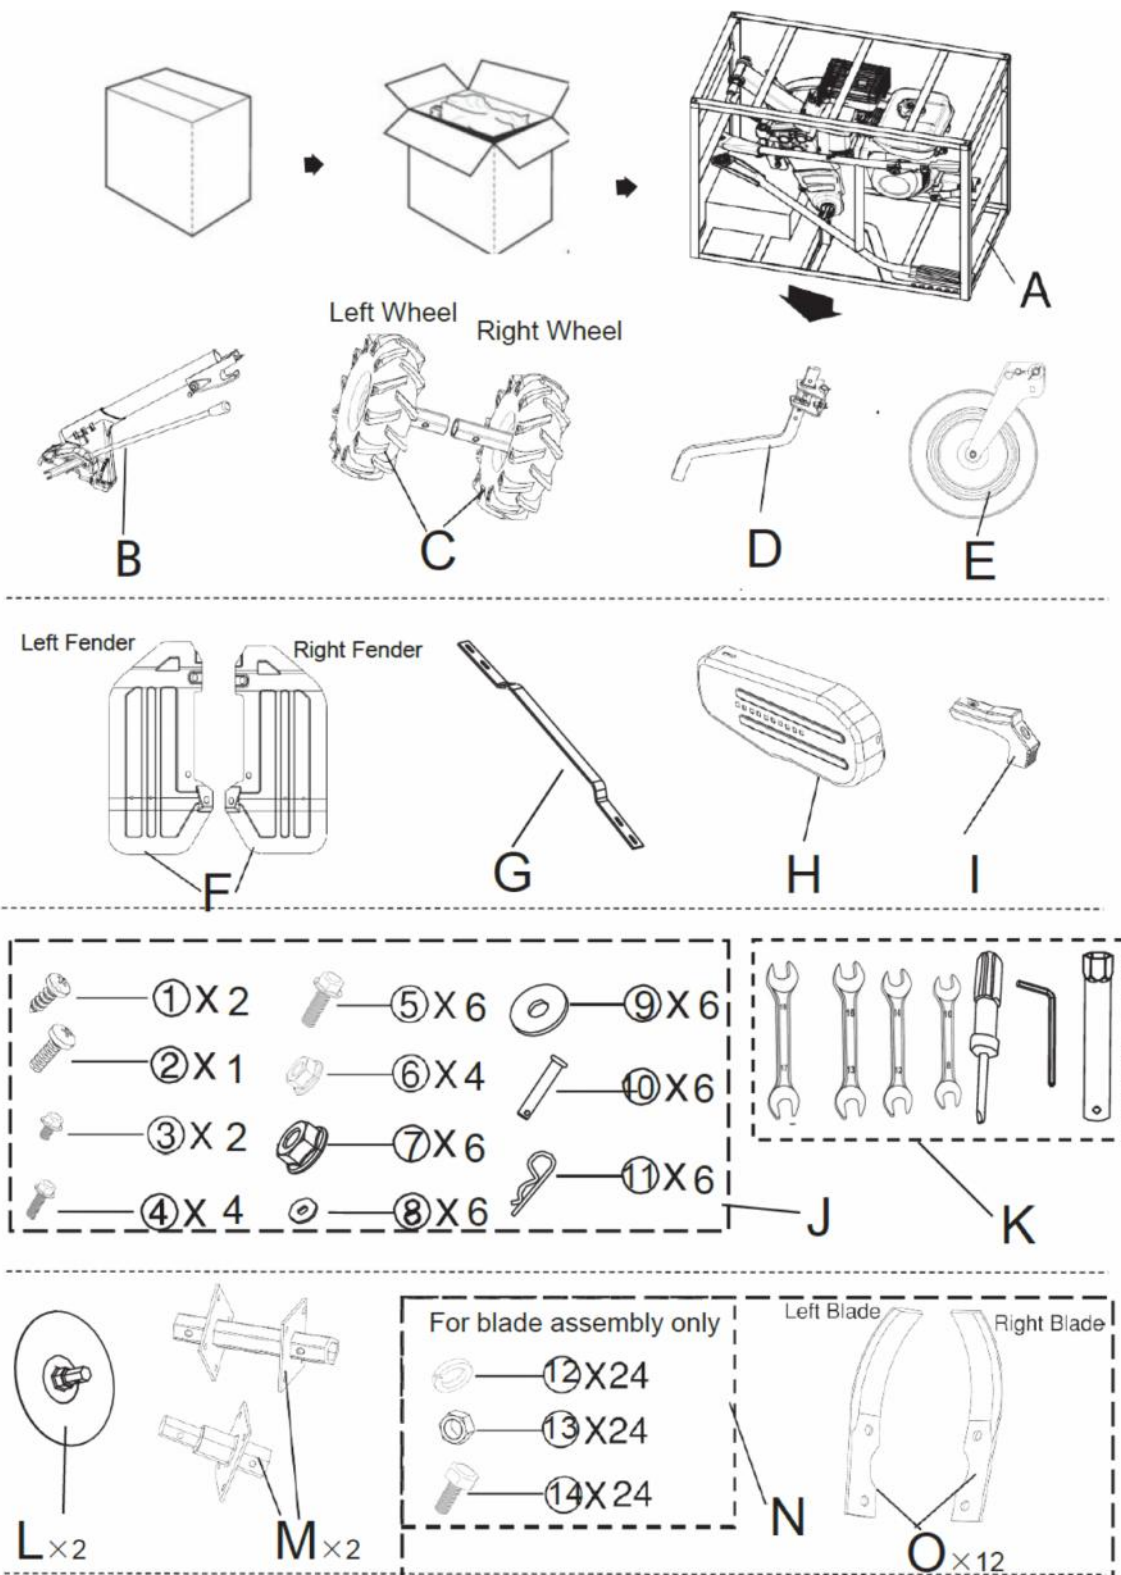

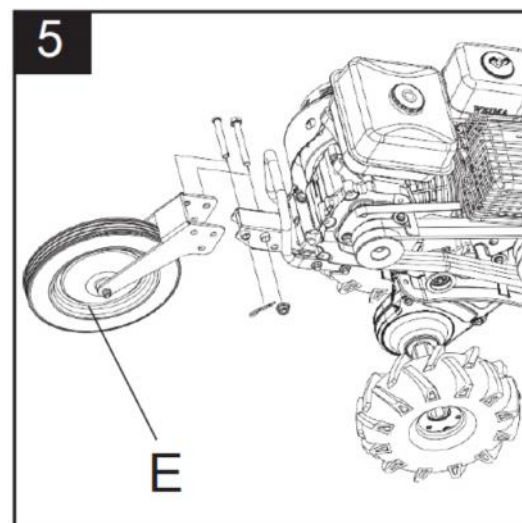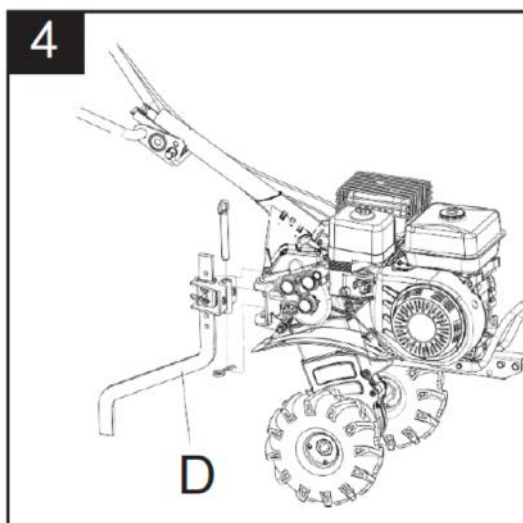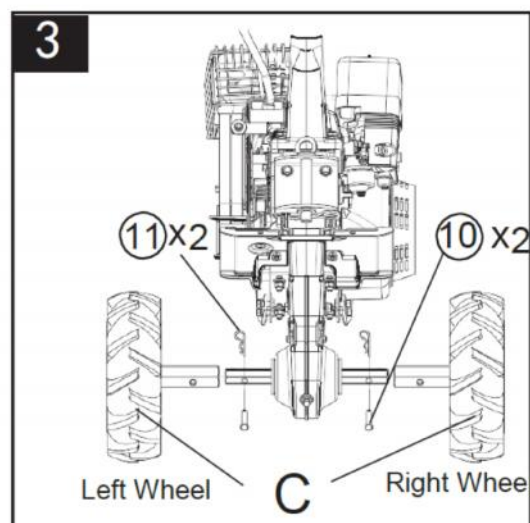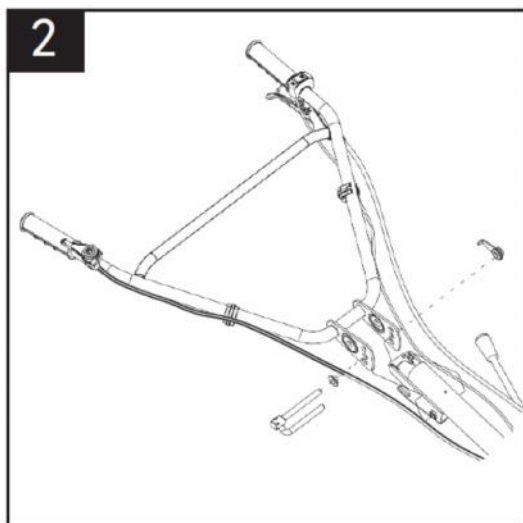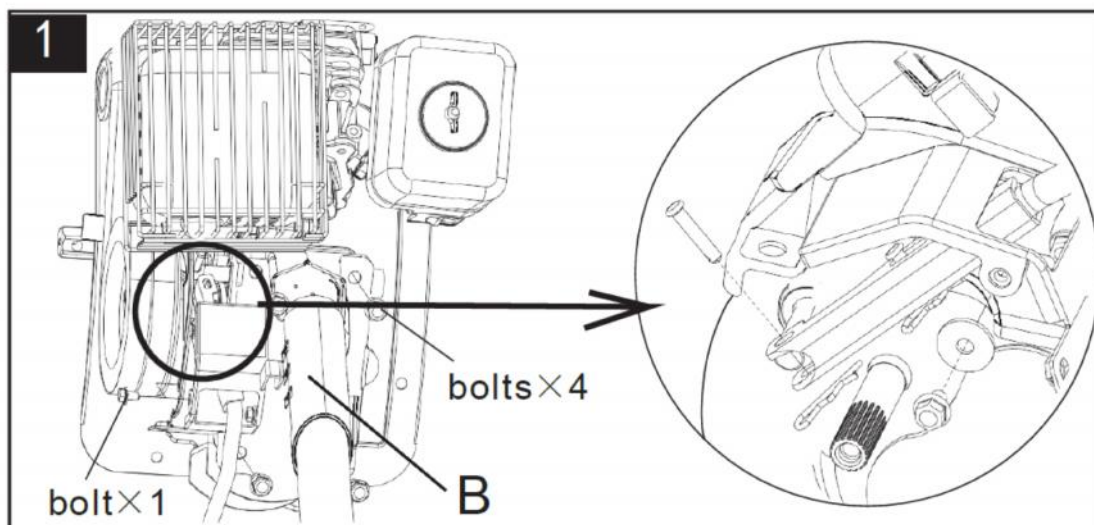

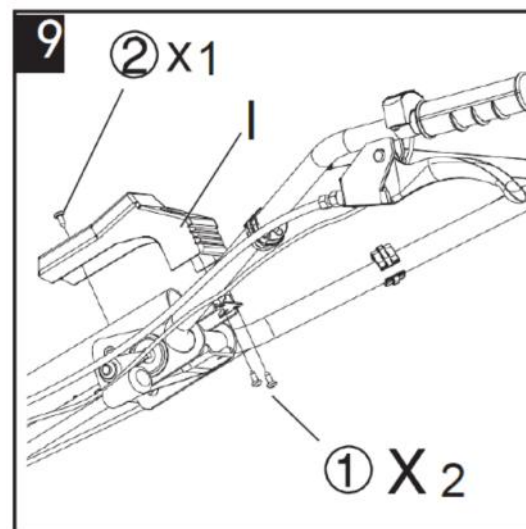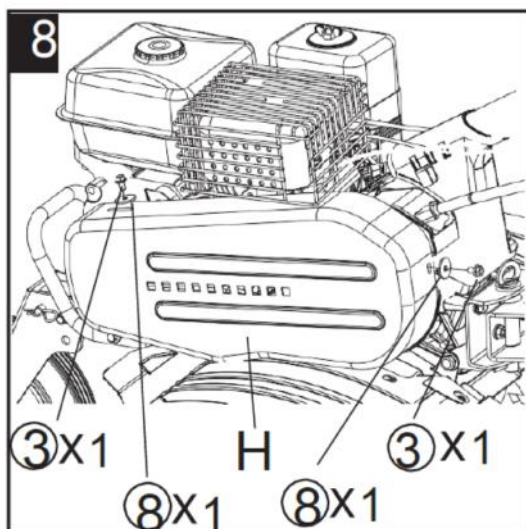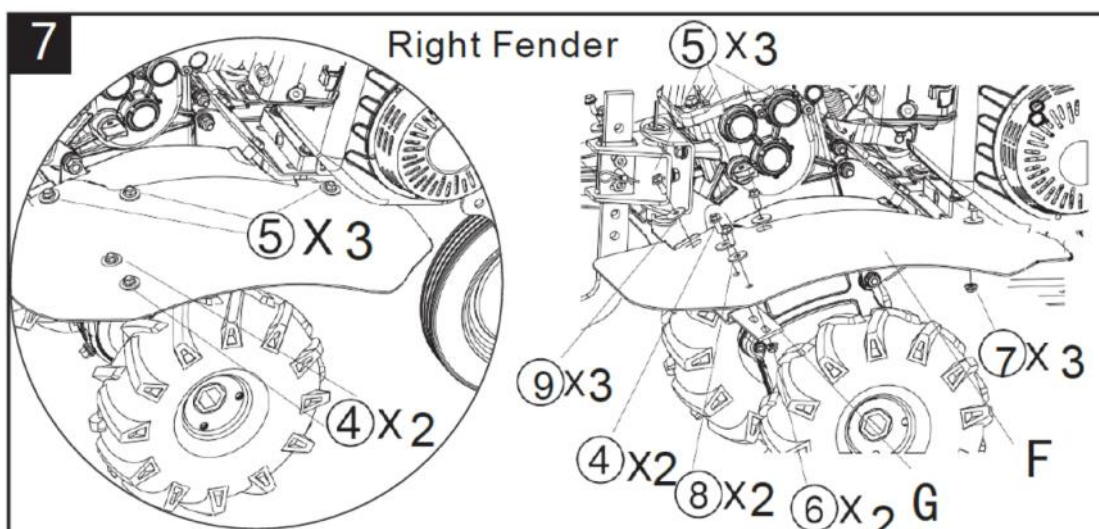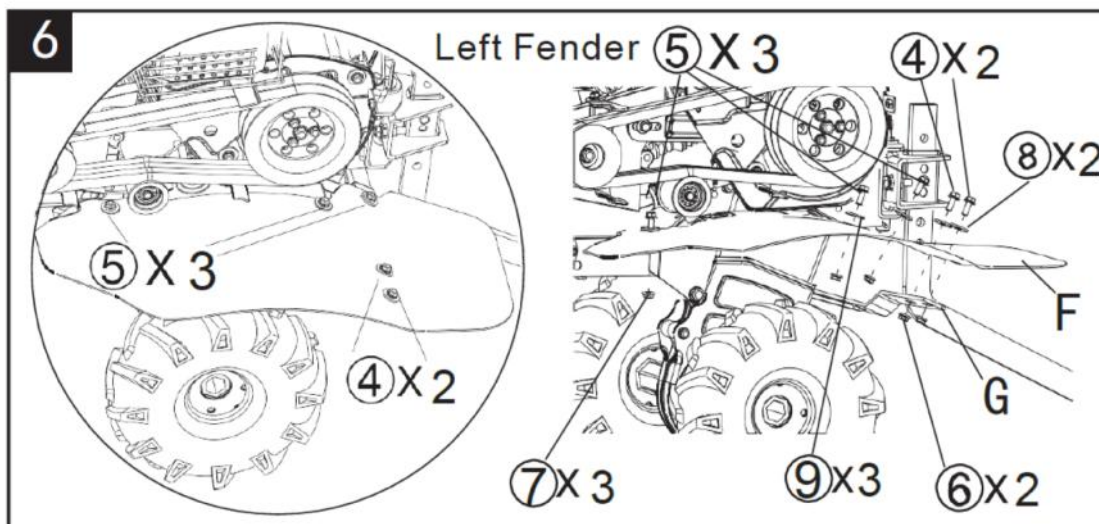

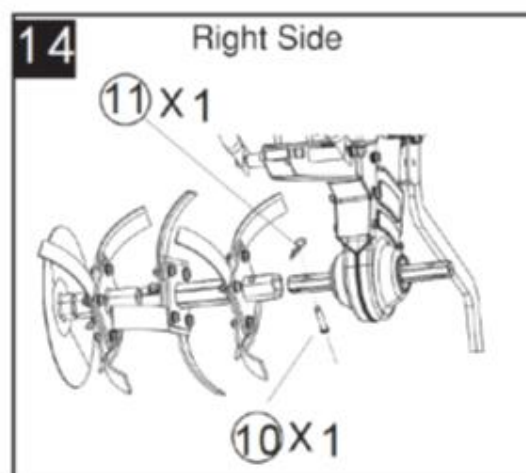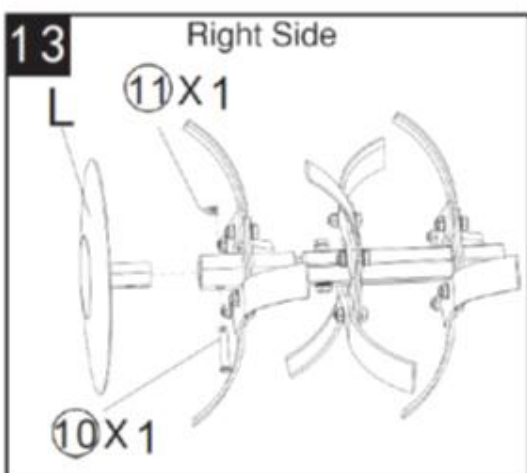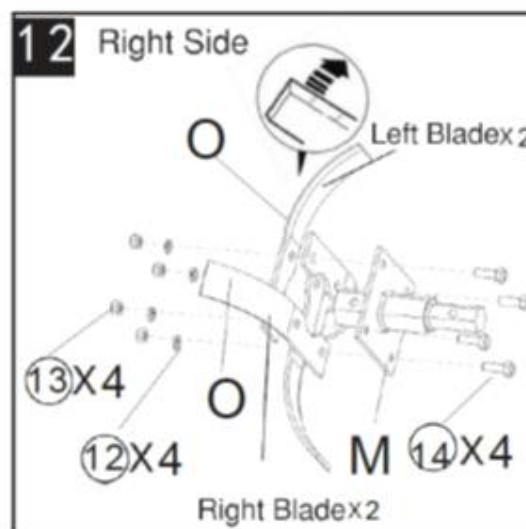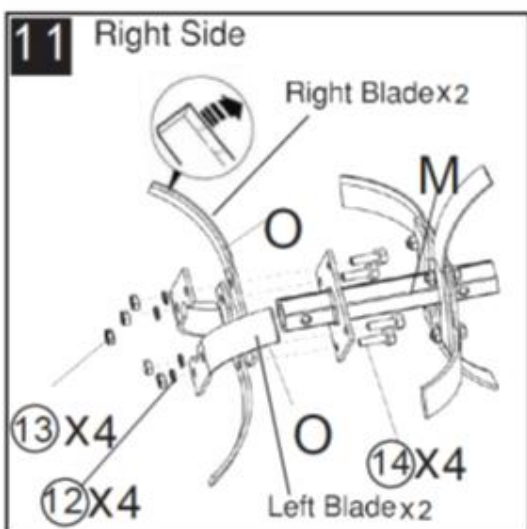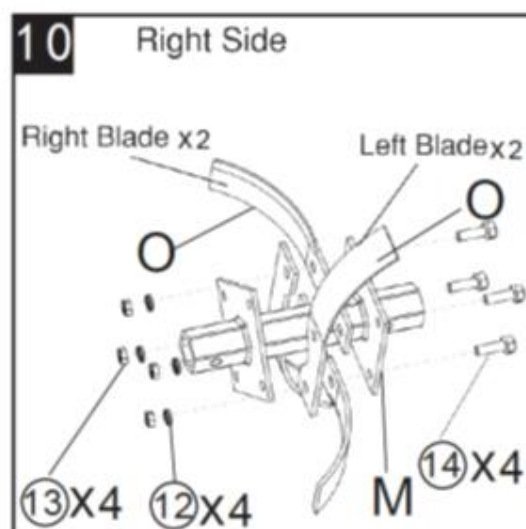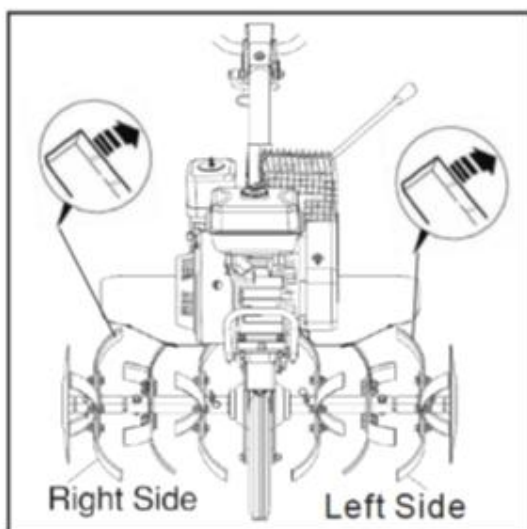

Notes: 1. Blade edge must forward.
2. Left and right blades are symmetric.

3. Safety Instruction

WARNING

To ensure safe operation

For the safety of yourself and others, please pay special attention on these precautions



This tiller is designed to give safe and dependable service if operated according to the instructions. Read and understand the Owner's Manual before operating the tiller. Failure to do so could result in personal injury or equipment damage.



Exhaust gas contains poisonous carbon monoxide. Never run the tiller in enclosed areas. Be sure to provide adequate ventilation.

When installing, ventilated protection is to be observed.



The rotating parts are sharp and running at high speed. Accidental contact can cause serious injury. Keep your hands and feet away from the parts while engine is running. Stop the engine and disengage the tines clutch before inspection or maintenance of the tines.

Disconnect the spark plug cap to prevent any possibility of accidental starting. Wear heavy gloves to protect your hands from the tines when clearing the tines or then inspecting or replacing the tines.

Operator Responsibility

- Keep the tiller in good operating condition. Operating a tiller in poor or Questionable condition could result in serious injury.
- Be sure all safety devices are in working order and warning labels are in place. These items are installed for your safety.
- Be sure the safety covers (Fan cover, recoil starter cover) are in place.
- Know how to stop the engine and tines quickly in case of emergency. Understand the use of all controls.
- Keep a firm hold on the handlebars, they may tend to lift during clutch engagement.

 WARNING

To ensure safe operation
Operator Responsibility

- Don't allow anyone to operate this tiller without proper training to avoid injury.
- Wear sturdy, full-coverage footwear. Operating this tiller on barefoot or with open toe shoes or sandals increase your risk of injury.
- Dress sensibly. Loose clothing may be caught by moving parts, increasing your risk of injury.
- Be alert. Operating this tiller when you are tired, ill or under the influence of alcohol or drugs may result serious injury.
- Keep all persons and pets away from the tilling area.
- Be sure drag bar is in place and properly adjusted.

Children Safety

- Keep children indoors and supervised at all times while any outdoor power equipment is being used nearby. Young children move quickly and are attracted especially by the tiller and tilling activity.
- Never assume children will remain where you last saw them. Be alert and turn the tiller off if children enter the area.
- Children should never be allowed to operate the tiller even under adult supervision.

Thrown Object Hazard

- Objects hit by the rotating tines can be thrown from the tiller with great force and may cause severe injury.
- Before tilling clear the tilling area of sticks large stone wire glass etc.
- Till only in daylight.
- Pieces thrown from worn or damaged-tines can cause serious injury. Always inspect the tines before using the tiller.

⚠ WARNING

To ensure safe operation

Fire and Burn Hazard

Gasoline is extremely flammable and gasoline vapor can explode. Take extreme care when handling gasoline. Keep gasoline out of reach of children.

- Refuel in a well-ventilated area with the engine stopped.
- Allow the engine to cool before refueling. Fuel vapor or spilled fuel may be ignited.
- The engine and exhaust system become very hot during operation and remain hot for a while after stopping. Contact with hot engine components can cause burn injuries and can ignite some materials.
- Avoid touching a hot engine or exhaust system.
- Allow the engine to cool before performing maintenance or storing the tiller indoors.

Carbon Monoxide Poisoning Hazard

Exhaust contains poisonous carbon monoxide a colorless and odorless gas. Breathing exhaust can cause loss of consciousness and may lead to death.

- If you run the engine in an area that is confined or even partially enclosed, the air you breathe could contain a dangerous amount of exhaust gas. To keep exhaust gas from building-up, provide adequate ventilation.



Operation on Slope

- When tilling on slopes, keep the fuel tank less than half full to minimize fuel spillage.
- Till across the slope (At equally spaced intervals) rather than up and down it.
- Be very careful when changing the direction of the tiller on a slope.
- Do not use the tiller on a slope of more than 10°
- The maximum safe grade angle shown is for reference purpose only and should be determined according to the type of the tool. Before starting the engine, check that the tiller is not damaged and in good condition. For your safety and safety of others. Exercise extreme care when using the tiller up or down hill.

4. Safety Label Locations

These labels warn you of potential hazards that can cause serious injury. Read the labels and safety notes and precautions described in this manual carefully.

If a label comes off or becomes hard to read contact your dealer for a replacement.

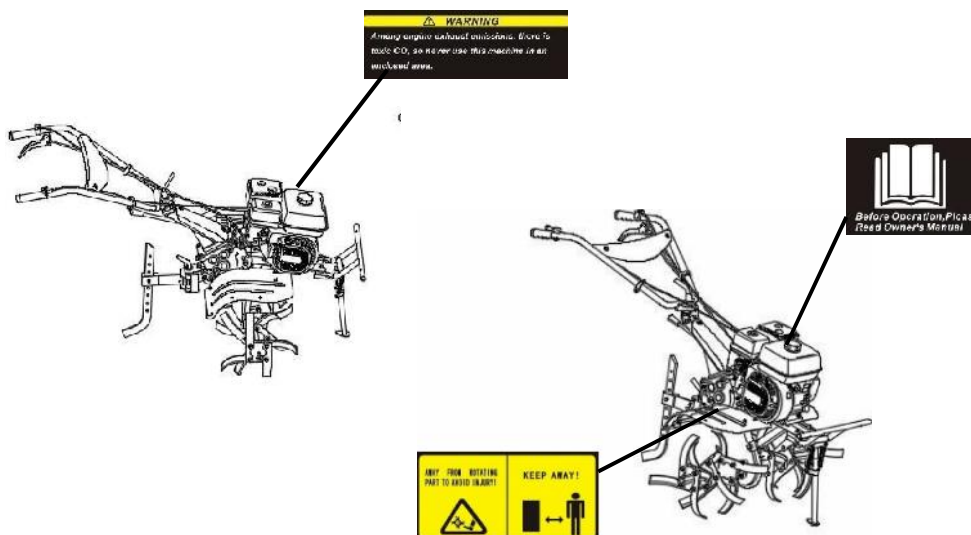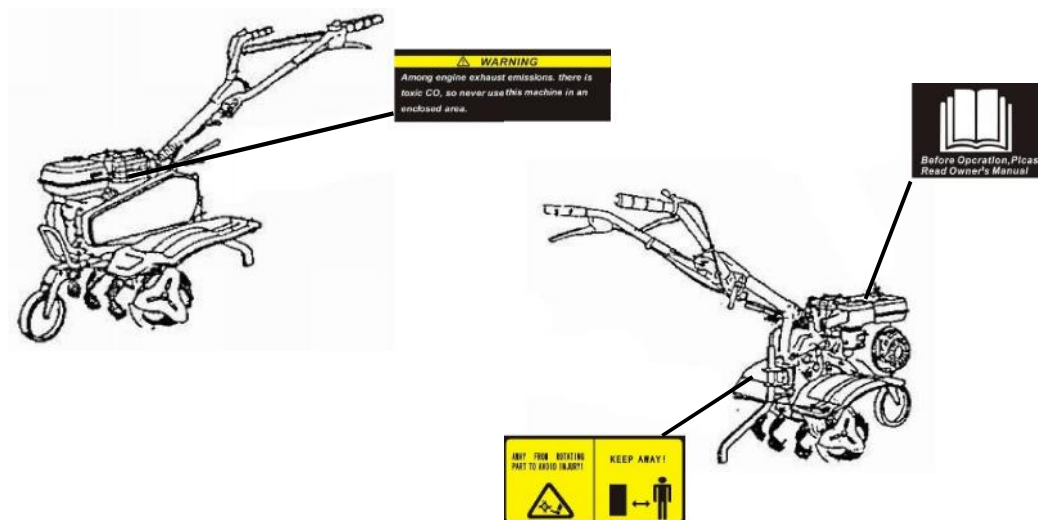

5. Specifications


ITEM		FWMT210PB
TILLER	Dimension (L x W x H) (mm)	1380 x 650 x 970
	N.W/G.W(kg)	70/73
	Transmission System	Belt + Chain
	Tilling Scope (mm)	500 - 1000
	Tilling Depth (mm)	150 - 300
ENGINE	Engine Model	210(170F)
	Type	4-stroke, 1-cylinder, OHV, forced air cooled
	Displacement	212cm ³
	Bore × stroke	70×55mm
	Compression Ratio	8.7 : 1
	Max. Output (Hp/rpm)	7/3600
	Rated Output (Hp/rpm)	6/3600
	Max. Torque (n.m)	12/2500
	Ignition system	Transistor magneto
	Starting System	Manual Start
	Oil capacity (0.6)	0.6
	Fuel tank capacity (L)	3.6
	Air Cleaner	Oil Bath Filter

6. Applicable Scope

The tiller is suitable for cultivating the sandy soil and clayey soil of canopied vegetables base and dry land, slopes with gradient less than 10%, paddy field with the depth of water surface to hard layer not more than 250mm.

For weedy and deep plots, remove the weeds before using the micro-tiller to cultivate the land.

7. Component Identification

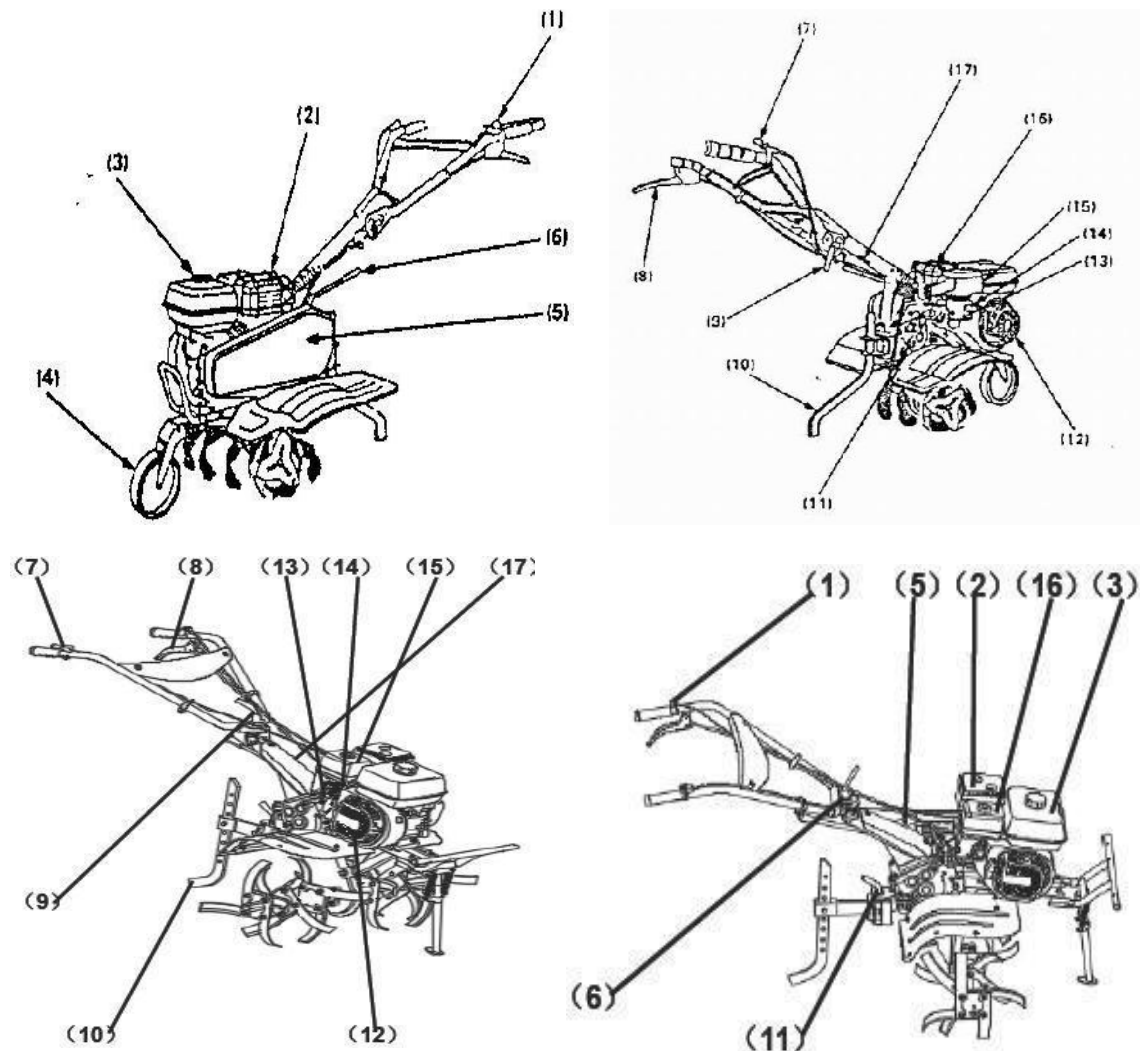

(1) ENGINE SWITCH

(2) MUFFLER

(3) FUEL TANK

(4) FRONT WHEEL

(5) BELT COVER

(6) SHIFT LEVER

(7) THROTTLE CONTROL

(8) CLUTCH

(9) HANDLE HEIGHT ADJUST

(10) DRAG BAR

(11) TRANSMISSION OIL FILLER CAP

(12) RECOIL STARTER

(13) FUEL VALVE

(14) CHOKE LEVER

(15) AIR CLEANER

(16) SPARK PLUG

(17) FRAME SERIAL NUMBER

8. Pre-Operation Check

1. Engine oil

CAUTION: Running the engine with low oil level will cause serious engine damage.

1. Remove the oil filler cap and wipe the dipstick clean.
2. Insert the dipstick into the oil filler neck but do not screw it in.
3. If the level is low, fill the recommended oil to the top of the oil filler neck.

Use high-detergent, premium quality 4-stroke engine oil, certified to meet or exceed U.S. automobile manufacturer's requirement for API Service Classification SG.SF


CAUTION: Using non-detergent oil or 2-stroke engine oil could shorten the engine's service life.

SAE 10W-30 is recommended for general all-temperature use. Other viscosities shown in the following chart might be used when at the average temperature in your area is within the indicated range.



(1) OIL FILLER HOLE

(2) UPPER LEVEL

(3) LOWER LEVEL

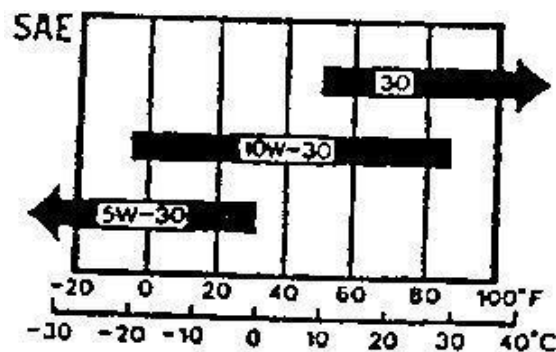


Ambient Temperature

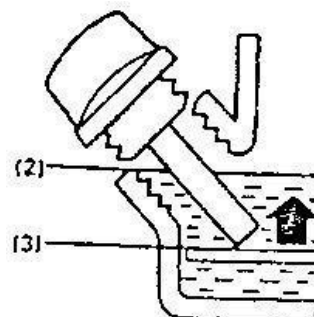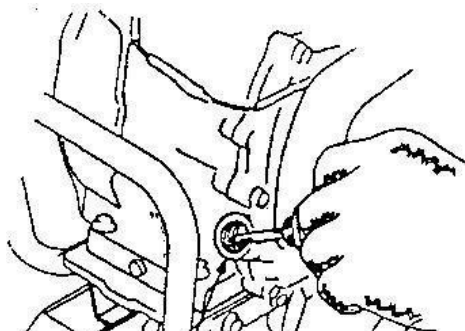

2. Transmission Gear Oil

Place the tiller on a level surface and remove the oil filler cap.
The oil should be level with the lower edge of the oil filler hole.
Add high quality engine oil if the level is low.


(1) OIL FILLER HOLE

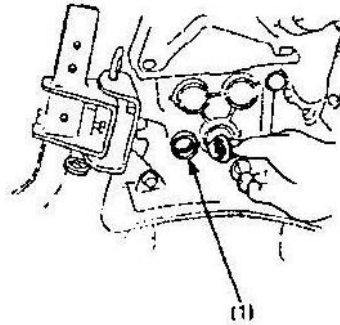

3. Air Cleaner

Check cleaner for dirt or obstruction of elements

(1) ELEMENTS

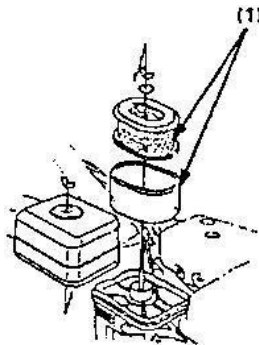

4. Fuel

Use automotive gasoline (Unleaded or low leaded is preferred to minimize combustion chamber deposits.)

FOR NEW SOUTH WALES ONLY:

Use unleaded fuel only:

Never use an oil/gasoline mixture or dirty gasoline. Avoid getting dirt, dust or water in the fuel tank.


CAUTION: Do not fill over the red level line.

⚠ WARNING

- Gasoline is extremely flammable and is explosive under certain conditions.
- Refuel in a well-ventilated area with the engine stopped. Do not smoke or allow flames or spark in the area where the engine is refueled or where gasoline is stored.
- Do not overfill the fuel tank (there should be no fuel in the filler neck). After refueling, make sure the tank cap is closed properly and securely.
- Be careful not to spill fuel when refueling. Spilled fuel or fuel vapor may ignite. If any fuel is spilled, make sure the area is dry before starting the engine.
- Avoid repeated or prolonged contact with skin or breathing of vapor.

Fuel tank capacity: 3.0L or 3.6L

(1) RED LEVEL LINE

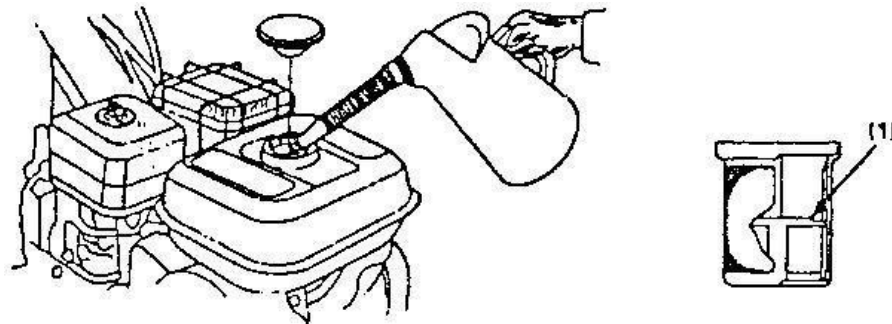

Gasoline containing alcohol

If you decide to use a gasoline containing alcohol (gasohol), be sure it's octane rating is at least as high as that recommended for tiller. There are two types of "gasohol": one containing ethanol and the other containing methanol! Do not use gasohol that contains more than 10% ethanol! Do not use gasoline containing methanol (methyl or wood alcohol) that does not also contain inhibitors for methanol corrosion! Never use gasoline containing more than 5% methanol, even if it has corrosion inhibitors.

NOTE:

- Fuel system damage or engine performance problems resulting from the use of fuels that contain alcohol are not covered under the warranty. Tiller cannot endorse the use of fuels containing methanol since evidence of their suitability is as yet incomplete.
- Before buying fuel from an unfamiliar station try to find out if the fuel contains alcohol, if it does, confirm the type and percentage of alcohol used. If you notice any undesirable operating symptoms while using a gasoline that contains alcohol or one that you think contains alcohol switch to a gasoline that you know does not contain alcohol.

5. Tool and Attachments


To install a tool or attachment on the tiller follow the instructions furnished with the tool or attachment. Ask your dealer for advice if you encounter any problem or difficulty in installing a tool or attachment.

9. Starting the Engine

CAUTION: Be sure the clutch is disengaged and the shift lever is in the neutral position to prevent sudden uncontrolled movement when the engine starts. The clutch is engaged by pulling in the clutch lever and disengaged by releasing the lever.

1. Turn the fuel valve to ON. Checkup tightness of drain knob.


- (1) FUEL VALVE
- (2) ON
- (3) DRAIN KNOB

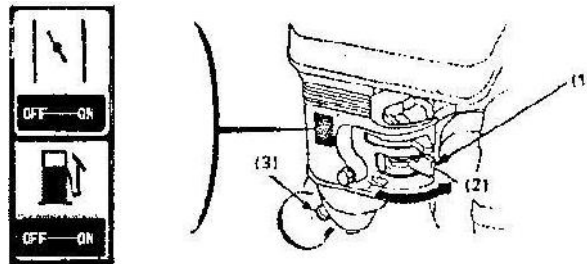

2. Close the choke lever.


NOTE: Do not use the choke if the engine is warm or the air temperature is high.

- (1) CHOKE LEVER
- (2) CLOSE

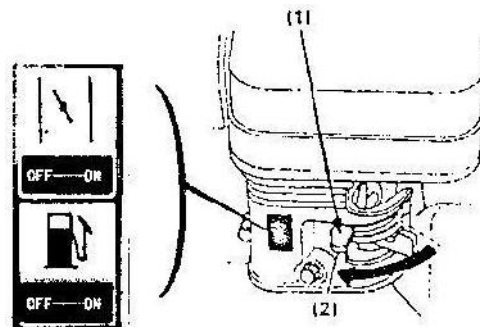


3. Turn the engine switch to ON

- (1) ON
- (2) ENGINE SWITCH

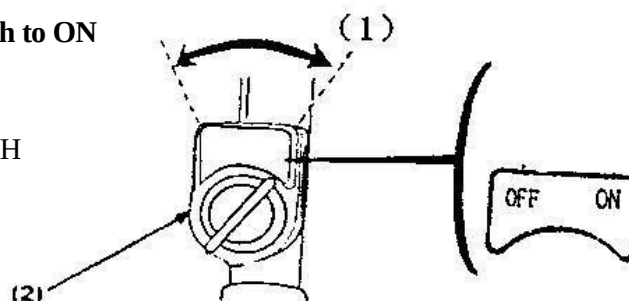

4. Move the throttle lever slightly to the right.


(1) THROTTLE LEVER

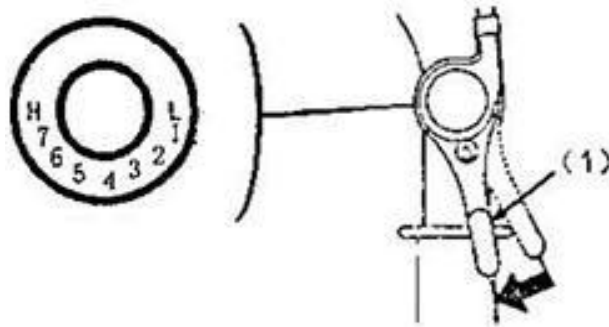

5. Pull the starter grip lightly until resistance is felt then pull briskly.

CAUTION: Do not allow the starter grip to snap back against the engine. Return it gently to prevent damage to the starter.


(1) STARTER GRIP

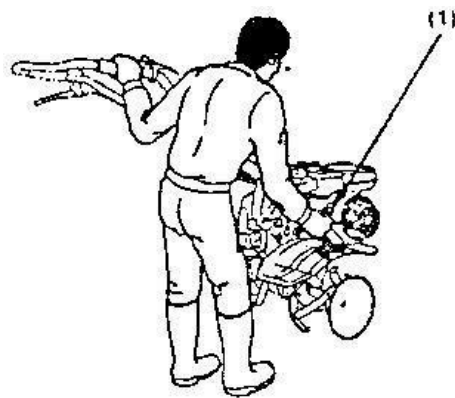

6. As the engine warms up. Gradually open the choke.

(1) CHOKE LEVER

(2) OPEN

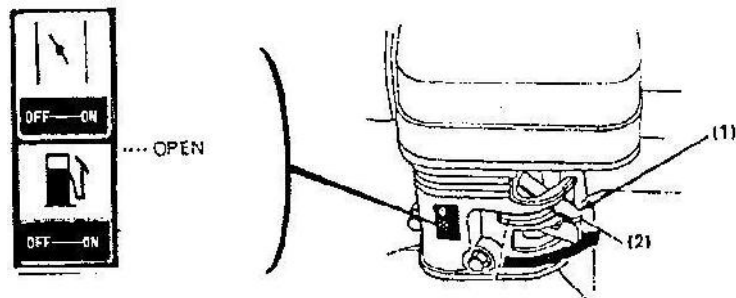

High altitude operation

At high altitude the standard carburetor air-fuel mixture will be excessively rich. Performance and fuel consumption will increase.

High altitude performance can be improved by installing a smaller diameter main fuel jet in the carburetor and readjusting the pilot screw. If you always operate the tiller at altitudes higher than 1.830m (6.000feet) above sea level ask your authorized tiller dealer to perform these carburetor modifications.

Even with suitable carburetor jetting, engine horsepower will decrease approximately 3-5% for each 305m (1.000foot) increase in altitude.

The effect of altitude on the horsepower will be greater than this if no carburetor modification is made.

CARTION: Operation of the tiller at an altitude lower than the carburetor is jetted for may result in reduced performance overheating and serious engine damage caused by an excessively lean air / fuel mixture.


10. Tiller Operation

1. Handlebar height adjustment

CAUTION: Before adjusting the handlebar place the tiller on firm level ground to prevent the handle from collapsing accidentally.

To adjust the handlebar height, loosen the adjuster select the appropriate holes and tighten the adjuster.

(1) ADJUSTER

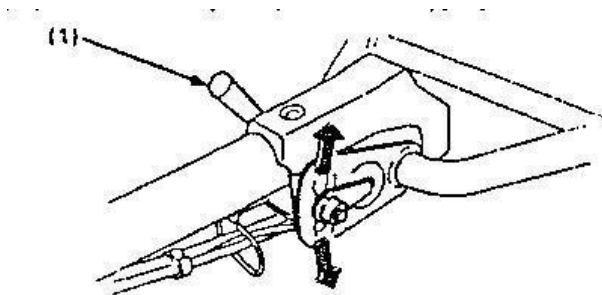


2. Tilling depth adjustment

Install the hitch attachment in the hitch box with a hitch pin. The tilling depth adjustment can be made as follows:

Remove the pin and lock pin loosen the bolt securing the drag bar and sliding the drag bar up or down as necessary.

- (1) HITCH BOX
- (2) HITCH PIN
- (3) LOCK PIN
- (4) DRAG BAR
- (5) PIN

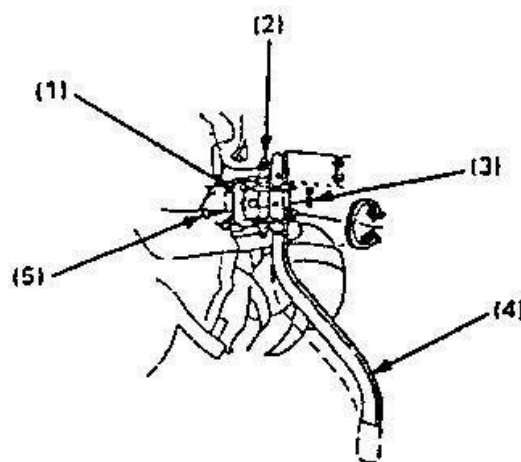

3. Clutch operation

The clutch engages and disengages the power from the engine to the transmission. When the clutch lever is squeezed the clutch is engaged and power is transmitted. Squeeze the lever. The tool will be rotated.


When the lever is released the clutch is disengaged and power is not transmitted. Release the clutch lever. The tool will be stopped.

CAUTION: Reduce engine rpm before operating main clutch.

(1) CLUTCH LEVER

(2) ENGAGED

(3) DISENGAGED

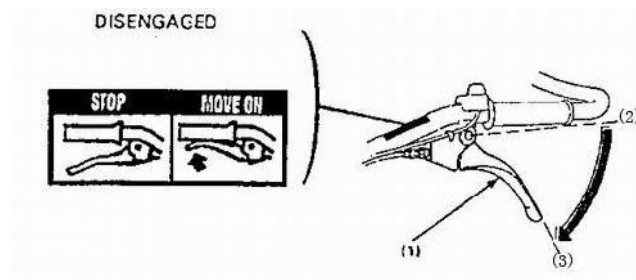


4. Gear selection

The transmission can be shifted into the 2nd forward gear.

The shift lever should be operated in accordance with the attached gear shifting plate.

Gear shifting:

1. Return the throttle lever to the extreme right.
2. Release the clutch lever to disengage the clutch
3. Move the shift lever to the desired gear position
4. Squeeze the clutch lever to engage the clutch.

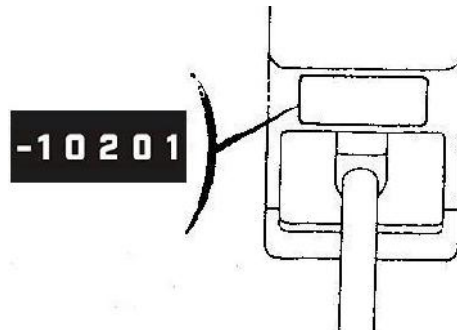


NOTE: If the shift lever will not engage the desired gear squeeze the clutch lever and move the tiller slightly to reposition the gears.

5. Choose the gear

The tiller has three gears to choose:

Gear Converted:

- (1) Pulling the throttle switch to the right
- (2) Unloosen the clutch handle and let the clutch separate.
- (3) Moving the gear shifting arm to your required gear
- (4) Gripping the clutch handle, the engine will work on the converted gear

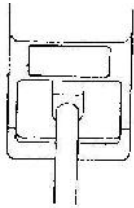


Gear Shifting
Reverse (-1), Forward (1), Neutral (0), Forward (2)

6. Use of a hitch box

Install the hitch attachment in the hitch box with a hitch pin.

- (1) HITCH BOX
- (2) HITCH PIN

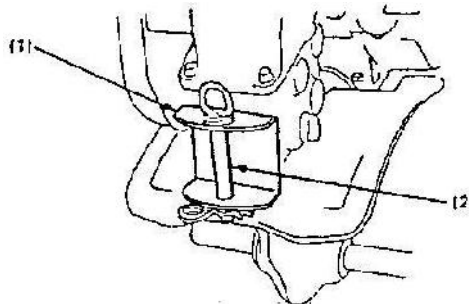


7. Front wheel

Move the tiller on road by the front wheel; lift the handlebars up the ground the front wheel.

When the tiller is used in the field, move the wheel up by replacing the lock pin.

- (1) When used in the field
- (2) LOCK PIN
- (3) When moved on road

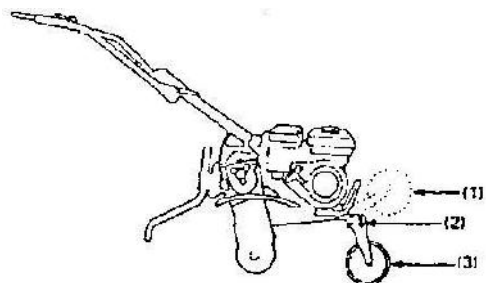


8. Handling tips

Adjust the handlebar height to a comfortable position (waist height for normal tilling). Should the machine jerk forward while tilling. Press down the handlebars. If the machine will not move forward, move the handlebars from side to side.

Turn: The proper method of negotiating a turn during a tilling operation is to lower the handlebars to bring the gravity center toward the rear and then make the turn this will permit a turn to be made with relative ease.

9. Normal operating angle

Lower the handle slightly so the front of the machine is raised about 6-8°

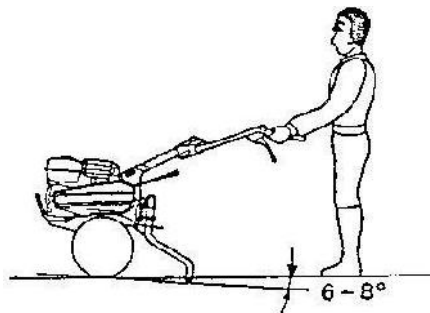

To get the maximum advantage from the tiller, try to hold the machine at the angle shown while you are tilling the ground

CAUTION:


- Do not use the tiller with a rotor whose diameter is in excess of 300mm.
- Operating the tiller on grades could cause the tiller to trip over.
- Allowing any one to operate this tiller without proper instruction may result in injury.
- Wear sturdy full coverage footgear. Operating this tiller with bare feet or with open toe shoes or sandals increase your risk of injury.
- Do not use the tiller in the night.
- Be sure to use two people to transport the tiller from one place to another without using a carrier.
- When the rotor is clogged with mud, pebble etc. immediately stop the engine and clean the rotor in a safe place. Be sure to wear heavy gloves when cleaning the rotor.

To prevent damage, check the tiller for any signs of damage or other faults each time the tiller is used after it has been operated last.

In an emergency:

Turn the engine switch to “OFF”


- (1) OFF
- (2) ENGINE SWITCH

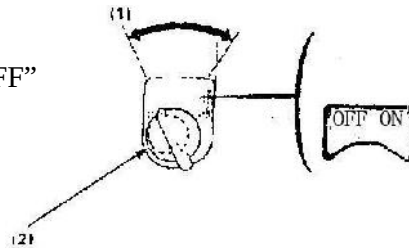

In normal use:


Release the clutch lever to DISENGAGED position and shift lever is in neutral position.

- (1) CLUTCH LEVER
- (2) DISENGAGED

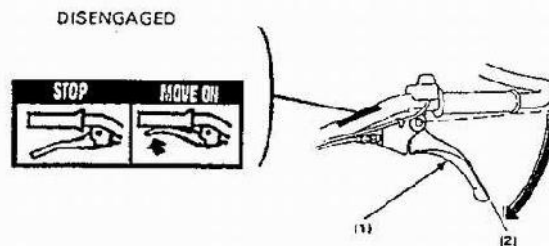


Move the throttle lever fully to the right.

- (1) THROTTLE LEVER

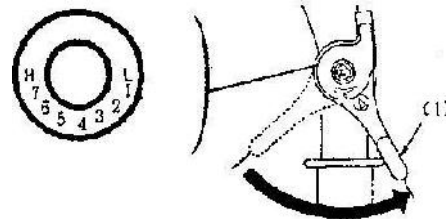


Turn the engine switch to OFF

- (1) OFF
- (2) ENGINE SWITCH

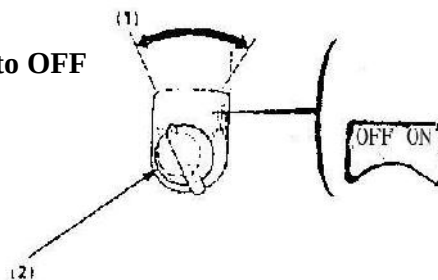

Turn the fuel valve to OFF

- (1) FULE VALVE
- (2) OFF

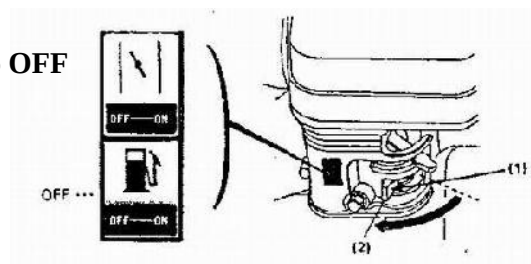

11. Maintenance

The purpose of the maintenance schedule is to keep the tiller in the best operating condition. Inspect or service as scheduled in the table below.

⚠ WARNING Shut off the engine before performing any maintenance. If the engine must be run, make sure the area is well ventilated. The exhaust contains poisonous carbon monoxide gas.

CAUTION: Use only genuine 750 parts or their equivalent. The use of replacement parts which are not of equivalent quality may damage the engine.

Maintenance schedule

ITEM	REGULAR SERVICE PERIOD PERFORM EVERY INDICATED MONTH OR OPERATING HOUR INTERVAL, WHICHEVER OCCURS FIRST	Daily	First Month Of 20 Hrs.	Every 3 months Of 50Hrs.	Every 6 months of 100 Hrs.	Every year of 300 Hrs.
Engine oil	Check level	o				
	Change		o		o	
Air Cleaner Element	Check	o				
	Clean			O(1)		
Fuel Strainer Cup	Clean				o	
Spark Plug	Clean-readjust				o	
Transmission Gear Oil	Check level	o				
Tappet Clearance	Check –Readjust					O(2)
Fuel Tank and Strainer	Clean					O(2)
Clutch Cable	Adjust		o		o	
Throttle Cable	Adjust					o
Belt Tension	Adjust		o		o	
Fuel Line	Check	Every 2 Years (2) (Replace if necessary)				

NOTE


(1): Service more frequently when used in dusty areas

(2): These items should be serviced by an authorized 750 dealer, unless the owner has the proper tools and is mechanically proficient. See the 750 ShopManual.

1. Changing oil

Drain the oil while the engine is still warm to assure rapid and complete draining

- (1) Remove the oil filler cap, and drain the oil
- (2) Refill with the recommended oil (see page 9) and check the level Oil capacity: 0.6 L

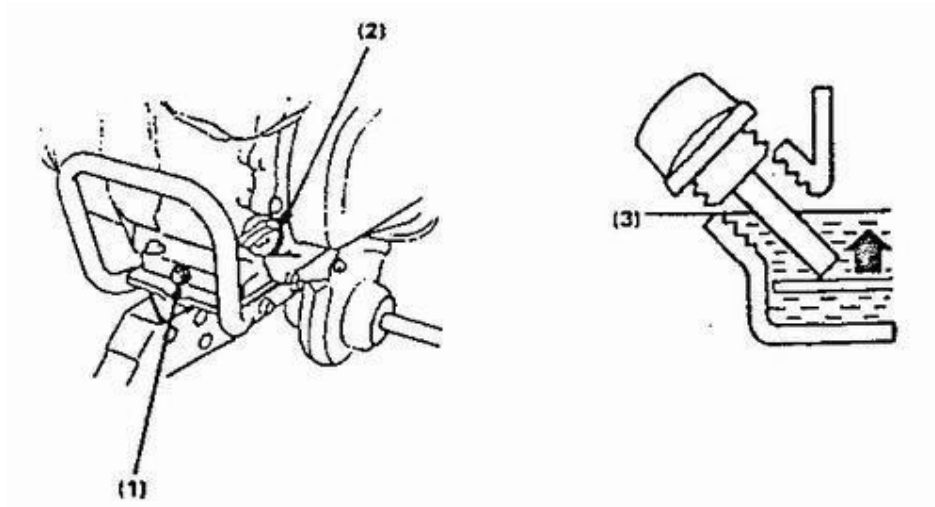

(1) DRAIN PLUG

(2) OIL FILLER CAP

(3) UPPER LEVEL

Wash your hands with soap and water after handling used oil.

NOTE: Please dispose of used motor oil in a manner that is compatible with the environment. We suggest you take it in a sealed container to your local service for reclamation. Do not throw it in the trash or pour it on the ground.

2. Air Cleaner Service

A dirty air cleaner will restrict air flow to the carburetor. To prevent malfunction, service the air cleaner regularly. Service more frequently when operating the engine in extremely dusty areas.

⚠ WARNING Never use gasoline or low flash point solvents for cleaning the air cleaner element. A fire or explosion could result in.


CAUTION:

Never run the engine without the air cleaner. Rapid engine wear will be the result.

1. Remove the wing nut and the air cleaner cover. Remove the elements and separate them. Carefully check both elements for holes or tears and replace if damaged.
2. Foam element: Clean in warm soapy water, rinse and allow to dry thoroughly. Or clean in high flash-point solvent and allow drying. Dip the element in clean engine oil and allow drying. Dip the element in clean engine oil will smoke during initial start-up if too much oil is left in the foam.
3. Paper element: Tap the element lightly several times on a hard surface to remove excess dirt, or blow compressed air through the filter from the inside out. Never try to brush the dirt off; brushing will force dirt into the fibers.

(1) PAPER ELEMENT

(2) FOAM ELEMENT

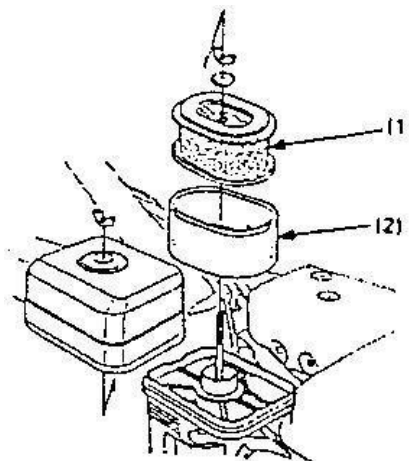


3. Fuel Strainer Cap Cleaning

⚠ WARNING Gasoline is highly flammable and explosive under certain conditions. Do not smoke or allow flames or sparks in the area.

Turn the fuel valve to the OFF position and remove the fuel strainer cup and the O-ring. Wash the removed parts in solvent, dry them thoroughly and reinstall securely. Turn the fuel valve ON and check for leaks.

- (1) O-RING
- (2) FUEL STRAINER CUP

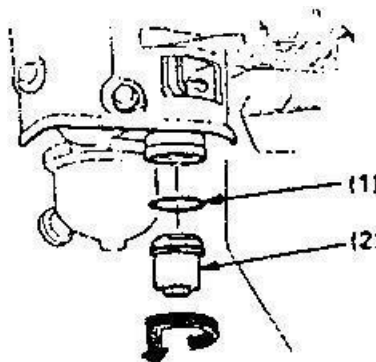


4. Spark plug service

Recommended spark plug: BPR5ES (NGK)
W16EPR-U (NIPPONDENSO)


To ensure proper engine operation the spark plug must be properly gapped and free of deposits.

⚠ WARNING If the engine has been running the muffler will be very hot. Be careful not to touch the muffler.


- Remove the spark plug cap.

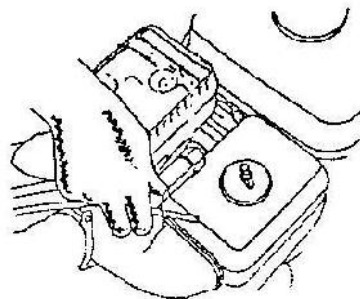

- Visually inspect the spark plug. Discard it if the insulator is cracked chipped.
- Measure the plug gap with a feeler gauge. The gap should be 0.7-0.8mm (0.028-0.031in). Correct as necessary by bending the side electrode.

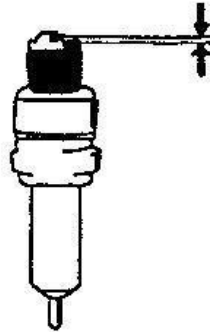

- Attach the plug washer. Thread the plug in by hand to prevent cross-threading.

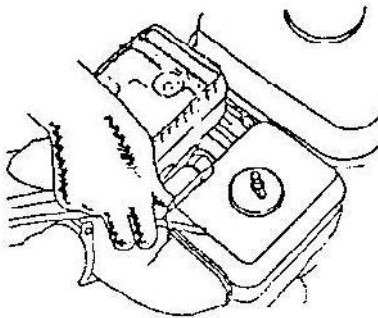

- When mounting a new spark plug, you should screw 1/2 more thread with the wrench after the washer is compressed. If you are mounting an old one, you should only screw 1/8 – 1/4 more thread.

CAUTION:

The spark plug must be securely tightened. An improperly tightened plug can become very hot and possibly damage the engine. Never use a spark plug with an improper heat range.

5. Clutch cable adjustment


Measure the free play at the lever tip

Free play: 3-8mm (0.1-0.3in)

If the free play is incorrect, loosen the lock nut and turn the adjusting bolt in or out as required.

(1) LOCK NUT

(2) ADJUSTING BOLT

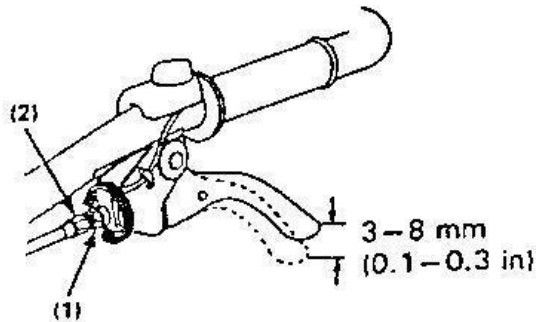

After adjustment tighten the lock nut securely. Then start the engine and check for proper clutch lever operation.

6. Throttle cable adjustment

Measure the free play at the lever tip


Free play: 5-10 mm (0.2-0.4in)

If the free play is incorrect, loosen the lock nut and turn the adjusting nut in or out as required.

(1) THROTTLE LEVER

(2) ADJUSTING NUT


(3) LOCK NUT

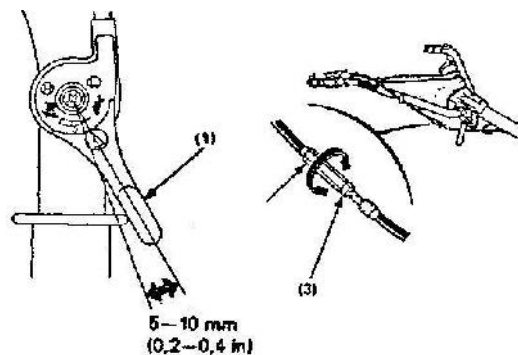

7. Belt tension adjustment

Adjust the clutch lever free play


The standard belt tension is 60-65mm (2.4-2.6 in) at the tension roller with the clutch engaged (clutch lever is squeezed).

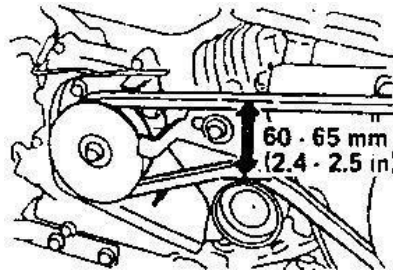

To adjust, loosen the four engine mounting bolts and the engine stay tightening bolt and move the engine forward or reverse to get proper tension of the belt.

NOTE: After adjusting the tension make sure that the outside face of the drive pulley is flush with the outside face of the driven pulley by using a straight gauge.


- (1) ENGINE MOUNTING BOLTS
- (2) ENGINE STAY TIGHTENING BOLT

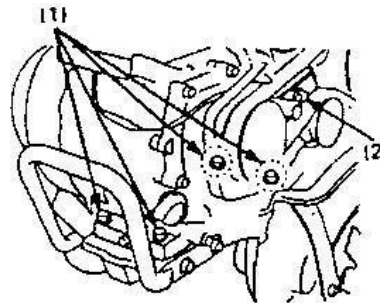

Loosen the attaching bolts of the belt stopper

Adjust the clearance between the belt stopper and the belt as illustrated with the clutch lever squeezed.

- (1) BELT STOPPERS.

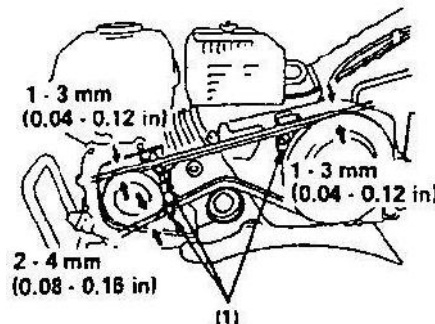

12. Transporting / Storage

⚠ WARNING When transporting the tiller, turn the fuel valve OFF and keep the tiller level to prevent fuel spillage. Fuel vapor or spilled fuel may be ignited.

Before storing the unit for an extended period:

1. Be sure the storage area is free of excessive humidity and dust.
2. Drain the fuel.


⚠ WARNING Gasoline is highly flammable and explosive under certain conditions. Do not smoke or allow flames or sparks in the area.

- a. With the fuel valve turned OFF, remove and empty the fuel strainer cup.
- b. Turn the fuel valve ON and drain the gasoline in the fuel tank into a suitable container.
- c. Replace the fuel strainer cup and tighten securely.
- d. Drain the carburetor by loosening the drain knob. Drain the gasoline into a suitable container.

(1) O-RING


(2) FUEL STRAINER CUP

(3) DRAIN KNOB

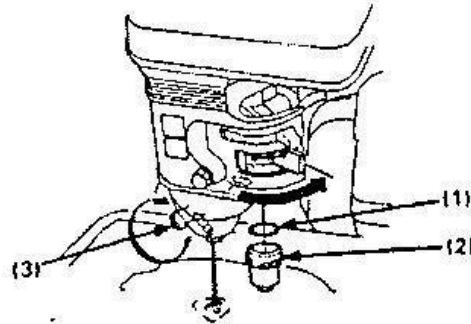

3. Pull the starter grip until resistance is felt. Continue pulling until the notch on the starter puller aligns with the hole on the recoil starter. At this point, the intake and exhaust valves are closed and this will help to protect the engine from internal corrosion.

(1) Align the notch on the starter pulley with the hole at the top of recoil starter.

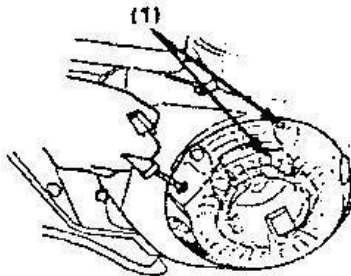

4. Change engine oil.
5. Cover tiller with plastic sheet.

Do not place the tiller with the handlebars on the ground. It will cause the oil entering the cylinder or the fuel spillage.

13. Troubleshooting


When the engine will not start:

1. Is there enough fuel?
2. Is the fuel valve on?
3. Is the engine switch ON?
4. Is gasoline reaching the carburetor?

To check, loosen the drain knob with the fuel valve ON. Fuel should flow freely. Retighten drain knob.

⚠ WARNING If any fuel is spilled, make sure the area is dry before testing the spark plug or starting the engine. Fuel vapor or spilled fuel may ignite.

- (1) FUEL VALVE
- (2) ON
- (3) DRAIN KNOB

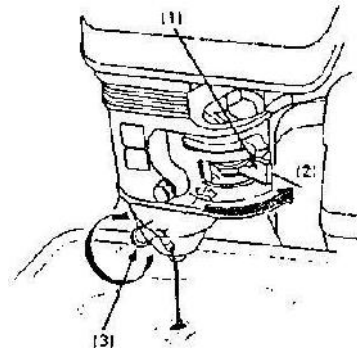

5. Is there a spark at the spark plug?
 - a. Remove the spark plug cap. Clean any dirt from around the spark plug base, and then remove the spark plug.
 - b. Install the spark plug in the plug cap.
 - c. Turn the engine switch on.
 - d. Grounding the side electrode to any engine ground, pull the recoil starter to see if sparks jump across the gap.
 - e. If there is not spark, replace the plug.

If OK, try to start the engine according to the instructions.

If the engine still does not start, take the tiller to an authorized tiller dealer.



Honour Your Trust

Mini Tiller Warranty Period and Warranty Policy Guide Lines

Warranty Period

1. Mini Tiller Machine (Engine, Transmission) 06 months from date of invoice to buyer.
2. Normal maintenance and adjustments to machine is the responsibility of the customer.
3. Normal wear and tear is not covered under warranty.

No Warranty on Electrical Motor / Electrical Parts / Battery Etc.

Warranty Policy Guide Lines:

1. The Warranty period shall start from the date of purchase of the product and applicable to the first purchaser on receipt of the warranty Registration Card.
2. The warranty only covers the manufacturing defect or defective part within the specified warranty timeframe only.
3. The warranty will cease if Service maintenance is not carried out as per periodical maintenance schedule.
4. Warranty voids if Farmworld genuine parts or approved blades are not used on machine during periodical maintenance.
5. The warranty will not cover for normal wear & tear of parts such as brake, clutch plate, Spark-plugs, nylon line, air-filters, fuel filters, oil seals, drive belt, rubber parts, plastic parts, electrical parts.
6. Warranty for Proprietary parts, Like: Fuel Injection Pump, Fuel Injector, Tyre, Battery, Alternator & Starter Motor etc. are subject to respective manufacturers as per their warranty policy.
7. Under warranty period, only repair or replacement of defective parts will be considered, replacement of machine is not warranted.
8. Farmworld or its manufacturers will not be liable for any general damages, including injuries to body, or incidental or consequential damages or other commercial loss or damages.
9. Any Implied warranties, obligations or liabilities, including but not limited to any implied warranty of merchantability shall be limited in duration to the applicable warranty period.
10. Warranty is not transferable to the second and subsequent owners. No agent, representative, dealer or employee of its manufacturers has the authority to increase or alter this warranty.
11. The warranty ceases if the machine is serviced or repaired by unauthorized persons or at any Local workshop.
12. The warranty will not cover for any accidental damage, fire, collision, improper usage, tampering, customer abuse and external modifications/fabrications done by the customer.

Receipt is required for availing warranty services

Jurisdiction: All disputes are subject to Rajkot court's jurisdiction.

FARMWORLD reserves the right to refuse warranty if the product was found not to be carried periodical maintenance & installed as per out installation instructions.



Honour Your Trust

What is covered:

Farmworld Agrotech Pvt. Ltd. and its manufacturers warrant this product to be free from defects in material or workmanship.

- (1) Parts defective in material and workmanship are covered.
- (2) Warranty will only cover defects arise under normal usage.
- (3) Warranty is limited to repair or replacement by Farmworld Agrotech Pvt. Ltd. or its manufacturers at the premises of Authorized Dealers, of such parts as appear to Farmworld or its manufacturers, upon inspection, to be defective in material and/or workmanship.
- (4) Farmworld or its manufacturers make no warranty with respect to trade accessories not manufactured or sold by them.

What is not covered:

The *warranty shall become null and void* and neither Farmworld Agrotech Pvt. Ltd. nor any of its manufacturers, nor its authorized dealers assumes any responsibility, if the failure was caused by the following:

- (1) Operation of product with incorrect fuel or lubricants.
- (2) Incorrect usage of machine or misuse.
- (3) Lack of maintenance.
- (4) Negligence.
- (5) Accident or physical damage.
- (6) Repairs made by unauthorized parties and/or with unauthorized parts.
- (7) Improper set up, adjustments, tampering or altered products.

Note: *The purchase is not dependent upon a product demonstration. The purchaser shall satisfy himself with the product, including any product demonstration or verification of any function, before buying. Farmworld Agrotech Pvt. Ltd. or its authorized dealers, including online sellers, shall not be liable to give any on-site demonstration after purchase of any of the product.*



Honour Your Trust

WARRANTY REGISTRATION CARD

(Company Copy)

Mini Tiller Details			
Model:		Invoice No.:	Invoice Date:
Engine Head No.:			
Engine Chassis No.:		Warranty Start Date:	Warranty End Date:
Please mark ✓ the machine is using for. List of accessories /Attachments	Ridger ☐	Plough ☐	Seed Drill ☐
	Paddy Wheel ☐	Weeding Blade ☐	Potato Digger ☐
	Trailer ☐	Water Pump ☐	
The Mini Tiller & accessories have been handed over to the Customer in good condition after pre-delivery inspection, training & service.			
Use of Mini Tiller	Farm Use (Rotavation)		
	Pudding	Sowing	Pumping Water
	Inter Culture	Harvesting	Spraying
	Other Use		
	Stone Cutting	Haulage	
Customer Details			
Name:			
Village:		PIN:	
City:		District:	
State:		Country:	
Contact No.:		Date of Birth:	
Email ID:			
Customer Signature (I acknowledge that I have read, understood and I accept the warranty policy and terms.)		Dealer's Seal & Signature	

*Dealer has to maintain the photo copy of the Warranty Registration Card.



Honour Your Trust



Honour Your Trust



Honour Your Trust

WARRANTY REGISTRATION CARD

(Dealer Copy)

Mini Tiller Details			
Model:		Invoice No.:	Invoice Date:
Engine Head No.:			
Engine Chassis No.:		Warranty Start Date:	Warranty End Date:
Please mark ✓ the machine is using for. List of accessories /Attachments	Ridger ☐	Plough ☐	Seed Drill ☐
	Paddy Wheel ☐	Weeding Blade ☐	Potato Digger ☐
	Trailer ☐	Water Pump ☐	
The Mini Tiller & accessories have been handed over to the Customer in good condition after pre-delivery inspection, training & service.			
Use of Mini Tiller	Farm Use (Rotavation)		
	Pudding	Sowing	Pumping Water
	Inter Culture	Harvesting	Spraying
	Other Use		
	Stone Cutting	Haulage	
Customer Details			
Name:			
Village:		PIN:	
City:		District:	
State:		Country:	
Contact No.:		Date of Birth:	
Email ID:			
Customer Signature (I acknowledge that I have read, understood and I accept the warranty policy and terms.)		Dealer's Seal & Signature	


*Dealer has to maintain the photo copy of the Warranty Registration Card.



Honour Your Trust



Honour Your Trust

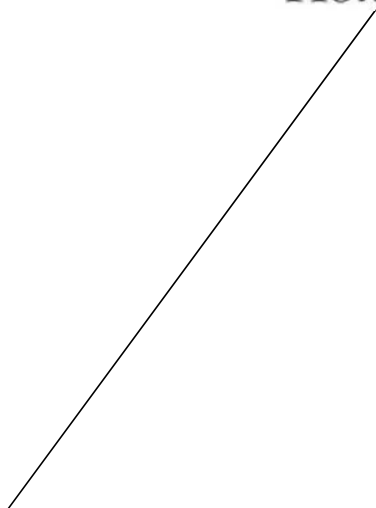



Honour Your Trust

WARRANTY REGISTRATION CARD

(Customer Copy)

Mini Tiller Details			
Model:		Invoice No.:	Invoice Date:
Engine Head No.:			
Engine Chassis No.:		Warranty Start Date:	Warranty End Date:
Please mark ✓ the machine is using for. List of accessories /Attachments	Ridger ☐	Plough ☐	Seed Drill ☐
	Paddy Wheel ☐	Weeding Blade ☐	Potato Digger ☐
	Trailer ☐	Water Pump ☐	
The Mini Tiller & accessories have been handed over to the Customer in good condition after pre-delivery inspection, training & service.			
Use of Mini Tiller	Farm Use (Rotavation)		
	Pudding	Sowing	Pumping Water
	Inter Culture	Harvesting	Spraying
	Other Use		
	Stone Cutting	Haulage	
Customer Details			
Name:			
Village:		PIN:	
City:		District:	
State:		Country:	
Contact No.:		Date of Birth:	
Email ID:			
Customer Signature (I acknowledge that I have read, understood and I accept the warranty policy and terms.)		Dealer's Seal & Signature	

*Dealer has to maintain the photo copy of the Warranty Registration Card.



Honour Your Trust



Honour Your Trust



Honour Your Trust



Honour Your Trust



Honour Your Trust

FARMWORLD AGROTECH PRIVATE LIMITED

Office Address:- Plot No. 373, Road-U, Khirasara Industrial Estate, Khirsara,
Taluka – Lodhika, District – Rajkot, 360021 (Gujarat) India.

Email: customercare@farmworld.in | Website: www.farmworld.in