



Honour Your Trust

POTATO HARVESTER USER MANUAL



Honour Your Trust

WWW.FARMWORLD.IN



Honour Your Trust

Index

Sr. No.	Contents	Page No.
1.	Introduction	1
2.	Technical Specifications	3
3.	Safety Instructions	4
4.	Do's and Don'ts	6
5.	Operating Instructions	7
6.	Field Precautions	8
7.	Part List	9
8.	Warranty Policy	24

Introduction

Potato Harvester harvest the potatoes very finely and forms equal level soil bed, with this efficiency of farmers will increase and they can harvest large fields in short time without any breakage. Potatoes harvested by **Potato Harvester** are very much clear and without cuts. Farmer can collect the potatoes easily from the field.

Potato Harvesting Machine:

Potato harvesters are designed for potato harvesting. This machine can finish mining, soil and potato separation in one time and can harvest the potato with the potato stems. It is a multifunctional machine which can used for variety kinds of root crops and vegetables such as peanut, carrot, onion, etc.

Working Principle of Potato Harvesting Machine:

The potato harvester dig the potatoes by the digger blade and then lift them to the cage assembly. The machine harvest the potatoes by lifting the potatoes from the blade to the cage assembly. Then soil and potatoes are transferred onto a series of rods (cage Assembly) where the soil and the potatoes are sieved out and the potatoes are separated from the soil.

Remarkable Features of Potato Harvester Machine

1. **Multifunctional:** This potato harvester machine can used for harvesting varieties of root crops and vegetables.
2. **High efficient:** This machine can harvest 0.27 hectare field per hour and the feed capacity is about 180kg/s.
3. **Wide working width:** Compared with other potato harvester, this potato harvesting machine has a wider working width about 1210mm & 1310mm, respectively.
4. **Low loss rate:** The loss rate of this machine is less than 0.1%.
5. **Wide adaptation:** The machine is suitable for all kinds of soil, such as sandy soil, clayey soil and Loam.
6. **Good performance:** This potato harvesting equipment can harvest the potatoes without hurting the peel of the potatoes and harvest the potatoes with the potato vine.
7. **Easy operation:** The machine is with simple and compact structure and can connect with the tractors easily.

Widely Application of Potato Harvesting Machinery:

This potato harvesting machine has a wide application range which can be used for the harvesting of potato, peanut, sweet potato, carrot, garlic, onion and other root crops.

Maintenance & Repair Tips:

1. The soil should be cleaned after each operation.
2. Check out the fastener of the machine and make sure there isn't any loose.
3. The machine should be prevented from the rain and acidic materials, the gear of the machine should be oiled when not using.

Potato Harvesting Machine Market:

Potatoes are planted almost all over the world and are welcomed by people all over the world. However, since the potatoes are grown underground and the soil are often sandy soil or clayey soil, it is hard to harvest. The traditional way of potato harvesting is low efficient and labour oriented. While by using this multi-functional potato harvester, it can harvest the plants efficient and also save labour. So the market of this potato harvester is vast.

Technical Specifications

Potato Harvester is designed to meet the needs of Indian Farmers. All Models are available with tool kit as well as options of side disc.

Sr. No.	DESCRIPTION	Model 50"	Model 57"
1	NO. OF ROWS	2	2
2	WORKING DEPTH	132-200 mm	130-200 mm
3	WORKING WIDTH	1190 mm	1190 mm
4	POWERED BY	Gear Drive	Gear Drive
5	CAGE TYPE	Belt Type	Belt Type
6	REQUIRED POWER	40-60 hp	40-60 hp
7	HARVESTING CAPACITY	1 acre/hour	1.25 acre / hour
8	TOTAL LENGTH	2200 mm	3050 mm
9	TOTAL WIDTH	1400 mm	1630 mm
10	TOTAL HEIGHT	1300 mm	1300 mm
11	TOTAL WEIGHT UNLADEN WEIGHT	820 Kgs	890 Kgs
12	ROLLER FOR BED PREPRATION	Yes	Yes

Safety Instructions

Maintenance Safety:

1. Follow all the operating maintenance and safety information in the manual.
2. Support the machine with blocks or safety stands when working beneath it.
3. Follow good work shop practices:
 - Keep service area clean and dry.
 - Use adequate light for the job in hand.
4. Use tools, jacks and hoists of sufficient capacity for the job.
5. Make sure all guards are in place and properly secured when maintenance work is completed.
6. Never wear loose fitting, baggy or frayed clothing when working around or on any of the drive system components.
7. Keep hands, feet, hair and clothing away from moving or rotating parts.
8. Clear the area of bystanders, especially small children, when carrying out maintenance and repairs or making any adjustments

Transport Safety:

1. Review transport safety instructions in tractor manual before moving.
2. Always travel at a safe speed
3. Always use hazard warning flashers on tractor when transporting unless prohibited by law.
4. Do not exceed speed 20km/h during transport.

Safety Instructions

General Safety:

1. First aid kit should be available and learn to use the same in case of emergency.
2. Fire extinguisher should be available and learn to use the same in case of emergency.
3. Wear appropriate protective equipment's. This list includes but not limited to :
 - a) A hard hat.
 - b) Protective shoes with slip resistant soles.
 - c) Protective glasses and goggles.
 - d) Heavy Gloves.
 - e) Hearing Protection.
 - f) Respirator or filter mask.
 - g) Wear suitable ear protection for prolonged exposure to excessive noise.

Storage Safety:

1. Store the unit in an area away from human activity.
2. Do not permit children to play on or around the stored machine.
3. Support frame should be on stands and blocks to provide a secure base.
4. Thoroughly wash the machine and apply rust prevent oil, when not in use for a long time.

Safety Signs:

1. Keep safety signs clean and legible at all time.
2. Replace safety signs that are missing.
3. Install safety features on repaired parts as earlier.

Do's and Don'ts

1. Check all parts of the machine every day whenever you intend to put it in the field.
2. Make sure that parking stand is up while operating in field.
3. Check and tight all bolts and nuts daily.
4. Beware of bystanders while operating the Potato Harvester.
5. Do not allow anyone to stand or sit on the implement while it is transported or operated.
6. Do not leave the tractor seat until the engine is off, brakes locked, and the Potato Harvester lowered to the ground.
7. Do not allow children to play in field or to sit on tractor while operation.
8. Always be sure that any new operator should has thoroughly understanding of the implement and should follow the safety precautions.
9. Keep your machine in good working condition. Always contact your dealer for repairs.
10. Never attempt to adjust or perform maintenance on this machine while it is being operated.

Operating Instructions

1. Read and understand the operator's manual and all safety signs before operating, servicing, adjusting, repairing and unplugging.
2. Install and secure all guards and shields before starting or operating.
3. Keep hands, feet, hair and clothing away from moving parts.
4. Lower implement to the ground, place all controls in neutral, stop engine, engage parking brake, remove ignition key. Ensure all moving parts should stop before service, repair, and any adjustment, connect or disconnect.
5. Put all tractor and machine controls in neutral position before starting.
6. Never start or operate the machine unless you are not sitting on tractor seat.
7. Do not operate machine inside a building unless there is adequate ventilation.
8. Do not put hands or feet under machine while tractor engine or machine is running.
9. Always know what you are planting. Never operate Harvester in an area that has hidden obstacles. Remove sticks, stone, roots, wire and other objects from working area before starting.
10. Clean reflectors, SMV emblem and lights before transporting.
11. Use hazard flashers on tractor while transporting.
12. Review safety instructions with all operators annually or seasonally.

Safety Precautions:


1. While mounting Potato Harvester to the tractor ensure that there should no downward pressure from the tractor hydraulic system on the Potato Harvester, also do not add up any external weight on Potato Harvester.
2. Adjust the tractor top link length and attach to top most in such a way that the main frame of Potato Harvester remains parallel to ground.
3. Lower implement to the ground, place all controls in neutral, stop engine, engage parking brake, remove ignition key. Ensure all moving Parts should stop before service, repair, and any adjustment, connect or disconnect.
4. Keep hands, feet, hair and clothing away from moving, rotating parts. Do not wear loose clothes as entanglement with rotating parts may cause serious injury or even death.
5. Do not make sharp turn while Harvester is in the ground, lower position or working.
6. Do not carry passengers while operating machines.

Field Precautions

ENSURE THAT AFTER FITMENT OF BLADE THE CENTRE TIP OF BLADE TOUCHES THE GROUND IN RESTING POSITION OF MACHINE.

Advantages:

1. It will increase working efficiency of machine.
2. It will attain adequate depth for harvesting potatoes.

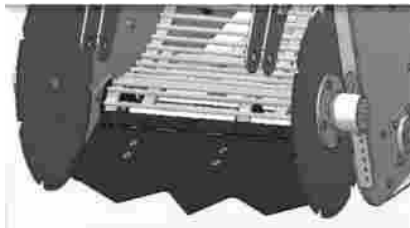

USE HINGE TYPE BLADE ONLY

Advantages:

1. It will ensure the smooth movement of cage.
2. It will overcome obstacles of hard soil stones.




ALWAYS USE BIG FLANGE AXLE DIA 180MM FOR SIDE DISC.

Advantages:

1. Increased axle diameter will give side disc more holding strength to avoid breakage.
2. Increase axle diameter will uniformly take the load of disc in hard and light soil conditions.



Gear Box Assembly

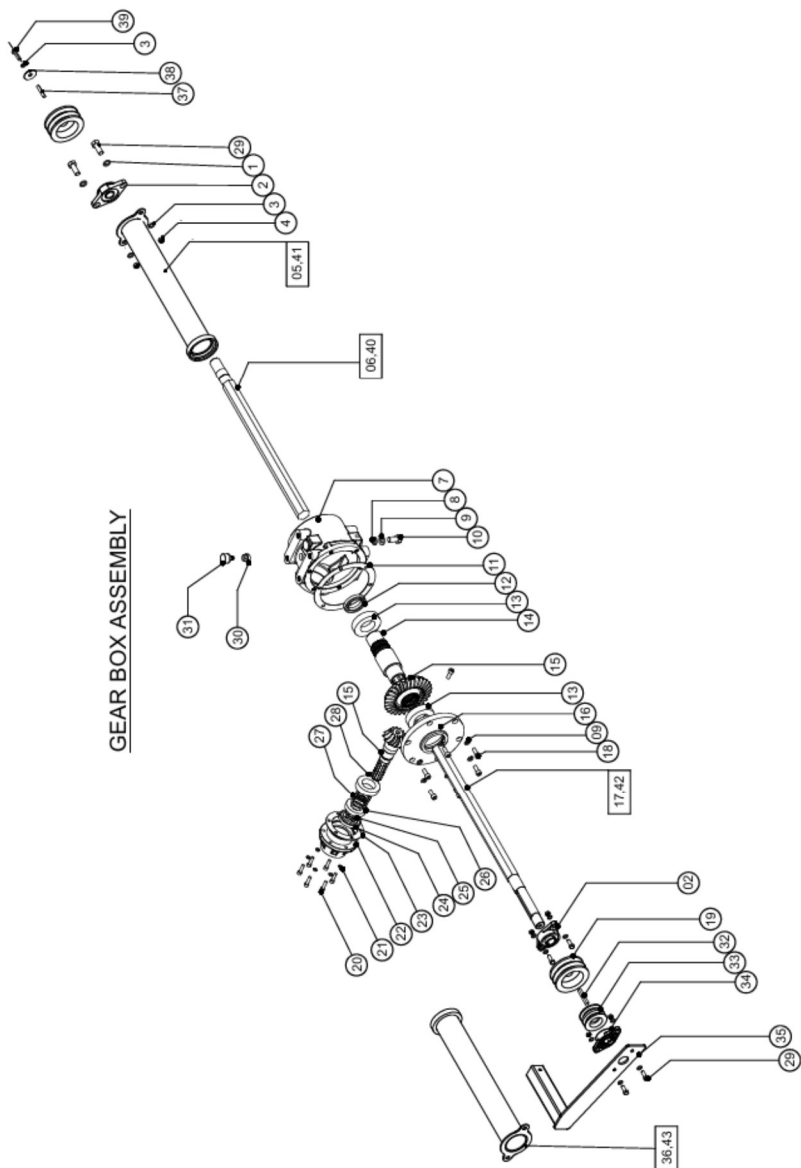


Gear Box Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	Plain washer 12.2	1000001269	2
2	Bearing UCFL 207	1000005467	2
3	SPRING WASHER 12 MM GOLDEN MFZN5 C	1000001261	4
4	NYLOCK NUT M12 X 1.75 MM SILVER	1000001242	2
5	PDN Hex Shaft Cover Assy 50"	3000009398	1
6	PDN hex shaft RH 50"	3000009400	1
7	PD GEAR BOX HOUSING POTATO DIGGER MC	3000004525	1
8	ALUMINIUM WASHER 12 X 1 5 MM SILVER	1000001069	1
9	SPRING WASHER 10.2	1000001260	1
10	HEX BOLT M10 X 25 F/T 10.9	1000001128	1
11	P D GASKET FOR BIG FLANGE 1 5 MM	1000001468	1
12	OIL SEAL 48 X 72 X 10	1000001482	1
13	BEARING 30210 NBC	1000000791	2
14	P D HOLLOW SHAFT DIA 38	1000001470	1
15	CROWN FOR DIGGER GEAR Z 12/29	1000001473	1
16	FLANGE FOR DIGGER DIA 200 MM	1000001479	1
17	PDN hex shaft LH 50"	3000009402	1
18	ALLEN BOLT 10 X 25	1000001034	6
19	P D PULLEY 6 2C SECTION BORE 33 MM	1000000891	2
20	ALLEN BOLT 8 X 30 MM	1000001062	6
21	Spring Washer M8	1000001266	6
22	P D TAIL PINION HOUSING	1000001499	1
23	GASKET TAIL PINION HOUSING 1 5 MM P D	1000001276	1
24	OIL SEAL 35 X 72 X 10 BINBOW	1000001450	1
25	P D CIRCLIP 40 X 1 75 N EXTERNAL	1000001466	1
26	Taper roller BEARING 32008	1000000794	1
27	SHIM ID 40 OD 50	1000003574	According to adjustment
28	Taper Roller Bearing 32009	1000000795	1
29	Hex bolt M12X40 h/t	1000001147	1
30	Air Breather Adopter Small	1000001024	1

31	Air Breather small	1000001027	1
32	R PARALLEL KEY 10x8x100	1000001724	1
33	P D PULLEY 4 2C SECTION BORE 33 MM	1000007353	1
34	Bearing UCFL 206	1000007018	1
35	PDN JUMPER DRIVE MTD BRKT	3000010038	1
36	PDN HEX SHAFT COVER ASSY LH 50"	3000009404	1
37	R PARALLEL KEY 10 X 8 X 40	1000001725	1
38	WASHER OD 40 ID11	1000003497	2
39	HEX BOLT M10 x 20 F/T	1000001127	2
40	PDN hex shaft RH 57"	3000010156	1
41	PDN Hex Shaft Cover Assy 57"	3000010155	1
42	PDN hex shaft LH 57"	3000010157	1
43	PDN HEX SHAFT COVER ASSY LH 57"	3000010158	


Front Jumper Shaft Assembly

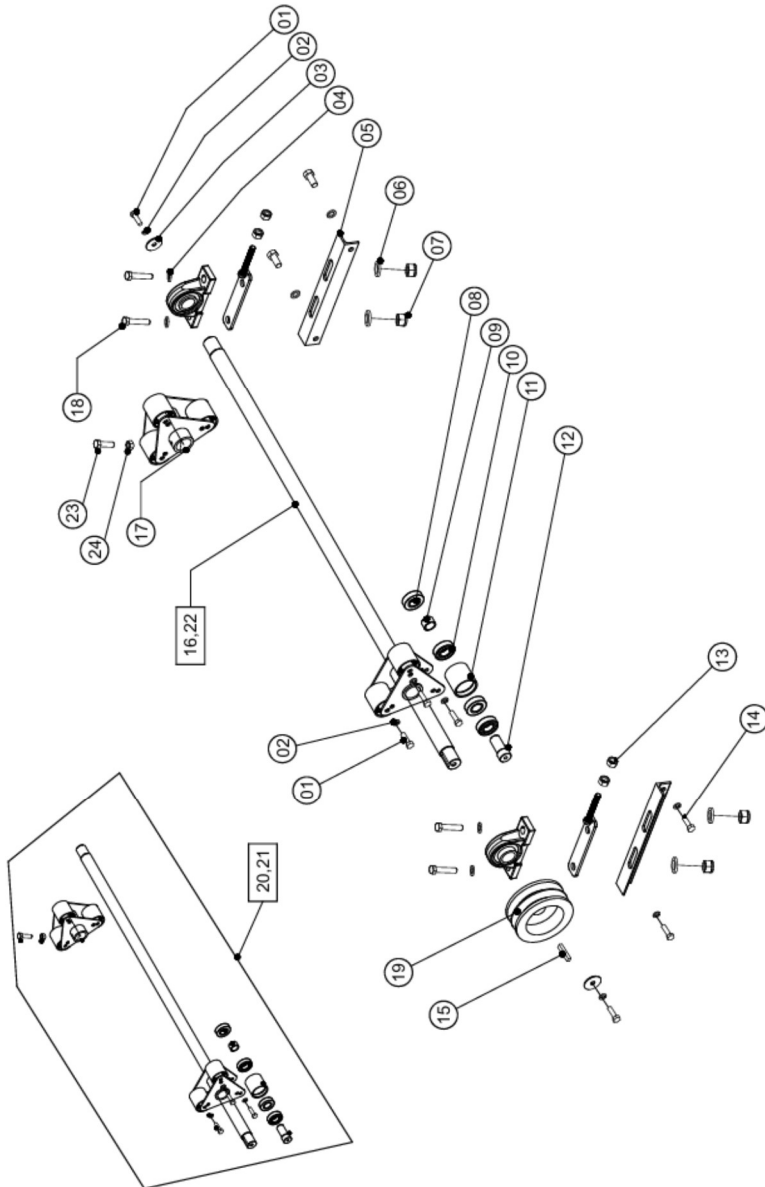

Front Jumper Shaft Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	HEX BOLT M10 x 20 F/T	1000001127	2
2	SPRING WASHER 10 MM GOLDEN MFZN5 C	1000001260	2
3	WASHER OD 40 ID11	1000003497	2
4	PLAIN WASHER 12.2	1000001269	4
5	PDN Jumper Bearing Angle PT	1000010062	2
6	SPRING WASHER 12 MM GOLDEN MFZN5 C	1000001261	8
7	NYLOCK NUT M12 X 1.75 MM SILVER	1000001242	8
8	OIL SEAL 30-52-7	1000001449	12
9	PDN Seal Bush ϕ 30X18	1000010106	6
10	Bearing 6205 ZZ ARB	1000000821	12
11	PDN JUMPER IDLER PIPE ϕ 60	1000010103	6
12	PDN JUMPER IDLER PIN ϕ 30	1000010104	6
13	HEX NUT 12 MM GOLDEN 10 MFZN5 C	1000001226	4
14	HEX BOLT M12x25 F/T	1000001142	4
15	R PARALLEL KEY 10 X 8 X 40	1000001725	1
16	PDN Front Jumper Shaft 50"	3000010100	1
17	PDN JUMPER IDLER ASSY	1000010098	2
18	HEX BOLT M12x45 H/T	1000001149	4
19	P D PULLEY 6 2C SECTION BORE 33 MM	1000000891	1
20	PDN Front Jumper Shaft Assy 50" (PC)	3000010017	1
21	PDN Front Jumper Shaft Assy 57" (PC)	3000010159	1
22	PDN Front Jumper Shaft 57"	3000010160	1
23	HEX BOLT M12 X 35 MM F/TH 10.9	1000001146	2
24	HEX NUT M12MM	1000001226	2

Main Frame Assembly & Mountings

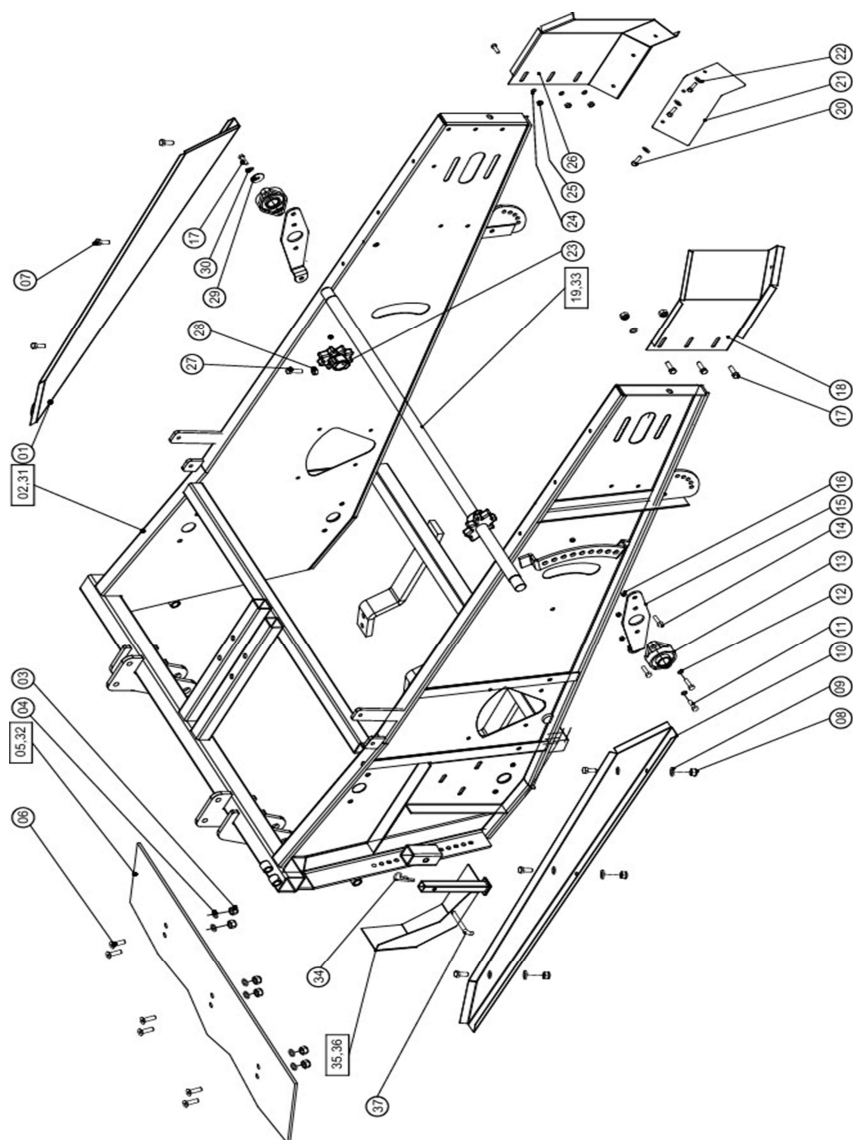


Main Frame Assembly & Mountings

SR.	DESCRIPTION	PART NO.	QTY.
1	PDN POTATO STOPPER R.H. (PC)	3000010044	1
2	PDN MAIN FRAME ASSEMBLY 50" (PC)	3000010015	1
3	NYLOCK NUT M16 X 2MM SILVER	1000001244	6
4	SPRING WASHER 16 MM GOLDEN MFZN5 C	1000001263	6
5	PDN BLADE 50" (PC)	3000010032	1
6	CSK BOLT M16x50 F/TH	1000001101	6
7	HEX BOLT M10 X 20 MM F/TH 10.9	1000001127	6
8	Nylock nut m10	1000001241	6
9	SPRING WASHER 10 MM GOLDEN MFZN5 C	1000001260	6
10	PDN POTATO STOPPER L.H.(PC)	3000010046	1
11	Hex bolt M12X40 h/t	1000001147	4
12	Plain washer 12.2	1000001269	4
13	Bearing UCFL 207	1000005467	2
14	HEX BOLT 12 X 35 H/T	1000001145	4
15	PDN BEARING MTG. BKT. (PC)	3000010060	2
16	NYLOCK NUT M12 X 1.75 MM SILVER	1000001242	8
17	HEX BOLT M10 X 25 F/T 10.9	1000001128	6
18	PDN REAR FLAPPER L.H. (PC)	3000010042	1
19	PDN REAR JUMPER SHAFT 50"	3000010164	1
20	HEX BOLT M8 X 20 F/T GRADE 10.9	1000001218	6
21	PDN RUBBER FLAPPER	1000007533	1
22	WASHER PLAIN 8 MM GOLDEN MFZN5 C	1000001274	6
23	PD JUMPER Z 8	1000001494	2
24	SPRING WASHER 10 MM GOLDEN MFZN5 C	1000001260	6
25	NYLOCK NUT M10 X 1.50	1000001241	6
26	PDN REAR FLAPPER R.H. (PC)	3000010040	1
27	HEX BOLT M12 X 35 MM F/TH 10.9	1000001146	2

28	HEX NUT M12MM	1000001226	2
29	WASHER OD 40 ID11	1000003497	2
30	SPRING WASHER 10 MM GOLDEN MFZN5 C	1000001260	2
31	PDN MAIN FRAME ASSEMBLY 57" (PC)	3000010161	1
32	PDN BLADE 57" (PC)	3000010162	1
33	PDN REAR JUMPER SHAFT 57"	3000010165	1
19,23, 27,28	PDN REAR JUMPER SHAFT ASSEMBLY 50" (PC)	3000010019	1
33,23, 27,28	PDN REAR JUMPER SHAFT ASSEMBLY 57" (PC)	3000010163	1
34	R PIN 4 x 76	1000001258	2
35	PDN DISC GUARD RH PT	3000010149	1
36	PDN DISC GUARD LH PT	3000010310	1
37	STAND L PIN	1000002429	2


Front Shaft Assembly

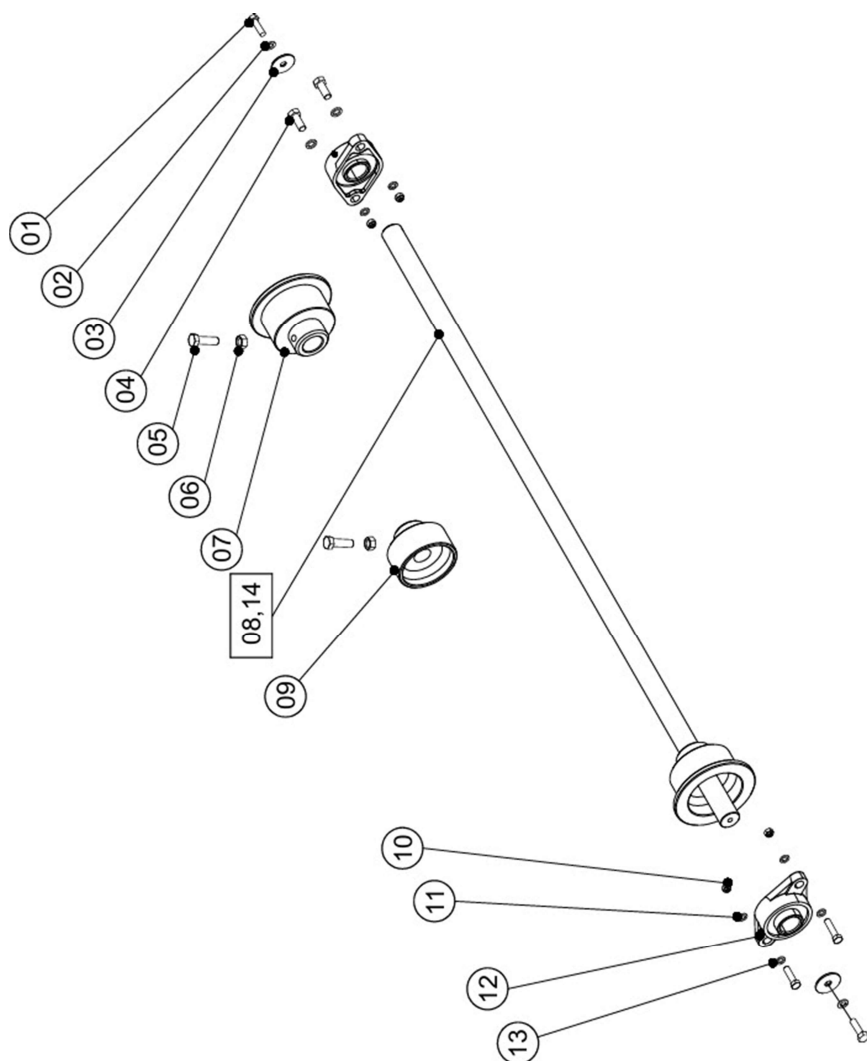

Front Shaft Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	HEX BOLT M10 X 25 F/T 10.9	1000001128	2
2	SPRING WASHER 10 MM GOLDEN MFZN5 C	1000001260	2
3	WASHER OD 40 ID11	1000003497	2
4	Hex bolt M12X40 h/t	1000001147	4
5	HEX BOLT M12 X 35 MM F/TH 10.9	1000001146	3
6	HEX NUT M12MM	1000001226	3
7	PD ROLLER WITH COLLAR FINISHED	3000005048	2
8	(PD) FRONT ROLLER SHAFT Ø35X1425 MM 50"	3000005047	1
9	PD ROLLER WITHOUT COLLAR FINISHED	3000005049	1
10	NYLOCK NUT M12 X 1.75 MM SILVER	1000001242	4
11	SPRING WASHER 12 MM GOLDEN MFZN5 C	1000001261	4
12	Bearing UCFL 207	1000005467	2
13	PLAIN WASHER 12.2	1000001269	4
14	(PD) FRONT ROLLER SHAFT Ø35X1575 MM 57"	3000010167	1
5,6,7, 8,9	PDN FRONT SHAFT ASSEMBLY 50" (PC)	3000010023	1
5,6,7, 14,9	PDN FRONT SHAFT ASSEMBLY 57" (PC)	3000010166	1


Hitch Assembly

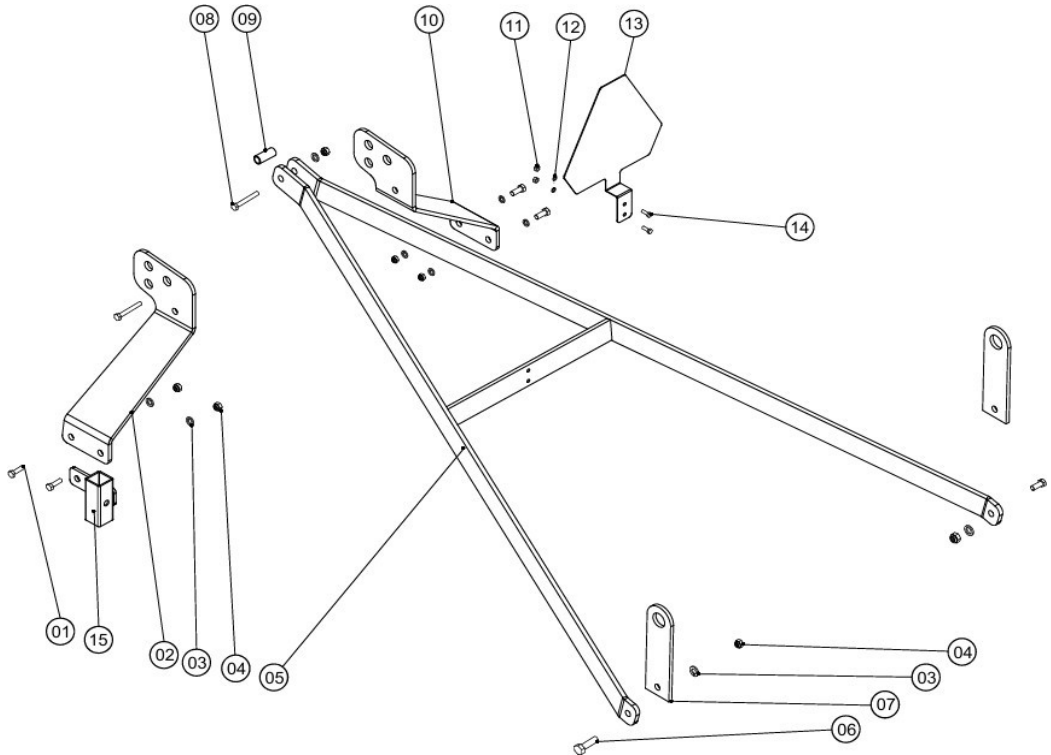

Hitch Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	HEX BOLT 16 X 45 H/T	1000001185	4
2	PDN HITCH SIDE PLATE L.H. (PC)	3000010036	1
3	SPRING WASHER 16.2	1000001263	7
4	NYLOCK NUT M16 X 2	1000001244	7
5	PDN HITCH STRIP ASSEMBLY (PC)	3000010052	1
6	HEX BOLT 16 X 50 MM H/T	1000001187	2
7	BELT CLAMP FOR MULCHER	3000003379	2
8	HEX BOLT 16 X 100 MM H/T	1000001169	1
9	BUSH OD 25 ID 17 L-34	1000007333	1
10	PDN HITCH SIDE PLATE R.H. (PC)	3000010034	1
11	Nylock nut m10	1000001241	1
12	SPRING WASHER 10 MM GOLDEN MFZN5 C	1000001260	1
13	PDN REFLECROR PLATE 2MM PT	3000010188	1
14	Hex Bolt M10X30 F/T	1000001129	1
15	PDN DISC GUARD HANGING BKT	3000010309	1


Rear Roller Assembly

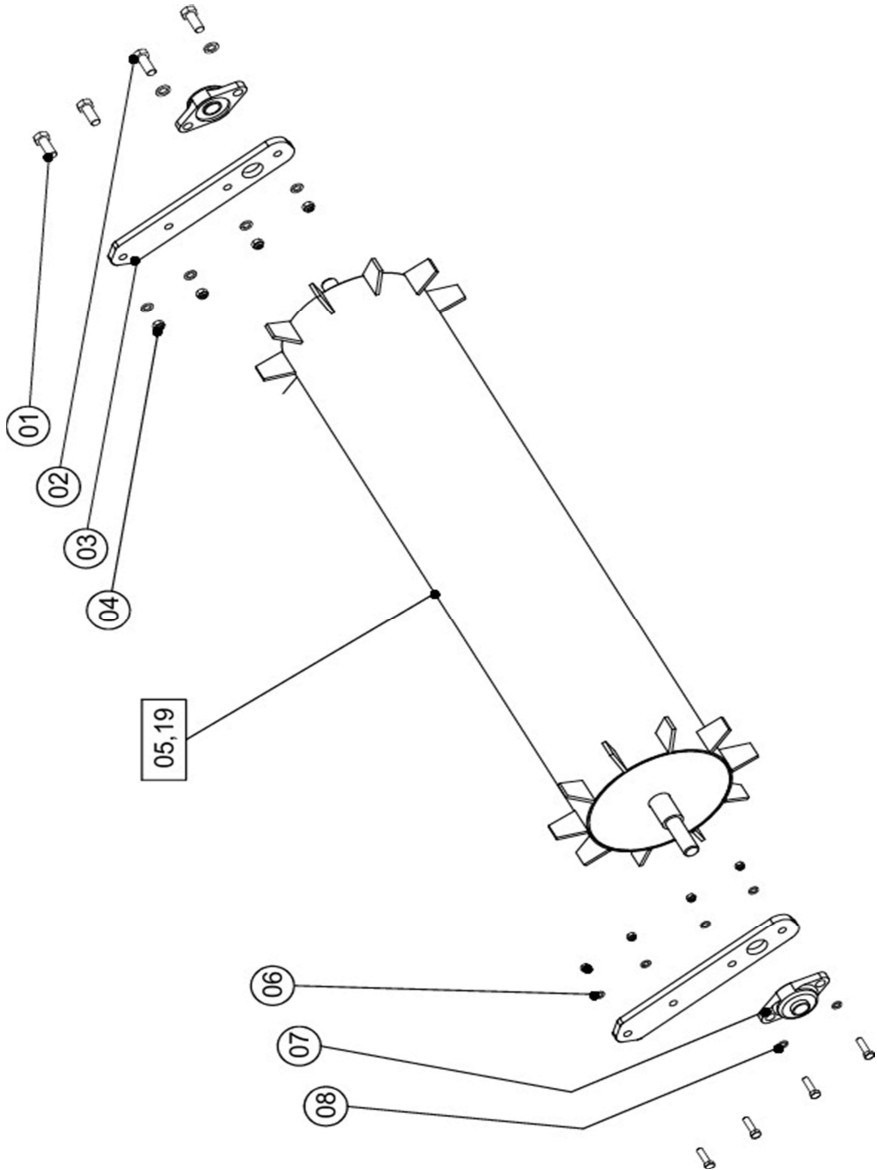

Rear Roller Assembly


SR.	DESCRIPTION	PART NO.	QTY.
1	HEX BOLT 12 X 30 MM H/T	1000001144	2
2	Hex bolt M12X40 H/T	1000001147	2
3	PDN REAR ROLLER MTG. STRIP (PC)	3000010056	2
4	NYLOCK NUT M12 X 1.75	1000001242	8
5	PDN REAR ROLLER ASSEMBLY 50" (PC)	3000010054	1
6	SPRING WASHER 12 MM GOLDEN MFZN5 C	1000001261	8
7	BEARING UCFL 205	1000000860	2
8	PLAIN WASHER 12.2	1000001269	4
9	PDN REAR ROLLER ASSEMBLY 57" (PC)	3000010168	1

Cage Assembly

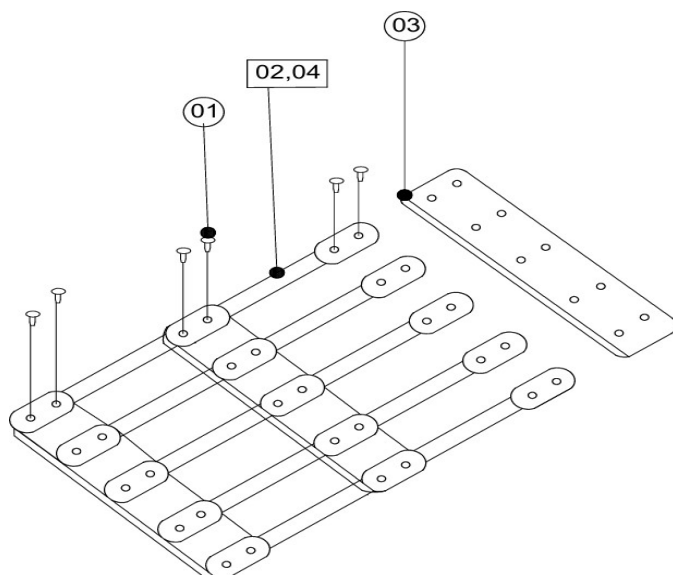

SR.	DESCRIPTION	PART NO.	QTY.
1	Rivets 6x25	1000002670	624
2	Rod Dia 13	3000005080	105
3	Flat Belt with Woven 8x55x3200	1000001467	3
4	CAGE Rod Dia 13 57"	3000010174	105


Drive Shaft Assembly

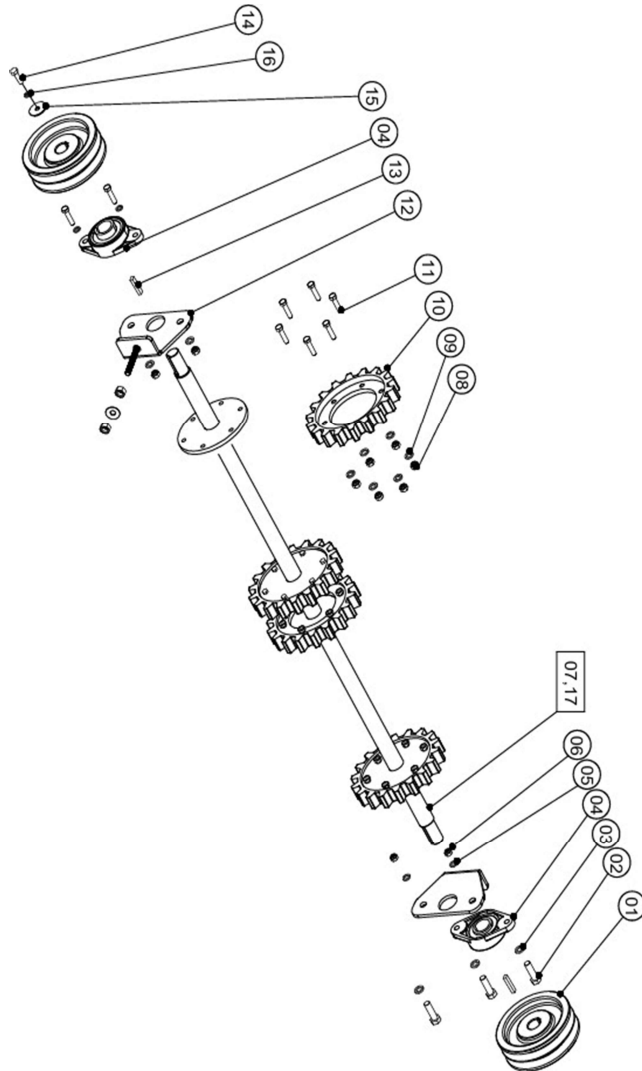

Drive Shaft Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	P D PULLEY 8 2C SECTION BORE 33 MM	1000000890	2
2	HEX BOLT 12 X 45 H/T	1000001149	4
3	PLAIN WASHER 12.2	1000001269	4
4	BEARING UCFL 208	1000000772	2
5	SPRING WASHER 12 MM GOLDEN MFZN5 C	1000001261	4
6	NYLOCK NUT M12 X 1.75 MM SILVER	1000001242	8
7	PDN DRIVE SHAFT ASSEMBLY 50" (PC)	3000010021	1
8	Nylock nut m10	1000001241	24
9	SPRING WASHER 10 MM GOLDEN MFZN5 C	1000001260	24
10	CASTING SPROCKET Z-18	1000002219	4
11	HEX BOLT M10 X 35 MM F/T	1000001130	24
12	PDN CAGE TENSIONER PLATE (PC)	3000010058	2
13	R PARALLEL KEY 10 X 8 X 40	1000001725	2
14	HEX BOLT M10 X 25 F/T 10.9	1000001128	2
15	WASHER OD 40 ID11	1000003497	2
16	SPRING WASHER 10 MM GOLDEN MFZN5 C	1000001260	2
17	PDN DRIVE SHAFT ASSEMBLY 57" (PC)	3000010169	1


Disc Assembly

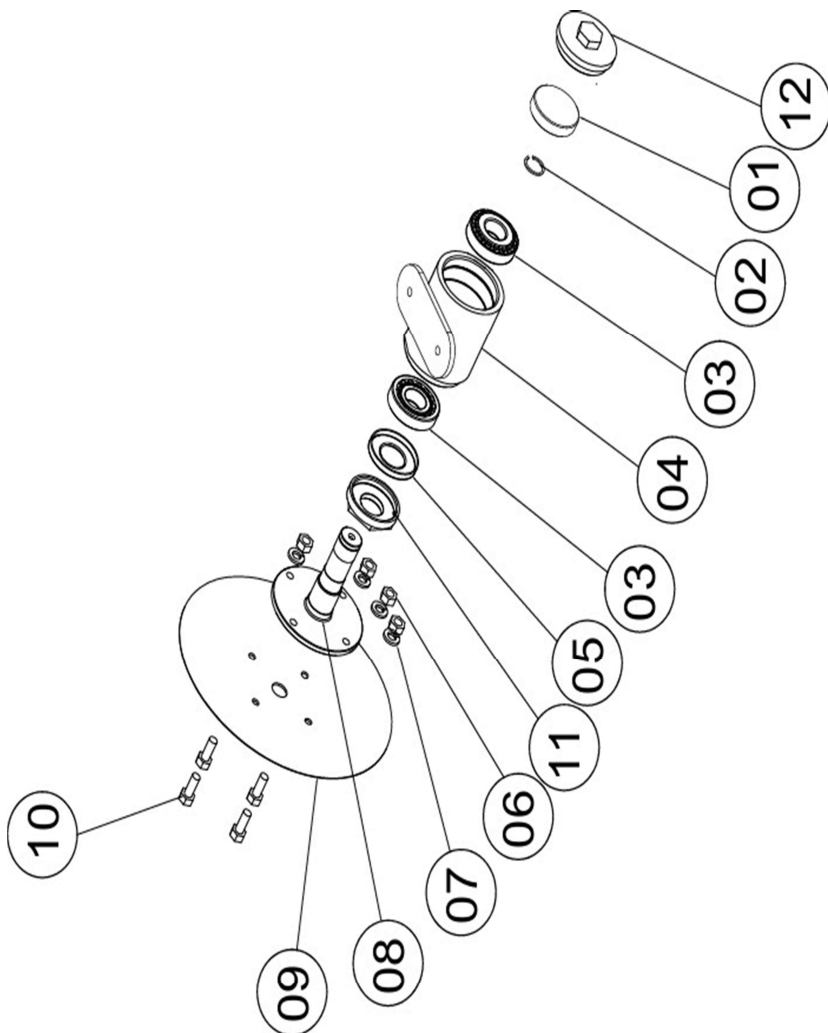

Disc Assembly


SR.	DESCRIPTION	PART NO.	QTY.
1	Oil Seal Blind (Cap Seal) 80x10	1000005014	1
2	External Circlip 35 x 1.5	1000001082	1
3	Taper Roller Bearing 30307 ARB	1000005012	2
4	PDN Disc Hub Assembly New Model	3000010154	2
5	Oil Seal 40 x 80 x 10	1000005013	1
6	Hex Nut M10 Plain	1000001224	4
7	Spring Washer Dia 10.2	1000001260	4
8	P D AXLE DISC 130 MM	1000001487	1
9	PDN FLAT Disc 21"	3000010153	1
10	Hex Bolt M10X30 F/T	1000001129	4
11	DISC COVER NUT NEW MODEL GS	1000007236	1
12	DISC NUT NEW MODEL GS	1000007235	1

Adjustment Roller Assembly

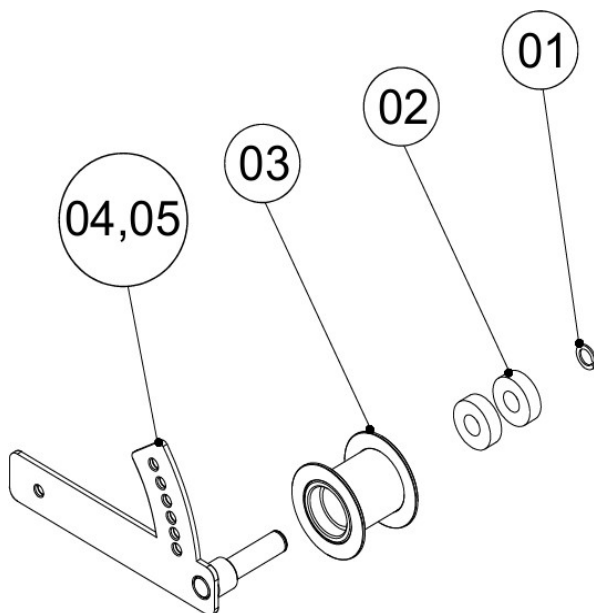

SR.	DESCRIPTION	PART NO.	QTY.
1	CIRCLIP 20 MM EXTERNAL	1000001080	1
2	(P.T.) BEARING 6204 ZZ ARB	1000000819	2
3	P D PIPE OD 60, ID 40, L 60	3000003023	1
4	PDN BELT ADJUSTER STRIP LH ASSY	3000010152	1
5	PDN BELT ADJUSTER STRIP RH ASSY	3000010151	1


Front Roller Assembly

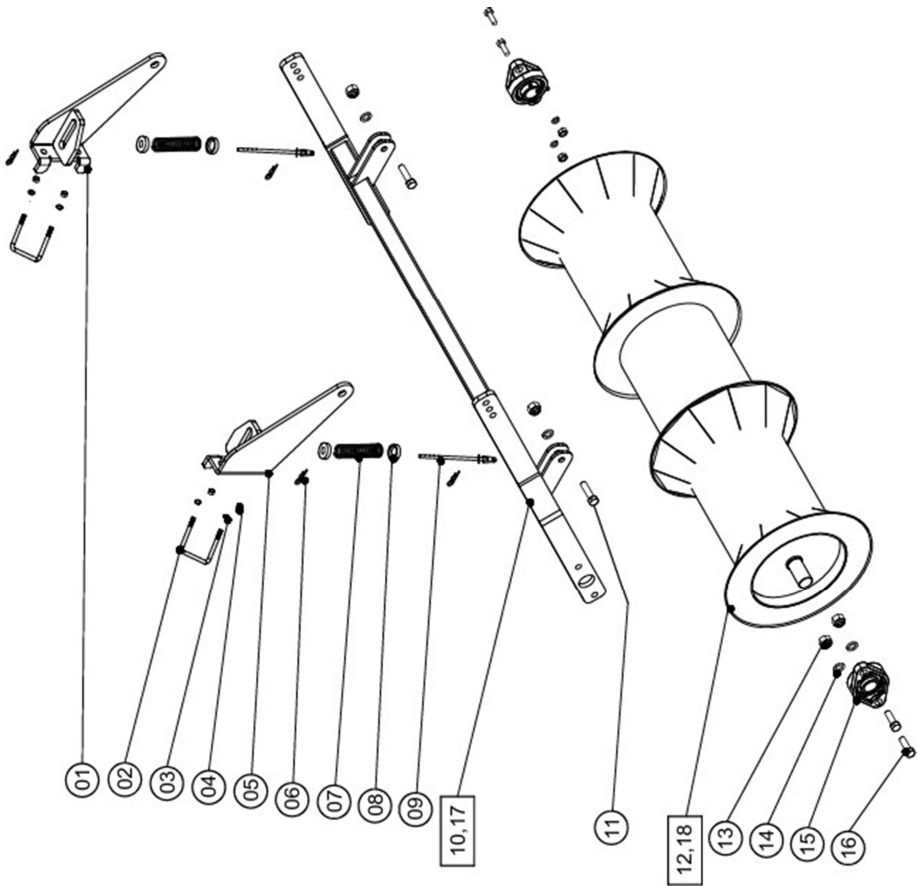

Front Roller Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	PDN FRONT ATTM. MTG. BKT. R.H. (PC)	3000010070	1
2	U BOLT M12x75x100	1000005863	2
3	SPRING WASHER 12 MM GOLDEN MFZN5 C	1000001261	6
4	NYLOCK NUT M12 X 1.75 MM SILVER	1000001242	6
5	PDN FRONT ATTM. MTG. BKT. L.H. (PC)	3000010072	1
6	R pin	1000001258	4
7	spring od 45 wire dia 5mm	1000006568	2
8	DC SPRING BOWL (PT)	3000009123	4
9	GS DC SIDE PLANNER SPRING ROD ASSY (PT)	3000009771	2
10	PDN FRONT ROLLER MTG. BKT. 50 (PC)	3000010050	1
11	HEX BOLT 12 X 45 H/T	1000001149	2
12	PDN FRONT ROLLER ASSEMBLY 50" (PC)	3000010048	1
13	Nylock nut m10	1000001241	4
14	SPRING WASHER 10 MM GOLDEN MFZN5 C	1000001260	4
15	Bearing UCFL 206	1000007018	2
16	HEX BOLT 10 X 40 MM H/TH	1000001131	4
17	PDN FRONT ROLLER MTG. BKT. 57 (PC)	3000010170	1
18	PDN FRONT ROLLER ASSEMBLY 57" (PC)	3000010171	1


Mounting Assembly

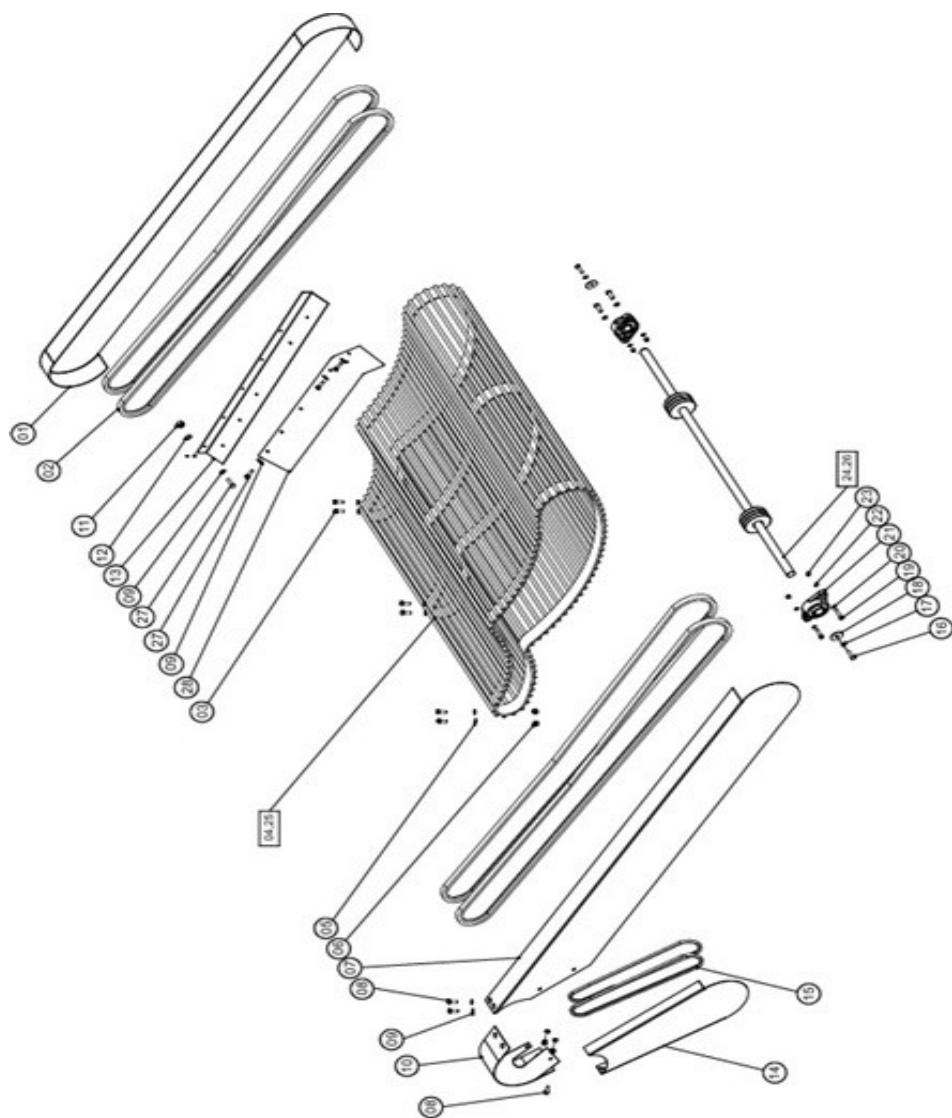

Mounting Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	PDN BELT COVER R.H. (PC)	3000010066	1
2	V BELT C 158	1000007355	4
3	HEX BOLT 6 X 30 MM F/T	1000001211	6
4	PDN CAGE ASSEMBLY 50"	3000010147	1
5	WASHER PLAIN 6 MM	1000001273	6
6	NYLOCK NUT 6 MM SILVER MFZN5 C	1000001247	6
7	PDN BELT COVER L.H. (PC)	3000010068	1
8	HEX BOLT M8 X 20 F/T GRADE 10.9	1000001218	4
9	WASHER PLAIN 8.2mm	1000001274	4
10	PDN FRONT CURVE BELT COVER	3000010148	1
11	NYLOCK NUT 8 x 1.25 MM SILVER	1000001248	16
12	Spring Washer M8	1000001266	16
13	PDN SIDE RUBBER FLAPPER SHEET	3000010311	2
14	PDN JUMPER DRIVE BELT COVER	3000010150	1
15	V BELT C55	1000007354	2
16	HEX BOLT M10 X 25 F/T 10.9	1000001128	2
17	SPRING WASHER 10 MM GOLDEN MFZN5 C	1000001260	2
18	WASHER OD 40 ID11	1000003497	2
19	HEX BOLT 12 X 35 H/T	1000001145	4
20	PLAIN WASHER 12.2	1000001269	4
21	Bearing UCFL 206	1000007018	2
22	SPRING WASHER 12 MM GOLDEN MFZN5 C	1000001261	4
23	NYLOCK NUT M12 X 1.75 MM SILVER	1000001242	4
24	PDN IDLER SHAFT ASSY 50"	3000010025	1
25	PDN CAGE ASSEMBLY 57"	3000010172	1
26	PDN IDLER SHAFT ASSY 57"	3000010173	1
27	HEX BOLT M8x25 F/T 10.9	1000001219	16
28	PDN SIDE RUBBER FLAPPER	3000010312	2

PTO Assembly

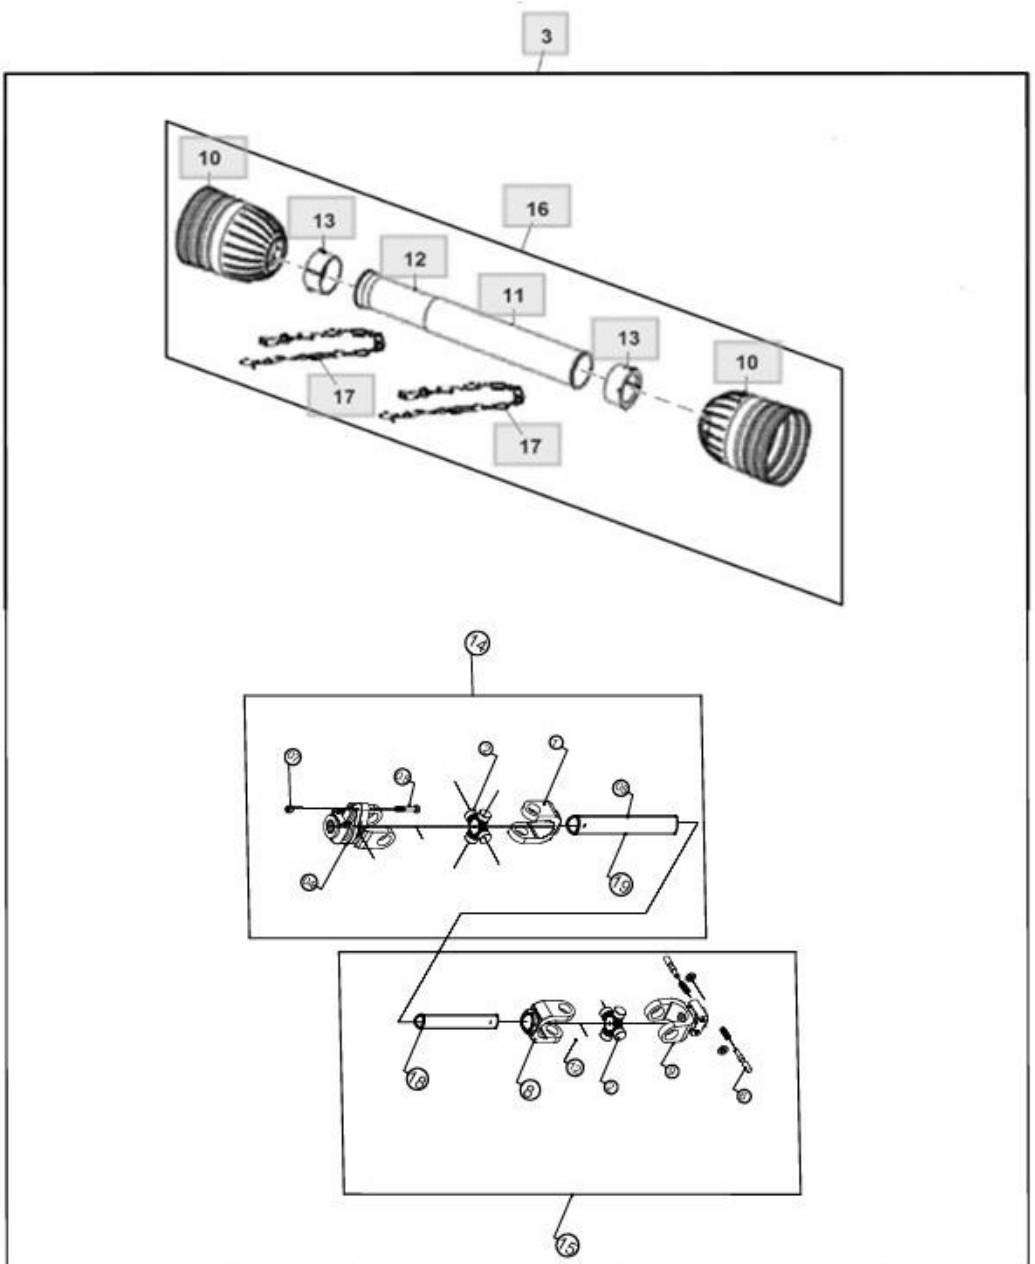

PTO Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	YOKE GEAR SIDE WITH FEMALE CAVITY	1000007535	1
2	CROSS 1210	1000000910	2
3	PTO PIPE TYPE	1000001671	1
4	SHEAR YOKE 6 SPLINE GEAR BOX SIDE	1000001011	1
5	SHEAR BOLT 10 X 65 H/T (BLACK,GRD-12.9)	1000004842	1
6	LOCK PIN DOULBE OLD	1000001257	4
7	NYLOCK NUT M10 X 1.50 MM SILVER	1000001241	4
8	YOKE TRACTOR SIDE WITH FEMALE CAVITY	1000007536	2
9	YOKE TRACTOR SIDE 6 SPLINE	1000001695	1
10	PTO OUTER COVER GS	1000007228	1
11	PTO OUTER PIPE OUTER BIG	1000007231	1
12	PTO OUTER PIPE INNER SMALL	1000007230	1
13	PTO OUTER COVER LOCKING COLLAR	1000007229	1
14	UNIVERSAL JOINT WITH SHAFT GEAR BOX	1000007232	1
15	UNIVERSAL JOINT WITH SHAFT TRACTOR	1000007233	1
16	PTO SHAFT COVER	1000001685	1
17	Mini PTO safety chain	1000006820	2
18	PTO TRIANGULAR PIPE MALE PART	1000007538	1
19	PTO TRIANGULAR PIPE FEMALE PART	1000007537	1

Warranty Policy

Farmworld products are warranted to be free of defects in material or workmanship. Farmworld has traditionally followed a generous warranty policy as below:

1. Warranty Period:

Farmworld gives 12 months warranty for export, for the Farmworld products.

2. Warranty Conditions:

2.1 The Company's/seller liability will be limited to the repair or replacement of the part, proven defective within the period of 12 month (for export only) from the date of delivery of new product.

2.2 Parts under warranty policy:

- 2.2.1 Gearbox Housing, Drive shaft, Pinion shaft Transmission shaft Gears, Sprockets, etc.
- 2.2.2 Main frame, 3-Point Linkage.
- 2.2.3 Transmission parts, Draw bar, Hook, Latch lock, U-clamps.
- 2.2.4 Hydraulic Cylinder, Ring Hitch, Spindle, Bearings, Bearing hub.
- 2.2.5 Tines, Furrow, Turn-buckle, Auger, Disc (Only Breakage).
- 2.2.6 Peeling of Paint, Welding Part Failure.

2.3 The parts/materials that are not covered by the warranty are as below:

- 2.3.1 All wearable parts blades, bar point, Shoe, Shovels, Bearings etc.
- 2.3.2 Oil seals, Gaskets and Gearbox, Side Chain/Gear drive oils, Air breather.
- 2.3.3 Reflector or indicator, stickers.
- 2.3.4 All fasteners nut & bolt, pins, Hard Liners etc.
- 2.3.5 Wires, Hose Pipes.
- 2.3.6 P.T.O shaft and its parts.

2.4 The claim due to below circumstances will not apply:

- 2.4.1 Accident/wrong application / misuse / wrong handling / improper maintenance.
- 2.4.2 Repair or replacement improperly done by person other than company's authorized representative.
- 2.4.3 Modification in product / part without consulting with the Manufacturer.
- 2.4.4 Damage from the external influence as environment condition, heavy stones, fires disaster and any act of God.
- 2.4.5 Usage of the product with replacement part that has not been manufactured or supplied by the Company will nullify this warranty claim.

3. Compensation Policy:

- 3.1 The warranty is automatically terminate on expiry of 12 months from date of delivery, even if the implements may not be in use for any time during the warranty tenure for any reason.
- 3.2 Company's employees or its Authorized representatives have no authority to vary the warranty terms/period.
- 3.3 Company will not cover any delivery costs for claim parts.

The warranty shall not cover or include any duty or taxes incurred by the Buyer in relation to the product under warranty policy. All proceeding relating to any dispute arising between the company and the Buyer on the liability of the company under this warranty shall be taken in civil court having JURISDICTION Actions.



Honour Your Trust

Warranty Registration Form

(Customer Copy)

CUSTOMER'S NAME:	
ADDRESS :	
CONTACT NO. : (1)	(2).
SERIAL NO. :	MACHINE MODEL :
INVOICE NO. :	TRACTOR MODEL :
DATE OF SALE :	HP :
EXPLAINED THE FOLLOWING:	YES / NO
LUBRICATION REQUIRED PARTS	
ADJUSTMENT AND CHECKING REQUIRED PARTS	
ROUTINE MAINTENANCE TIPS AND SCHEDULE	
WARRANTY / TERMS IN DETAIL	
SPARES CATALOGUE & RECOGNISING PARTS EASILY	
EMERGENCY CONTACT NUMBER OF DEALER PERSON	
INSTALLATION OF MACHINE AND TRAINING	
RECEIVED MACHINE WITH:	
NO SHORTAGES	
NO DAMAGES	
ALL ITEMS IN TOOL KIT	
CORRECTED PROPELLER SHAFT (PROPERLY LENGTH CUT)	
I UNDERSTOOD COMPLETE OPERATING PROCEDURE AND RECEIVED MACHINE IN PERFECT CONDITION WITH PROPER INSTALLATION	
CUSTOMER'S SIGNATURE	DEALER SIGNATURE WITH SEAL



Honour Your Trust



Honour Your Trust



Honour Your Trust

Warranty Registration Form

(Dealer Copy)

CUSTOMER'S NAME:	
ADDRESS :	
CONTACT NO. : (1)	(2).
SERIAL NO. :	MACHINE MODEL :
INVOICE NO. :	TRACTOR MODEL :
DATE OF SALE :	HP :
EXPLAINED THE FOLLOWING:	YES / NO
LUBRICATION REQUIRED PARTS	
ADJUSTMENT AND CHECKING REQUIRED PARTS	
ROUTINE MAINTENANCE TIPS AND SCHEDULE	
WARRANTY / TERMS IN DETAIL	
SPARES CATALOGUE & RECOGNISING PARTS EASILY	
EMERGENCY CONTACT NUMBER OF DEALER PERSON	
INSTALLATION OF MACHINE AND TRAINING	
RECEIVED MACHINE WITH:	
NO SHORTAGES	
NO DAMAGES	
ALL ITEMS IN TOOL KIT	
CORRECTED PROPELLER SHAFT (PROPERLY LENGTH CUT)	
I UNDERSTOOD COMPLETE OPERATING PROCEDURE AND RECEIVED MACHINE IN PERFECT CONDITION WITH PROPER INSTALLATION	
CUSTOMER'S SIGNATURE	DEALER SIGNATURE WITH SEAL



Honour Your Trust



Honour Your Trust



Warranty Registration Form

(Manufacturer Copy)

CUSTOMER'S NAME:	
ADDRESS :	
CONTACT NO. : (1)	(2).
SERIAL NO. :	MACHINE MODEL :
INVOICE NO. :	TRACTOR MODEL :
DATE OF SALE :	HP :
EXPLAINED THE FOLLOWING:	YES / NO
LUBRICATION REQUIRED PARTS	
ADJUSTMENT AND CHECKING REQUIRED PARTS	
ROUTINE MAINTENANCE TIPS AND SCHEDULE	
WARRANTY / TERMS IN DETAIL	
SPARES CATALOGUE & RECOGNISING PARTS EASILY	
EMERGENCY CONTACT NUMBER OF DEALER PERSON	
INSTALLATION OF MACHINE AND TRAINING	
RECEIVED MACHINE WITH:	
NO SHORTAGES	
NO DAMAGES	
ALL ITEMS IN TOOL KIT	
CORRECTED PROPELLER SHAFT (PROPERLY LENGTH CUT)	
I UNDERSTOOD COMPLETE OPERATING PROCEDURE AND RECEIVED MACHINE IN PERFECT CONDITION WITH PROPER INSTALLATION	
CUSTOMER'S SIGNATURE	DEALER SIGNATURE WITH SEAL



Honour Your Trust



Honour Your Trust



Honour Your Trust



Honour Your Trust

FARMWORLD AGROTECH PRIVATE LIMITED

Registered Address:- Plot No. 373, Road-U, Khirasara Industrial Estate, Khirasara,

Taluka – Lodhika, District – Rajkot, 360021 (Gujarat) India.

Email: customercare@farmworld.in | Website: www.farmworld.in