



Honour Your Trust

POTATO PLANTER USER MANUAL



Honour Your Trust



Honour Your Trust

Index

Sr. No.	Contents	Page No.
1.	Introduction	1
2.	Technical Specifications	2
3.	Assembly Parts	3
4.	Safety Instruction	6
5.	Do's and Don'ts	8
6.	Operating Instructions	9
7.	Instruction for Varying Gaps	10
8.	Part List	11
9.	Warranty Policy	48



Honour Your Trust

Introduction

Potato planter is used for sowing the seed of potatoes in the ridge or bed. Farmworld Potato Planter is fully Automatic Potato Planter No labor is required for sowing to ridge distance the seed. The Farmworld Potato planter can sow from Diameter 30mm to 95 mm of the mother seed. The Farmworld Potato Planter's ridge can be adjusted as per customer's requirement, it may be 24" to 32".

The Farmworld Potato planter is power driven by wheels to the whole mechanism. The wheel can also help to stabilize the position of machine no need to fix the position of machine by tractor hydraulic lift.

This machine is Eco friendly machine to environment and farmer also. This machine is designed as per farming of potatoes and can be maintained easily.

Technical Specifications

Potato Planter is designed to meet the needs of Farmers. All Models are available with tool kit and parking stand.

Sr. No.	DESCRIPTION	Specification
1	Model	FW Potato Planter 02
2	Drive Type	Wheel Drive
3	Wheel Size	02 Pneumatic Wheel (6.00-16 8PR)
4	No. & Type of Bearing Power gear off	UCF-208
5	No. of Hopper assembly	02
6	Storage Capacity of Hopper	240 Kgs
7	Capacity of Seed Sowing	01 acre/02 hours
8	Capacity of sowing size of seed	Min. 30mm Dia. / Max. 70mm Dia.
9	Potato Planter Weight	610 Kgs
10	Chain Size for Main Power	5/8" / 7/32" Chain Simplex
11	For Vibration Roller	3/8" x 7/32" Chain Simplex
12	For Joint of Hopper	3/8" x 7/32" Chain Simplex
13	Bearing	Roller Bearing 6205zz, 6200 2RS, UCP 208, UCF 204, UCFL 205
14	Cam	Cam can be used to reduce the blockage of the seed by compression in travelling
15	No. of Cam System	2No. Of Cam System
16	Type of Cam System	Reciprocating Cam

Assembly Parts


1. BELT ASSEMBLY

The belt is equipped with steel bowl for tubers of a diameter from 25 to 35 mm. For lower diameter there is a plastic reduction



2. UPPER ROLLER


The upper roller supported by side adjustment assembly which gives better adherence to the belt. That permit to eliminate possible skids which can cause some faults during sowing. Upper Roller is shown below

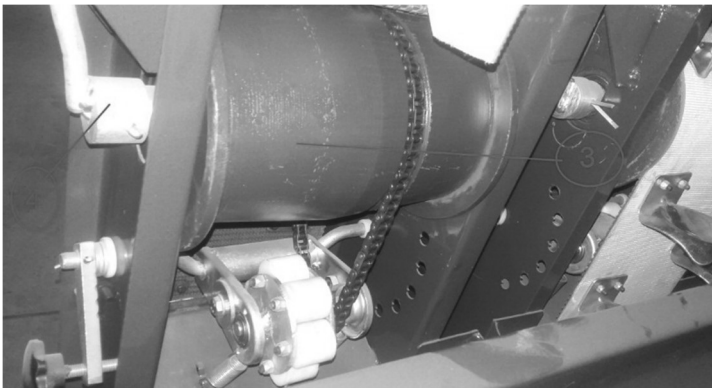

Assembly Parts


3. Lower Roller

The lower roller has biconical shape. This shape prevent the accumulation of extraneous material that can damage the belt.

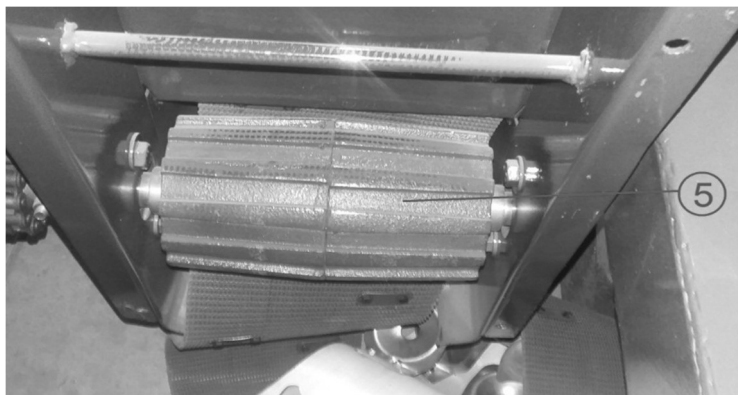

4. Mechanical Vibrator


The mechanical vibrator with small wheels, situated behind the belt, gives a regular and constant vibration that prevent the loading of more tubers on one bowl.

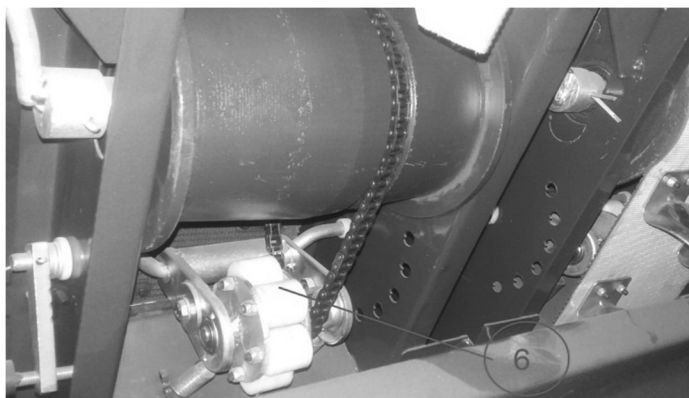

Assembly Parts


5. Front Power Joint

The front power joint is very simple to handle and permit to get the desired distance between tubers in short time. There are 12 positions to choose.

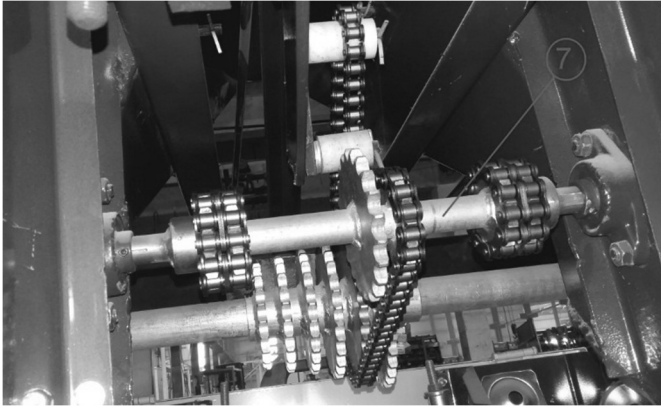

6. Front Liner Assembly

The Function of front liner is marking of ridges and depth adjustment of seeds.

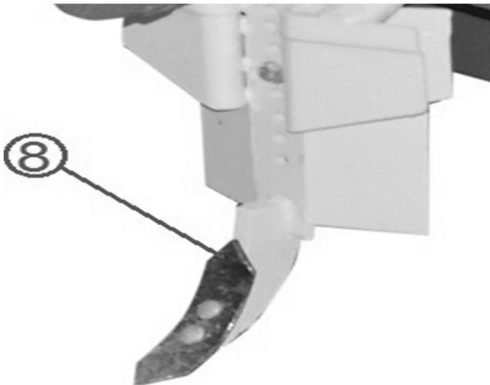

Safety Instructions

Maintenance Safety:

1. Follow all the operating maintenance and safety information in the manual.
2. Support the machine with blocks or safety stands when working beneath it.
3. Follow good work shop practices:
 - Keep service area clean and dry.
 - Use adequate light for the job in hand.
4. Use tools, jacks and hoists of sufficient capacity for the job.
5. Make sure all guards are in place and properly secured when maintenance work is completed.
6. Never wear loose fitting, baggy or frayed clothing when working around or on any of the drive system components.
7. Keep hands, feet, hair and clothing away from moving or rotating parts.
8. Clear the area of bystanders, especially small children, when carrying out maintenance and repairs or making any adjustments

Transport Safety:

1. Review transport safety instructions in tractor manual before moving.
2. Always travel at a safe speed
3. Always use hazard warning flashers on tractor when transporting unless prohibited by law.
4. Do not exceed speed 20km/h during transport.

Safety Instructions

General Safety:

1. First aid kit should be available and learn to use the same in case of emergency.
2. Fire extinguisher should be available and learn to use the same in case of emergency.
3. Wear appropriate protective equipment's. This list includes but not limited to :
 - a) A hard hat.
 - b) Protective shoes with slip resistant soles.
 - c) Protective glasses and goggles.
 - d) Heavy Gloves.
 - e) Hearing Protection.
 - f) Respirator or filter mask.
 - g) Wear suitable ear protection for prolonged exposure to excessive noise.

Storage Safety:

1. Store the unit in an area away from human activity.
2. Do not permit children to play on or around the stored machine.
3. Support frame should be on stands and blocks to provide a secure base.
4. Thoroughly wash the machine and apply rust prevent oil, when not in use for a long time.

Safety Signs:

1. Keep safety signs clean and legible at all time.
2. Replace safety signs that are missing.
3. Install safety features on repaired parts as earlier.

Do's and Don'ts

1. Check all parts of the machine every day whenever you intend to put it in the field.
2. Make sure that parking stand is up while operating in field.
3. Check and tight all bolts and nuts daily.
4. Beware of bystanders while operating the Potato Planter.
5. Do not allow anyone to stand or sit on the implement while it is transported or operated.
6. Do not leave the tractor seat until the engine is off, brakes locked, and the Potato Planter lowered to the ground.
7. Do not allow children to play in field or to sit on tractor while operation.
8. Always be sure that any new operator should has thoroughly understanding of the implement and should follow the safety precautions.
9. Keep your machine in good working condition. Always contact your dealer for repairs.
10. Never attempt to adjust or perform maintenance on this machine while it is being operated.

Operating Instructions


1. Read and understand the operator's manual and all safety signs before operating, servicing, adjusting, repairing and unplugging.
2. Install and secure all guards and shields before starting or operating.
3. Keep hands, feet, hair and clothing away from moving parts.
4. Lower implement to the ground, place all controls in neutral, stop engine, engage parking brake, remove ignition key. Ensure all moving parts should stop before service, repair, and any adjustment, connect or disconnect.
5. Put all tractor and machine controls in neutral position before starting.
6. Never start or operate the machine unless you are not sitting on tractor seat.
7. Do not operate machine inside a building unless there is adequate ventilation.
8. Do not put hands or feet under machine while tractor engine or machine is running.
9. Always know what you are planting. Never operate Planter in an area that has hidden obstacles. Remove sticks, stone, roots, wire and other objects from working area before starting.
10. Clean reflectors, SMV emblem and lights before transporting.
11. Use hazard flashers on tractor while transporting.
12. Review safety instructions with all operators annually or seasonally.

Safety Precautions:

1. While mounting Potato Planter to the tractor ensure that there should no downward pressure from the tractor hydraulic system on the Potato Planter, also do not add up any external weight on Potato Planter.
2. Adjust the tractor top link length and attach to top most in such a way that the main frame of Potato Planter remains parallel to ground.
3. Lower implement to the ground, place all controls in neutral, stop engine, engage parking brake, remove ignition key. Ensure all moving Parts should stop before service, repair, and any adjustment, connect or disconnect.
4. Keep hands, feet, hair and clothing away from moving, rotating parts. Do not wear loose clothes as entanglement with rotating parts may cause serious injury or even death.
5. Do not make sharp turn while Planter is in the ground, lower position or working.
6. Do not carry passengers while operating machines.

Instructions for Varying Gap between Potatoes


SPROCKET ARRANGEMENT

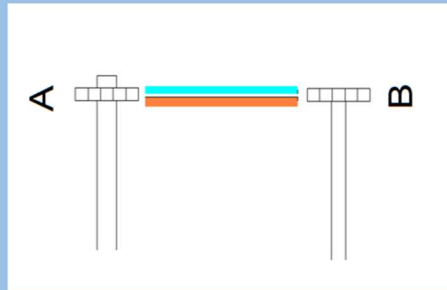

SEEDING DISTANCE ADJUSTMENT

WHEEL	SPROCKET A - B	STRAIGHT		ZIG-ZAG	
		INCHES		INCHES	
21	21 - 13	6	6	12	12
	23 - 13	5.5	5.5	11	11
	25 - 13	5	5	10	10
	28 - 13	4.5	4.5	9	9
	31 - 13	4	4	8	8
	34 - 13	3	3	6	6
	21 - 18	8	8	16	16
	23 - 18	7.5	7.5	15	15
	25 - 18	7	7	14	14
	28 - 18	6.5	6.5	13	13
28	31 - 18	6	6	12	12
	34 - 18	5.5	5.5	11	11


Chassis Assembly

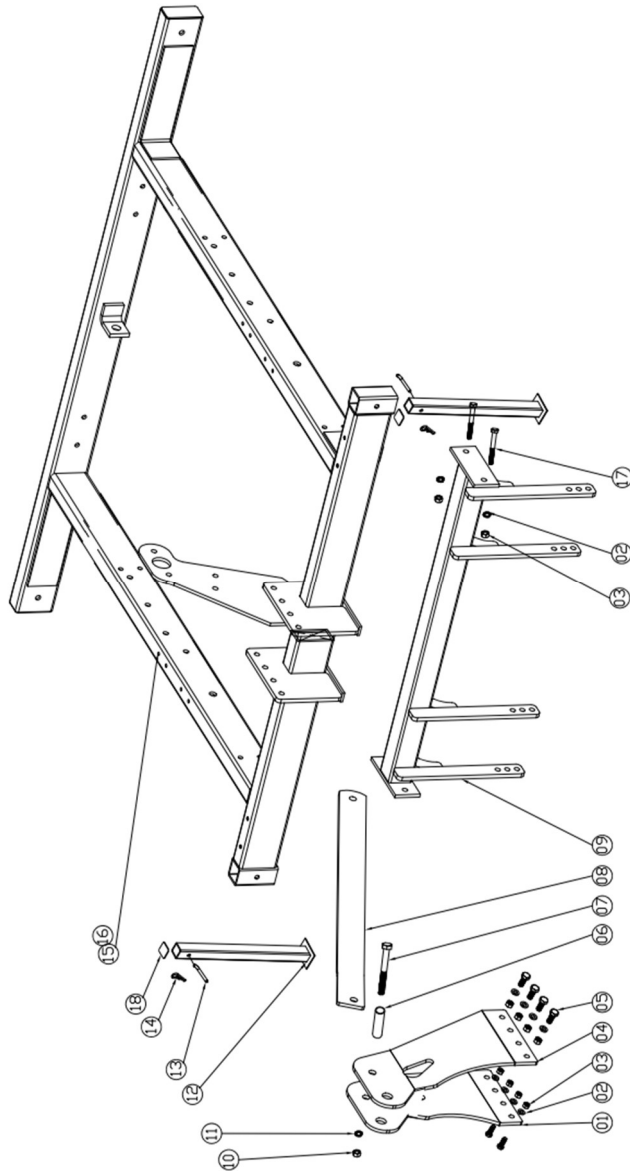

Chassis Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	GS PP HITCH SIDE PLATE RH PT	3000009892	4
2	SPRING WASHER 12 MM GOLDEN MFZN5 C	1000001261	4
3	NYLOCK NUT M12 X 1.75 MM SILVER	1000001242	12
4	GS PP HITCH SIDE PLATE LH PT	3000009891	12
5	Hex Bolt 12x40	1000001147	2
6	BUSH 58 mm	1000000903	1
7	HEX BOLT M16 X 100 H/TH	1000001169	2
8	GS PP HITCH SUPPORT STRIP	3000009894	2
9	GS PP SQ PIPE ASSY	3000009893	1
10	NYLOCK NUT M16 X 2 MM SILVER	1000001244	1
11	SPRING WASHER 16 MM GOLDEN MFZN5 C	1000001263	1
12	GS PP STAND PIPE ASSEMBLY (PT)	3000009852	2
13	Stand pin L pin	1000002429	2
14	R pin	1000001258	2
15	GS CHASSIS ASSY	3000009854	1
16	GS PP CHASSIS ASSY ZIG ZAG	3000009914	1
17	HEX BOLT M12 X 75 H/TH	1000001157	4
18	PVC CAP FOR SQU PIPE 38 X 38 X 2	1000002356	2


Zig Zag Liner Assembly

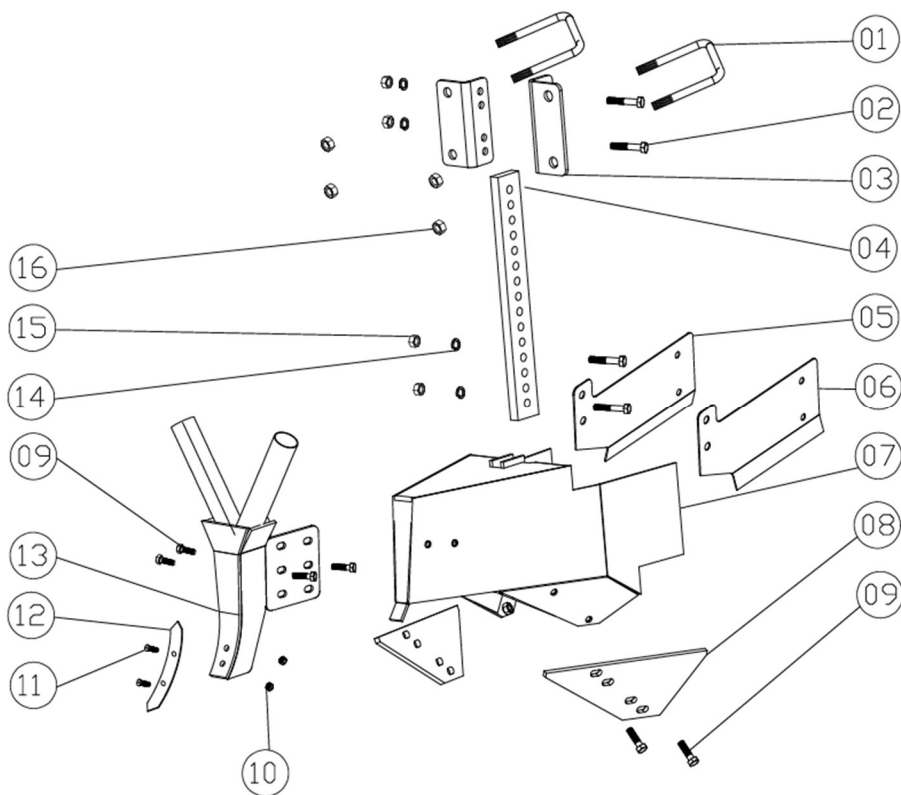

Zig Zag Liner Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	U BOLT 18 X 100 X 100 MM	1000002448	4
2	HEX BOLT 12 X 45 H/T	1000001149	8
3	GS PP LINER MTG BRACKET (PT)	3000009915	4
4	GS DC LINER STRIP 16MM (PT)	3000009742	2
5	GS DC LINER CENTRAL PARTITION RH (PT)	3000009745	2
6	GS DC LINER CENTRAL PARTITION LH (PT)	3000009744	2
7	GS LINER ZIG-ZAG ASSEMBLY(PT)	3000009711	2
8	GS DC LINER BLADE (PT)	3000009743	4
9	HEX BOLT M10 X 25 F/T 10.9	1000001128	16
10	NYLOCK NUT M8 SILVER 10 MFZN5 C	1000001248	4
11	CARRY BOLT M8X35 SILVER	1000002461	4
12	P P SHOVEL	1000001589	2
13	GS DC LINER PIPE HOLDING ASSY (PT)	3000009746	2
14	SPRING WASHER 12 MM GOLDEN MFZN5 C	1000001261	2
15	NYLOCK NUT M12 X 1.75 MM SILVER	1000001242	8
16	HEX NUT M18	1000001230	8
17	GS DC ZIG ZAG LINER COMPLETE ASSY	3000009863	


Liner Assembly

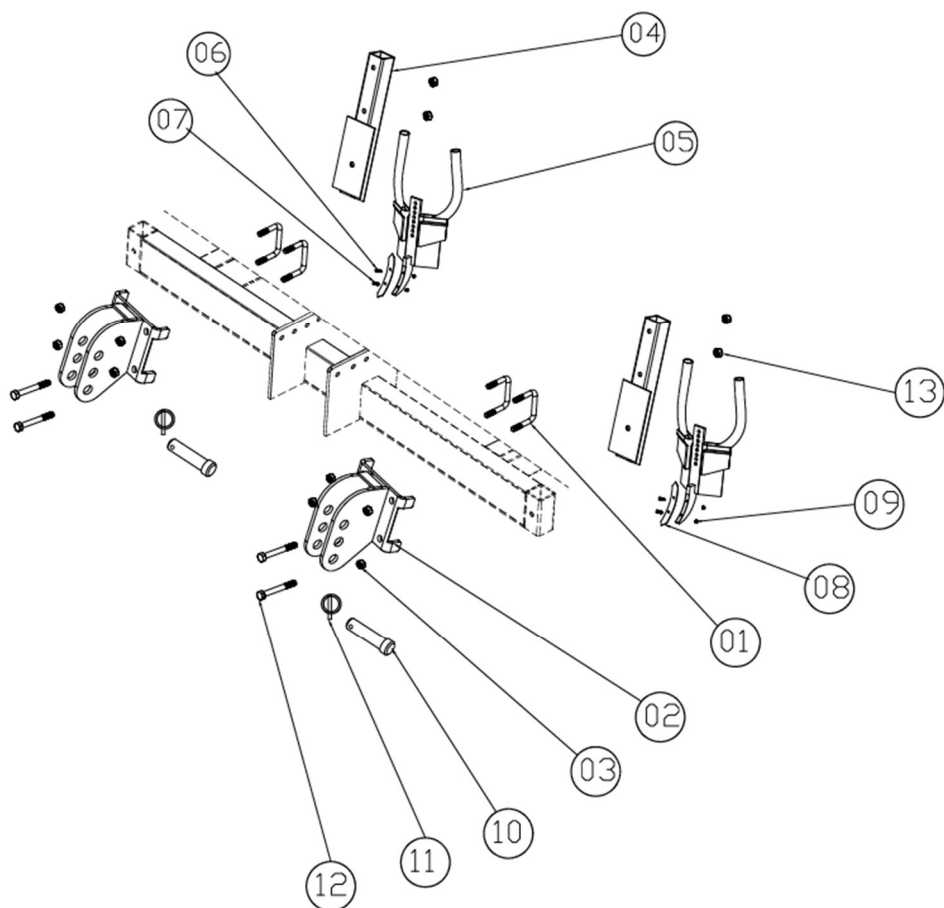

Liner Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	U BOLT 18 X 100 X 100 MM	1000002448	4
2	GS LOWER LINKAGE ASSEMBLY PAINTED	3000009866	1
3	HEX NUT M18	1000001230	8
4	GS PP FRONT LINER SQ PIPE ASSY PT	3000009895	2
5	GS PP LINER ASSY PT	3000009896	2
6	CARRY BOLT M8X50 SILVER	1000002462	2
7	CARRY BOLT M8X35 SILVER	1000002461	2
8	P P SHOVEL	1000001589	2
9	NYLOCK NUT M8 SILVER 10 MFZN5 C	1000001248	4
10	HITCH PIN 28 MM GOLDEN	1000002311	2
11	LINCH PIN 10 X 45	1000002331	2
12	ALLEN BOLT 10 X 130	1000001031	4
13	NYLOCK NUT M10 X 1.50 MM SILVER	1000001241	4
4-9,12,13	GS PP FRONT LINER PAINTED	3000009867	1


Ridger Assembly

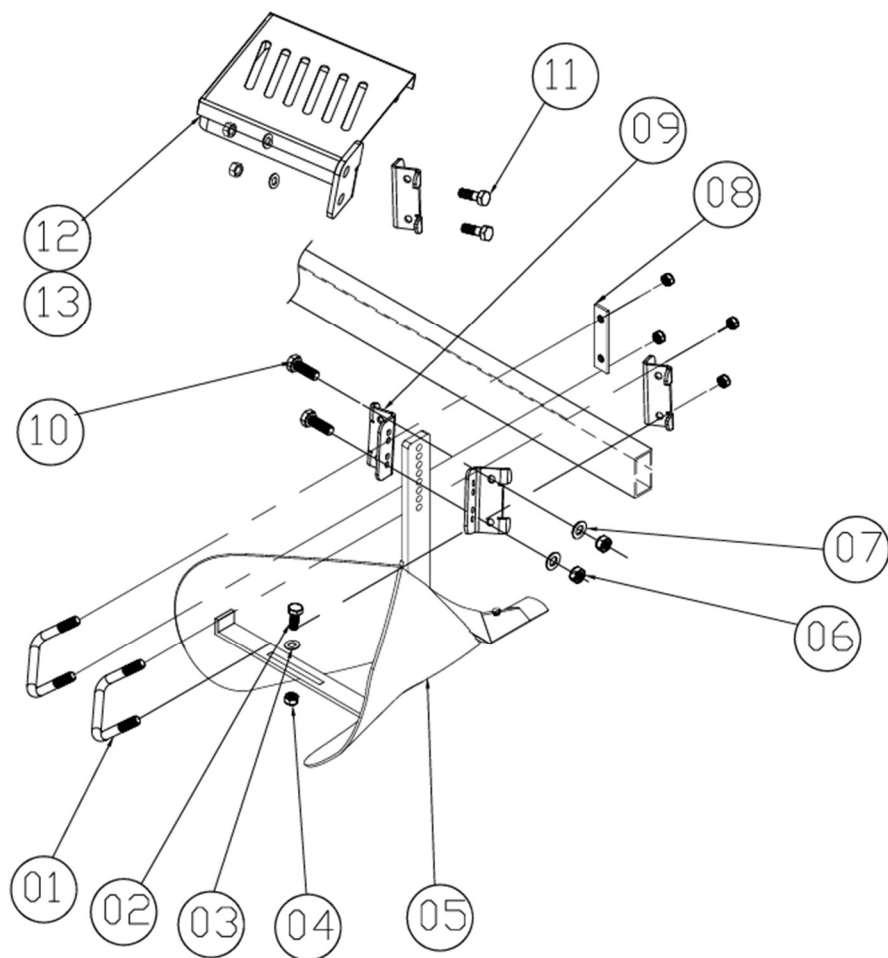

Ridger Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	U BOLT 18 X 100 X 100 MM	1000002448	2
2	HEX BOLT 10 x 30 F/TH	1000001129	1
3	SPRING WASHER 10 MM GOLDEN MFZN5 C	1000001260	1
4	NYLOCK NUT M10 X 1.50 MM SILVER	1000001241	1
5	P P RIDGER ASSEMBLY COMPLETE PAINTED	3000002951	1
6	NYLOCK NUT M16 X 2 MM SILVER	1000001244	2
7	SPRING WASHER 16 MM GOLDEN MFZN5 C	1000001263	2
8	P P STRIP 40 X 12 X 180	3000002871	1
9	GS DC REAR RIDGER MTG ANGLE (PT)	3000009729	1
10	Hex bolt 16 x 60 H/T	1000001190	2
11	HEX BOLT 16x35 H/T	1000001181	2
12	GS DC SIDE FOOT REST ASSY RH (PT)	3000009779	1
13	GS DC SIDE FOOT REST ASSY LH (PT)	3000009780	1
1-10	GS P P RIDGER ASSEMBLY COMPLETE (PT)	3000009723	3


Tyre Assembly

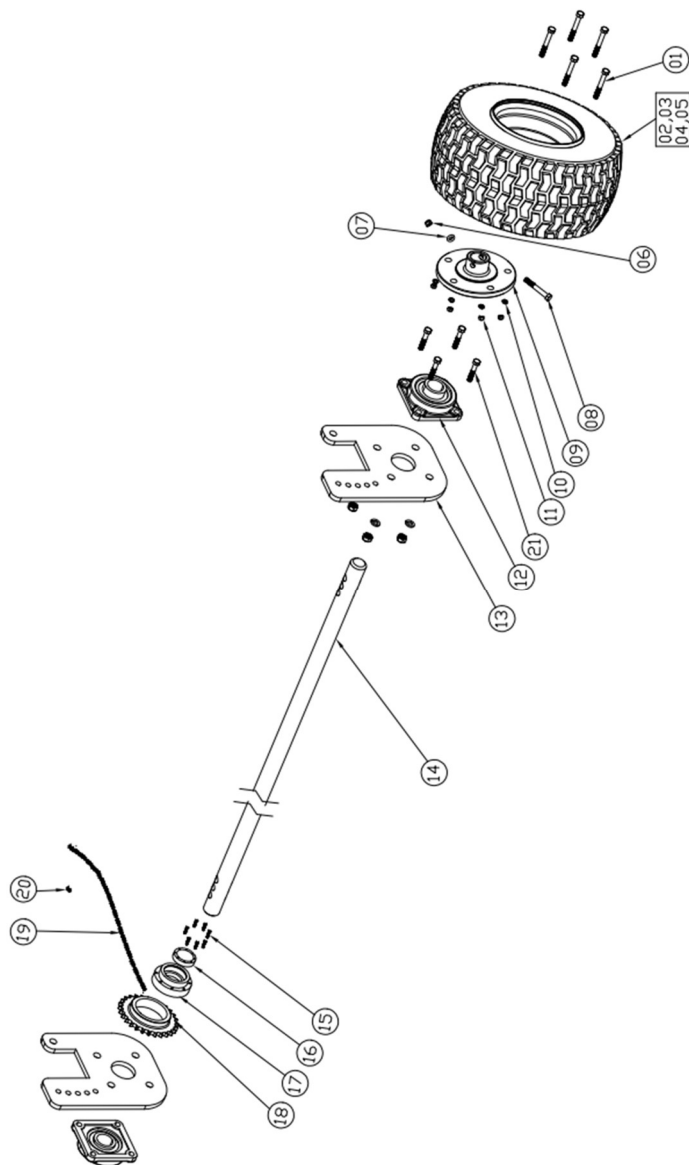


Tyre Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	HEX BOLT 16 X 55 MM	1000001188	10
2	TYRE TUBE RIM 6.00-16 ASSY	3000003246	2
3	P P TYRE 6 00 X 16	1000001607	2
4	P P RIM 6 00 X 16 PAINTED	3000003059	2
5	P P TUBE 6 00 X 16	1000001604	2
6	NYLOCK NUT M12 X 1.75 MM SILVER	1000001242	2
7	SPRING WASHER 12 MM GOLDEN MFZN5 C	1000001261	2
8	HEX BOLT 12 X 80 H/T	1000001158	2
9	GS RIM HUB 6.00 X 16 (PT)	3000009897	2
10	SPRING WASHER 16 MM GOLDEN MFZN5 C	1000001263	20
11	NYLOCK NUT M16 X 2MM SILVER	1000001244	18
12	BEARING 208 UCF	1000000771	2
13	GS PP TYRE PLATE	3000009899	2
14	P P AXLE SHAFT 40	3000003422	1
15	ALLEN BOLT 8X40 F/T	1000001064	7
16	MALE COLLET FOR 40 MM SHAFT	1000001433	1
17	FEMALE COLLET	1000001418	1
18	P P SPROCKET Z-28 COLLET TYPE	1000006747	1
19	P P CHAIN SIMPLEX 5/8 DIAMOND 48 LINKS	300009845	1
20	CHAIN LOCK 5/8 FULL	1000001623	1
21	HEX BOLT 16 X 45 H/T	1000001185	8

Belt Assembly

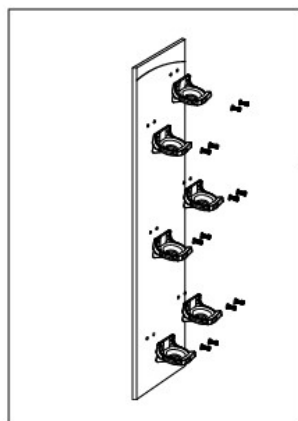

03

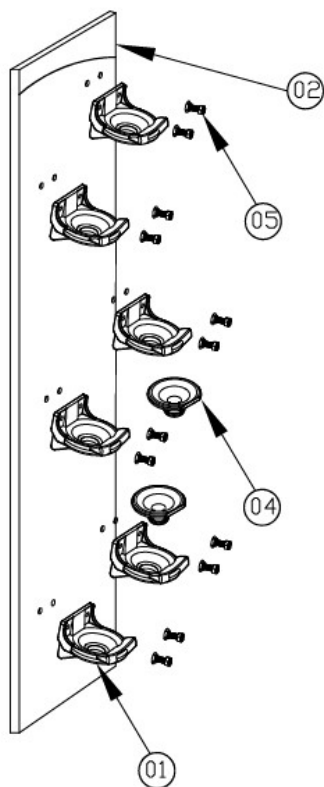


Belt Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	P P PLASTIC BOWL	1000005696	36
2	P P CONVEYOR BELT ENDLESS L-2320	1000006833	1
3	DC BELT ASSEMBLY 2025	3000010949	1
4	P P ADOPTER NYLON DIA 70 MM	1000001503	36
5	BELT BUCKET BOLT 1/4	1000007877	36
6	PP GS CUT POTATO BOWL GUJRAT	1000007504	36
7	BELT ASSEMBLY JOINT TYPE 2320MM FOR PP	3000003251	1

Upper Hopper Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	PP UPPER HOPPER SIDE PLATE RH	3000003110	14
2	GS DC SHIELD PROTECTION 2MM (PT)	3000009781	14
3	Carry Bolt M10X20 F/T SILVER	1000007032	14
4	GS PP CENTRE COVER (PT)	3000009900	1
5	CARRY BOLT M10X25 SILVER	1000006716	2
6	P P UPPER HOPPER BACK PLATE	3000003108	1
7	WASHER PLAIN 10 MM GOLDEN MFZN5 C	1000001268	30
8	NYLOCK NUT M10 X 1.50 MM SILVER	1000001241	42
9	S D PVC COVER BOLT M10X50 KNOB STAR LATU	1000002684	6
10	P P ROD DIA 12MM	3000002879	2
11	PP UPPER HOPPER SIDE PLATE LH	3000002952	1
12	DC UPPER HOPPER FRONT PLATE	3000003109	1
1,3,6-8,11,12	GS DC UPPER HOPPER ASSEMBLY (PT)	3000009869	1
14	NYLOCK NUT M8 SILVER 10 MFZN5 C	1000001248	6
15	WASHER PLAIN 8 MM GOLDEN MFZN5 C	1000001274	6
16	GS DC SHUTTER (PT)	3000009753	2
17	PP RUBBER FLAPPER	1000003513	2
18	HEX BOLT M8 X 20 F/T GRADE 10.9	1000001218	6
19	R PIN 4 X 76 SILVER 8	1000001258	2
20	GS P P UPPER FRONT PLATE 32	3000009918	1
21	GS P P UPPER HOPPER BACK PLATE 32	3000009917	1


Lower Hopper Assembly

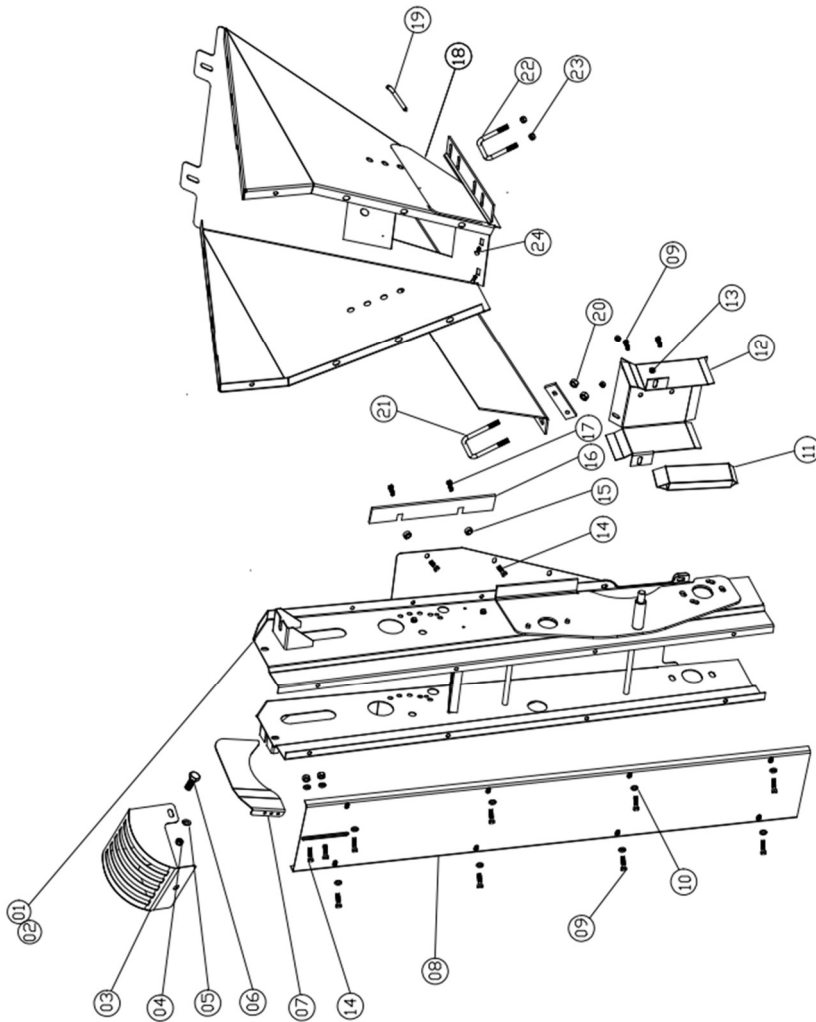

Lower Hopper Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	GS PP FRONT ARM ASSY LH 2025 (PT)	3000010963	1
2	GS PP FRONT ARM ASSY RH 2025 (PT)	3000010964	1
3	GS UPPER CURVE ASSEMBLY(PT)	3000009714	1
4	NYLOCK NUT M10 X 1.50 MM SILVER	1000001241	2
5	WASHER PLAIN 10 MM GOLDEN MFZN5 C	1000001268	2
6	HEX BOLT 10 x 15 F/T	1000006017	2
7	GS DC UPPER PARTITION PT	3000009786	1
8	GS DC BELT COVER (PT)	3000009755	1
9	HEX BOLT M8 X 12 F/T GRADE 10.9	1000001217	10
10	WASHER PLAIN 8 MM GOLDEN MFZN5 C	1000001274	10
11	GS LOWER BOWL PARTITION ASSY PC	3000009756	1
12	GS LOWER BOWL PC	3000009754	1
13	NYLOCK NUT M8	1000001248	2
14	HEX BOLT M8 X 20 F/T GRADE 10.9	1000001218	2
15	P D SPACER OD 16 ID 11	1000003560	8
16	GS PP BELT GUIDE STRIP (PT)	3000009775	4
17	HEX BOLT M8 X 30 F/TH GOLDEN	1000001220	4
18	GS PP LOWER HOPPER (PT)	3000009868	2
19	Stand pin L pin	1000002429	2
20	HEX NUT M14 X 1.5	1000001228	2
21	U BOLT 14 X 50 X 150 MM	1000001007	2
22	S D U BOLT 12x60x100	1000002495	2
23	NYLOCK NUT M12 X 1.75 MM SILVER	1000001242	2
24	CARRY BOLT M8X1.25X15 F/T SILVER 10.9	1000006719	2


Upper Roller Assembly

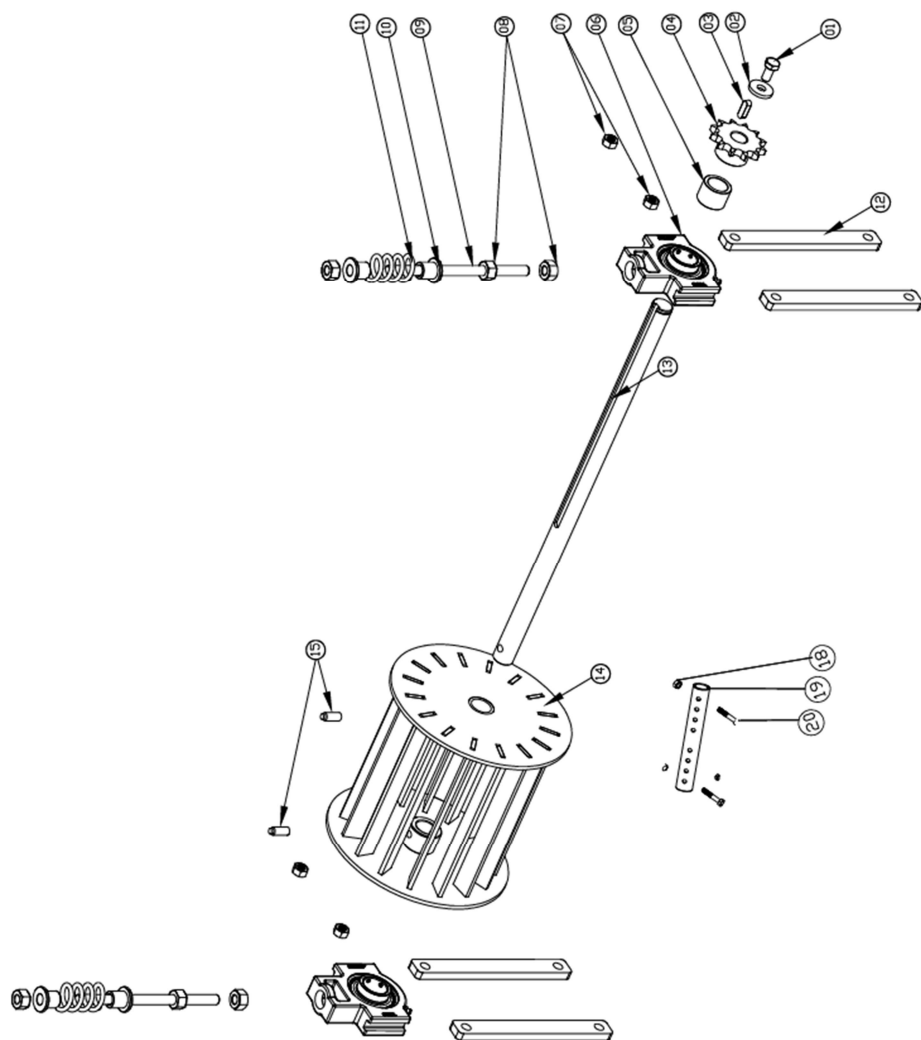

Upper Roller Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	HEX BOLT M10X20	1000001127	1
2	WASHER ID 11 OD 30 THK. 4mm	3000010952	1
3	R B PARALLEL KEY 8x7x23	1000001933	1
4	SPRKT 13 TEETH 5/8 W KNOB	1000007038	1
5	SPACER L-17	1000007088	1
6	BEARING UCT-205	1000007775	4
7	NYLOCK NUT M10X1.5	1000001241	16
8	NYLOCK NUT M12X1.75	1000001242	12
9	THREADED ROD M12X200X1.75	3000010953	4
10	P P BUSH FOR UPPER ROLLOR TENSION	1000001516	8
11	SPRING FOR CONVEYOR BELT 2025	1000007879	4
12	RAILING FOR UCT BEARING	3000010880	8
13	SHAFT FOR UPPER ROLLER LH	3000010909	1
14	UPPER ROLLER	3000010920	2
15	GRUB SCREW M10X1.5	1000007880	4
16	SPRKT 18 TEETH 5/8 W KNOB	1000007039	1
17	SHAFT FOR UPPER ROLLER RH	3000010908	1
18	NYLOCK NUT M8	1000001248	2
19	GS DC MIDDLE JOINT PT	3000009774	1
20	HEX BOLT M8X50 H/T 10.9	1000006139	2


Lower Roller Assembly

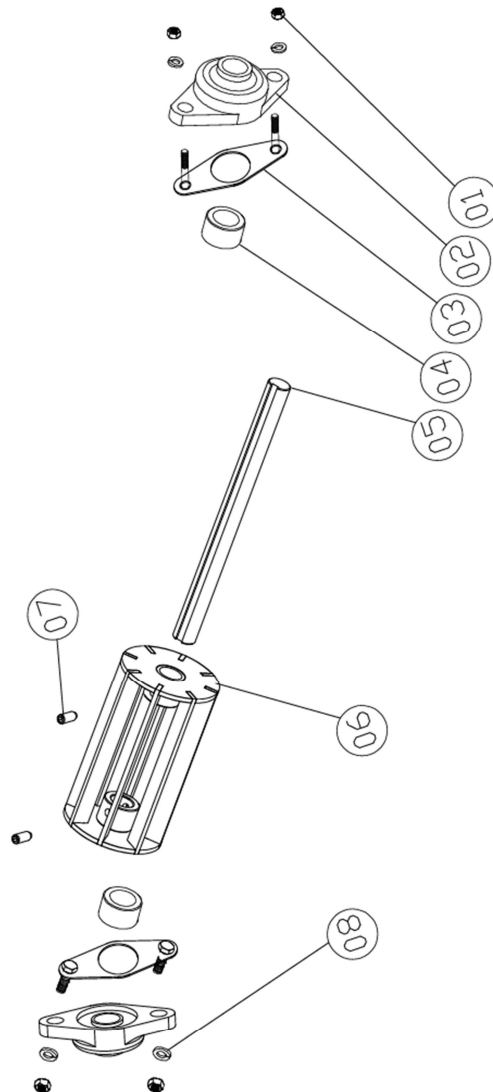

Lower Roller Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	NYLOCK NUT M10 X 1.50	1000001241	8
2	BEARING UCFL 205	1000000860	4
3	GS DC LOWER ROLLER LOCKING STRIP (PT)	3000009778	4
4	P P BUSH LOWER ROLLOR SPACER L-34	1000001517	4
5	SHAFT FOR LOWER ROLLER	1000007085	2
6	LOWER ROLLER	3000010850	2
7	GRUB SCREW M10X1.5	1000007880	4
8	WASHER PLAIN 10 MM GOLDEN MFZN5 C	1000001268	8

Side Drive Assembly

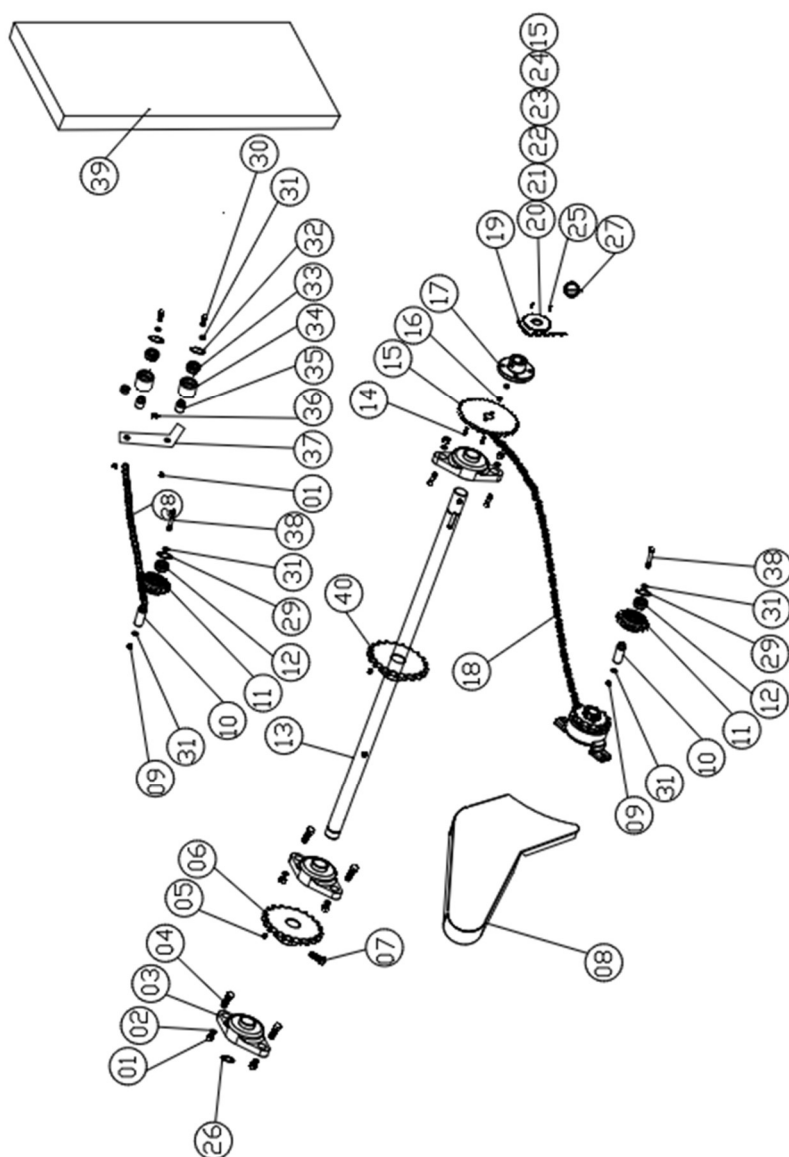


Side Drive Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	NYLOCK NUT M10 X 1.50	1000001241	6
2	WASHER PLAIN 10 MM GOLDEN MFZN5 C	1000001268	6
3	BEARING UCFL 205	1000000860	3
4	HEX BOLT M10X35 F/T 10.9	1000001130	1
5	NYLOCK NUT M8	1000001248	2
6	SPROCKET 21 TEETH 5/8 X 3/8 WITH KNOB	1000000979	1
7	HEX BOLT M8X60 H/T 8.8	1000000108	2
8	GS SIDE CHAIN COVER FERTILIZER (PT)	3000010965	1
9	NYLOCK NUT M12 X 1.75 MM SILVER	1000001242	3
10	D C PIN FOR 6205 IDLER FOR FERTILIZER	1000007114	2
11	HSD IDLER TEETH Z 16 6205 5/8	1000001352	2
12	P P BEARING 6205 ZZ	1000000762	2
13	PP SHAFT 25MM (FINISH)	3000008512	
14	ALLEN BOLT M8x35	1000001063	7
15	SPROCKET 34 TEETH 5/8 X 3/8	1000000986	1
16	P D SPACER OD 16 ID 11	1000003560	2
17	P P SPROCKET CHANGER HUB	1000006748	1
18	P P CHAIN SIMPLEX 5/8 (10B-1) DIAMOND	1000003850	1
19	P P CHAIN SIMPLEX 5/8 DIAMOND 42 LINKS	3000009844	1
20	SPROCKET 21 TEETH 5/8 X 3/8 W/O KNOB	1000000978	1
21	SPROCKET 23 TEETH 5/8 X 3/8	1000000980	1
22	SPROCKET 25 TEETH 5/8 X 3/8	1000000981	1
23	SPROCKET 28 TEETH 5/8 X 3/8	1000000983	1
24	SPROCKET 31 TEETH 5/8 X 3/8	1000000985	1
25	ALLEN BOLT M8x15	1000007209	1
26	CIRCLIP 25 MM EXTERNAL	1000002222	1
27	LINCH PIN 10 X 45	1000002331	1
28	PP CHAIN STEEL RING TYPE	1000007431	1
29	CIRCLIP 52 MM INTERNAL	1000002225	2
30	HEX BOLT M10 X 50 F/T	1000001134	1

31	WASHER PLAIN 12 MM GOLDEN MFZN5 C	1000001269	3
32	CIRCLIP 40MM INTERNAL	1000006791	2
33	BEARING 6203 ZZ ARB	1000000817	2
34	PP IDLER ROLLER 6203	30000108	2
35	P P IDLER PIN 6203	1000006750	2
36	NYLOCK NUT M16 X 2 MM SILVER	1000001244	1
37	GS CHAIN TIGHTNER (PT)	3000009721	1
38	HEX BOLT 12 X 80 H/T	1000001158	2
39	Side Drive Chain Cover	3000010966	1
40	SPROCKET Z-20 ½"	1000002489	1


Rear Footrest Assembly

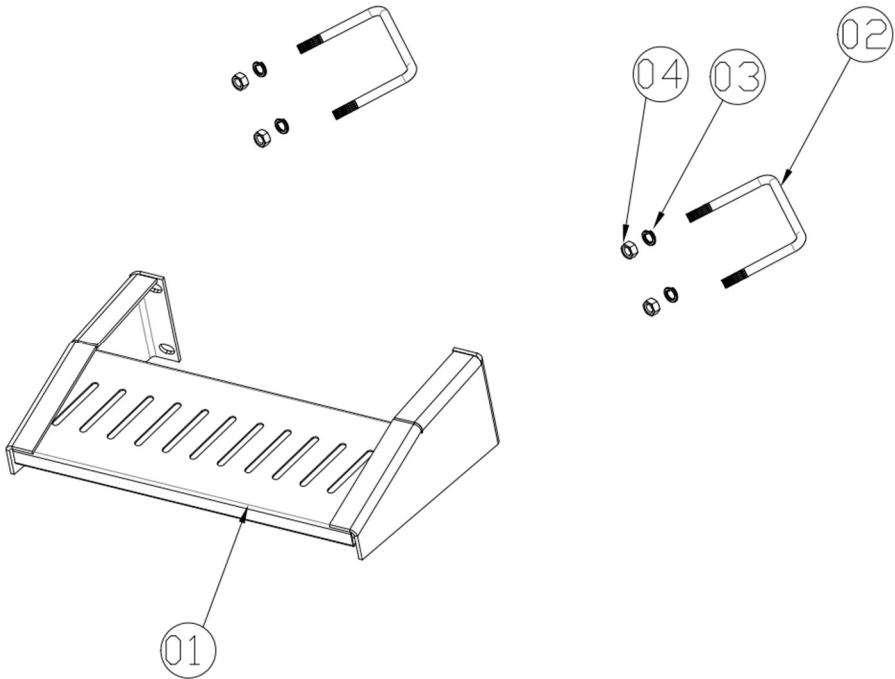

Rear Footrest Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	GS PP REAR FOOT REST (PT)	3000009913	1
2	U-BOLT M16 X 115CD L-95	1000007061	2
3	SPRING WASHER 16 MM GOLDEN MFZN5 C	1000001263	4
4	NYLOCK NUT M16 X 2 MM SILVER	1000001244	4


Disc Assembly

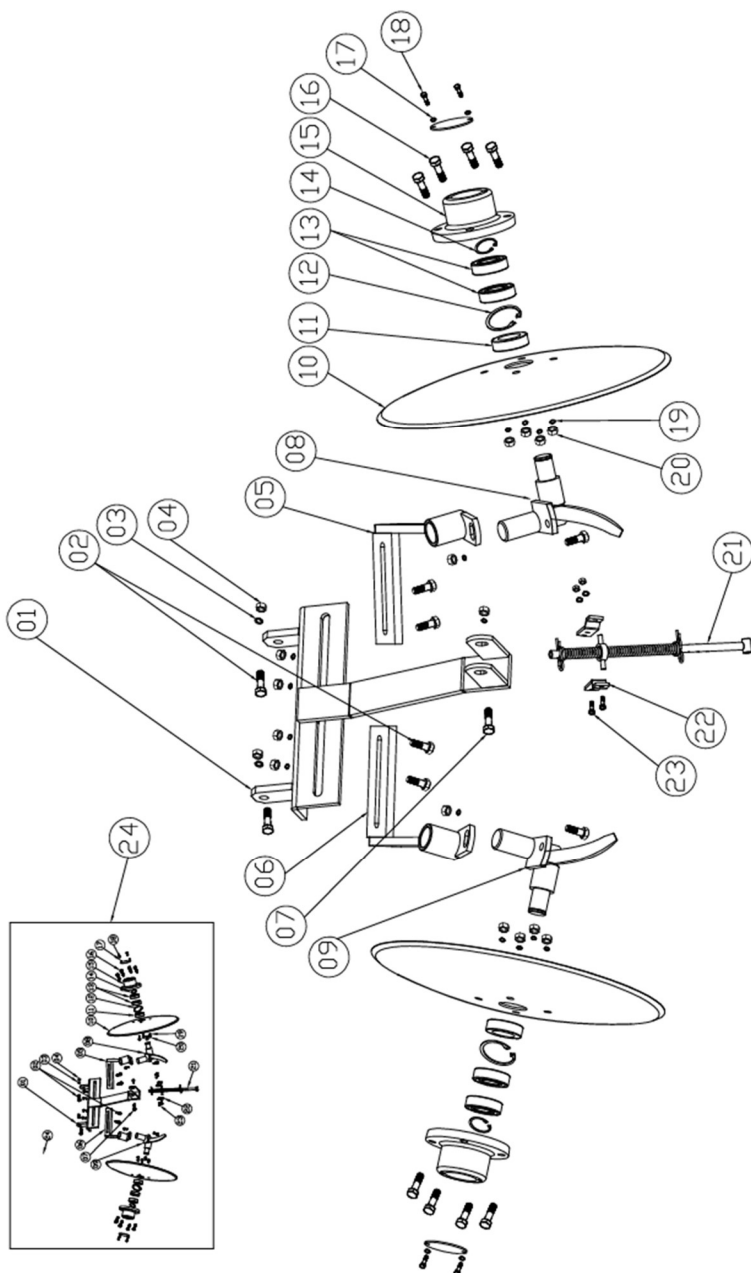

Disc Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	GS P P DISC MTG ASSY (PT)	3000009872	1
2	HEX BOLT 12 X 35 H/T	1000001145	8
3	SPRING WASHER 12 MM GOLDEN MFZN5 C	1000001261	9
4	NYLOCK NUT M12 X 1.75 MM SILVER	1000001242	9
5	GS DC RELAY ASSY RH (PT)	3000009748	1
6	GS DC RELAY ASSY LH (PT)	3000009749	1
7	HEX BOLT 12 X 70 MM H/T	1000001156	1
8	P P AXLE PIN ASSEMBLY RH	3000003136	1
9	P P AXLE PIN ASSEMBLY LH	3000003135	1
10	P P DISC 17"	1000001538	2
11	OIL SEAL 35-52-7 SUPER	1000001461	2
12	CIRCLIP 52 MM INTERNAL	1000002225	2
13	P P BEARING 6205 ZZ ARB	1000000821	4
14	CIRCLIP 25 MM EXTERNAL	1000002222	2
15	P P DISC HUB	1000003525	2
16	HEX BOLT M10 X 30 MM F/T	1000001129	10
17	SPRING WASHER 6 MM GOLDEN MFZN5 C	1000001265	10
18	HEX BOLT 6 X1X 20 F/T 10.9	1000001208	4
19	SPRING WASHER 10 MM GOLDEN MFZN5 C	1000001260	10
20	NYLOCK NUT M10 X 1.50 MM SILVER	1000001241	10
21	SPRING ASSEMBLY Small	1000002400	1
22	Spring Mounting Strip GS	3000002348	4
23	Hex Bolt M12X50 H/T	1000001151	4
24	P P DC DISC ASSEMBLY (PT)	3000009904	2


Planner Assembly

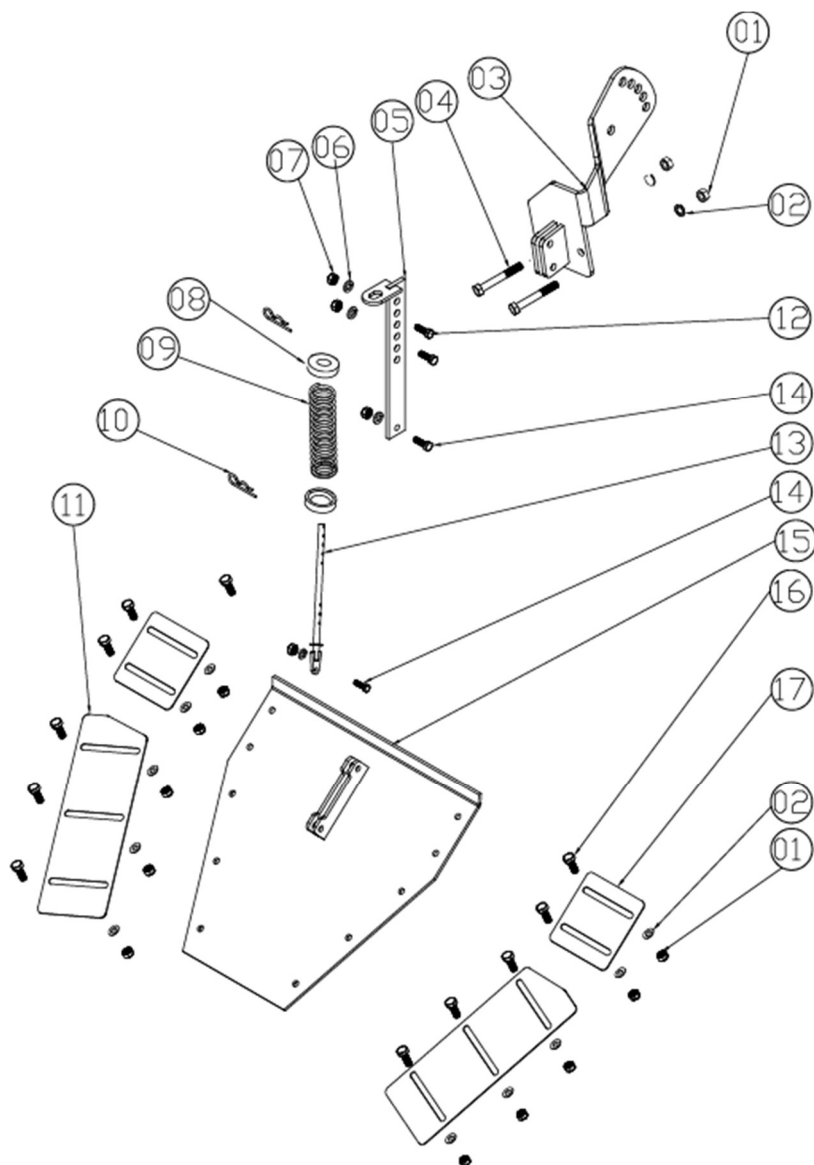

Planner Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	Nylock nut m10	1000001241	8
2	WASHER PLAIN 10 MM GOLDEN MFZN5 C	1000001268	8
3	GS PP PLANNER MTG STRIP ASSEMBLY (PT)	3000009906	2
4	HEX BOLT 10 X 70 H/T	1000003490	8
5	GS DC PLANNER ADJUSTMENT STRIP ASSY (PT)	3000009730	2
6	SPRING WASHER 12	1000001261	4
7	Nylock Nut m12	1000001242	4
8	DC SPRING BOWL (PT)	3000009123	4
9	spring od 45 wire dia 5mm	1000006568	2
10	R pin	1000001258	2
11	Planner Extension big	3000008530	4
12	Hex Bolt 12x40	1000001147	4
13	GS DC SIDE PLANNER SPRING ROD ASSY (PT)	3000009771	2
14	HEX BOLT 10 X 40 MM H/T	1000001131	4
15	GS PLANNER ASSEMBLY(PT)	3000009707	2
16	HEX BOLT M10 X 20 MM F/TH 10.9	1000001127	20
17	Planner Extension small	3000008531	2
8-10,13	DC PLANNER SPRING ASSY	1000007435	2


Outer Planner Assembly

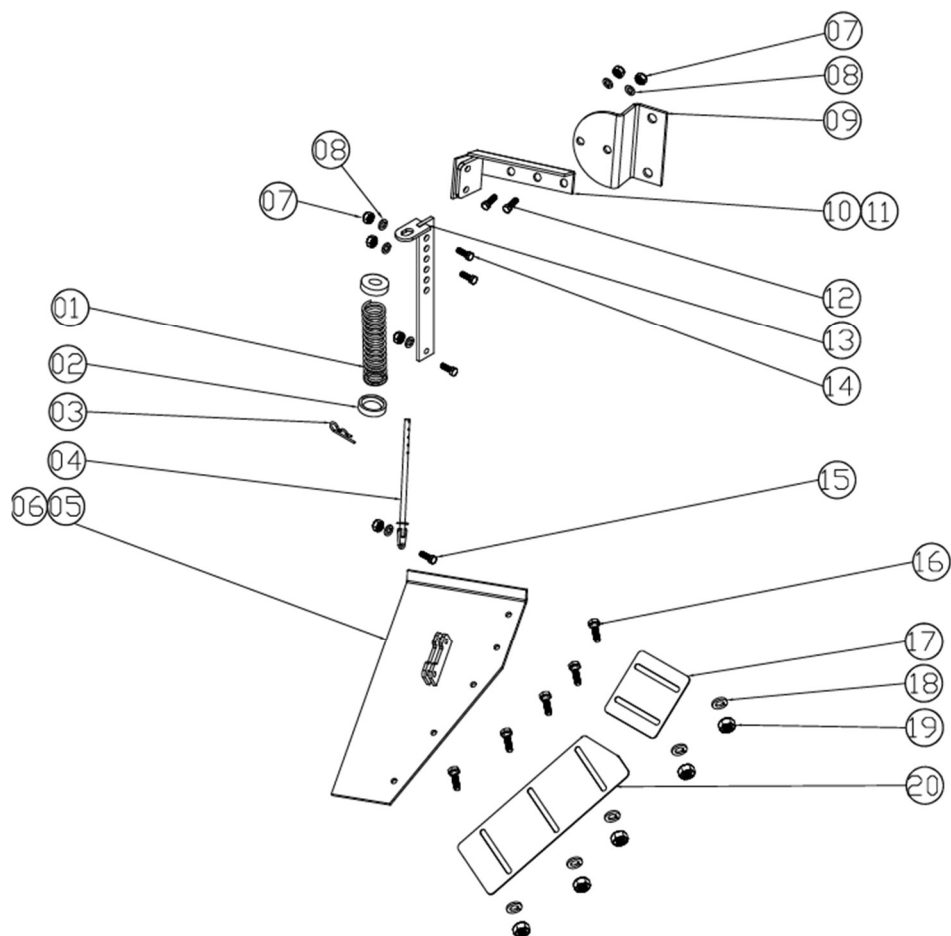

Outer Planner Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	Spring od 45 wire dia 5mm	1000006568	1
2	DC SPRING BOWL (PT)	3000009123	2
3	R pin	1000001258	1
4	GS DC SIDE PLANNER SPRING ROD ASSY (PT)	3000009771	1
5	GS DC SIDE PLANNER LH ASSY (PT)	3000009735	1
6	GS DC SIDE PLANNER RH ASSY (PT)	3000009736	1
7	Nylock Nut m12	1000001242	2
8	SPRING WASHER 12	1000001261	2
9	GS DC SIDE PLANNER ANGLE MTG BRACKET(PT)	3000009734	1
10	GS DC SIDE PLANNER MTG ANGLE ASSY RH(PT)	3000009732	1
11	GS DC SIDE PLANNER MTG ANGLE ASSY LH(PT)	3000009733	1
12	HEX BOLT 12x30 F/T	1000001144	2
13	GS DC SIDE PLANNER SPRING ROD ASSY (PT)	3000009771	1
14	Hex Bolt 12x40	1000001147	2
15	HEX BOLT 10 X 40 MM H/T	1000001131	2
16	HEX BOLT M10 X 20 MM F/TH 10.9	1000001127	5
17	Planner Extension small	3000008531	2
18	WASHER PLAIN 10 MM GOLDEN MFZN5 C	1000001268	7
19	Nylock nut m10	1000001241	24
20	Planner Extension big	3000008530	4


Vibration Assembly

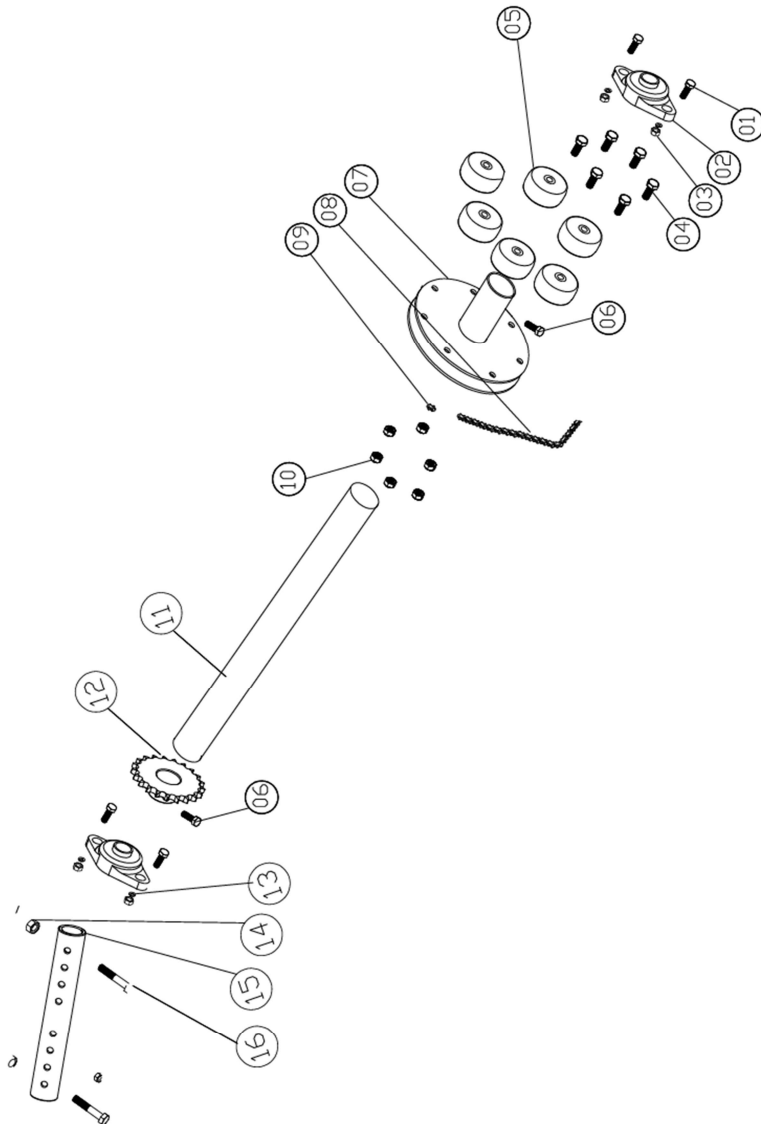

Vibration Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	HEX BOLT M10X25	1000001128	1
2	BEARING UCFL-204	1000000764	2
3	NYLOCK NUT M10	1000001241	2
4	HEX BOLT 5 X 50 MM F/TH	1000003484	2
5	P P VIBRATION MECHANISM ROLLER 2025	3000010854	6
6	HEX BOLT M10X25	1000001128	6
7	FLANGE ASSEMBLY	3000010851	2
8	CHAIN 1/2 10 MM 10FT	1000002456	1
9	CHAIN LOCK 1/2 FULL	1000003790	1
10	NYLOCK NUT M5	1000001246	1
11	SHAFT FOR VIBRATION ASSLY	3000010906	6
12	SPROCKET Z-14	1000002485	1
13	SPRING WASHER 10MM	1000001260	1
14	NYLOCK NUT M8	1000001248	2
15	VIBRATOR POWER JOINT	3000009125	2
16	HEX BOLT M8 X 50 F/T	1000002009	2
1-16	VIBRATION ASSEMBLY FOR POTATO PLANTER 2025	3000010957	2


Agitator Assembly

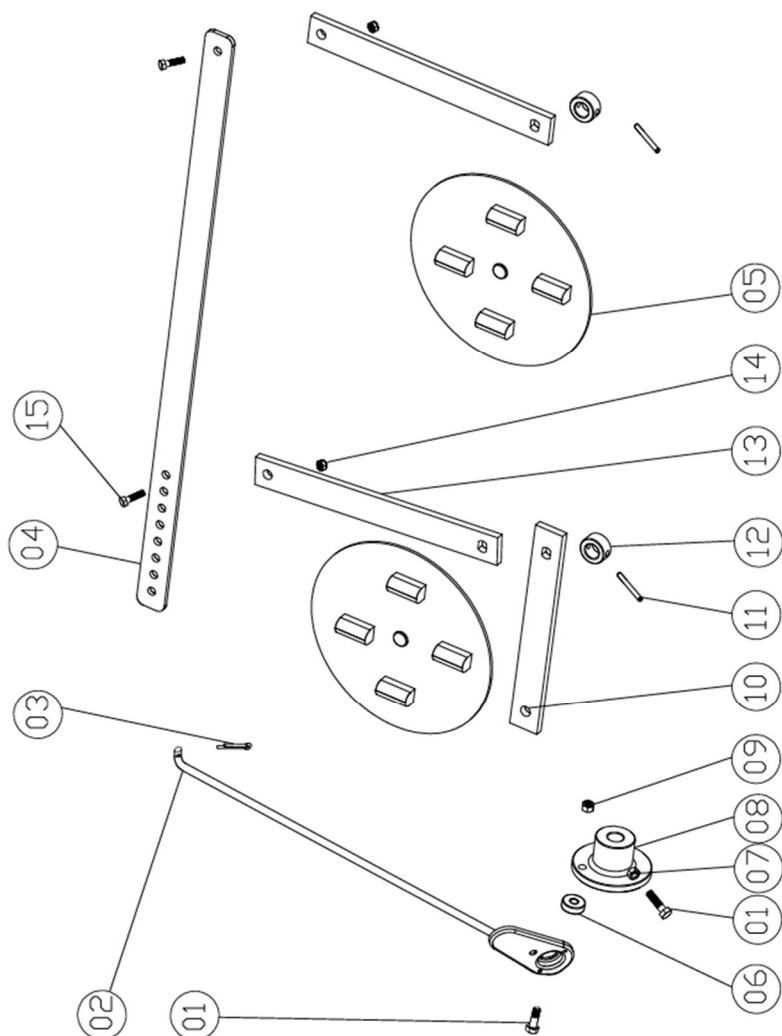

Agitator Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	HEX BOLT M10 X 30 MM F/T 10.9	1000001129	1
2	P P MOTION TRANSFER ROD 12	3000009911	2
3	SPLIT PIN 5 X 50 GOLDEN	1000002397	1
4	GS P P JOINT STRIP	3000009909	1
5	G S P P CAM PLATE ASSEMBLY	3000009910	1
6	BEARING 6200 ARB	1000000814	1
7	HEX NUT 10 MM GOLDEN 10 MFZN5 C	1000001224	2
8	P P FLANGE FOR CAM	1000001543	2
9	Nylock nut m10	1000001241	1
10	GS P P CAM ADJUSTMENT 2	3000009908	1
11	DOWEL ø5x25	1000003730	1
12	GS PP BUSH FOR DOWEL	3000009912	2
13	GS P P CAM ADJUSTMENT	3000009907	1
14	Nylock Nut m12	1000001242	2
15	HEX BOLT 12 X 35 H/T	1000001145	2

Fertilizer Assembly

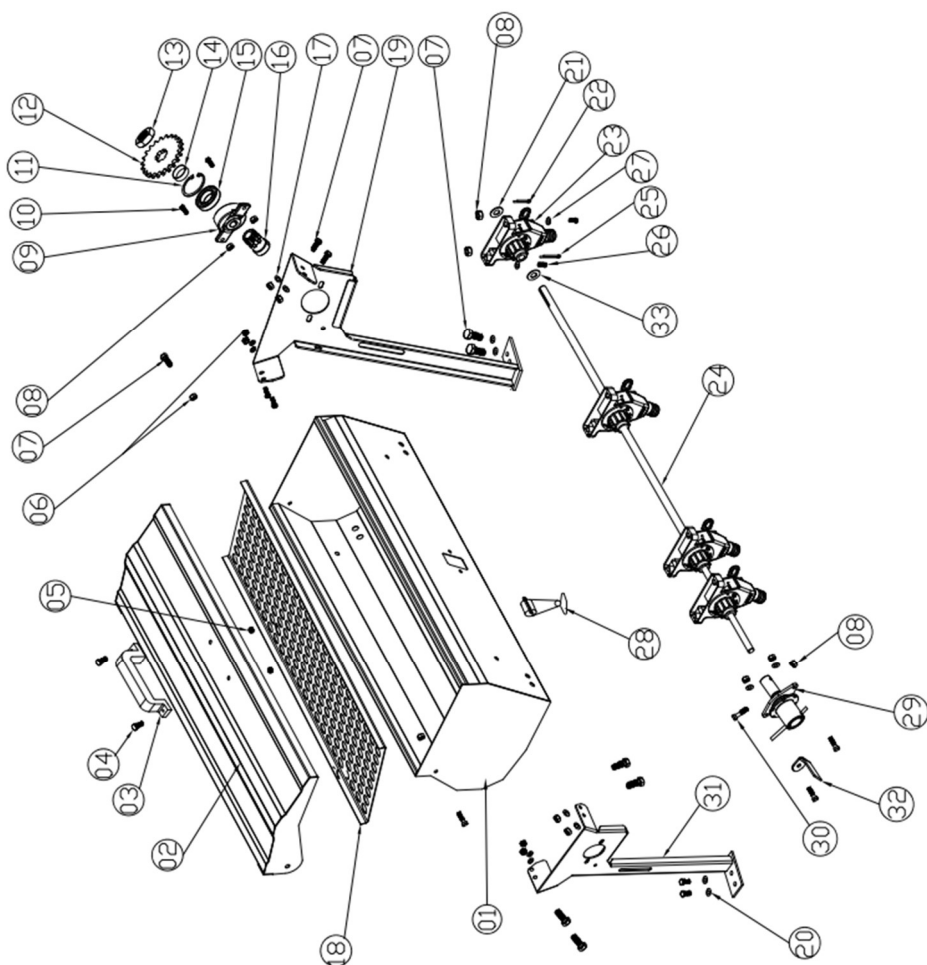

Fertilizer Assembly

SR.	DESCRIPTION	PART NO.	QTY.
1	GS DC FERTILIZER TANK ASSY (PT)	3000009702	1
2	GS CONTAINER TOP COVER ASSEMBLY(PT)	3000009703	1
3	S D HANDLE	1000003579	1
4	HEX BOLT 6 X 25 MM H/TH	1000001210	2
5	NYLOCK NUT 6 MM SILVER MFZN5 C	1000001247	2
6	Nylock nut M10	1000001241	10
7	Hex Bolt 10x20	1000001127	10
8	Nylock nut M8	1000001237	4
9	BEARING HOUSING CUP 6007	1000000850	1
10	Hex bolt 8 x 20 f/t	1000006441	4
11	CIRCLIP 62 MM INTERNAL	1000002502	1
12	SPRKT 22 TEETH SPLINED 5/8	1000001376	1
13	CHECK NUT 32 X 1 5 12 MM	1000002499	1
14	HSD SPACER OD 40 ID 37 L 10	3000003139	1
15	BALL BEARING 6007ZZ GRADE 2	1000000856	1
16	S D SPLINE SLEVE FOR FERTILIZER SHAFT	1000002480	1
17	WASHER PLAIN 10 MM GOLDEN MFZN5 C	1000001268	8
18	GS PP NET FOR FERTILIZER PT 2025	3000009787	1
19	PP FERTILIZER LEG ASSEMBLY LH 2025 (PT)	3000010982	1
20	SPRING WASHER 10 MM GOLDEN MFZN5 C	1000001260	2
21	PLAIN WASHER ID 20 OD 43 THK 3 MM	1000003597	4
22	SPLIT PIN 5 X 50 GOLDEN	1000002397	4
23	PISTOL ASSLY FOR PP BIG	1000007836	4
24	S D FERTILIZER HANDLE ROD DIA18 80X2075	3000003410	1
25	SPLIT PIN 5 X 35 GOLDEN	1000002396	4
26	HEX BOLT M8 X 30 F/TH GOLDEN	1000001220	8
27	WASHER PLAIN 8 MM GOLDEN MFZN5 C	1000001274	8
28	BONNET LOCK RUBBER TYPE	1000002498	1
29	SSD SCREW TYPE GUAGE ASSY	1000007254	1
30	HEX BOLT M8 X 45 MM GOLDEN MFZN5 C	1000001223	1
31	PP FERTILIZER LEG ASSEMBLY RH 2025(PT)	3000010981	1
32	GS GAUGE STOPPER STRIP (PT)	3000009788	1
33	WASHER PLAIN OD 32 ID 20 THK 3 MM	1000001275	1
9,11,12,13, 14,16,16	DC SPROCKET 22 TEETH ASSEMBLY	3000006099	1

Warranty Policy

Farmworld products are warranted to be free of defects in material or workmanship. Farmworld has traditionally followed a generous warranty policy as below:

1. Warranty Period:

Farmworld gives 12 months warranty for export, for the Farmworld products.

2. Warranty Conditions:

2.1 The Company's/seller liability will be limited to the repair or replacement of the part, proven defective within the period of 12 month (for export only) from the date of delivery of new product.

2.2 Parts under warranty policy:

- 2.2.1 Gearbox Housing, Drive shaft, Pinion shaft Transmission shaft Gears, Sprockets, etc.
- 2.2.2 Main frame, Rotor Assembly, 3-Point Linkage, Deflector.
- 2.2.3 Seed Container, Feeder Assy. For Seed & Fertilizer.
- 2.2.4 Bearing hub.
- 2.2.5 Side Disc.
- 2.2.6 Welding Part Failure.

2.3 The parts/materials that are not covered by the warranty are as below:

- 2.3.1 All wearable parts blades, chain, Skid Shoe, Shovels, Bearings, Oil Seals etc.
- 2.3.2 Spring Assembly, Gaskets of Gearbox, Side Chain/Gear drive oils, Air breather.
- 2.3.3 Reflector or indicator, stickers.
- 2.3.4 All fasteners nut & bolt, pins, Hard Liners etc.
- 2.3.5 Wires, Hose Pipes.
- 2.3.6 P.T.O shaft and its parts.
- 2.3.7 Paint

2.4 The claim due to below circumstances will not apply:

- 2.4.1 Accident/wrong application / misuse / wrong handling / improper maintenance.
- 2.4.2 Repair or replacement improperly done by person other than company's authorized representative.
- 2.4.3 Modification in product / part without consulting with the Manufacturer.
- 2.4.4 Damage from the external influence as environment condition, heavy stones, fires disaster and any act of God.
- 2.4.5 Usage of the product with replacement part that has not been manufactured or supplied by the Company will nullify this warranty claim.

3. Compensation Policy:

- 3.1 The warranty is automatically terminate on expiry of 12 months from date of delivery, even if the implements may not be in use for any time during the warranty tenure for any reason.
- 3.2 Company's employees or its Authorized representatives have no authority to vary the warranty terms/period.
- 3.3 Company will not cover any delivery costs for claim parts.

The warranty shall not cover or include any duty or taxes incurred by the Buyer in relation to the product under warranty policy. All proceeding relating to any dispute arising between the company and the Buyer on the liability of the company under this warranty shall be taken in civil court having JURISDICTION in Rajkot only.

Warranty Registration Form

(Customer Copy)

CUSTOMER'S NAME:	
ADDRESS :	
CONTACT NO. : (1)	(2).
SERIAL NO. :	MACHINE MODEL :
INVOICE NO. :	TRACTOR MODEL :
DATE OF SALE :	HP :
EXPLAINED THE FOLLOWING:	YES / NO
LUBRICATION REQUIRED PARTS	
ADJUSTMENT AND CHECKING REQUIRED PARTS	
ROUTINE MAINTENANCE TIPS AND SCHEDULE	
WARRANTY / TERMS IN DETAIL	
SPARES CATALOGUE & RECOGNISING PARTS EASILY	
EMERGENCY CONTACT NUMBER OF DEALER PERSON	
INSTALLATION OF MACHINE AND TRAINING	
RECEIVED MACHINE WITH:	
NO SHORTAGES	
NO DAMAGES	
ALL ITEMS IN TOOL KIT	
CORRECTED PROPELLER SHAFT (PROPERLY LENGTH CUT)	
I UNDERSTOOD COMPLETE OPERATING PROCEDURE AND RECEIVED MACHINE IN PERFECT CONDITION WITH PROPER INSTALLATION	
CUSTOMER'S SIGNATURE	DEALER SIGNATURE WITH SEAL



Honour Your Trust



Honour Your Trust



Warranty Registration Form

(Dealer Copy)

CUSTOMER'S NAME:	
ADDRESS :	
CONTACT NO. : (1)	(2).
SERIAL NO. :	MACHINE MODEL :
INVOICE NO. :	TRACTOR MODEL :
DATE OF SALE :	HP :
EXPLAINED THE FOLLOWING:	YES / NO
LUBRICATION REQUIRED PARTS	
ADJUSTMENT AND CHECKING REQUIRED PARTS	
ROUTINE MAINTENANCE TIPS AND SCHEDULE	
WARRANTY / TERMS IN DETAIL	
SPARES CATALOGUE & RECOGNISING PARTS EASILY	
EMERGENCY CONTACT NUMBER OF DEALER PERSON	
INSTALLATION OF MACHINE AND TRAINING	
RECEIVED MACHINE WITH:	
NO SHORTAGES	
NO DAMAGES	
ALL ITEMS IN TOOL KIT	
CORRECTED PROPELLER SHAFT (PROPERLY LENGTH CUT)	
I UNDERSTOOD COMPLETE OPERATING PROCEDURE AND RECEIVED MACHINE IN PERFECT CONDITION WITH PROPER INSTALLATION	
CUSTOMER'S SIGNATURE	DEALER SIGNATURE WITH SEAL



Honour Your Trust



Honour Your Trust



Warranty Registration Form

Honour Your Trust

(Manufacturer Copy)

CUSTOMER'S NAME:	
ADDRESS :	
CONTACT NO. : (1)	(2).
SERIAL NO. :	MACHINE MODEL :
INVOICE NO. :	TRACTOR MODEL :
DATE OF SALE :	HP :
EXPLAINED THE FOLLOWING:	YES / NO
LUBRICATION REQUIRED PARTS	
ADJUSTMENT AND CHECKING REQUIRED PARTS	
ROUTINE MAINTENANCE TIPS AND SCHEDULE	
WARRANTY / TERMS IN DETAIL	
SPARES CATALOGUE & RECOGNISING PARTS EASILY	
EMERGENCY CONTACT NUMBER OF DEALER PERSON	
INSTALLATION OF MACHINE AND TRAINING	
RECEIVED MACHINE WITH:	
NO SHORTAGES	
NO DAMAGES	
ALL ITEMS IN TOOL KIT	
CORRECTED PROPELLER SHAFT (PROPERLY LENGTH CUT)	
I UNDERSTOOD COMPLETE OPERATING PROCEDURE AND RECEIVED MACHINE IN PERFECT CONDITION WITH PROPER INSTALLATION	
CUSTOMER'S SIGNATURE	DEALER SIGNATURE WITH SEAL



Honour Your Trust



Honour Your Trust



Honour Your Trust



Honour Your Trust

FARMWORLD AGROTECH PRIVATE LIMITED

Registered Address:- Plot No. 373, Road-U, Khirasara Industrial Estate, Khirasara,

Taluka - Lodhika, District - Rajkot, 360021 (Gujarat) India.

Email: customercare@farmworld.in | Website: www.farmworld.in