

POTATO PLANTER USER MANUAL



Honour Your Trust



Honour Your Trust

Index

Sr. No.	Contents	Page No.
1.	Introduction	1
2.	Technical Specifications	2
3.	Assembly Parts	3
4.	Safety Instruction	6
5.	Do's and Don'ts	8
6.	Operating Instructions	9
7.	Instruction for Varying Gaps	10
8.	Part List	11
9.	Warranty Policy	43

Introduction

Potato planter is used for sowing the seed of potatoes in the ridge or bed. Farmworld Potato Planter is fully Automatic Potato Planter No labor is required for sowing to ridge distance the seed. The Farmworld Potato planter can sow from Diameter 30mm to 95 mm of the mother seed. The Farmworld Potato Planter's ridge can be adjusted as per customer's requirement, it may be 24", 25" & 26".

The Farmworld Potato planter is power driven by wheels to the whole mechanism. The wheel can also help to stabilize the position of machine no need to fix the position of machine by tractor hydraulic lift.

This machine is Eco friendly machine to environment and farmer also. This machine is designed as per farming of potatoes and can be maintained easily.

Technical Specifications


Potato Planter is designed to meet the needs of Farmers. All Models are available with tool kit and parking stand.

Sr. No.	DESCRIPTION	Specification
1	Model	FW Potato Planter 02
2	Drive Type	Wheel Drive
3	Wheel Size	02 Pneumatic Wheel (7.00-12 8PR)
4	No. & Type of Bearing Power gear off	UCP-208
5	No. of Hopper assembly	02
6	Storage Capacity of Hopper	400 Kg
7	Capacity of Seed Sowing	01 acre/02 hours
8	Capacity of sowing size of seed	Min. 30mm Dia. / Max. 70mm Dia.
9	Potato Planter Weight	700 Kgs
10	Chain Size for Main Power	5/8" / 7/32" Chain Simplex
11	For Vibration Roller	3/8" x 7/32" Chain Simplex
12	For Joint of Hopper	3/8" x 7/32" Chain Simplex
13	Bearing	Roller Bearing 6205zz, 6200 2RS, UCP 208, UCP 204, UCFL 205
14	Cam	Cam can be used to reduce the blockage of the seed by compression in travelling
15	No. of Cam System	2No. Of Cam System
16	Type of Cam System	Reciprocating Cam

Assembly Parts

1. BELT ASSEMBLY

The belt is equipped with steel bowl for tubers of a diameter from 25 to 35 mm. For lower diameter there is a plastic reduction

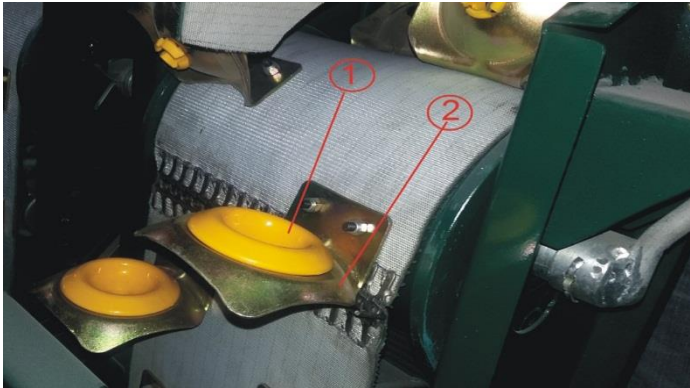

2. UPPER ROLLER

The upper roller supported by side adjustment assembly which gives better adherence to the belt. That permit to eliminate possible skids which can cause some faults during sowing. Upper Roller is shown below



Assembly Parts


3. Lower Roller

The lower roller has biconical shape. This shape prevent the accumulation of extraneous material that can damage the belt.



4. Mechanical Vibrator


The mechanical vibrator with small wheels, situated behind the belt, gives a regular and constant vibration that prevent the loading of more tubers on one bowl.

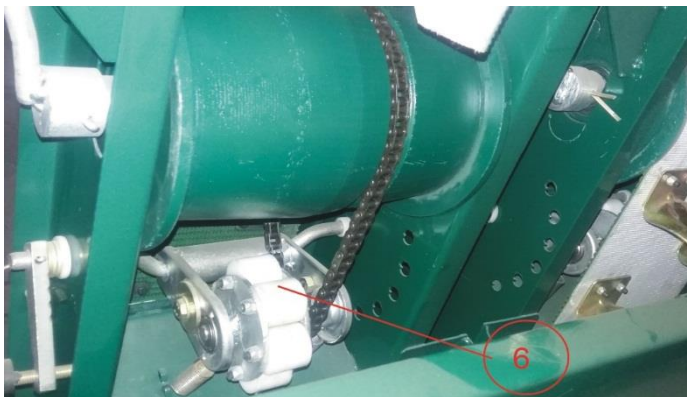

Assembly Parts

5. Front Power Joint

The front power joint is very simple to handle and permit to get the desired distance between tubers in short time. There are 12 positions to choose.

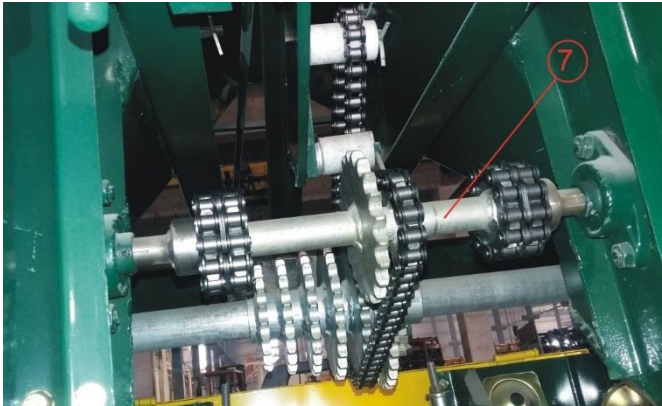

6. Front Liner Assembly

The Function of front liner is marking of ridges and depth adjustment of seeds.



Safety Instructions

Maintenance Safety:

1. Follow all the operating maintenance and safety information in the manual.
2. Support the machine with blocks or safety stands when working beneath it.
3. Follow good work shop practices:
 - Keep service area clean and dry.
 - Use adequate light for the job in hand.
4. Use tools, jacks and hoists of sufficient capacity for the job.
5. Make sure all guards are in place and properly secured when maintenance work is completed.
6. Never wear loose fitting, baggy or frayed clothing when working around or on any of the drive system components.
7. Keep hands, feet, hair and clothing away from moving or rotating parts.
8. Clear the area of bystanders, especially small children, when carrying out maintenance and repairs or making any adjustments

Transport Safety:

1. Review transport safety instructions in tractor manual before moving.
2. Always travel at a safe speed
3. Always use hazard warning flashers on tractor when transporting unless prohibited by law.
4. Do not exceed speed 20km/h during transport.

Safety Instructions

General Safety:

1. First aid kit should be available and learn to use the same in case of emergency.
2. Fire extinguisher should be available and learn to use the same in case of emergency.
3. Wear appropriate protective equipment's. This list includes but not limited to :
 - a) A hard hat.
 - b) Protective shoes with slip resistant soles.
 - c) Protective glasses and goggles.
 - d) Heavy Gloves.
 - e) Hearing Protection.
 - f) Respirator or filter mask.
 - g) Wear suitable ear protection for prolonged exposure to excessive noise.

Storage Safety:

1. Store the unit in an area away from human activity.
2. Do not permit children to play on or around the stored machine.
3. Support frame should be on stands and blocks to provide a secure base.
4. Thoroughly wash the machine and apply rust prevent oil, when not in use for a long time.

Safety Signs:

1. Keep safety signs clean and legible at all time.
2. Replace safety signs that are missing.
3. Install safety features on repaired parts as earlier.

Do's and Don'ts

1. Check all parts of the machine every day whenever you intend to put it in the field.
2. Make sure that parking stand is up while operating in field.
3. Check and tight all bolts and nuts daily.
4. Beware of bystanders while operating the Potato Planter.
5. Do not allow anyone to stand or sit on the implement while it is transported or operated.
6. Do not leave the tractor seat until the engine is off, brakes locked, and the Potato Planter lowered to the ground.
7. Do not allow children to play in field or to sit on tractor while operation.
8. Always be sure that any new operator should has thoroughly understanding of the implement and should follow the safety precautions.
9. Keep your machine in good working condition. Always contact your dealer for repairs.
10. Never attempt to adjust or perform maintenance on this machine while it is being operated.


Operating Instructions

1. Read and understand the operator's manual and all safety signs before operating, servicing, adjusting, repairing and unplugging.
2. Install and secure all guards and shields before starting or operating.
3. Keep hands, feet, hair and clothing away from moving parts.
4. Lower implement to the ground, place all controls in neutral, stop engine, engage parking brake, remove ignition key. Ensure all moving parts should stop before service, repair, and any adjustment, connect or disconnect.
5. Put all tractor and machine controls in neutral position before starting.
6. Never start or operate the machine unless you are not sitting on tractor seat.
7. Do not operate machine inside a building unless there is adequate ventilation.
8. Do not put hands or feet under machine while tractor engine or machine is running.
9. Always know what you are planting. Never operate Planter in an area that has hidden obstacles. Remove sticks, stone, roots, wire and other objects from working area before starting.
10. Clean reflectors, SMV emblem and lights before transporting.
11. Use hazard flashers on tractor while transporting.
12. Review safety instructions with all operators annually or seasonally.


Safety Precautions:

1. While mounting Potato Planter to the tractor ensure that there should no downward pressure from the tractor hydraulic system on the Potato Planter, also do not add up any external weight on Potato Planter.
2. Adjust the tractor top link length and attach to top most in such a way that the main frame of Potato Planter remains parallel to ground.
3. Lower implement to the ground, place all controls in neutral, stop engine, engage parking brake, remove ignition key. Ensure all moving Parts should stop before service, repair, and any adjustment, connect or disconnect.
4. Keep hands, feet, hair and clothing away from moving, rotating parts. Do not wear loose clothes as entanglement with rotating parts may cause serious injury or even death.
5. Do not make sharp turn while Planter is in the ground, lower position or working.
6. Do not carry passengers while operating machines.

Instructions for Varying Gap between Potatoes

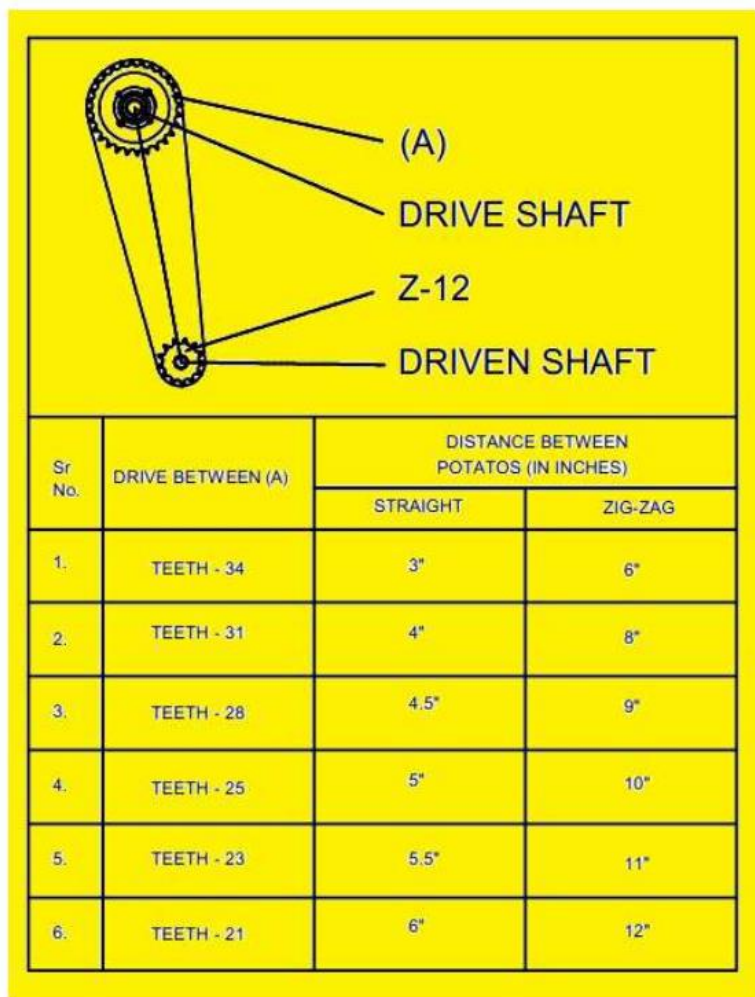


Chassis Assembly

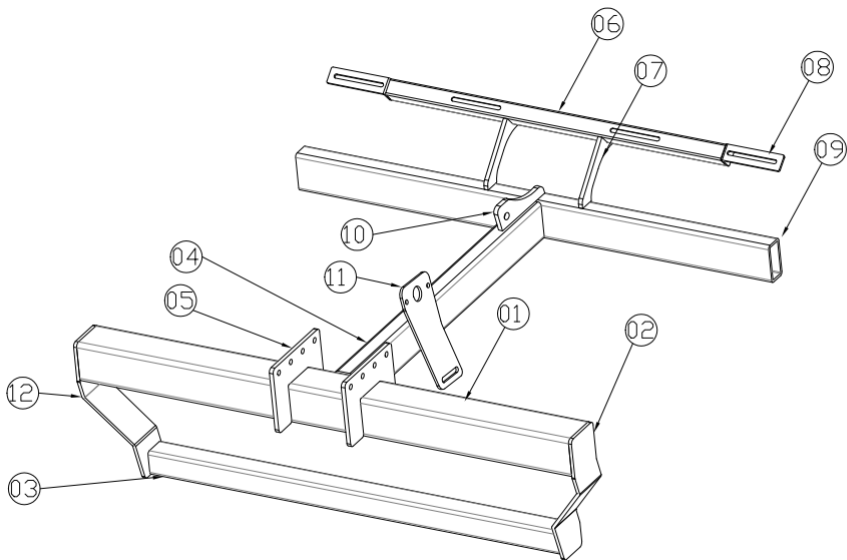

Chassis Assembly

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	FRONT SQ PIPE L-1300MM	3000008491	1
2	LINER PIPE SUPPORT LH	3000008494	1
3	SQ. PIPE 60x60x1100	3000008496	1
4	REC PIPE 96x48x870	3000008492	1
5	Hinge Plate	3000008497	2
6	SQ. PIPE 40x40x886	3000008500	1
7	HOPPER SUPPORT	3000008499	2
8	SIDE BRACKET SQ. PIPE 40x04	3000008501	2
9	REC PIPE 96x48x1250	3000008493	1
10	U SUPPORT BACK STRIP	3000008498	1
11	CENTER IDLER MTG PLATE	3000008502	1
12	LINER PIPE SUPPORT RH	3000008495	1


FRONT LINER ASSEMBLY

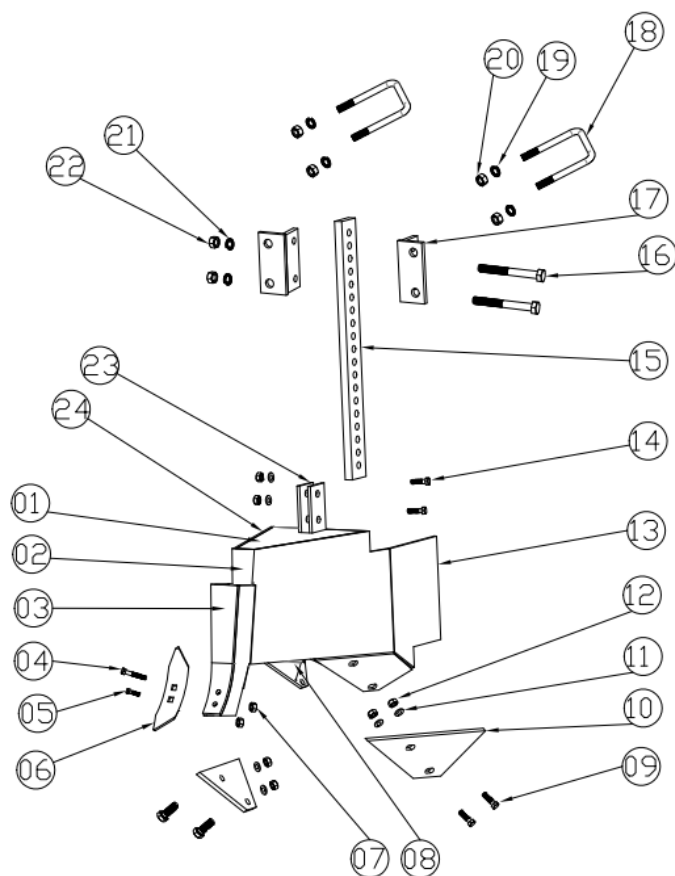

FRONT LINER ASSEMBLY

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	LINER TOP PLATE	3000008539	1
2	FRONT PIPE HOLDER	3000008544	1
3	PIPE HOLDER COVER	3000008545	1
4	CARRY BOLT 8 x 50 MM	1000002462	1
5	CARRY BOLT 8 x 35 MM	1000002461	1
6	P P SHOVEL	1000001589	1
7	NYLOCK NUT M8 SILVER	1000001248	1
8	BOTTOM PLATE	3000008668	1
9	HEX BOLT M 10 x 25	1000001128	4
10	LINER BLADE	3000008546	2
11	SPRING WASHER 10 MM GOLDEN MFZN5 C	1000001260	4
12	NYLOCK NUT M10 SILVER	1000001241	4
13	LINER SIDE PLATE LH	3000008540	1
14	HEX BOLT M12 x 40	1000001147	2
15	LINER STRIP	3000008537	1
16	HEX BOLT M12 x 45	1000005267	2
17	LINER MTG BRACKET FRONT STRIP	3000008548	2
18	U BOLT M 16	1000006569	2
19	SPRING WASHER M16	1000001263	4
20	NYLOCK NUT M16 SILVER	1000001244	4
21	SPRING WASHER M12 SILVER	1000001261	4
22	NYLOCK NUT M12 SILVER	1000001242	4
23	MTG STRIP	3000008538	2
24	LINER SIDE PLATE RH	3000008541	1


Ridger Assembly

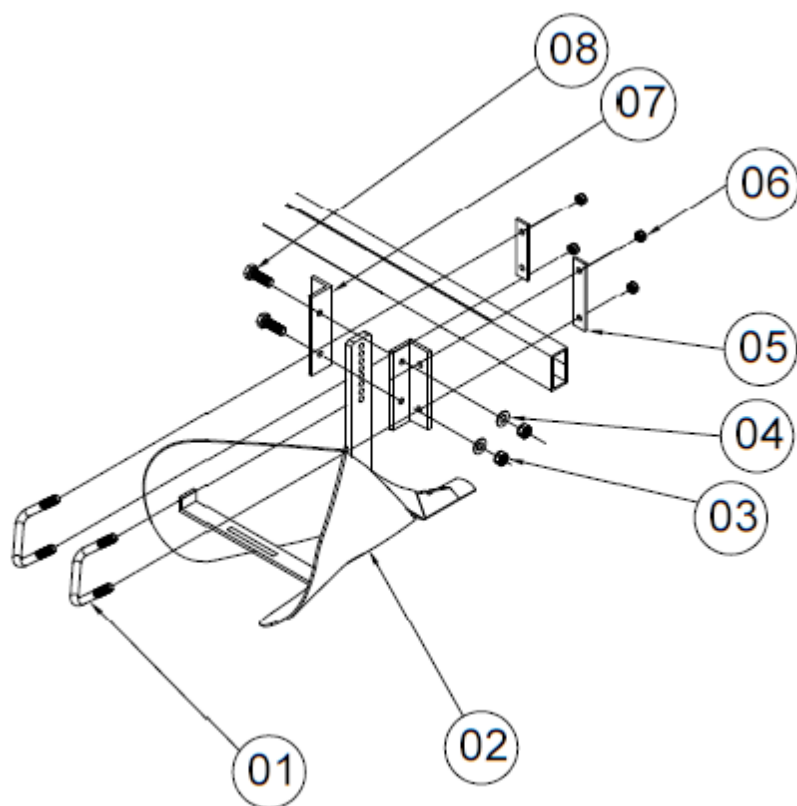

Ridger Assembly

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	U BOLT 18 x 100 x 100 MM	1000002448	12
2	P P REAR RIDGER	3000003402	3
3	NYLOCK NUT M16 x 2 MM SILVER	1000001244	6
4	SPRING WASHER 16MM GOLDEN MFZN5 C	1000001263	6
5	P P STRIP 40 x 10 x 180	3000002871	6
6	HEX NUT 18MM	1000001230	24
7	P P ANGLE FOR REAR TYNE 70 x 70 x 8	3000003101	6
8	HEX BOLT 16 x 55 MM	1000001188	6


Tyre Assembly

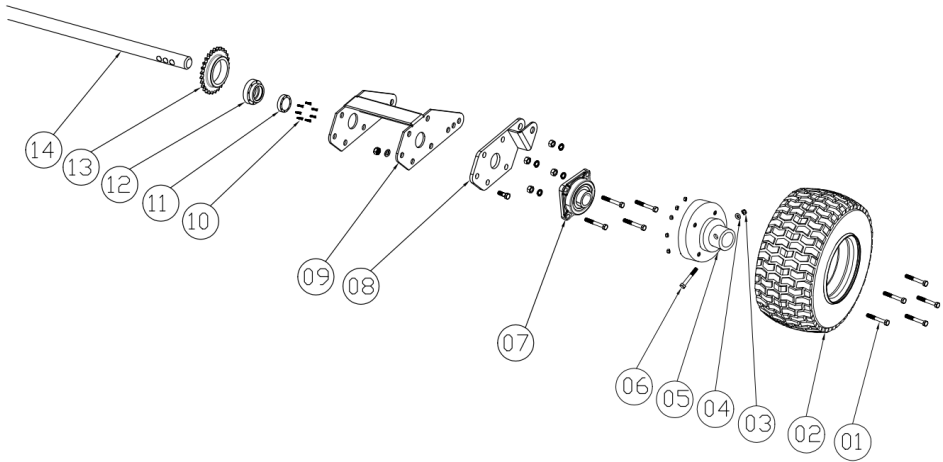

Tyre Assembly

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	HEX BOLT 16 x 50 MM H/T	1000001187	10
2	WHEEL ASSY. FOR POTATO PLANTER 7.00-12	3000003246	2
3	NYLOCK NUT M16 x 2MM SILVER	1000001244	22
4	WASHER PLAIN 16MM GOLDEN MFZN5 C	1000001271	22
5	PP HUB FOR PLANTER RIM 7.00- 12	1000001557	2
6	HEX BOLT 16 x 80 H/T	1000001196	2
7	BEARING UCF 208	1000000771	2
8	DRIVE SHAFT MTG	3000008576	2
9	DICS ASSEMBLY MTG BRACKET	3000008574	2
10	ALLEN BOLT 8 x 40	1000001064	7
11	MALE COLLECT 40MM SHAFT	1000001433	1
12	FEMALE COLLECT	1000001418	1
13	SPROCKET Z-28 COLLECT TYPE	1000006747	1
14	P P AXLE SHAFT 40	3000008579	1


Belt Assembly

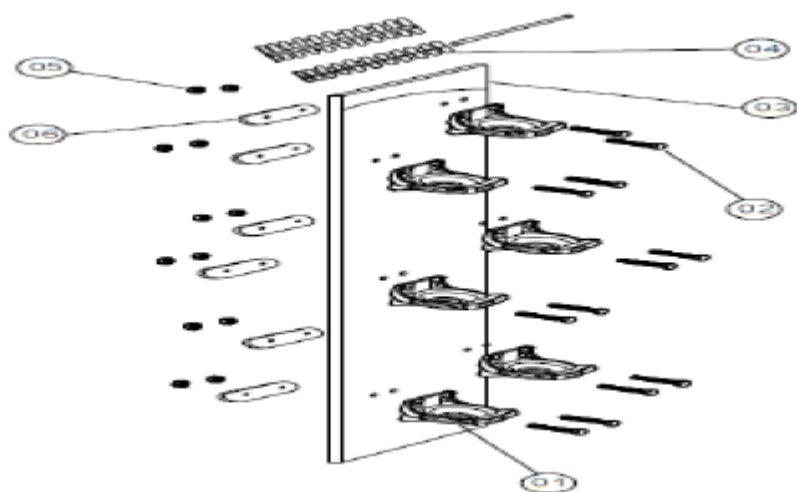

Belt Assembly

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	P P PLASTIC BOWL	1000005696	68
2	HEX BOLT M15 x 15 F/T PLANTER	1000003485	136
3	P P CONVER BELT 200MM	1000001536	13
4	P P KHANGI	1000001562	4
5	NYLOCK NUT M5 PLANTER	1000003486	13
6	PP STRIP FOR PLASTIC BOWL 55x15x1.5	3000006595	68
1-6	BELT ASSEMBLY FOR POTATO PLANTER	3000003251	2


Upper Hopper Assembly

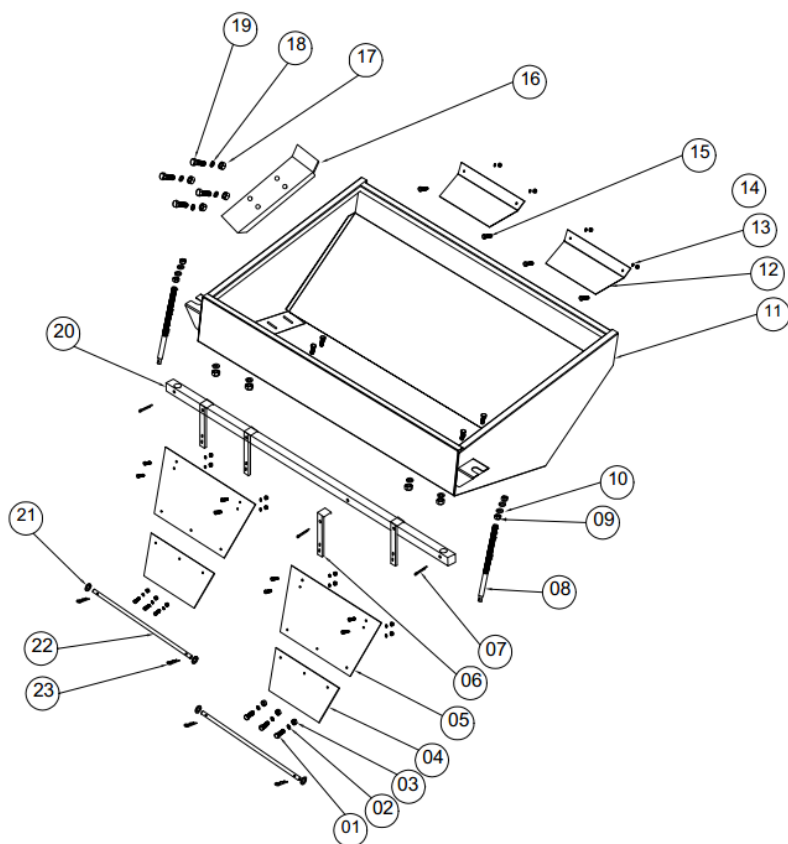

Upper Hopper Assembly

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	Hex Bolt M6 x 25MM F/T MFZN5 C	1000001209	14
2	WASHER PLAIN 6MM	1000001273	14
3	HEX NUT M6	1000001236	14
4	P P RUBBER FLAPPER	1000003513	2
5	P P STRIP FOR SUTTER	3000002878	2
6	P P BELT GUIDE STRIP	3000003106	1
7	SPLIT PIN 4 X 35	1000002394	6
8	P P SHUTTER OPENER THREAD ROD	1000001590	2
9	HEX NUT M16	1000001229	4
10	WASHER PLAIN 16MM GOLDEN MFZN5 C	1000001271	4
11	P P UPPER HOPPER ASSEMBLY	3000003054	1
12	P P SUPPORT SHEET FOR UPPER HOPPER	3000006615	2
13	WASHER PLAIN 8MM GOLDEN MFZN5 C	1000001274	8
14	HEX NUT 8MM GOLDEN MFZN5 C	1000001237	8
15	HEX BOLT M8 x 20 F/T	1000001218	8
16	P P CENTER PARTITION FOR UPPER HOPPER	3000006616	1
17	P P SQUARE ROD 20 X 20MM L – 52"	3000003461	1
18	P P ROD 12MM	3000002879	2
19	R PIN 4 x 76 SILVER	1000001258	4
20	PP SQUARE ROD 20 X 20MM L 52	3000003461	1
21	WASHER PLAIN 12MM GOLDEN MFZN5 C	1000001269	4
22	PP ROD 12 MM	3000002879	2
23	R PIN 4 x 76 SILVER 8	1000001258	4


Lower Hopper Assembly

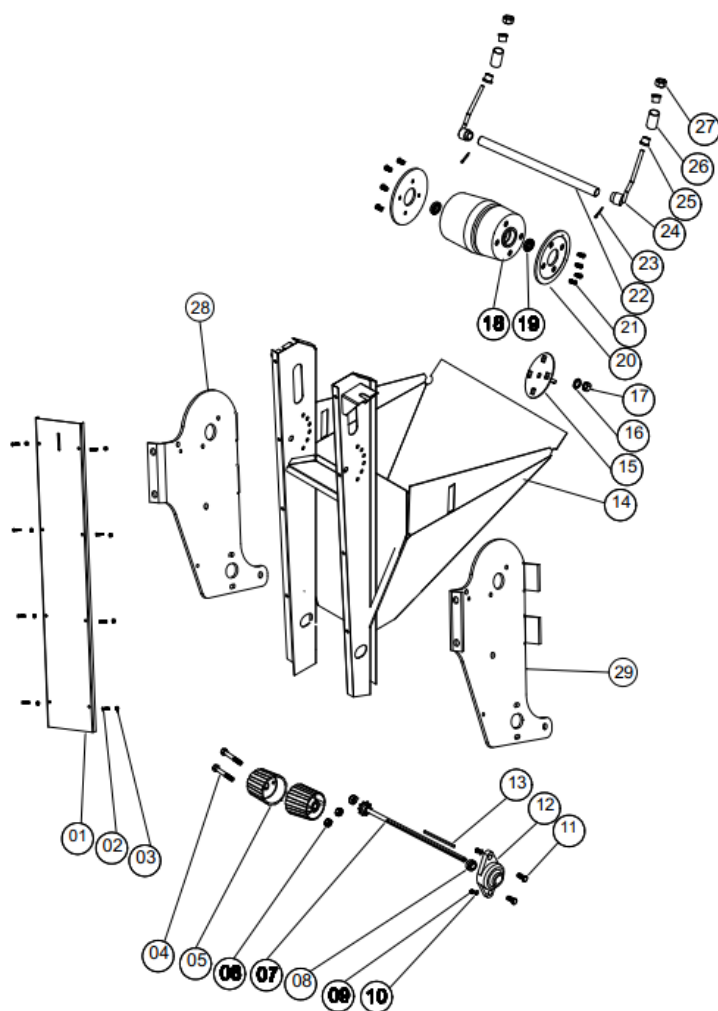

Lower Hopper Assembly

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	DC BELT COVER	3000008641	1
2	HEX BOLT M8 x 20 F/T	1000001218	4
3	NYLOCK NUT M8 SILVER MFZN5 C	1000001248	4
4	ALLEN BOLT M10 x 130	1000001031	4
5	PP LOWER ROLLER IN 2 PIECE	1000003566	2
6	NYLOCK NUT M10x1.5MM SILVER	1000001241	4
7	PP LOWER ROLLER SHAFT & SPROCKET ASSEMBLY	3000006617	2
8	PP BUSH LOWER ROLLER SPACER	1000001517	4
9	NYLOCK NUT M10 X 1.50 MM SILVER	1000001241	4
10	SPRING WASHER 10MM GOLDEN MFZN5 C	1000001260	4
11	HEX BOLT M10 X 25MM F/T	1000001128	4
12	BEARING 204 UCFL	1000000764	4
13	PP KEY WAY ROD SQ 6MM 14	1000003509	2
14	PP LOWER ROLLER ASSEMBLY	3000003053	1
15	PP CAM PLATE ASSEMBLY	3000003116	1
16	SPRING WASHER 16MM GOLDEN MFZN5 C	1000001263	2
17	NYLOCK NUT M16 X 2 MM SILVER	1000001244	2
18	UPPER ROLLER	1000001780	2
19	BEARING 6005	1000000809	4
20	PP UPPER ROLLER SIDE PLATE	3000003467	4
21	PP CSK ALLEN BOLT M8 X 20	1000001537	16
22	PP SHAFT FOR UPPER ROLLER 25 X 280	3000002870	2
23	SPLIT PIN 4 X 50	1000000967	4
24	PP UPPER ROLLER TENSIONER ASSEMBLY	1000001516	4
25	PP BUSH FOR UPPER ROLLER TENSION	1000001516	8
26	PP PIPE FOR SPACER	3000003097	4
27	HEX NUT 12MM GOLDEN MFZN5 C	1000001226	4
28	DC HOPPER MTG PLATE RH	3000008560	1
29	DC HOPPER MTG PLATE LH	3000008559	1


Side Drive Assembly

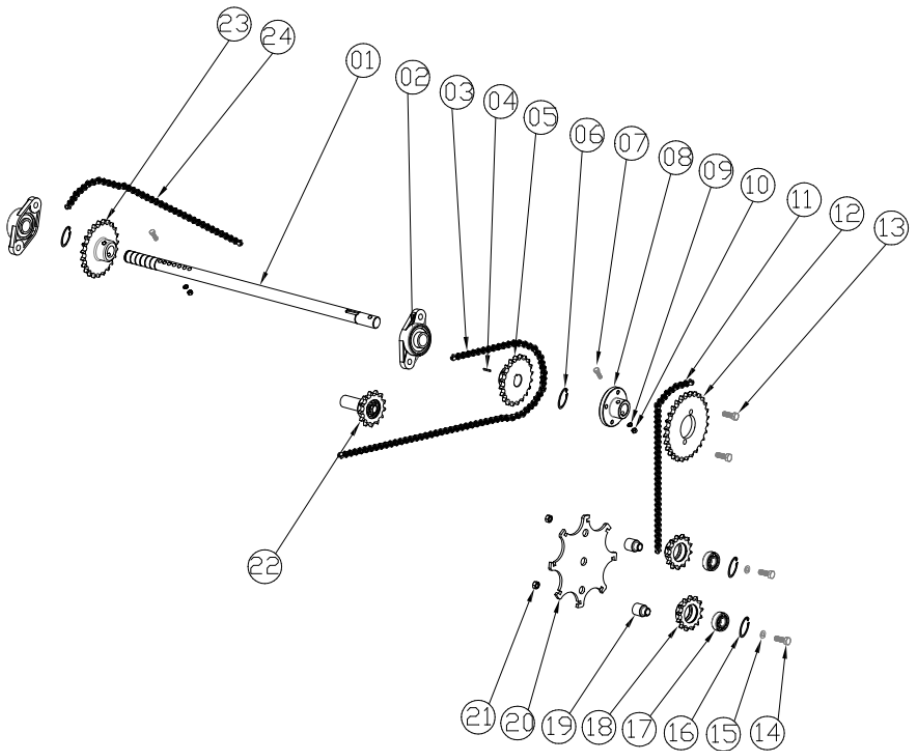

Side Drive Assembly

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	SHAFT 25MM	1000006751	1
2	BEARING UCFL 205	1000000860	2
3	PP CHAIN SIMPLEX 5/8" X 3/8"	1000001534	1
4	PARALLEL KEY 8 X 7	1000001933	1
5	SPROCKET z-34 WITH KNOB	1000006746	1
6	CIRCLIP EXTERNAL 25MM	1000002222	2
7	HEX BOLT 8X60	1000000108	2
8	SPROCKET CHANGER HUB	1000006748	1
9	PLAIN WASHER 8MM GOLDEN	1000005715	2
10	HEX NUT M8	1000001237	2
11	PP CHAIN SIMPLEX 5/8" X 3/8"	1000001534	1
12	SPROCKET Z-28	1000000983	1
13	HEX BOLT 10X20	1000001127	2
14	HEX BOLT 12X50	1000001150	2
15	WASHER PLAIN M12	1000001269	2
16	CIRCLIP INTERNAL 40MM	1000006791	2
17	BEARING 6203	1000000817	2
18	SPROCKET z-13 IDLER	1000006749	2
19	IDLER PIN 6203	1000006750	2
20	CHAIN TIGHTNER	3000008514	1
21	HEX NUT M12	1000001226	2
22	HSD IDLER Z-16 6205	1000001352	1
23	SPROCKET z-23 WITH KNOB	1000006745	1
24	PP CHAIN SIMPLEX 5/8" X 3/8"	1000001534	1


Rear Footrest Assembly

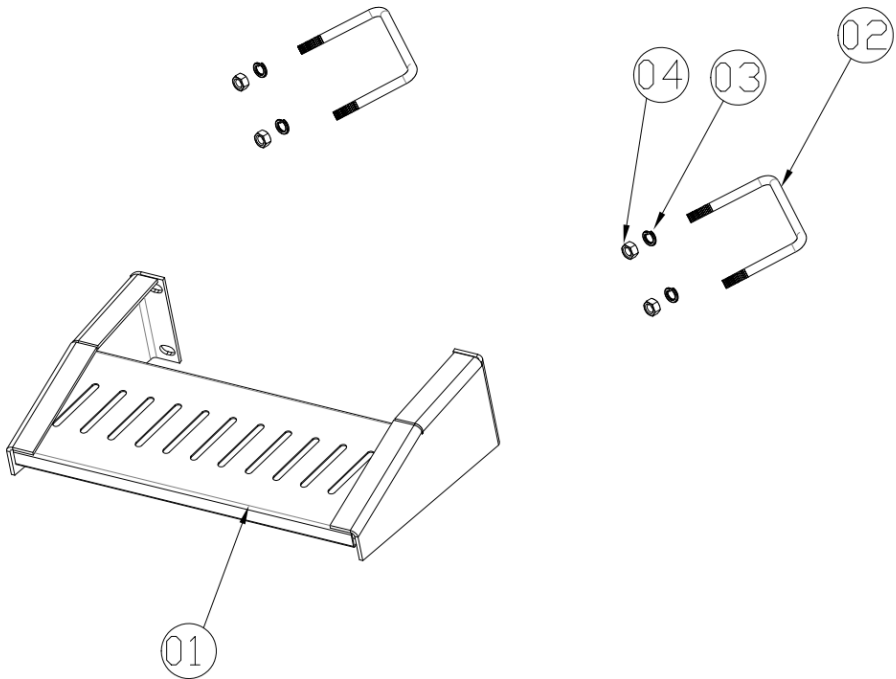

Rear Footrest Assembly

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	REAR FOOT REST	3000008590	1
2	U BOLT 16	1000006569	2
3	SPRING WASHER 16MM GOLDEN MFZN5 C	1000001263	4
4	NYLOCK NUT M16 X 2 MM SILVER	1000001244	4


Disc Assembly

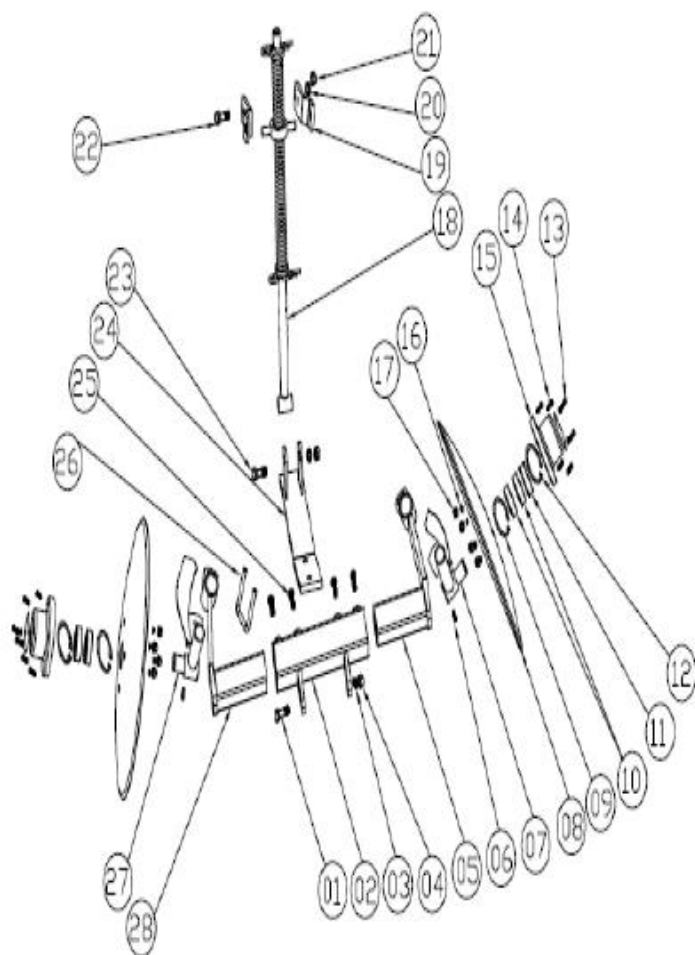

Disc Assembly


SR. NO.	DESCRIPTION	PART NO.	QTY.
1	HEX BOLT M12 X 35 F/T	1000001145	4
2	PP SQ PIPE 60 X 60 X 45 ASSEMBLY	3000002882	2
3	SPRING WASHER 12 MM GOLDEN MFZN5 C	1000001261	4
4	NYLOCK NUT M12 X 1.75 MM SILVER	1000001242	4
5	PP MOUNTING STRIP ASSEMBLY LH	3000003133	1
6	HEX BOLT M10 X 25 MM F/T	1000001128	2
7	PP AXLE PIN ASSEMBLY LH	3000003135	1
8	PP DISC 17"	1000001538	4
9	CIRCLIP 52 MM INTERNAL	1000002225	2
10	PP BEARING 6205 ZZ	1000000762	8
11	OIL SEAL 35 X 52 X 7	1000004170	2
12	CIRCLIP 25 MM EXTERNAL	1000002222	2
13	HEX BOLT M8 X 15 F/T	1000003489	4
14	HEX BOLT M10 X 30MM F/T	1000001129	8
15	PP DISC HUB	1000003525	2
16	SPRING WASHER 10MM GOLDEN MFZN5 C	1000001260	8
17	NYLOCK NUT M10 X 1.50MM SILVER	1000001241	8
18	SPRING ASSEMBLY BIG	1000002399	2
19	SPRING MOUNTING STRIP	3000002585	4
20	SPRING WASHER 12MM GOLDEN MFZN5 C	1000001261	1
21	NYLOCK NUT M12 X 1.75MM SILVER	1000001242	1
22	HEX BOLT 12 X 35 H/T	1000001145	1
23	HEX BOLT M12 X 30	1000005265	2
24	PP STRIP SPRING MOUNTING 10X65X340	3000004630	2
25	HEX BOLT M12 X 30	1000005265	8
26	S D U BOLT M12 X 60 X 100	1000002495	2
27	PP AXLE PIN ASSEMBLY RH	3000003136	1
28	PP MOUNTING STRIP ASSEMBLY RH	3000003134	1

Hitch Assembly

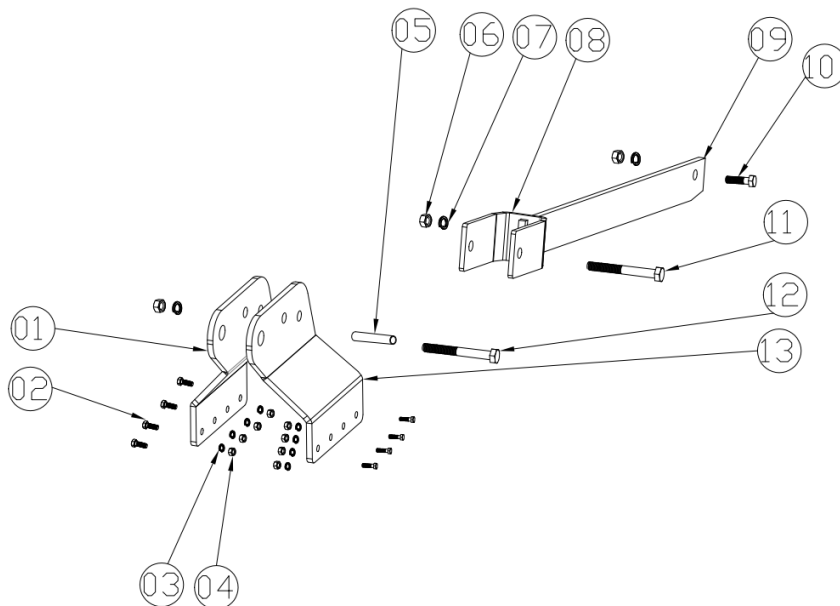


SR. NO.	DESCRIPTION	PART NO.	QTY.
1	HITCH PLATE RH	3000008552	1
2	HEX BOLT M10 X 40MM	1000001131	8
3	SPRING WASHER M10 GOLDEN	1000001260	8
4	NYLOCK NUT M10 SILVER	1000001241	8
5	HITCH BUSH	3000008673	1
6	NYLOCK NUT M15 X 2 MM SILVER	1000001244	3
7	SPRING WASHER 16MM GOLDEN MFZN5 C	1000001263	3
8	U SUPPORT HITCH	3000008553	1
9	HITCH SUPPORT STRIP	3000008554	1
10	HEX BOLT M16 X 30 H/TH	1000001180	1
11	HEX BOLT M16 X 120 H/TH	1000001173	1
12	HEX BOLT M16 X 100 H/TH	1000001169	1
13	HITCH PLATE LH	3000008551	1

Lower Link Assembly

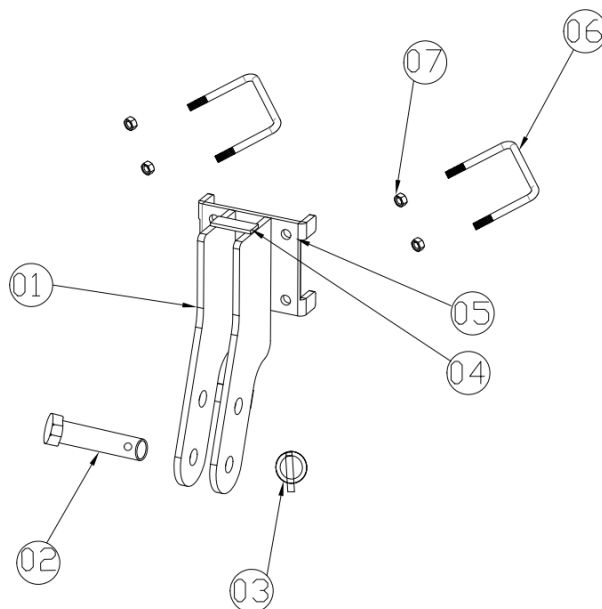

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	LOWER LINK PLATE	3000008555	2
2	LINK PIN M	1000005609	1
3	LINCH PIN	1000002331	1
4	JOINT SUPPORT PATTI	3000003428	2
5	DC BRACKET	3000003446	1
6	U BOLT M18 X 100 X 100	1000006715	2
7	HEX NUT M18 NUT LONG	1000006141	4


Planner Assembly

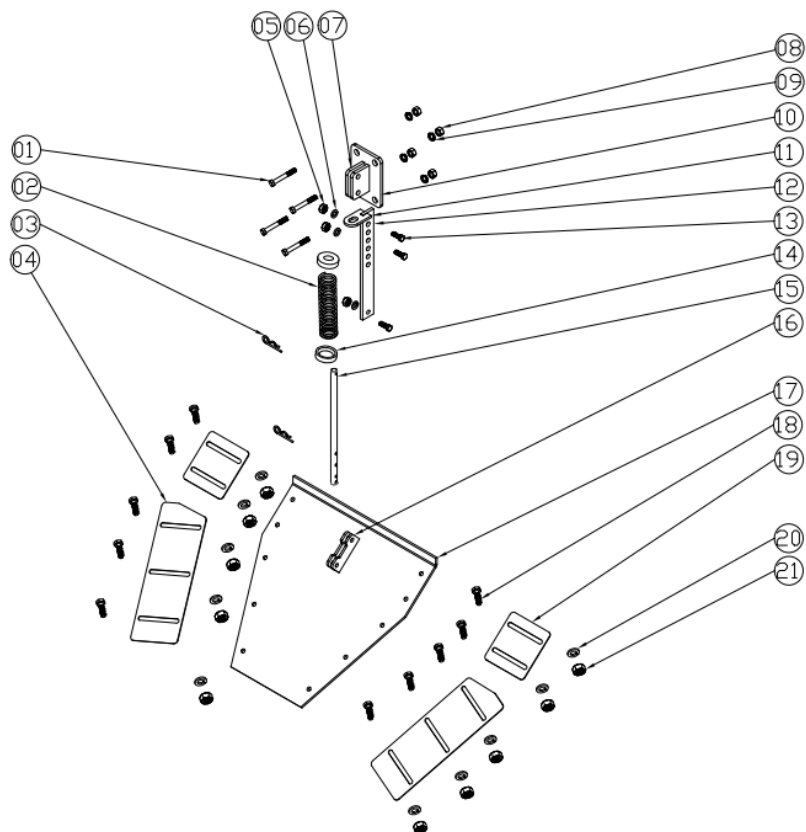

Planner Assembly

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	HEX BOLT 16 X 90 H/TH	1000001197	4
2	SPRING OD 45 WIRE DIA 5MM	1000006568	1
3	R PIN	1000001258	2
4	PLANNER EXTENSION BIG	3000008530	2
5	NYLOCK NUT M12	1000001242	3
6	SPRING WASHER 12	1000001261	3
7	PLANNER BRACKET STRIP	3000008525	2
8	NYLOCK NUT M16	1000001244	4
9	SPRING WASHER M16	1000001263	4
10	PLANNER MTG STRIP	3000008523	1
11	PLANNER SPRING MTG STRIP	3000008527	1
12	PLANNER ADJUSTER STRIP	3000008526	1
13	HEX BOLT 12 X 40	1000001147	3
14	SPRING BOWL	3000008672	2
15	SPRING ROD M16	3000008532	1
16	PLANNER STRIP	3000008528	2
17	PLANNER	3000008529	1
18	HEX BOLT 10 X 15	1000006017	10
19	PLANNER EXTENSION SMALL	3000008531	2
20	SPRING WASHER M10 GOLDEN	1000001260	10
21	NYLOCK NUT M10	1000001241	10


Outer Planner Assembly

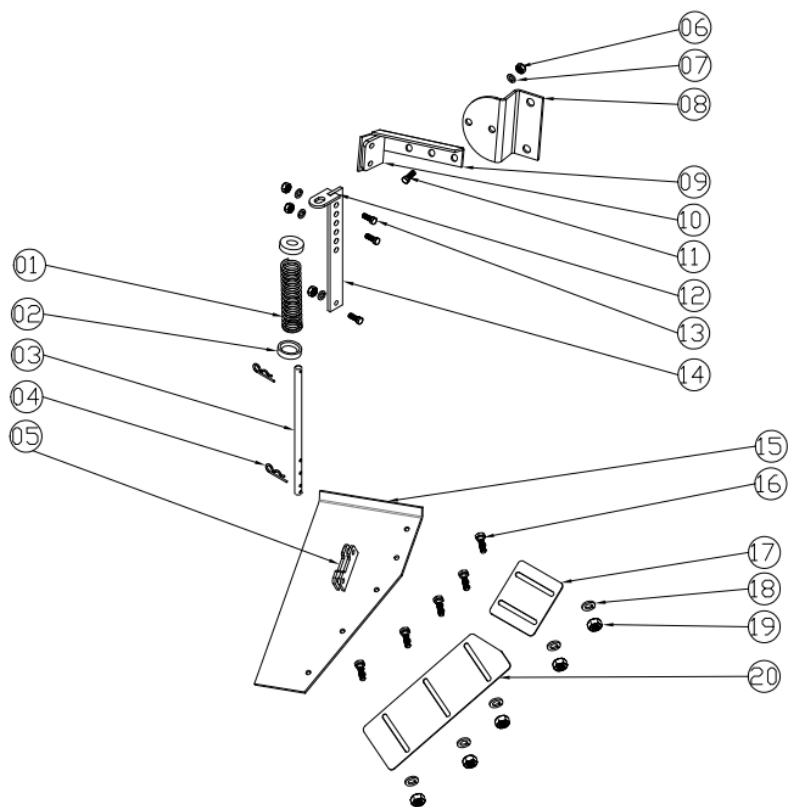

Outer Planner Assembly

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	SPRING ROD 45 WIRE DIA 5MM	1000006568	1
2	SPRING BOWL	3000008672	2
3	SPRING ROD M16	3000008532	1
4	R PIN	1000001258	2
5	PLANNER STRIP	3000008528	2
6	NYLOCK NUT M16	1000001244	1
7	SPRING WASHER M16	1000001263	1
8	MTG BRKT	3000008670	1
9	MTG ANGLE	3000008671	1
10	PLANNER BRACKET STRIP	3000008525	1
11	HEX BOLT 16 X 30 FTH	1000001180	1
12	PLANNER SPRING MTG STRIP	3000008527	1
13	HEX BOLT 12 X 40	1000001147	3
14	PLANNER ADJUSTER STRIP	3000008526	1
15	OUTER PLANNER	3000008669	1
16	HEX BOLT 10 X 15	1000006017	5
17	PLANNER EXTENSION SMALL	3000008531	1
18	SPRING WASHER M10 GOLDEN	1000001260	5
19	NYLOCK NUT M10	1000001241	5
20	PLANNER EXTENSION BIG	3000008530	1


Vibration Assembly

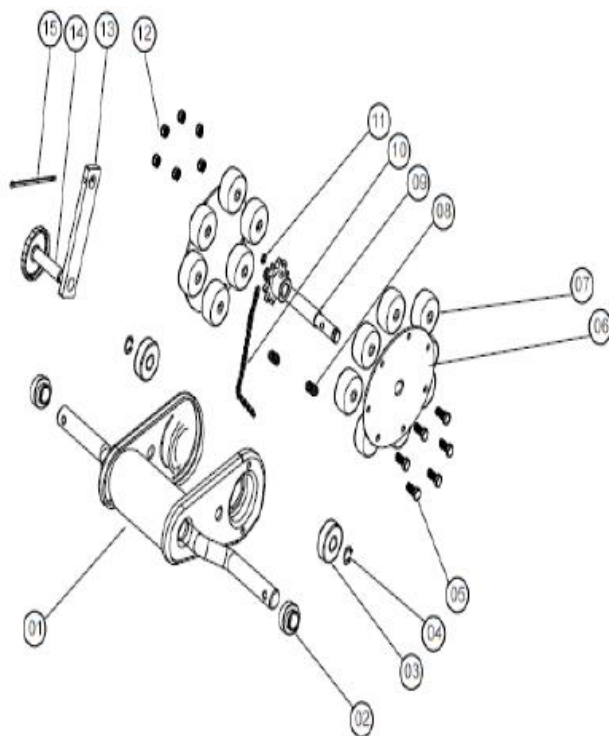

Vibration Assembly

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	PP ROD COVER BELT ADJUSTMENT ROLLER	3000002869	2
2	PP NYLON BUSH VIBRATION OD 25 ID 17	1000001570	2
3	BEARING 6200 ARB	1000000814	4
4	CIRCLIP 10MM EXTENAL	1000003508	4
5	HEX BOLT 5 X 50 MM F/TH	1000003484	12
6	PP VIBRO MECHANISM SIDE PLATE	3000003093	4
7	PP VIBRATION MECHANISM ROLLER	1000001612	6
8	SD SPRING SMALL	1000002484	2
9	SPROCKET & SHAFT ASSEMBLY	3000003091	1
10	PP CHAIN ROLLER D 6.25 3/8' X 7/32	1000001533	1
11	CHAIN LOCK 3/8" FULL	1000001618	1
12	NYLOCK NUT M5	1000003486	12
13	PP VIBRO ADJUSTMENT STRIP	3000003468	2
14	SD PVC COVER BOLT M10 X 50 KNOB	1000003084	2
15	SPLIT PIN 4 X 50	1000000967	2


Rear Tilt Assembly

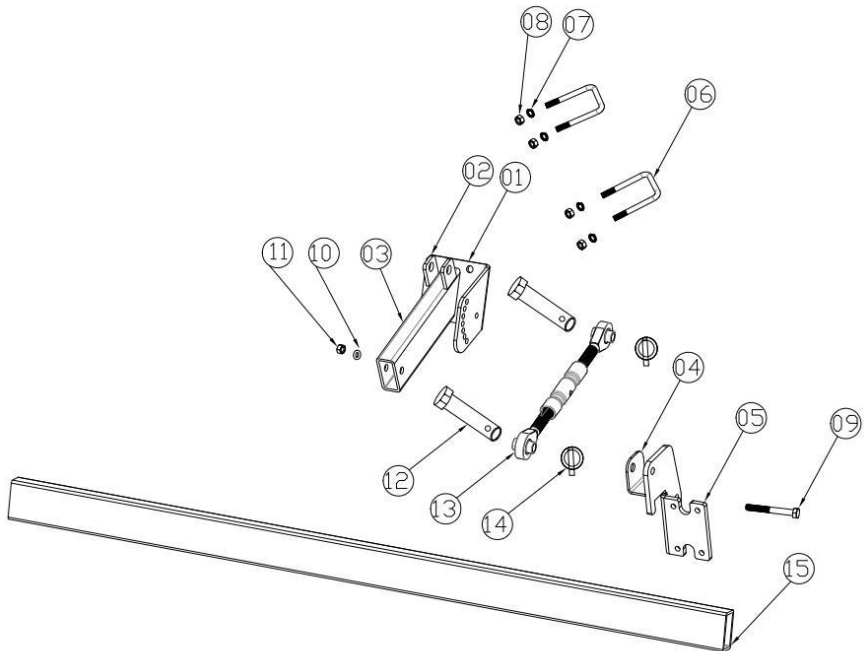

Rear Tilt Assembly

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	REAR PIPE MTG STRIP	3000008505	1
2	TOP LINK MTG STRIP	3000008507	2
3	REAR TILT PIPE	3000008506	1
4	BRACKET SMALL LINK	3000008515	1
5	RIDGER PIPE MTG PLATE	3000008509	1
6	U BOLT M16	1000006569	2
7	SPRING WASHER M16	1000001263	4
8	NYLOCK NUT M16	1000001244	4
9	HEX BOLT 16 X 80 H/TH	1000001196	1
10	SPRING WASHER M16	1000001263	1
11	NYLOCK NUT M16	1000001244	1
12	PIN DIA 19	1000002309	1
13	LINK 14"	1000006567	1
14	LINCH PIN	1000002331	1
15	RIDGER PIPE 1900MM	3000008517	1

Fertilizer Assembly

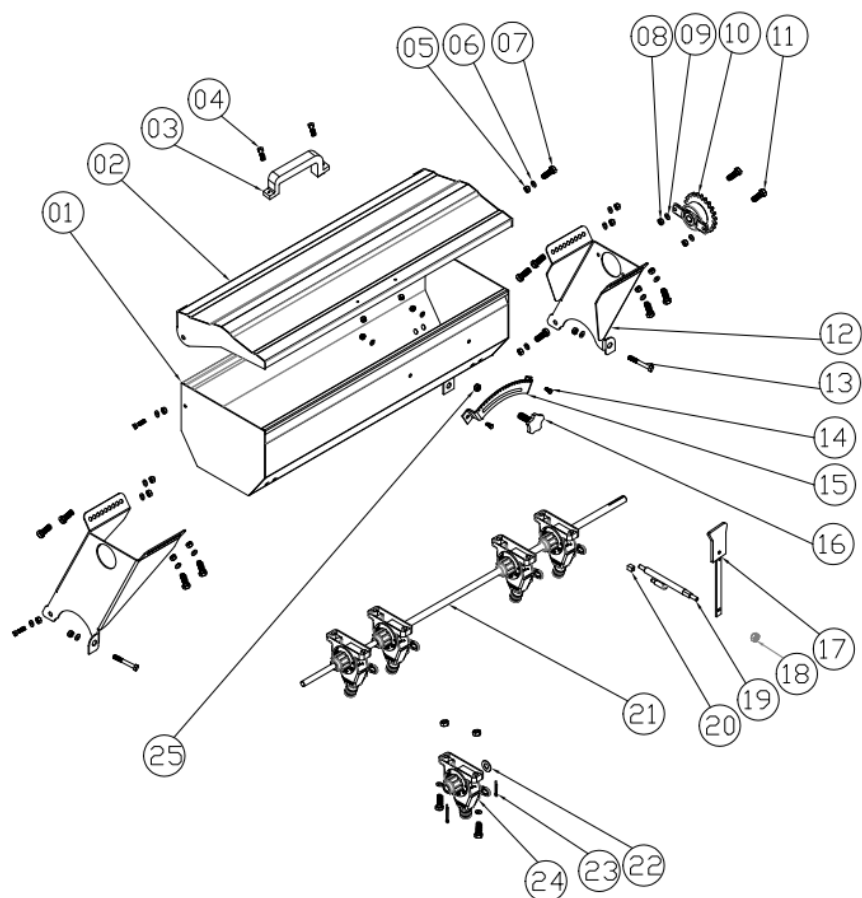

Fertilizer Assembly

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	FERTILIZER CONTAINER	3000008480	1
2	CONTAINER TOP COVER ASSY	3000008485	1
3	HANDLE	1000002476	1
4	HEX BOLT 8 X 30	1000001220	4
5	NYLOCK NUT M10	1000001241	8
6	SPRING WASHER M10 COLDEN	1000001260	8
7	HEX BOLT 10 X 25	1000001128	1
8	NYLOCK NUT M8	1000001237	1
9	SPRING WASHER 8MM	1000001266	1
10	SPROCKET 22 TEETH ASSEMBLY	3000006099	2
11	HEX BOLT 8 X 30	1000001220	1
12	SIDE SUPPORT PLATE LH	3000008482	1
13	HEX BOLT 16 X 30 H/TH	1000001174	1
14	HEX BOLT 8X25 GREADE 8.8	1000006442	1
15	GAUGE PLATE 4MM	3000002855	4
16	PVC COVER BOLT M10 X 50 KNOB (STAR LATTU)	1000002684	8
17	GAUGE LEVER ASSEMBLY	1000003336	8
18	NYLOCK NUT M8 SILVER 10 MFZN5 C	1000001248	1
19	SD FERTILIZER HANDLE ROD DIA 18 80 X 2075	3000003410	1
20	SQUARE BUSH 12 X 12 (RITHA)	1000001380	1
21	GAUGE SHAFT FOR SEEDER ASSEMBLY	3000003335	1
22	WASHER PLAIN ID 20	1000001275	1
23	SPLIT PIN 4 X 75	1000002395	2
24	PISTOL FOR FERTILIZER (HSD)	1000001363	1
25	NYLOCK NUT M10	1000001241	2

Warranty Policy

Farmworld products are warranted to be free of defects in material or workmanship. Farmworld has traditionally followed a generous warranty policy as below:

1. Warranty Period:

Farmworld gives 12 months warranty for export, for the Farmworld products.

2. Warranty Conditions:

2.1 The Company's/seller liability will be limited to the repair or replacement of the part, proven defective within the period of 12 month (for export only) from the date of delivery of new product.

2.2 Parts under warranty policy:

- 2.2.1 Gearbox Housing, Drive shaft, Pinion shaft Transmission shaft Gears, Sprockets, etc.
- 2.2.2 Main frame, Rotor Assembly, 3-Point Linkage, Deflector.
- 2.2.3 Seed Container, Feeder Assy. For Seed & Fertilizer.
- 2.2.4 Bearing hub.
- 2.2.5 Side Disc.
- 2.2.6 Welding Part Failure.

2.3 The parts/materials that are not covered by the warranty are as below:

- 2.3.1 All wearable parts blades, chain, Skid Shoe, Shovels, Bearings, Oil Seals etc.
- 2.3.2 Spring Assembly, Gaskets of Gearbox, Side Chain/Gear drive oils, Air breather.
- 2.3.3 Reflector or indicator, stickers.
- 2.3.4 All fasteners nut & bolt, pins, Hard Liners etc.
- 2.3.5 Wires, Hose Pipes.
- 2.3.6 P.T.O shaft and its parts.
- 2.3.7 Paint

2.4 The claim due to below circumstances will not apply:

- 2.4.1 Accident/wrong application / misuse / wrong handling / improper maintenance.
- 2.4.2 Repair or replacement improperly done by person other than company's authorized representative.
- 2.4.3 Modification in product / part without consulting with the Manufacturer.
- 2.4.4 Damage from the external influence as environment condition, heavy stones, fires disaster and any act of God.
- 2.4.5 Usage of the product with replacement part that has not been manufactured or supplied by the Company will nullify this warranty claim.

3. Compensation Policy:

- 3.1 The warranty is automatically terminate on expiry of 12 months from date of delivery, even if the implements may not be in use for any time during the warranty tenure for any reason.
- 3.2 Company's employees or its Authorized representatives have no authority to vary the warranty terms/period.
- 3.3 Company will not cover any delivery costs for claim parts.

The warranty shall not cover or include any duty or taxes incurred by the Buyer in relation to the product under warranty policy. All proceeding relating to any dispute arising between the company and the Buyer on the liability of the company under this warranty shall be taken in civil court having JURISDICTION in Rajkot only.



Warranty Registration Form

(Customer Copy)

CUSTOMER'S NAME:	
ADDRESS :	
CONTACT NO. : (1)	(2).
SERIAL NO. :	MACHINE MODEL :
INVOICE NO. :	TRACTOR MODEL :
DATE OF SALE :	HP :
EXPLAINED THE FOLLOWING:	YES / NO
LUBRICATION REQUIRED PARTS	
ADJUSTMENT AND CHECKING REQUIRED PARTS	
ROUTINE MAINTENANCE TIPS AND SCHEDULE	
WARRANTY / TERMS IN DETAIL	
SPARES CATALOGUE & RECOGNISING PARTS EASILY	
EMERGENCY CONTACT NUMBER OF DEALER PERSON	
INSTALLATION OF MACHINE AND TRAINING	
RECEIVED MACHINE WITH:	
NO SHORTAGES	
NO DAMAGES	
ALL ITEMS IN TOOL KIT	
CORRECTED PROPELLER SHAFT (PROPERLY LENGTH CUT)	
I UNDERSTOOD COMPLETE OPERATING PROCEDURE AND RECEIVED MACHINE IN PERFECT CONDITION WITH PROPER INSTALLATION	
CUSTOMER'S SIGNATURE	DEALER SIGNATURE WITH SEAL



Honour Your Trust



Honour Your Trust

Warranty Registration Form

(Dealer Copy)

CUSTOMER'S NAME:	
ADDRESS :	
CONTACT NO. : (1) (2).	
SERIAL NO. :	MACHINE MODEL :
INVOICE NO. :	TRACTOR MODEL :
DATE OF SALE :	HP :
EXPLAINED THE FOLLOWING:	YES / NO
LUBRICATION REQUIRED PARTS	
ADJUSTMENT AND CHECKING REQUIRED PARTS	
ROUTINE MAINTENANCE TIPS AND SCHEDULE	
WARRANTY / TERMS IN DETAIL	
SPARES CATALOGUE & RECOGNISING PARTS EASILY	
EMERGENCY CONTACT NUMBER OF DEALER PERSON	
INSTALLATION OF MACHINE AND TRAINING	
RECEIVED MACHINE WITH:	
NO SHORTAGES	
NO DAMAGES	
ALL ITEMS IN TOOL KIT	
CORRECTED PROPELLER SHAFT (PROPERLY LENGTH CUT)	
I UNDERSTOOD COMPLETE OPERATING PROCEDURE AND RECEIVED MACHINE IN PERFECT CONDITION WITH PROPER INSTALLATION	
CUSTOMER'S SIGNATURE	DEALER SIGNATURE WITH SEAL



Honour Your Trust



Honour Your Trust



Warranty Registration Form

Honour Your Trust

(Manufacturer Copy)

CUSTOMER'S NAME:	
ADDRESS :	
CONTACT NO. : (1)	(2).
SERIAL NO. :	MACHINE MODEL :
INVOICE NO. :	TRACTOR MODEL :
DATE OF SALE :	HP :
EXPLAINED THE FOLLOWING:	YES / NO
LUBRICATION REQUIRED PARTS	
ADJUSTMENT AND CHECKING REQUIRED PARTS	
ROUTINE MAINTENANCE TIPS AND SCHEDULE	
WARRANTY / TERMS IN DETAIL	
SPARES CATALOGUE & RECOGNISING PARTS EASILY	
EMERGENCY CONTACT NUMBER OF DEALER PERSON	
INSTALLATION OF MACHINE AND TRAINING	
RECEIVED MACHINE WITH:	
NO SHORTAGES	
NO DAMAGES	
ALL ITEMS IN TOOL KIT	
CORRECTED PROPELLER SHAFT (PROPERLY LENGTH CUT)	
I UNDERSTOOD COMPLETE OPERATING PROCEDURE AND RECEIVED MACHINE IN PERFECT CONDITION WITH PROPER INSTALLATION	
CUSTOMER'S SIGNATURE	DEALER SIGNATURE WITH SEAL



Honour Your Trust



Honour Your Trust



Honour Your Trust



Honour Your Trust

FARMWORLD AGROTECH PRIVATE LIMITED

Office Address:- Plot No. 373, Road-U, Khirasara Industrial Estate, Khirasara,

Taluka – Lodhika, District – Rajkot, 360021 (Gujarat) India.

Email: customercare@farmworld.in | Website: www.farmworld.in