

POTATO PLANTER USER MANUAL



Index

Sr. No.	Contents	Page No.
1.	Introduction	1
2.	Technical Specifications	2
3.	Assembly Parts	3
4.	Safety Instruction	6
5.	Do's and Don'ts	8
6.	Operating Instructions	9
7.	Instruction for Varying Gaps	10
8.	Part List	11
9.	Warranty Policy	26

Introduction

Potato planter is used for sowing the seed of potatoes in the ridge or bed. Farmworld Potato Planter is fully Automatic Potato Planter No labor is required for sowing to ridge distance the seed. The Farmworld Potato planter can sow from Diameter 25mm to 70mm of the mother seed. The Farmworld Potato Planter's ridge can be adjusted as per customer's requirement, it may be 24", 25" & 26".

The Farmworld Potato planter is power driven by wheels to the whole mechanism. The wheel can also help to stabilize the position of machine no need to fix the position of machine by tractor hydraulic lift. The capacity of Farmworld Potato planter 2 row to sow the seed is 2 hours per acre and 4 row planter can sow the seed 1 hour per acre. This machine is Eco friendly machine to environment and farmer also. This machine is designed as per farming of potatoes and can be maintained easily.

Technical Specifications


Potato Planter is designed to meet the needs of Farmers. All Models are available with tool kit and parking stand.

Sr. No.	DESCRIPTION	Specification
1	No. Of Furrow Opener	2 & 4
2	Drive Type	Wheel Drive
3	Wheel Size	02 Pneumatic Wheel (6.00-16 8PR)
4	No. & Type of Bearing Power gear off	UCP-208
5	No. of Hopper assembly	02
6	Storage Capacity of Hopper	250 Kg
7	Capacity of Seed Sowing	01 acre/02 hours
8	Capacity of sowing size of seed	Min. 25mm Dia. / Max. 70mm Dia.
9	Potato Planter Weight	525 Kgs
10	Chain Size for Main Power	5/8" x 3/8" Chain Simplex
11	For Vibration Roller	3/8" x 7/32" Chain Simplex
12	For Joint of Hopper	5/8" x 3/8" Chain Duplex
13	Bearing	Roller Bearing 6205zz, 6200 2RS, UCP 208, UCFL 204
14	Cam	Cam can be used to reduce the blockage of the seed by compression in travelling
15	No. of Cam System	One/Hopper
16	Type of Cam System	Reciprocating Cam

Assembly Parts

1. BELT ASSEMBLY

The belt is equipped with steel bowl for tubers of a diameter from 25 to 35 mm. For lower diameter there is a plastic reduction

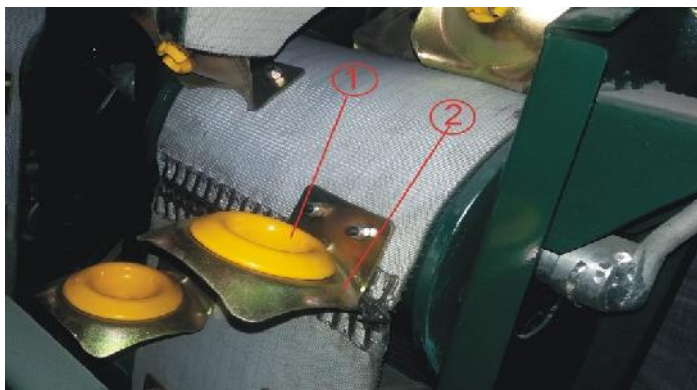

2. UPPER ROLLER

The upper roller supported by side adjustment assembly which gives better adherence to the belt. That permit to eliminate possible skids which can cause some faults during sowing. Upper Roller is shown below



Assembly Parts

3. Lower Roller

The lower roller has biconical shape. This shape prevent the accumulation of extraneous material that can damage the belt.



4. Mechanical Vibrator


The mechanical vibrator with small wheels, situated behind the belt, gives a regular and constant vibration that prevent the loading of more tubers on one bowl.



Assembly Parts

5. Front Power Joint

The front power joint is very simple to handle and permit to get the desired distance between tubers in short time. There are 12 positions to choose.

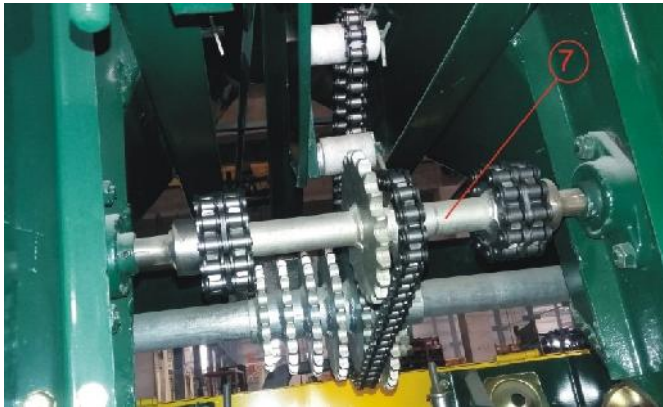

6. Front Liner Assembly

The Function of front liner is marking of ridges and depth adjustment of seeds.



Safety Instructions

Maintenance Safety:

1. Follow all the operating maintenance and safety information in the manual.
2. Support the machine with blocks or safety stands when working beneath it.
3. Follow good work shop practices:
 - Keep service area clean and dry.
 - Use adequate light for the job in hand.
4. Use tools, jacks and hoists of sufficient capacity for the job.
5. Make sure all guards are in place and properly secured when maintenance work is completed.
6. Never wear loose fitting, baggy or frayed clothing when working around or on any of the drive system components.
7. Keep hands, feet, hair and clothing away from moving or rotating parts.
8. Clear the area of bystanders, especially small children, when carrying out maintenance and repairs or making any adjustments

Transport Safety:

1. Review transport safety instructions in tractor manual before moving.
2. Always travel at a safe speed
3. Always use hazard warning flashers on tractor when transporting unless prohibited by law.
4. Do not exceed speed 20km/h during transport.

Safety Instructions

General Safety:

1. First aid kit should be available and learn to use the same in case of emergency.
2. Fire extinguisher should be available and learn to use the same in case of emergency.
3. Wear appropriate protective equipment's. This list includes but not limited to :
 - a) A hard hat.
 - b) Protective shoes with slip resistant soles.
 - c) Protective glasses and goggles.
 - d) Heavy Gloves.
 - e) Hearing Protection.
 - f) Respirator or filter mask.
 - g) Wear suitable ear protection for prolonged exposure to excessive noise.

Storage Safety:

1. Store the unit in an area away from human activity.
2. Do not permit children to play on or around the stored machine.
3. Support frame should be on stands and blocks to provide a secure base.
4. Thoroughly wash the machine and apply rust prevent oil, when not in use for a long time.

Safety Signs:

1. Keep safety signs clean and legible at all time.
2. Replace safety signs that are missing.
3. Install safety features on repaired parts as earlier.

Do's and Don'ts

1. Check all parts of the machine every day whenever you intend to put it in the field.
2. Make sure that parking stand is up while operating in field.
3. Check and tight all bolts and nuts daily.
4. Beware of bystanders while operating the Potato Harvester.
5. Do not allow anyone to stand or sit on the implement while it is transported or operated.
6. Do not leave the tractor seat until the engine is off, brakes locked, and the Potato Planter lowered to the ground.
7. Do not allow children to play in field or to sit on tractor while operation.
8. Always be sure that any new operator should has thoroughly understanding of the implement and should follow the safety precautions.
9. Keep your machine in good working condition. Always contact your dealer for repairs.
10. Never attempt to adjust or perform maintenance on this machine while it is being operated.


Operating Instructions

1. Read and understand the operator's manual and all safety signs before operating, servicing, adjusting, repairing and unplugging.
2. Install and secure all guards and shields before starting or operating.
3. Keep hands, feet, hair and clothing away from moving parts.
4. Lower implement to the ground, place all controls in neutral, stop engine, engage parking brake, remove ignition key. Ensure all moving parts should stop before service, repair, and any adjustment, connect or disconnect.
5. Put all tractor and machine controls in neutral position before starting.
6. Never start or operate the machine unless you are not sitting on tractor seat.
7. Do not operate machine inside a building unless there is adequate ventilation.
8. Do not put hands or feet under machine while tractor engine or machine is running.
9. Always know what you are planting. Never operate Planter in an area that has hidden obstacles. Remove sticks, stone, roots, wire and other objects from working area before starting.
10. Clean reflectors, SMV emblem and lights before transporting.
11. Use hazard flashers on tractor while transporting.
12. Review safety instructions with all operators annually or seasonally.

Safety Precautions:

1. While mounting Potato Planter to the tractor ensure that there should no downward pressure from the tractor hydraulic system on the Potato Planter, also do not add up any external weight on Potato Planter.
2. Adjust the tractor top link length and attach to top most in such a way that the main frame of Potato Planter remains parallel to ground.
3. Lower implement to the ground, place all controls in neutral, stop engine, engage parking brake, remove ignition key. Ensure all moving Parts should stop before service, repair, and any adjustment, connect or disconnect.
4. Keep hands, feet, hair and clothing away from moving, rotating parts. Do not wear loose clothes as entanglement with rotating parts may cause serious injury or even death.
5. Do not make sharp turn while Planter is in the ground, lower position or working.
6. Do not carry passengers while operating machines.

Instructions for Varying Gap between Potatoes

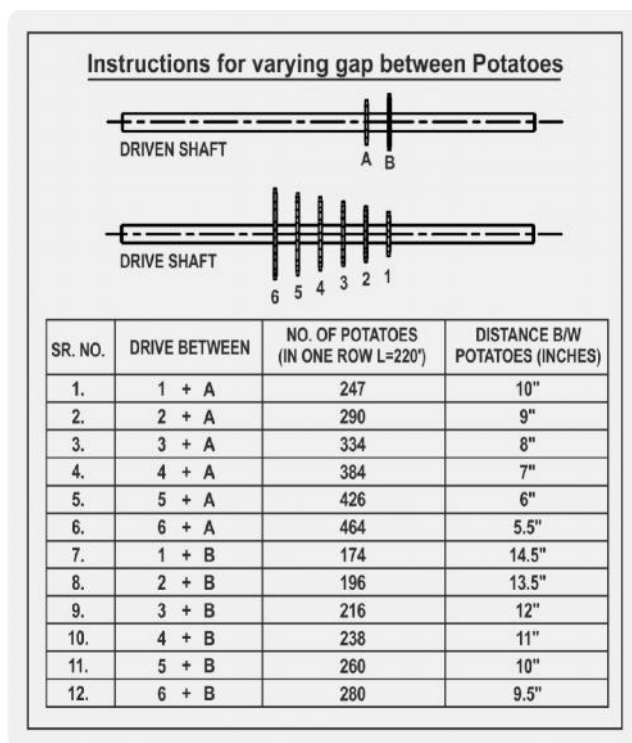

Where

A= Driven Sprocket Z= 13

B= Driven Sprocket Z= 21

For Drive Shaft

1 = Drive Sprocket Z= 21

2 = Drive Sprocket Z= 23


3 = Drive Sprocket Z= 25

4 = Drive Sprocket Z= 28

5 = Drive Sprocket Z= 31

6 = Drive Sprocket Z= 34


Chassis Frame Assembly

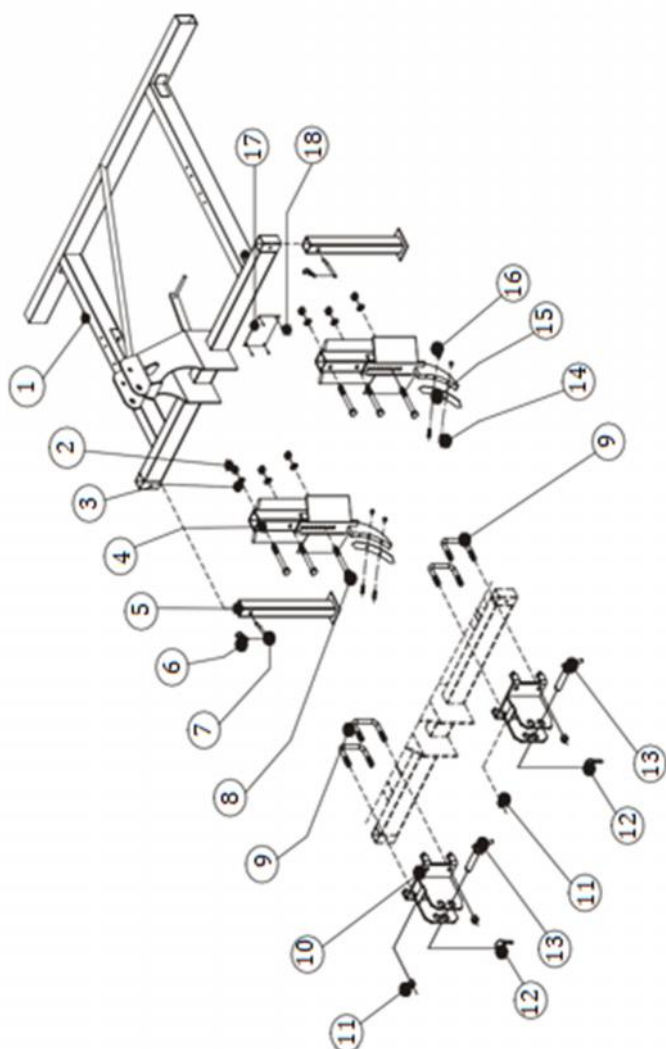

Chassis Frame Assembly

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	MAIN BODY CHASSIE ASSEMBLY	PP9110002AA	1
2	HEX NUT M12	PP9010009AA	4
3	WASHER M12	PP9010032AA	4
4	LINER ASSEMBLY	PP9110001AA	2
5	STAND PIPE	PP9010068AA	2
6	R-PIN	RT9010064AA	2
7	L- PIN	RT9010067AA	2
8	HEX BOLT M12X75	RT9010072AA	2
9	U-BOLT M18 X 100 X 100	PP9010004AA	4
10	HITCH LOWER LINKAGE	PP9040003AA	2
11	HEX NUT M18 LONG NUT	PP9010004AA	8
12	LINCH PIN	PP9050038AA	2
13	HITCH PIN	RT9010066AA	2
14	CSK BOLT M8X60	PP9010080AA	4
15	SHOVEL	PP9020030AA	2
16	NUT M8	RT9010006AA	4
17	NUMBER PLATE	RT9010151AA	1
18	RIVIT	RT9010204AA	4


Ridger Assembly

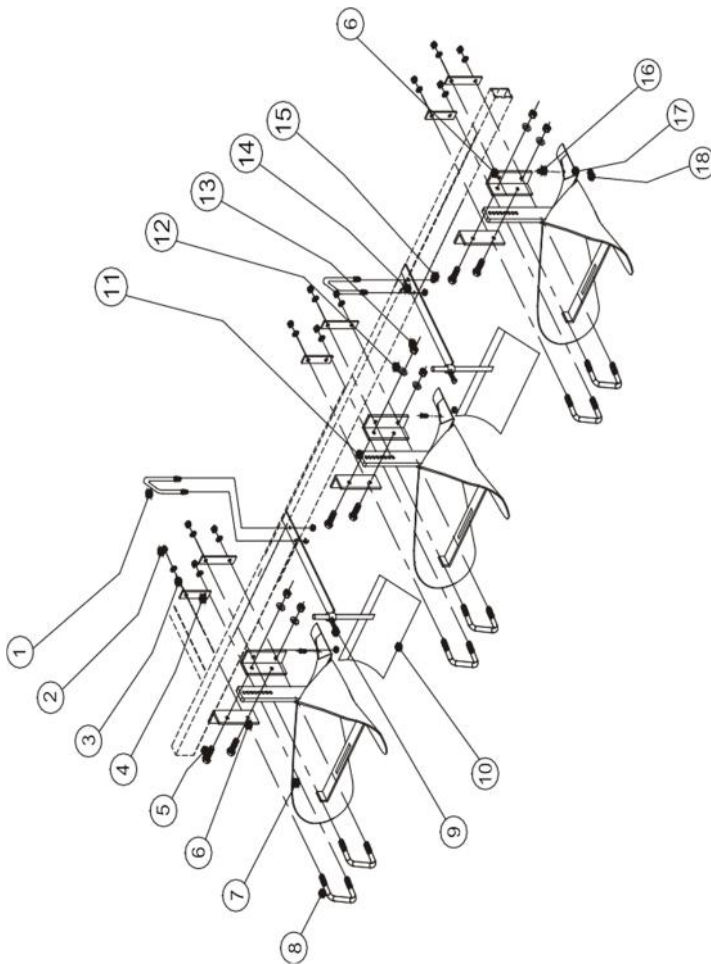

Ridger Assembly

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	U-BOLT M14 X 50 X 150	PP9010003AA	2
2	HEX NUT M18 LONG NUT	PP9010006AA	12
3	PLAIN WASHER M18	PP9010079AA	12
4	SUPPORT FLAT PLATE	PP9020029AA	1
5	HEX BOLT M16X50	RT9010255AA	6
6	ANGLE FOR TYNE BAR	PP9020023AA	6
7	WINGS THICKNESS 6MM	PP9020022AA	2
8	U-BOLT M18 X 100 X 100	PP9010004AA	6
9	HEX BOLT M10X25	RT9010056AA	1
10	PLANNER ASSY.	RT9040021AA	1
11	TYNE BAR FOR REAR RIDGER	PP9020013AA	1
12	PLAIN WASHER M16	PP9010070AA	6
13	NYLOCK NUT M16	RT9010028AA	6
14	PLANNER ANGLE ASSY.	RT9040019AA	1
15	HEX NUT M14	RT9010041AA	4
16	CSK BOLT M10X120	PP9010079AA	4
17	BOOT	PP9070005AA	1
18	HEX NUT M10	RT9010057AA	3


Wheel Assembly

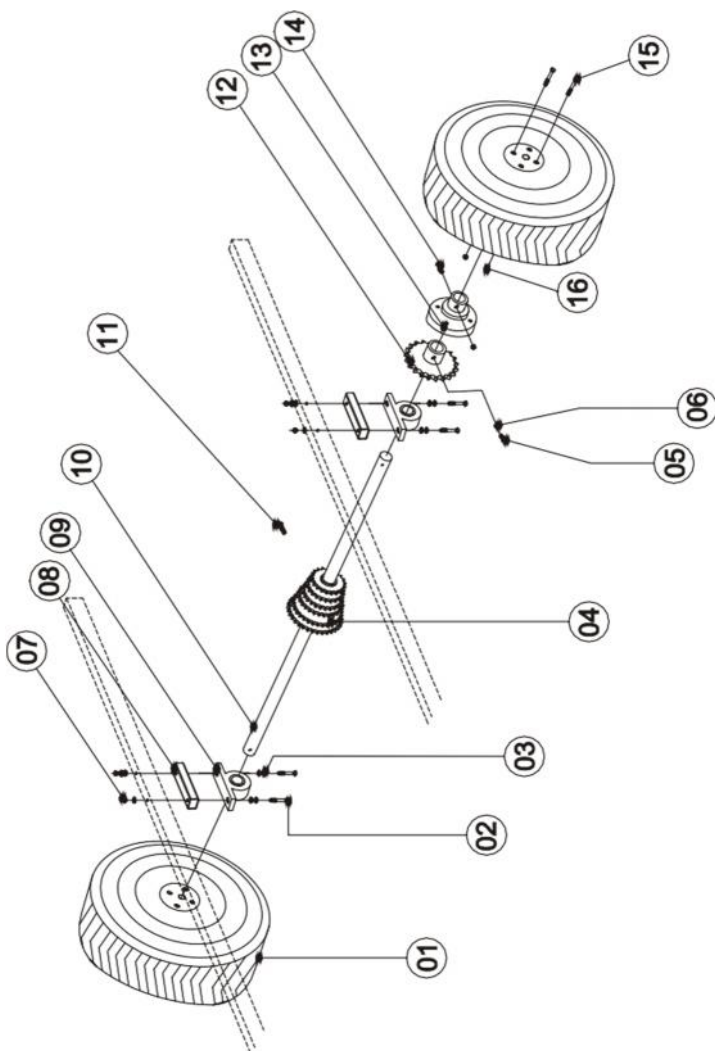

Wheel Assembly

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	TYRE (TUBE TYPE)	PP9080001AA	2
2	HEX BOLT M16X100 H/T	RT9010027AA	2
3	SPRING WASHER 16.2	RT9010029AA	12
4	SPROCKET CLUSTER	PP9040006AA	1
5	HEX BOLT 12X35	RT9010030AA	1
6	HEX NUT M12 PLAIN	PP9010009AA	2
7	HEX NUT M16	PP9010071AA	2
8	PACKING FOR REAR WHEELS	PP9010066AA	2
9	BEARING UCP 208	PP9000008AA	2
10	AXLE SHAFT 40	PP9010001AA	1
11	HEX BOLT 12X35	RT9010030AA	1
12	SPROCKET Z-31 5/8" X 3/8"	PP9050005AA	1
13	HUB	PP9070001AA	2
14	HEX BOLT M12X100 F/T	PP9010080AA	2
15	HEX BOLT M16 X 50 HALF THREAD	RT9010255AA	8
16	HEX NUT M16 NYLOCK	RT9010028AA	8


Fertilizer Container & Drive

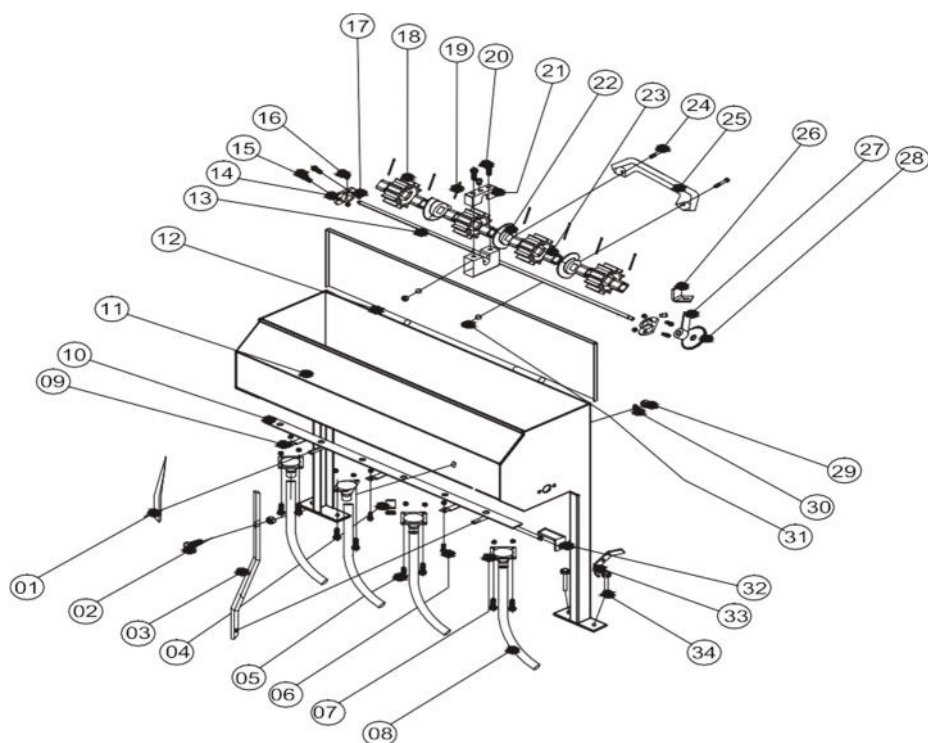

Fertilizer Container & Drive


SR. NO.	DESCRIPTION	PART NO.	QTY.
1	GUAGE NEEDLE	PP9020033AA	1
2	HEX BOLT 12X35 H/T	RT9010030AA	1
3	LEVER STRIP	PP9020035AA	1
4	DRAIN PIPE FOR FERTILIZER	PP9010069AA	1
5	HEX BOLT M6X25 F/T	PP9010074AA	6
6	HEX BOLT M6X25 F/T	PP9010074AA	6
7	NYLONE CONE	PP9080009AA	4
8	RUBBER PIPE	PP9080013AA	4
9	HEX NUT M6	PP9010073AA	12
10	STRIP 600X40X5	PP9020034AA	1
11	FERTILIZER TANK 2MM	PP9040060AA	1
12	HINGE 3"	PP9010043AA	2
13	SQUARE SHAFT	PP9010056AA	1
14	CASTING BUSH BRACKET	PP9070004AA	1
15	HEX BOLT M8X25 F/T	RT9010004AA	4
16	OIL DIP	PP9010048AA	3
17	HEX NUT M8	RT9010006AA	4
18	SPROCKET NYLONE	PP9080008AA	4
19	SPLIT PIN	PP9010045AA	6
20	HEX BOLT M8X25 F/T	RT9010004AA	2
21	CENTER BLOCK	PP9010065AA	1SET
22	NYLONE WORM	PP9080010AA	8
23	NYLONE BUSH L-45, OD-34, ID-19.2	PP9080011AA	8
24	HEX BOLT M6X35	PP9010072AA	8
25	PLASTIC HANDLE	PP9080007AA	1
26	ANGLE SUPPORT FOR FERTILIZER TANK	PP9020072AA	1
27	M.S BUSH	PP9010049AA	1
28	SPROCKET 20T	PP9010009AA	1
29	HEX NUT M12 PLAIN	PP9010009AA	2
30	WASHER 12.2 MM	RT9010032AA	2
31	PLAIN NUT M6	PP9010073AA	2
32	STRIP 130 X 40 X 5 MM	PP9020008AA	1
33	HEX BOLT M12 X 120 HALF THREAD	PP9010008AA	4
34	LATCH LOCK	PP9010044AA	1

Conveyor Belt Assembly

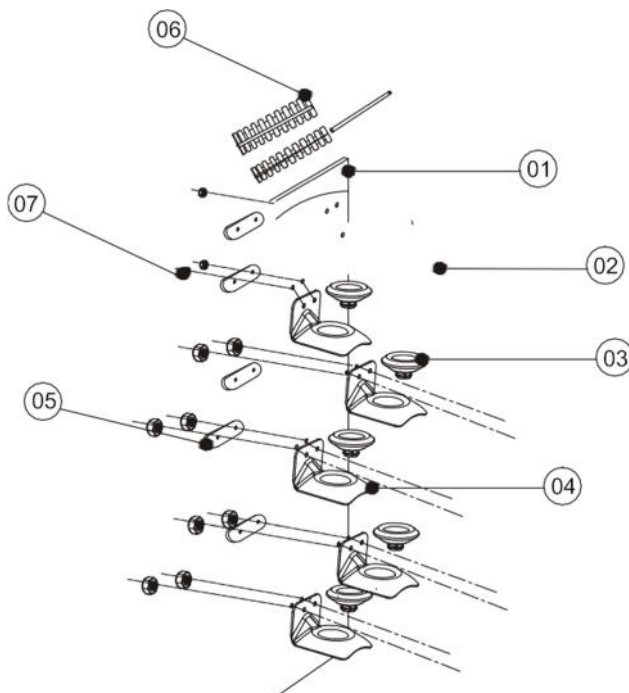

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	CONVEYOR FLATBELT	PP9080004AA	2
2	HEX BOLT M5X15	PP9010026AA	272
3	ADAPTER	PP9080016AA	136
4	BOWL BIG	PP9020015AA	136
5	STRIP	PP9020017AA	136
6	FLEXIBLE BELT JOINT (KANGI)	PP9010028AA	2set
7	NYLOCK NUT M5	PP9010027AA	272


Upper Hopper Assembly

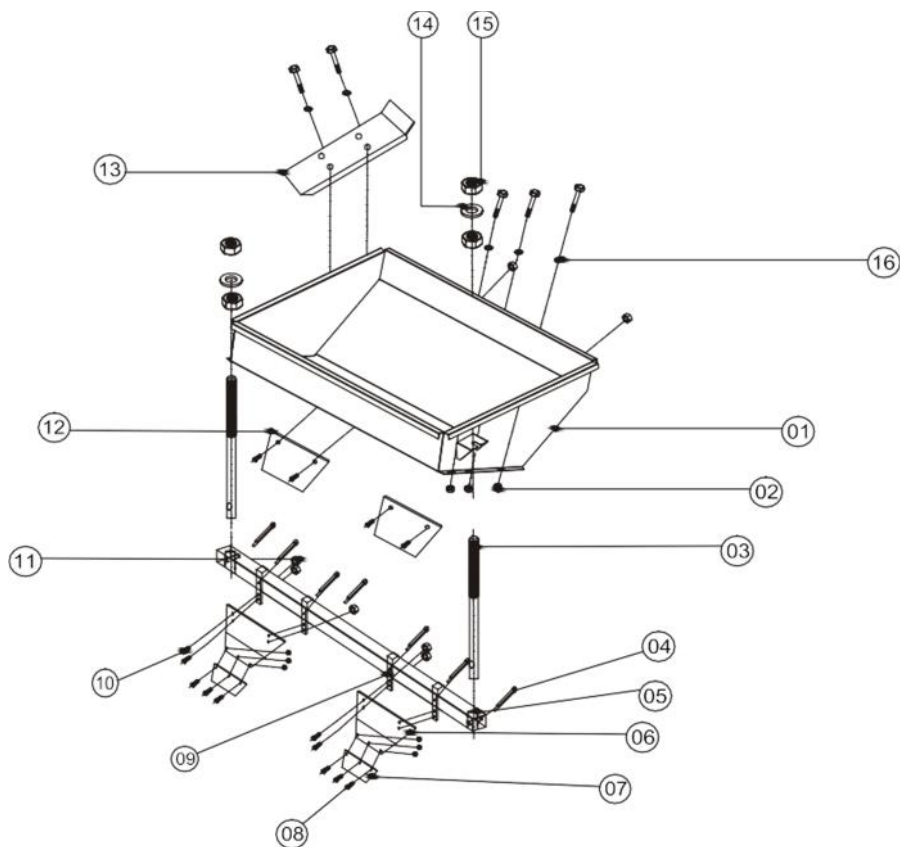

Upper Hopper Assembly

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	UPPER HOPPER ASSEMBLY	PP9020055AA	1
2	HEX NUT M8	RT9010006AA	16
3	SHUTTER OPENER THREAD ROD	PP9010032AA	2
4	SPLIT PIN	PP9010045AA	7
5	SQ. ROD 20X20	PP9010056AA	1
6	FLAPPER SHEET	PP9020019AA	2
7	RUBBER FLAPPER	PP9080014AA	2
8	HEX BOLT 8X25 F/T	RT9010004AA	6
9	STRIP FOR SHUTTER	PP9010036AA	4
10	HEX BOLT M6X25 F/T	PP9010074AA	8
11	HEX NUT M6	PP9010073AA	8
12	SEED DRAIN PLATE	PP9020055AA	2
13	CENTER PARTITION	PP9020069AA	1
14	PLAIN WASHER 16.2	PP9010070AA	4
15	HEX NUT M16	PP9010071AA	4
16	PLAIN WASHER 8.2	RT9010130AA	6


Lower Hopper Assembly and Drive

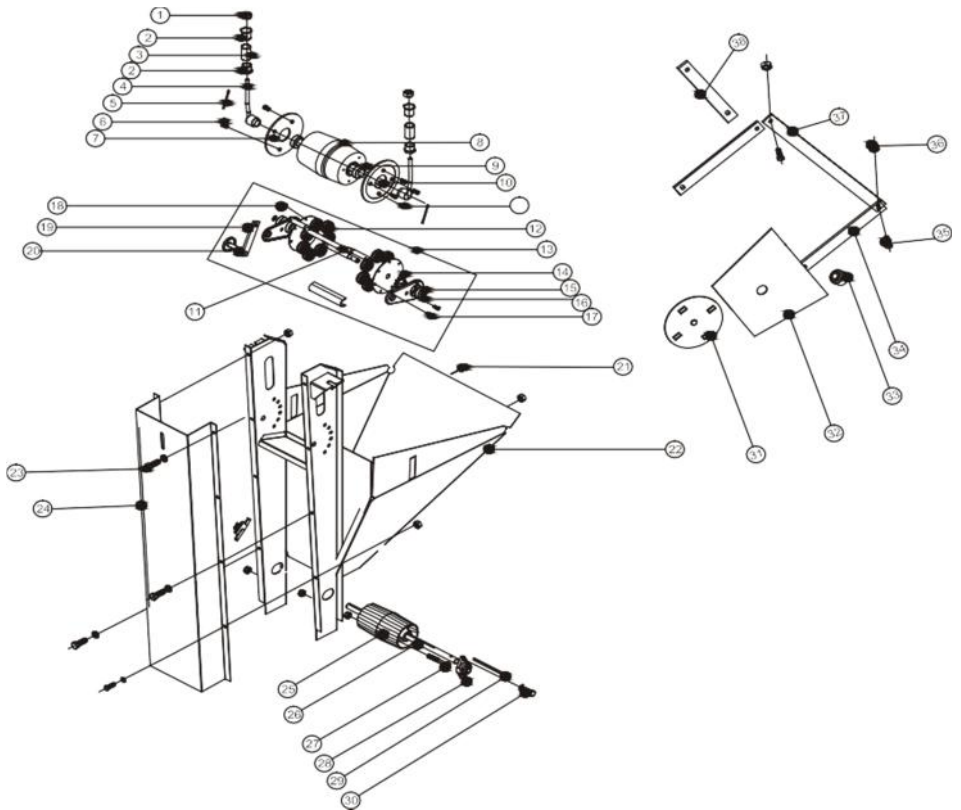

Lower Hopper Assembly and Drive


SR. NO.	DESCRIPTION	PART NO.	QTY.
1	HEX NUT M12X1.75	RT9010159AA	2
2	BUSH FOR UPPER ROLLER	PP9010033AA	4
3	SPACER PIPE	PP9010017AA	2
4	BELT TENSIONER ASSEMBLY	PP9040012AA	2
5	SPLIT PIN 4 MM	PP9010045AA	2
6	CSK BOLT M 8 X 1.25	PP9010038AA	4
7	UPPER ROLLER SIDE PLATE	PP9020027AA	2
8	UPPER ROLLER	PP9070002AA	1
9	BALL BEARING 6005 ZZ	PP9000004AA	2
10	SHAFT Ø 25	PP9010022AA	1
11	CSK BOLT M8X15 FIT	PP5010038AA	4
12	NYLON WHEEL	PP9080003AA	6
13	VIBRO MECHANISM ASSEMBLY	PP9110010AA	1
14	VIBRO MECHANISM SIDE PLATE	PP9020014AA	2
15	BEARING 6200 2 RS	PP9000002AA	2
16	EXTERNAL CIRCLIP DIA.12.2 X 9.5 X 1	PP9010019AA	2
17	HEX NUT M 6	PP9010073AA	2
18	HEX BOLT M6X50	PP9010021AA	6
19	VIBRO ADJUSTMENT SIDE STRIP	PP9020051AA	1
20	BEARING SHAFT BELT ADJUSTMENT ROLLER	PP9050012AA	1
21	HEX NUT M10	RT9010057AA	1
22	LOWER HOPPER ASSEMBLY	PP9040008AA	1
23	HEX BOLT M10X25	RT9010056AA	1
24	FRONT COVER ASSEMBLY	RT9040014AA	1
25	LOWER ROLLER	PP9070003AA	1
26	LOWER ROLLER SHAFT ASSEMBLY	PP9040011AA	1
27	ALLEN BOLT M10 X 140	PP9010037AA	2
28	BRACKET BEARING RHB FI-204	PP9000003AA	2
29	SQUARE KEY 6X6 MM	PP9010046AA	1
30	HEX BOLT M10 X 25	RT9010056AA	2
31	CAM PLATE	PP9020063AA	1
32	SEED DRAIN PLATE	PP9020055AA	1
33	M.S BUSH	PP9010049AA	1
34	CAM ADJUSTMENT	PP9020024AA	2
35	HEX BOLT M10X30 F/T	RT2010015AA	2
36	NYLON NUT M10	RT9010007AA	2
37	JOINT STRIP	PP9020025AA	1
38	CAM ADJUSTMANT 2	PP9020064AA	1

Lower Chain Drive Mechanism

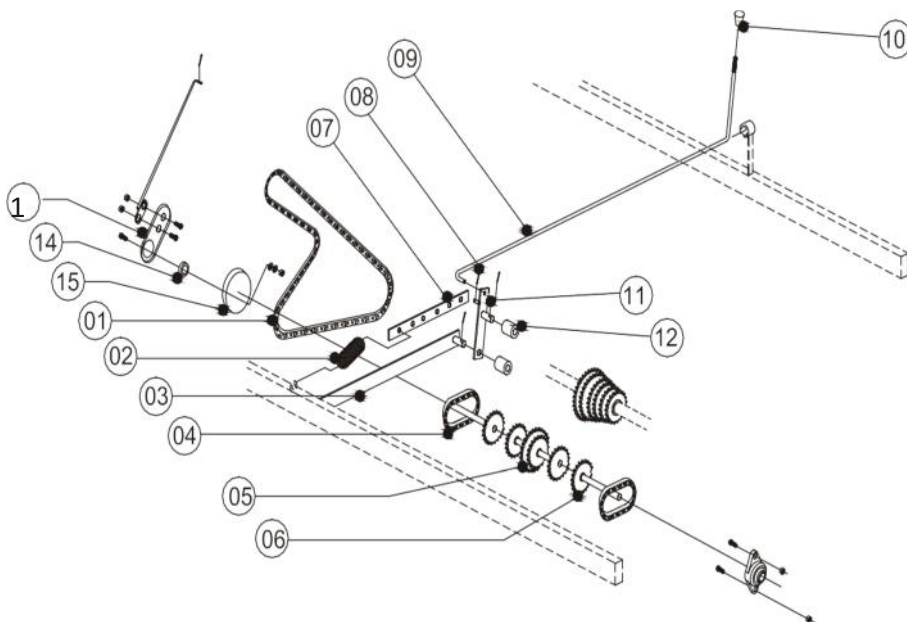

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	CHAIN SIMPLEX 5/8" X 3/8" (35 LINK)	PP9010014AA	1
2	SPRING FOR CLUTCH TENSION	PP9010039AA	1
3	STRIP FOR CHAIN TENSIONER	PP9020012AA	1
4	CHAIN DUPLEX 5/8" X 3/8" (6 LINK)	PP9010013AA	2
5	FRONT POWER JOINT ASSEMBLY	PP9040005AA	1
6	SPROCKET Z-12 5/8" X 3/8" WITHOUT KNOB	PP9050009AA	2
7	SPRING TENSIONER STRIP	PP9020056AA	1
8	SPLIT PIN	PP9010045AA	2
9	ROD 12MM	PP9020026AA	1
10	PLASTIC HANDLE	PP9080007AA	1
11	CHAIN TENSIONER ASSEMBLY	PP9040017AA	1
12	NYLON ROLLER 80X30X17.5MM	PP9080006AA	2
13	BEARING SHAFT LHS & RSH 130X67X2	PP9020012AA	5
14	BERING 6200 2RS	PP9000002AA	04
15	FLANGE FOR CAM	PP9010058AA	01

Side Chain Drive Mechanism

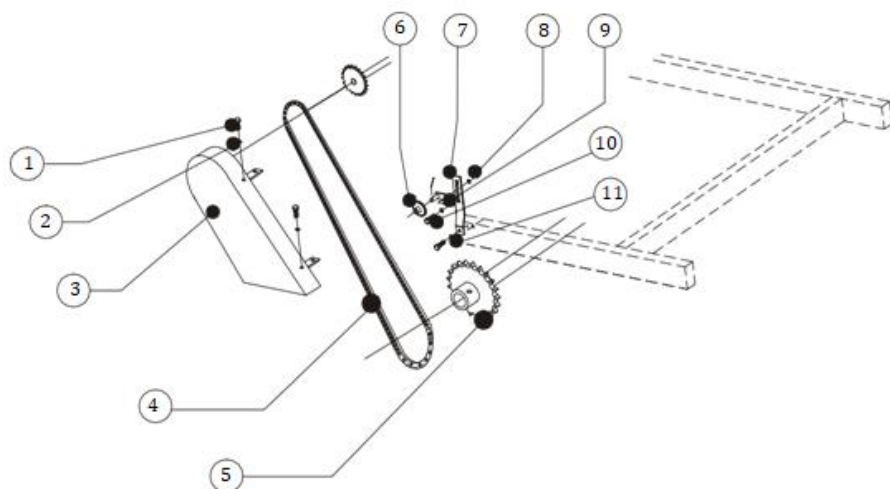

SR. NO.	DESCRIPTION	PART NO.	QTY.
1	HEX BOLT 8X25 F/T	RT9010004AA	2
2	PLAIN NUT M8	RT9010006AA	2
3	SIDE CHAIN COVER	PP9020070AA	1
4	CHAIN SIMPLEX 5/8" X 3/8"	PP9010053AA	1
5	SPROCKET Z-31 5/8" X 3/8"	PP9050005AA	1
6	SPROCKET Z-14 5/8" X3/8"	PP9050010AA	1
7	IDLER SUPPORT STRIP	PP9020071AA	1
8	HEX NUT M10 PLAIN	RT9010057AA	2
9	IDLER SPROCKET ASSY	PP9040026AA	1
10	HEX BOLT 10X25 F/T	RT9010056AA	2
11	PLAIN WASHER M10	RT9010157AA	2

Warranty Policy

Farmworld products are warranted to be free of defects in material or workmanship. Farmworld has traditionally followed a generous warranty policy as below:

1. Warranty Period:

Farmworld gives 12 months warranty for export, for the Farmworld products.

2. Warranty Conditions:

2.1 The Company's/seller liability will be limited to the repair or replacement of the part, proven defective within the period of 12 month (for export only) from the date of delivery of new product.

2.2 Parts under warranty policy:

- 2.2.1 Gearbox Housing, Drive shaft, Pinion shaft Transmission shaft Gears, Sprockets, etc.
- 2.2.2 Main frame, 3-Point Linkage.
- 2.2.3 Transmission parts, Draw bar, Hook, Latch lock, U-clamps.
- 2.2.4 Hydraulic Cylinder, Ring Hitch, Spindle, Bearings, Bearing hub.
- 2.2.5 Tines, Furrow, Turn-buckle, Auger, Disc (Only Breakage).
- 2.2.6 Peeling of Paint, Welding Part Failure.

2.3 The parts/materials that are not covered by the warranty are as below:

- 2.3.1 All wearable parts blades, bar point, Shoe, Shovels, Bearings etc.
- 2.3.2 Oil seals, Gaskets and Gearbox, Side Chain/Gear drive oils, Air breather.
- 2.3.3 Reflector or indicator, stickers.
- 2.3.4 All fasteners nut & bolt, pins, Hard Liners etc.
- 2.3.5 Wires, Hose Pipes.
- 2.3.6 P.T.O shaft and its parts.

2.4 The claim due to below circumstances will not apply:

- 2.4.1 Accident/wrong application / misuse / wrong handling / improper maintenance.
- 2.4.2 Repair or replacement improperly done by person other than company's authorized representative.
- 2.4.3 Modification in product / part without consulting with the Manufacturer.
- 2.4.4 Damage from the external influence as environment condition, heavy stones, fires disaster and any act of God.
- 2.4.5 Usage of the product with replacement part that has not been manufactured or supplied by the Company will nullify this warranty claim.

3. Compensation Policy:

- 3.1 The warranty is automatically terminate on expiry of 12 months from date of delivery, even if the implements may not be in use for any time during the warranty tenure for any reason.
- 3.2 Company's employees or its Authorized representatives have no authority to vary the warranty terms/period.
- 3.3 Company will not cover any delivery costs for claim parts.

The warranty shall not cover or include any duty or taxes incurred by the Buyer in relation to the product under warranty policy. All proceeding relating to any dispute arising between the company and the Buyer on the liability of the company under this warranty shall be taken in civil court having JURISDICTION Actions.



Honour Your Trust

Warranty Registration Form

(Customer Copy)

CUSTOMER'S NAME:	
ADDRESS :	
CONTACT NO. : (1)	(2).
SERIAL NO. :	MACHINE MODEL :
INVOICE NO. :	TRACTOR MODEL :
DATE OF SALE :	HP :
EXPLAINED THE FOLLOWING:	YES / NO
LUBRICATION REQUIRED PARTS	
ADJUSTMENT AND CHECKING REQUIRED PARTS	
ROUTINE MAINTENANCE TIPS AND SCHEDULE	
WARRANTY / TERMS IN DETAIL	
SPARES CATALOGUE & RECOGNISING PARTS EASILY	
EMERGENCY CONTACT NUMBER OF DEALER PERSON	
INSTALLATION OF MACHINE AND TRAINING	
RECEIVED MACHINE WITH:	
NO SHORTAGES	
NO DAMAGES	
ALL ITEMS IN TOOL KIT	
CORRECTED PROPELLER SHAFT (PROPERLY LENGTH CUT)	
I UNDERSTOOD COMPLETE OPERATING PROCEDURE AND RECEIVED MACHINE IN PERFECT CONDITION WITH PROPER INSTALLATION	
CUSTOMER'S SIGNATURE	DEALER SIGNATURE WITH SEAL



Honour Your Trust



Honour Your Trust



Honour Your Trust

Warranty Registration Form

(Dealer Copy)

CUSTOMER'S NAME:	
ADDRESS :	
CONTACT NO. : (1) (2).	
SERIAL NO. :	MACHINE MODEL :
INVOICE NO. :	TRACTOR MODEL :
DATE OF SALE :	HP :
EXPLAINED THE FOLLOWING:	YES / NO
LUBRICATION REQUIRED PARTS	
ADJUSTMENT AND CHECKING REQUIRED PARTS	
ROUTINE MAINTENANCE TIPS AND SCHEDULE	
WARRANTY / TERMS IN DETAIL	
SPARES CATALOGUE & RECOGNISING PARTS EASILY	
EMERGENCY CONTACT NUMBER OF DEALER PERSON	
INSTALLATION OF MACHINE AND TRAINING	
RECEIVED MACHINE WITH:	
NO SHORTAGES	
NO DAMAGES	
ALL ITEMS IN TOOL KIT	
CORRECTED PROPELLER SHAFT (PROPERLY LENGTH CUT)	
I UNDERSTOOD COMPLETE OPERATING PROCEDURE AND RECEIVED MACHINE IN PERFECT CONDITION WITH PROPER INSTALLATION	
CUSTOMER'S SIGNATURE	DEALER SIGNATURE WITH SEAL



Honour Your Trust



Honour Your Trust

Warranty Registration Form

(Manufacturer Copy)

CUSTOMER'S NAME:	
ADDRESS :	
CONTACT NO. : (1)	(2).
SERIAL NO. :	MACHINE MODEL :
INVOICE NO. :	TRACTOR MODEL :
DATE OF SALE :	HP :
EXPLAINED THE FOLLOWING:	YES / NO
LUBRICATION REQUIRED PARTS	
ADJUSTMENT AND CHECKING REQUIRED PARTS	
ROUTINE MAINTENANCE TIPS AND SCHEDULE	
WARRANTY / TERMS IN DETAIL	
SPARES CATALOGUE & RECOGNISING PARTS EASILY	
EMERGENCY CONTACT NUMBER OF DEALER PERSON	
INSTALLATION OF MACHINE AND TRAINING	
RECEIVED MACHINE WITH:	
NO SHORTAGES	
NO DAMAGES	
ALL ITEMS IN TOOL KIT	
CORRECTED PROPELLER SHAFT (PROPERLY LENGTH CUT)	
I UNDERSTOOD COMPLETE OPERATING PROCEDURE AND RECEIVED MACHINE IN PERFECT CONDITION WITH PROPER INSTALLATION	
CUSTOMER'S SIGNATURE	DEALER SIGNATURE WITH SEAL



Honour Your Trust



Honour Your Trust



Honour Your Trust

FARMWORLD AGROTECH PRIVATE LIMITED

Office Address:- Plot No. 373, Road-U, Khirasara Industrial Estate, Khirasara,

Taluka – Lodhika, District – Rajkot, 360021 (Gujarat) India.

Email: customercare@farmworld.in | Website: www.farmworld.in