



Installation & Connection

ENI


1 Download CHASING DORY App

Scan QR code or visit iOS App store /
Google Play to download.
(iOS 9.0 / Android 5.0 and above)



2 Connect Drone and Wi-Fi Buoy

Insert one end of the tether into the drone and the other end into the Wi-Fi buoy. Securely hand-tighten both coupling bolts.

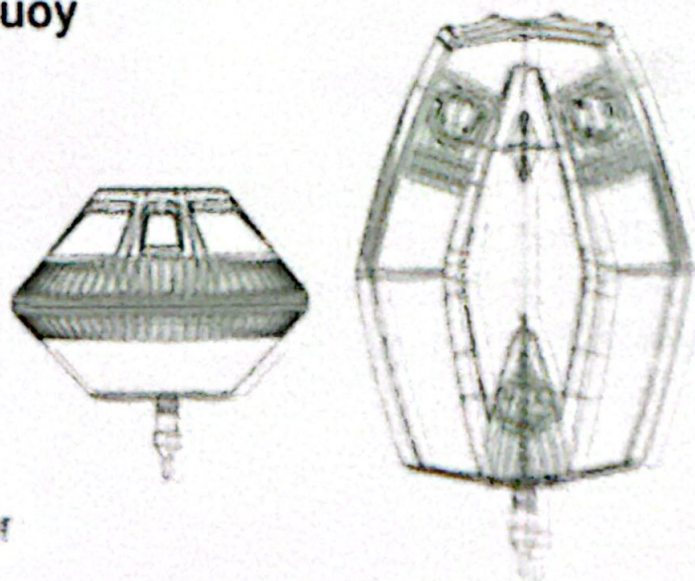


⚠ Note: Check the O-rings on the tether connectors. If they are missing or damaged, please replace them. Make sure the tether connectors are dry before connecting.

3 Booting Up

Once the Dory and the Wi-Fi buoy are connected, the LED lights on the drone will flash and you will hear two self-test sounds. A flashing green light will indicate that both the Dory and Wi-Fi buoy are powered on.

Wi-Fi Buoy


The function of the buoy is to provide Wi-Fi signal, so that the mobile phone can connect with the drone through Wi-Fi, making it possible to control the drone in real time.

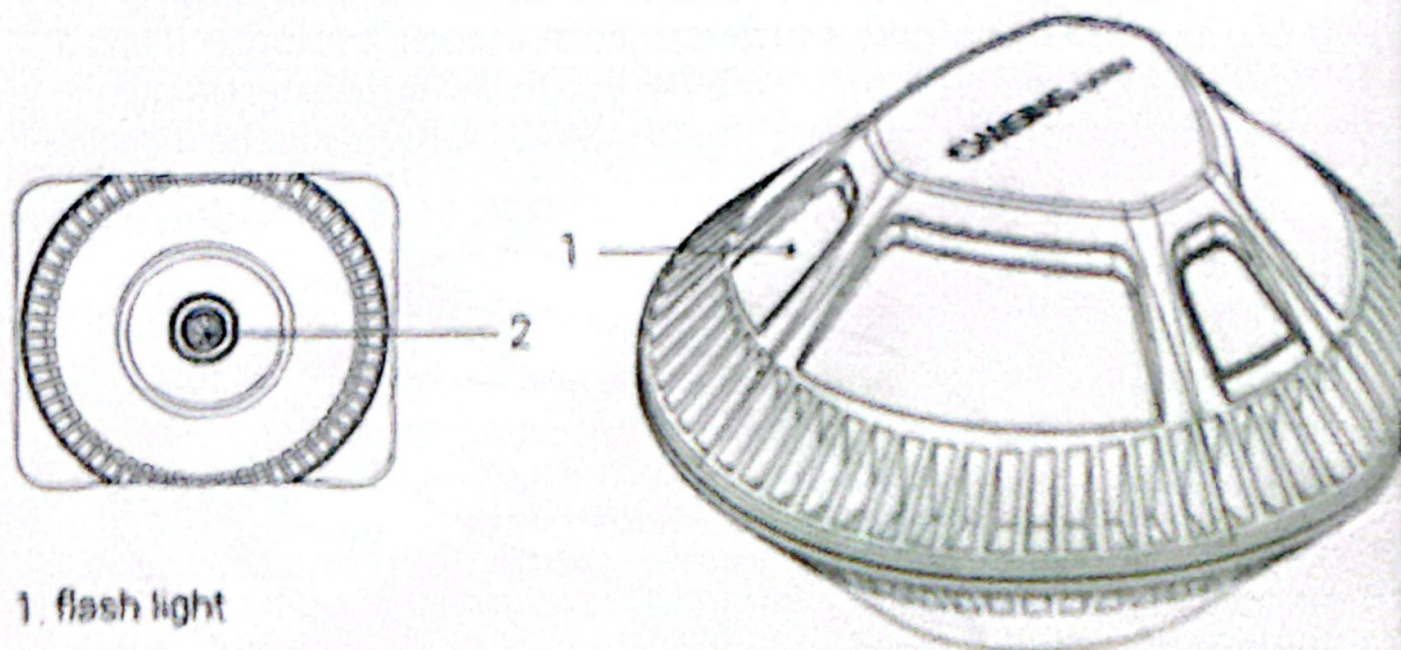

- 1. flash light
- 2. tether socket

Tether

The tether is used to connect the drone and buoy

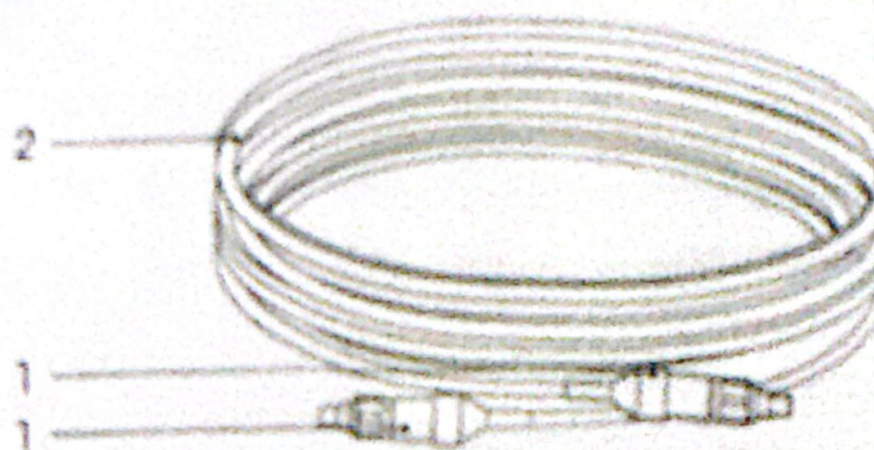

- 1. tether connectors
- 2. tether

④ Wi-Fi Connection

EN

On your mobile device, go to Wi-Fi settings.

Click* Dory _xxxxx* network and enter password 12345678.



⑤ App Homepage


After entering the CHASING DORY App, tap "Enter Camera" to enter the shooting interface.



⑥ CHASING DORY App Tutorial

EN


Open the App, when you see "connected" on the bottom left corner, click "start" on the right. Now you will see the main App interface (below). Click the power button to unlock the drone and use the virtual joy stick on screen to control the drone's movement.

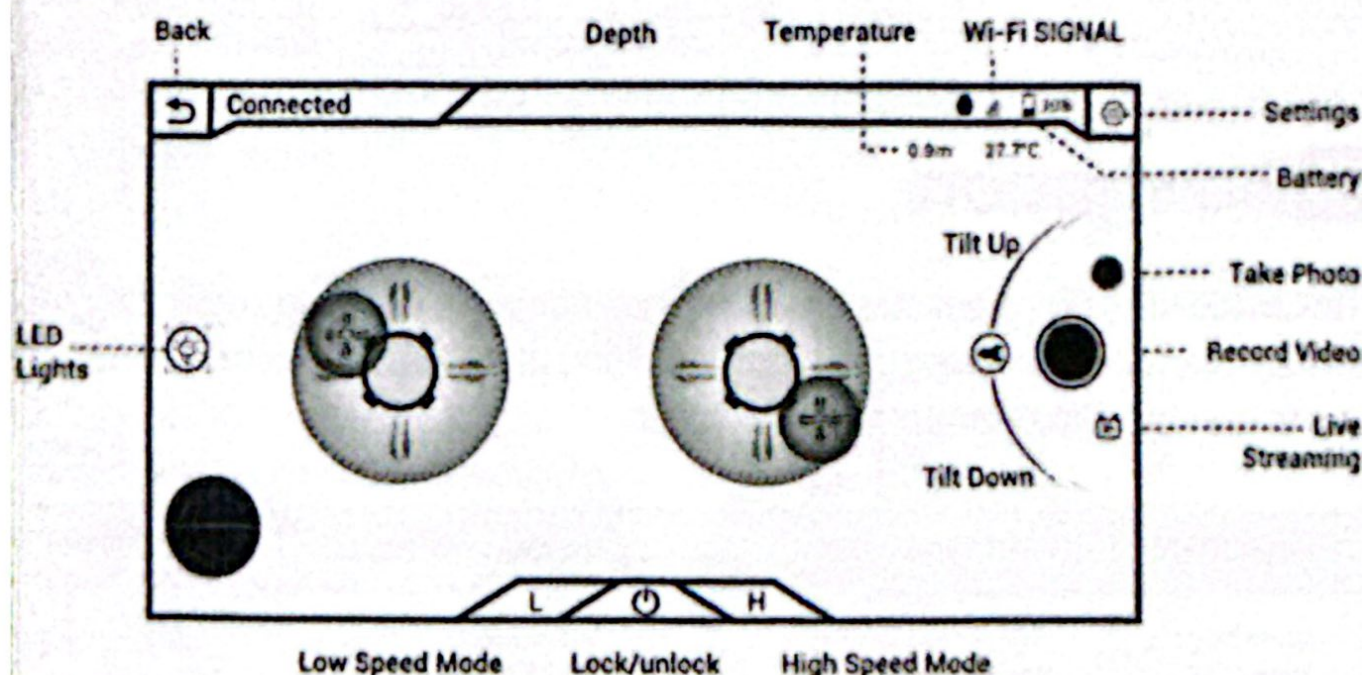


- Note:**
1. Do not start the Dory motors while out of the water. Doing this can seize the motors.
 2. For better user experience, we are constantly updating software interface & features.

⬇ Photo & Video Download

- 1 Once the drone and buoy are connected, open CHASING DORY App and click on "Media"

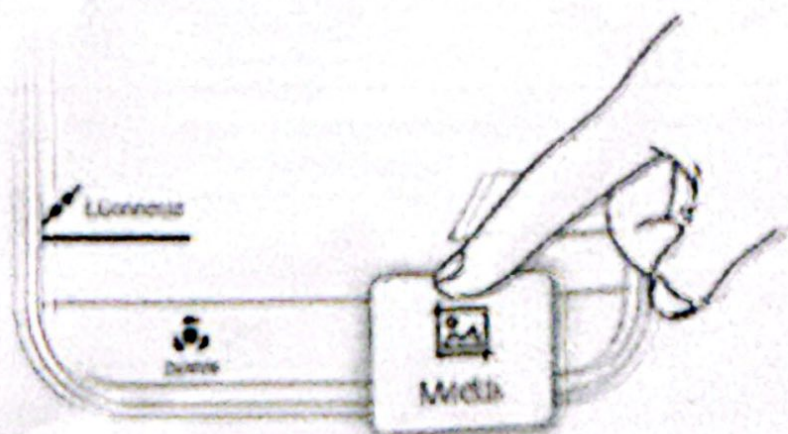

- 2 Find the video / photo you wish to download.
Click the download button to save it directly to your phone / tablet.

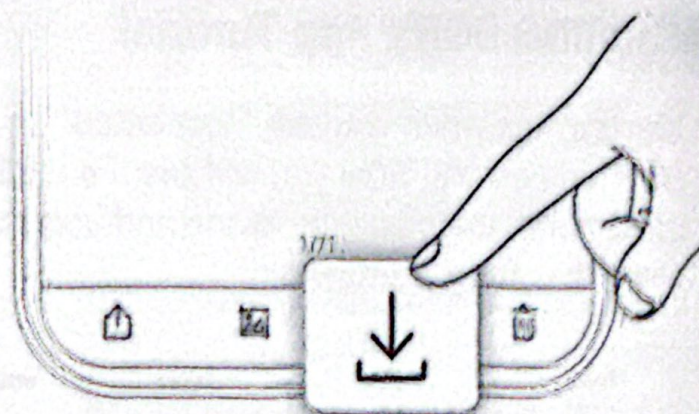

Navigation

The CHASING DORY has 8 states: ascending, decending, left turn, right turn, forward, backward, lowering the head, and lifting the head. See details below on how to use the virtual controller to navigate.

Flight Direction	American Hand	Japanese Hand	Virtual Controls
Ascending / Decending 	left virtual joystick, move up and down 	right virtual joystick, move up and down 	options for customize
Turn left / right 	left virtual joystick, move left and right 	left virtual joystick, move left and right 	options for customize
Forward / Backward 	right virtual joystick, move up and down 	left virtual joystick, move up and down 	options for customize

Flight Direction	American Hand	Japanese Hand	Virtual Controller
Lowering the head / Lifting the head 	Tilt up / Tilt down 	Tilt up / Tilt down 	


EN

▲ Note: The default mode is Japanese hand. You can switch to American hand or customize settings in the app.

Charging Guidelines

ROV. After the power adapter is connected, the indicator light of the power adapter turns red to indicate normal charging or green to indicate the completion of charging. Unplug the adapter in time after charging.

▲ No need to charge the buoy since the buoy contains no battery.

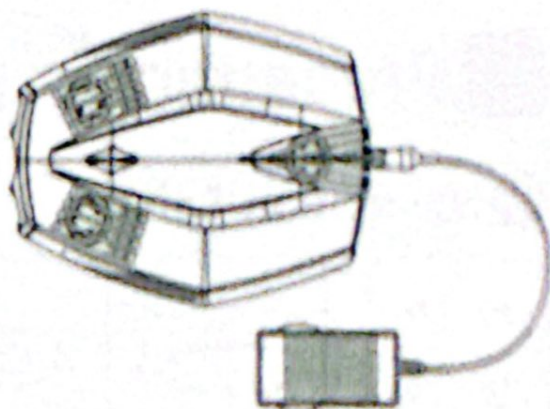

Specifications

DRONE

SIZE	247*188*92mm
WEIGHT	1.1kg
MAX DEPTH	14.5m
MAX SPEED	1.5kn
RUNTIME	Up to 60min
BATTERY CYCLE LIFE	≥300times

BUOY

SIZE	130*130*88mm
WEIGHT	160g
STORAGE	160
MAX WIFI DISTANCE	15m

CHARGER

POWER	12.6V 1.8A
CHARGING TIME	3 hours

CAMERA

CMOS	1/2.9-inch
LENS	f/1.6
Focus range	1m ~ ∞
ISO RANGE	100-3200
FOV	100°
MAX RESOLUTION	2M (1920*1080)
FORMAT	JPEG
VIDEO	FHD: 1920*1080 30FPS
VIDEO STREAM	4M
VIDEO FORMAT	MP4

SENSOR

	3 axis gyro
IMU	accelerometer
	compass
DEPTH SENSOR	±0.5m
TEMPERATURE SENSOR	±2


LED

BRIGHTNESS	2*250 Lumens
COLOR TEMPERATURE	4500K-5000K
CRI	80


▲ Note: Charging time varies by environmental factors, actual results will vary.

Precautions


1 Navigation Safety

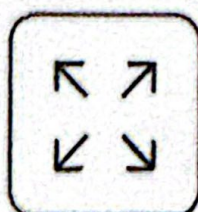

Open sea navigation

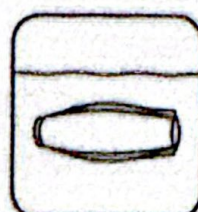


Suggested to use in calm waters

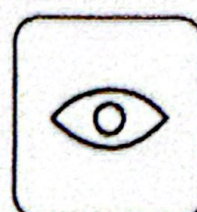

For best results dive in clear waters, avoid heavy seaweed areas.



No dense radio or radar signals

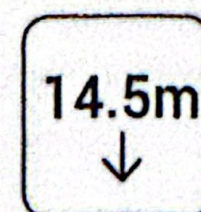


Do not dive more than 14.5m




The buoy's Wi-Fi range is 15 meters. If distance between Wi-Fi buoy and phone exceeds this distance, the connection will be lost.


2 Battery Protection

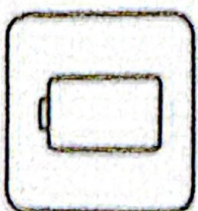


Do not run out of battery power

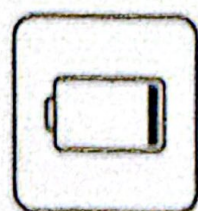

Charge it when the power is less than 25%

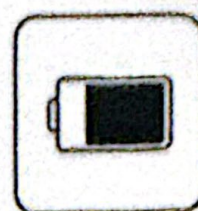


When not in use, keep battery power at 50% - 70%

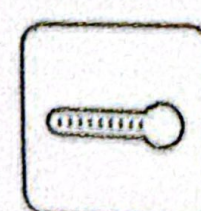

Working temperature: -10°C ~ 55°C (14°F ~ 140°F)

▲ Note: Fully discharge every 3 months.


③ Others

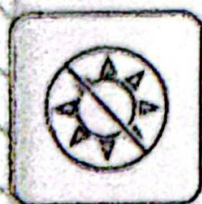


When not in use, do not expose the drone to sunlight. Store it in a cool dry place or in the protective case.



Children must use product under adult supervision.

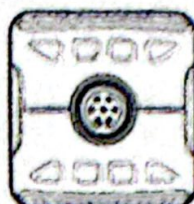

Before use, check for water on the tether connectors. If present, wipe with a towel.

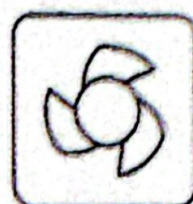

After each use please wash the motor and propellers with clean water.

EN

Others

1. Do not turn on the LED lights before entering the water.
2. Rusted screws should be replaced immediately.
3. After each use, dry the connectors on drone, buoy and tether with absorbent towel.
4. Do not place heavy objects on drone or tether to avoid possible damage.
5. When not in use, do not expose the drone to sunlight. Store it in a cool place or in the protective case.
6. Do not run drone motors out of water for more than two minutes to avoid wearing out thrusters.

Support

If you have any questions or technical issues, send an email to the aftersales services of Chasing or contact us on the official website.

Aftersales support on the official website:

<https://www.chasing.com/> >> Contact us >> Online Customer Support >> Click here

Aftersales service email addresses:

support01@chasing-innovation.com for Europe.

support02@chasing-innovation.com for Asia and Oceania.

support03@chasing-innovation.com for South America, North America, and Africa.

CHASING

This guide may be updated without notice.

Visit the official Chasing website for the latest version: <https://www.chasing.com>