
🚀 ATLS nRF54L15 — Release Notes & Setup Guide (Aug 21)

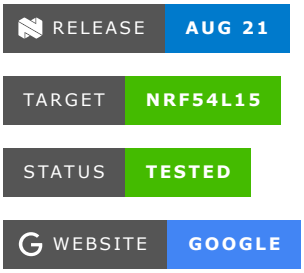


📋 Quick Setup Workflow

Mermaid demo



Plantuml demo

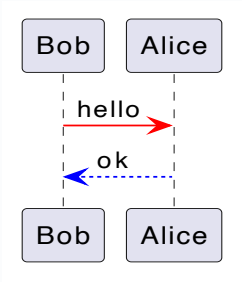

🧩 Code HTML chèn vào file .md để break page khi chuyển sang PDF

Nhớ add [1 empty row] ở trên và ở dưới code html

```HTML
<!-- add [1 empty row] -->
<div style="page-break-after: always; break-after: page;"></div>
<!-- add [1 empty row] -->
```

🛠️ Step-by-Step Instructions

1️⃣ Flash Firmware

Flash the merged hex file to the board using **J-Flash** or **nRF Connect Programmer**:

- **Binary:** `merged_ATLS_NRF54L15_nrf54l15_cpuapp.hex`

2️⃣ Open Serial Terminal

Open the serial terminal using the **nRF Connect for VS Code** extension:

- **Baud Rate:** `115200`
- **Data Bits:** `8`, **Stop Bits:** `1`, **Parity:** `None`

3️⃣ Inspect File System

Check the active storage directory and files:

```bash
# Print current working path
fs pwd

# List files and directories
fs ls
```

4️⃣ Scan & Configure Wi-Fi

📡 Scan available networks:

```bash
netcfg scan
```

⚙️ Configure Wi-Fi credentials:

```bash
netcfg set ssid "your_wifi_ssid"
netcfg set password "your_wifi_password"
netcfg set security wpa2-psk
```

> ⚠️ **Important**
>
> **Security Type Case-Sensitivity:**
> Always use **lowercase** for the security type (e.g., `wpa2-psk`, `open`, `wpa3-sae`) as shown in the scan results.

5️⃣ Reboot System

Apply the new configuration by rebooting the device:

```bash
kernel reboot
```

6️⃣ Verify Wi-Fi Status

After the board reboots, check the connection state and assigned IP address:

```bash
netcfg status
```

> 💡 **Tip**
> If connection fails, re-check credentials with `netcfg scan` and verify that the AP signal strength is sufficient.

📄 Command Summary Reference

Step	Action	Shell Command	Description
01	`Check Path`	`fs pwd`	Display current LittleFS working directory
02	`List Files`	`fs ls`	List stored files in filesystem
03	`Scan Wi-Fi`	`netcfg scan`	Scan for nearby 2.4GHz / 5GHz Wi-Fi APs
04	`Set SSID`	`netcfg set ssid ""`	Save Target Wi-Fi SSID
05	`Set Pass`	`netcfg set password ""`	Save Wi-Fi Password
06	`Set Security`	`netcfg set security wpa2-psk`	Set Authentication (`wpa2-psk`)
07	`Reboot`	`kernel reboot`	Soft reset the board
08	`Check Status`	`netcfg status`	Check connection, IP, RSSI