

Pan head screw IS M5×20

9022 371 1020

Bin A9 | 1 spare per FRK | S2 supervision




Online guide

Main FRK use: MS 462 starter / fan-housing mounting.

Match the full part number. Blue marks identify the screw; drawings are not to scale. Fitted quantities below describe the saw. The kit carries **one shared spare**.

MS462 C-M — ITEM 17

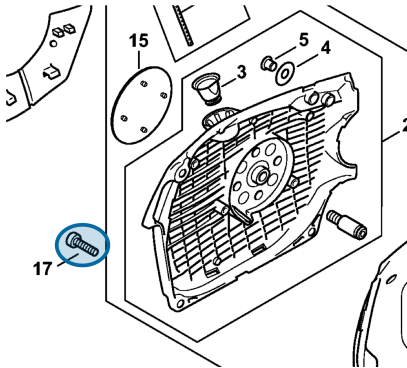

MS 462 — starter / fan housing


Secures the starter / fan housing to the crankcase. This is the main intended field use of the spare. The screw is separate from the complete starter assembly.

Item 17 | 3 fitted

MS 462 C-M Z spare-parts list, 10/29/2024.

Section O; PDF drawing p. 21, parts table p. 22.

MS462 C-M — ITEM 5

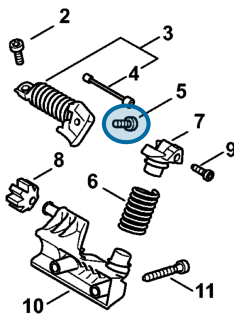

MS 462 — AV spring


Also used at the anti-vibration spring attachment shown in this drawing.

Item 5 | 1 fitted

MS 462 C-M Z spare-parts list, 10/29/2024.

Section AI; PDF drawing p. 32, parts table p. 33.

MS261 C-M — ITEM 20

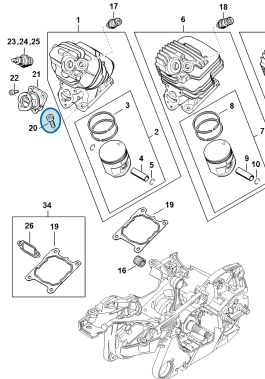

MS 261 — cylinder mounting

Secures the cylinder to the crankcase. Included for identification and compatibility; cylinder work would normally go to the shop in our operation.

Item 20 | 4 fitted

MS 261 C-M spare-parts list, 10/02/2023.

PDF drawing p. 8, parts table p. 9.

Drawings © ANDREAS STIHL AG & Co. KG; cropped and highlighted for identification. Use the service information applicable to the saw for the repair procedure.

Save this PDF before deployment or keep a printed copy with the kit.

2026-09-27