

# Pan head screw IS M5×20


## 9022 371 1020

Bin A9 | 1 spare per FRK | S2 supervision



Online guide

### MS462 C-M — ITEM 17

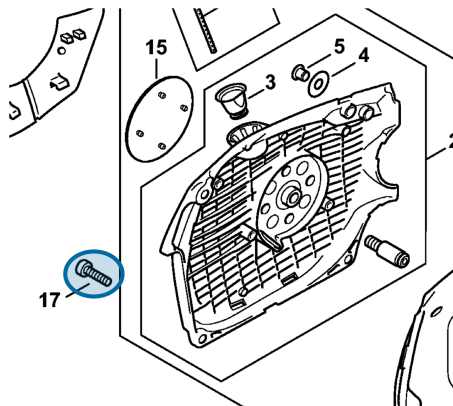

### MS 462 — starter / fan housing


Secures the starter / fan housing to the crankcase. Listed separately from the complete starter assembly.

**Item 17 | Qty fitted: 3**

MS 462 C-M Z spare-parts list, 10/29/2024.

Section O; PDF drawing p. 21, parts table p. 22.

### MS462 C-M — ITEM 5

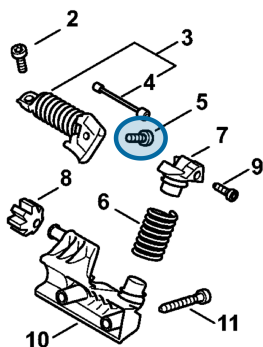

### MS 462 — AV system


Anti-vibration spring attachment.

**Item 5 | Qty fitted: 1**

MS 462 C-M Z spare-parts list, 10/29/2024.

Section AI; PDF drawing p. 32, parts table p. 33.

### MS261 C-M — ITEM 20

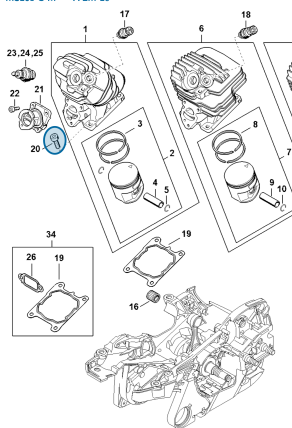

### MS 261 — cylinder mounting

Secures the cylinder to the crankcase.

**Item 20 | Qty fitted: 4**

MS 261 C-M spare-parts list, 10/02/2023.

PDF drawing p. 8, parts table p. 9.