




Online guide

Pan head screw IS M5×20

9022 371 1020

Bin **A9** | 1 spare per kit | **S2** supervision

MS462 C-M — ITEM 17

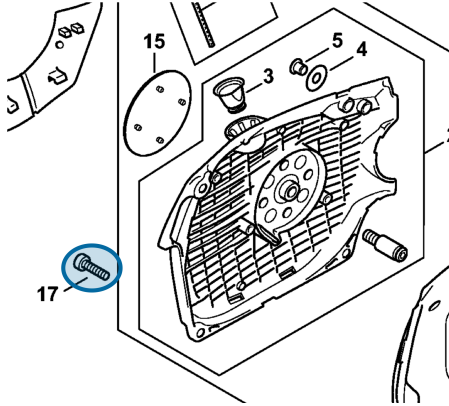

MS 462 — starter / fan housing


Secures the starter / fan housing to the crankcase. Listed separately from the complete starter assembly.

Item 17 | **Qty fitted: 3**

MS 462 C-M Z spare-parts list, 10/29/2024.

Section O; PDF drawing p. 21, parts table p. 22.

MS462 C-M — ITEM 5

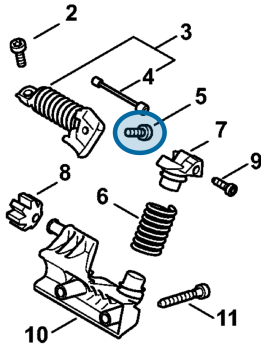

MS 462 — AV system


Anti-vibration spring attachment.

Item 5 | **Qty fitted: 1**

MS 462 C-M Z spare-parts list, 10/29/2024.

Section A1; PDF drawing p. 32, parts table p. 33.

MS261 C-M — ITEM 20

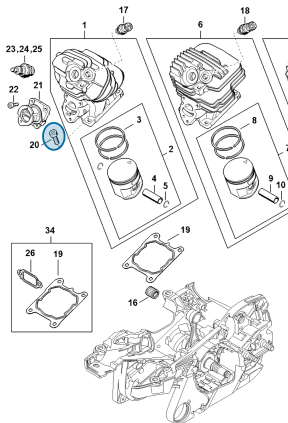

MS 261 — cylinder mounting

Secures the cylinder to the crankcase.

Item 20 | **Qty fitted: 4**

MS 261 C-M spare-parts list, 10/02/2023.

PDF drawing p. 8, parts table p. 9.