


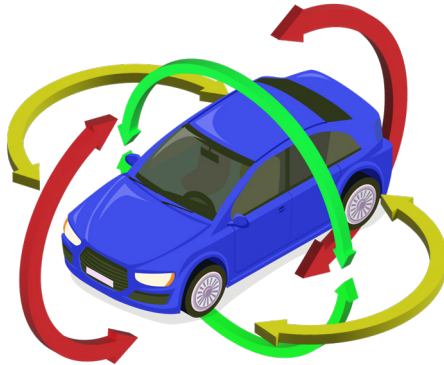

It's natural for your vehicle's balance to shift a bit when it starts to move. To maintain stability of your vehicle, keep the weight evenly balanced across the tires. Regular maintenance, correct tire pressure, and alignment checks will help you do this.



PITCH

Lay your hand flat on a table. Lift your fingers and feel the increased pressure on your wrist. Now put your fingers on the table and lift your wrist. This forward and backward motion is called pitch (shown here with arrows).

When you accelerate, the weight of the vehicle shifts to the back and increases pressure on the rear of the vehicle. If you stop abruptly, the weight shifts forward, increasing pressure on the front of the vehicle.