尺寸：122x185mm 2026.6.9 157克铜板 彩印 PANTON 7579C

REBUNE®
BEYOND IMAGINATION

كتيب التعليمات
Instructions Manual

ELECTRIC HEATER	اسم المنتج Product Name
RE-7-112	رقم الموديل Model Number

REMOTE CONTROL · 24 TIMER · 2000W Power

INTRODUCTION

- Before using your new heater, please carefully read through the following instructions. KEEP THIS BOOKLET IN A SAFE PLACE SO THAT YOU MAY CONSULT IT LATER.
- After removing the packaging, make sure that the appliance is in good condition.
- The packaging materials may contain plastic, nails etc., which may be hazardous and therefore should not be left within the reach of children.

Product details:
Model No.:RE-7-112
VOLTAGE：220V-240V~
Frequency：50-60Hz
Power：2000W

IMPORTANT SAFETY INFORMATION

- Installation MUST be carried out by a qualified electrician.
- Avoid installation behind a door.
- Use only the voltage specified on the rating plate of the heater.
- Do not cover or restrict airflow to the inlet or exhaust grilles in any manner as the appliance may overheat and become a fire risk (for Fan Heaters).
- Do not cover grilles, block entry or exhaust of airflow by placing appliance against any surface. Keep all objects at least 1 metre from the front and sides of the appliance. With exception of appliances designed for wall-mounting, maintain a 1 metre gap from the rear of the unit as well.

WARNING: FIRE RISK EXISTS IF THE HEATER IS COVERED BY OR POSITIONED CLOSE TO CURTAINS OR OTHER COMBUSTIBLE MATERIALS

- Do not place appliance close to a radiant heat source.
- Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.
- This appliance heats up when in use. To avoid burns, do not let bare skin touch hot surfaces. Switch off and use handles where provided when moving.
- Do not use the appliance to dry clothes.
- Do not leave the appliance unattended whilst in use.
- Do not insert or allow foreign objects enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
- Do not immerse in liquid or allow liquid to run into the interior of the appliance, as this could create an electrical shock hazard.
- Do not use this appliance on a wet surface, or where it can fall or be pushed into water.
- Do not reach for an appliance that has fallen into water. Switch off at supply and unplug immediately.
- Do not operate any appliance with a damaged cord, plug or after the appliance malfunction or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical or mechanical adjustment, service or repair before further use.
- Do not operate appliance with wet hands.
- This appliance is intended for household use only and not for commercial or industrial use.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- A common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum-cleaning air vents and grilles, where available.
- Do not use this appliance in a window as rain may cause electric shock.
- Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
- Do not connect the appliance to the mains source until it has been installed in its final location and adjusted to the position it will be used in.
- This appliance is not intended for use in bathrooms, laundry or similar locations which may be exposed to water, moisture or humidity.
- Always operate on a flat horizontal surface.
- Switch off the appliance, then use handles (where provided) to change its position.
- Do not operate with the cord coiled up as this could cause a build up of heat, which could pose a hazard.
- The use of an extension cord with this appliance is not recommended.
- Do not remove the power plug from the socket by pulling the cord – grip the plug instead.

- Always unplug appliance when not in use.
- Do not allow cord to come in contact with heated surfaces during operation.
- Do not run cord under carpeting, throw rugs or runners etc. Arrange cord away from areas where it is likely to be tripped over.
- Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that the cord has been fully removed from any cord storage area before use.
- Do not store appliance in a box or closed space until it has cooled down sufficiently.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children should be supervised to ensure they do not play with the appliance.
- The appliance must not be located immediately below a socket-outlet.
- Do not use this appliance with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
- If the supply cord is damaged, it must be replaced by a qualified electrical person in order to avoid a hazard.
- Do not use this appliance outdoors, or on wet surfaces. Avoid spilling liquid on the appliance.
- In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

ASSEMBLY INSTRUCTIONS

1. Install the left base and right base as below picture.Pass the powercord through the slot on the base.
2.Take out the plastic nut,use plastic nuts clockwise to secure the baseto the product.

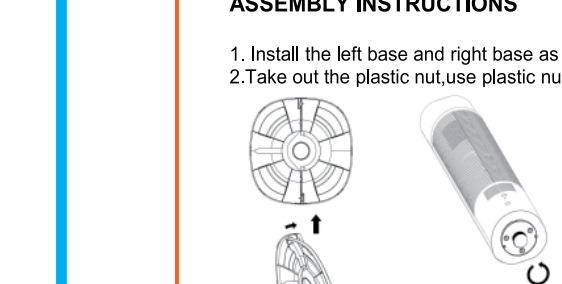

CONTROL PANEL VIEW

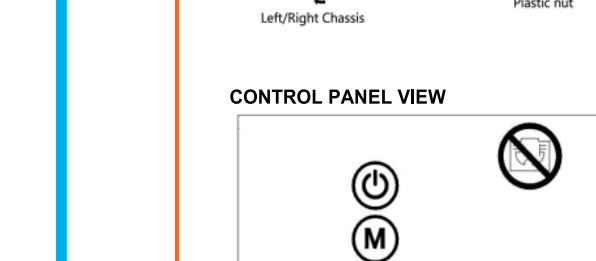

OPERATION

1. Before inserting the plug into an electrical outlet, make sure that the electrical supply in your area matches that on the rating label on the unit.
2. Carefully remove the heater from the plastic bag and the carton.
3. Place the heater on a firm level surface
4. Plug the cord set into a 220-240V~AC electrical outlet.

5. Turn the heater ON by pressing the " ⏻ " button ,the unit will display the current Room temperature and blow the cold air.
6. Upon pressing the " +/- " button,and "ECO" lamp will light up,start set the suitable temperature(the highest temperature you can set until to 49℃),when the set temperature is higher then room temperature,the unit will start one heat setting,and at this time the " ✲ " symbol will light up with WHITE color.If continue pressing " +/- " the set temperature will be even higher.The unit will start totally 2 heat settings.At this time the " ✲ " symbol will light up with RED color.Once continue pressing " +/- " the set temperature reached 49℃ ,then the temperature restart from 10℃.
7. Press button " Ⓜ " one time pressing is in low heat setting and the " ✲ "will light up with WHITE color.Two times pressing is in high heat setting and the " ✲ " will light up with RED color.When pressing this button for third times,it will come back with only cool air blowing mode.
8. By pressing " ◡ "button with the " ◡ " light up,you can make the heater with or without oscillation.
9. By pressing " ⏰ "button with the" ⏰ "light up,you can set the timer from 1-24 hours .
10. After heating,while turn off the heater,you can press" ⏻ "button, this time the symbol "fan blade"will be shining,and at the meaning time,all the heating will turn off and only fan blowing,after blowing 30s,the heater will cut off .
11. By pressing " 🔥 "button with the " 🔥 " light up,you can make the heater with or without flames display.Flames display function only for decoration，not for lighting. Total seven colors of carbon fire，and they switch automatically.

OSCILLATION BUTTON

This appliance also have oscillation function.To switch the function on, press the" ⟳ " button with the " ⟳ " light up. To stop it, press the oscillation button again with " ⟳ " light turn off.

TIMER FUNCTION

This function will work in any mode.The timer function allows you to set the length of operation from 1 hour to 24 hours.Pressing the " ⏰ "button increase the length of operation by 1 hour each times the button is pressed.Once the timer has been set the timer will count down the hours in 1 hour by 1 hour ,showing on the display the remaining operating time until the heater will turn itself off.Pressing the timer button once more after the display reflects 24 hours will reset the heater to continuously running.

THERMOSTAT INSTRUCTIONS

1. To adjust temperature,press the " +/- " to increase the desired temperature Max 49℃ and continue press" +/- " to reset from 10℃ to 49℃.
2. When the air temperature drops 2 degree below the set temperature,the heater will start Low heating .
3. When the air temperature drops 4 degree below the set temperature ,the heater will start Hot heating .
4. When the air temperature high 1 degree or ≥ the set temperature,the heater will blow the cold air
5. Temperature can setting from 10 degree to 49 degree

Remote control

1.Remote control, please use 2XAAA battery.
2.The remote control power button is labeled as such.

1."ON/OFF"	:	Main power button
2."MODE"	:	COLD,WARM,HOT 3 setting for selection
3."TIMER"	:	Setting timer from 1-24 hours
4."SWING"	:	Oscillation function for heater
5."CANCEL"	:	Turn off the light ,keep comfortable sleep environment
6. "UP"	:	Setting temperature for increase
7. "DOWN"	:	Setting temperature for decrease
8."FLAMES"	:	Flames display function

SAFETY TIP-OVER SWITCH

The appliance have safety tip-over switch for safe protected.Make the user away from fire and other damage.

OVERHEAT PROTECTION

This heater is protected with an overheat protection that switches off the appliance automatically in case of overheating. For example: due to the total or partial obstruction of the vents. In this case, unplug the appliance, wait about 30 minutes for it to cool and remove the object which is obstructing the vents. Then switch it back on as described above. The appliance should now operate normally. If the problem persist, please contact Customer Service for assistance.

CLEANING & MAINTENANCE

—Before undertaking any cleaning or maintenance on the appliance, disconnect it from the power supply.
—For cleaning it is recommended to use a soft moist rag and neutral detergent. Do not use an abrasive cloth or devices which could affect the appearance of the appliance. Check that the hot air outlet and the ventilation inlet are free of dust and dirt.
—During cleaning, be careful not to touch the heating elements.
—In case of breakdown and/or poor functioning of the appliance, disconnect the appliance from the power supply and contact an authorized repairer.

WARNING

1)To reduce the risk of fire, keep textiles, curtains, or anyother flammable material a minimum distance of 1 mfrom the air outlet.
2)Do not place the heater near a bed because objectssuch as pillows or blankets can fall off the bed and beignited by the heater.
3)Always unplug heater when not in use. (This item maybe omitted if the heater is provided with a clock-operatedswitch).
4) Always plug heaters directly into a wall outlet/receptacle.Never use with an extension cord or relocatable powertap (outlet/power strip).
5) Do not run cord under carpeting. Do not cover cord withthrow rugs, runners, or similar coverings. Do not routecord under furmiture or appliances. Arrange cord awayfrom traffic area and where it will not be tripped over.

6)Check your heater cord and plug connections:
a) Faulty wall outlet connections or loose plugs can causethe outlet or plug to overheat, Be sure the plug fits tightin the outlet.
b) Heaters draw more current than small appliances,overheating of the outlet may occur even if it has notoccurred with the use of other appliances.
c) During use check frequently to determine if your plugoutlet or faceplate is HOT!
d) If so, discontinue use of the heater and have a qualifiedelectrician check and/or replace the faulty outlet(s)

-the appliance is not to be used by persons(includingchildren) with reduced physical, sensory or mental -capabilities, or lack of experience and knowledge,unless they have been given supervision or instruction.
-children being supervised not to play with the appliance.
-Statement: heater is not located immediately below asocket-outlet.
-Do not use the heater with a proarammer, timer or anyother device that switches the heater on automatically.
-Do not use this heater in the immediate surroundingsof a bath, a shower or a swimming pool.
-Do not use this heater if it has been dropped.
-Do not use if there are visible signs of damage to the heater.
-Use this heater on a horizontal and stable surface, or fix itto the wall, as applicable.
-WARNING: Do not use this heater in small rooms when theyare occupied by persons not capable of leavingthe roomon their own, unless constant supervision is provided.
-WARNING: To reduce the risk of fire, keep textiles curtains,or any other flammable material a minimumdistance ofl m from the air outlet.
-Instructions for visibly glowing radiant heaters warn aboutthe possible danger of installation close to curtainsand othercombustible materials.

Meaning of crossed -out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collectionfacilities. Contact you local government for information regarding the collection systemsavailable.If electrical appliances are disposed of in landfils or dumps, hazardous substancescan leak into the groundwater and get into the food chain, damaging your health and well-being.

Rebune International Trading Co.
Address:3rd,Floor,Al Mousa Trading Building,
King Fahad Road,P.O .Box 235185 Riyadh 11332 K.S.A.

REBUNE®
BEYOND IMAGINATION

نجمّل اللحظة لكِ وليبتك
بمنتجات وأقسام متنوعة تُلبي احتياجاتك اليومية

تابعنا عبر منصاتنا الرسمية

في البداية:

- قبل استخدام المدفأة الجديدة، يُرجى قراءة التعليمات التالية بعناية مع الاحتفاظ به في مكان آمن للرجوع إليه لاحقًا عند اللزوم.
- بعد إزالة مواد التغليف يجب التأكد من سلامة الجهاز وكامل الأجزاء.
- قد تحتوي مواد التغليف على مواد بلاستيكية، ومسامير، وما شابه، ومثل هذه المواد قد تكون خطرة، لذا يجب إبعادها عن متناول الأطفال.

تفاصيل المنتج:

- موديل RE- 7 – 112
- الجهد 220-240 فولت
- التردد : 50-60 هرتز
- القدرة الكهربية 2000 وات

معلومات مهمة للأمن و السلامة

- ❖ يجب أن يتم تركيب المدفأة بواسطة كهربائي مؤهل لديه خبرة.
- ❖ يراعى تجنب التركيب في المنطقة الموجودة خلف الأبواب.
- ❖ يتم استخدام الجهد الكهربائي المناسب فقط والمحدد على لوحة بيانات المدفأة.
- ❖ يراعى عدم تغطية أو حجب تدفق الهواء إلى فتحات التهوية (الداخلة للمدفأة أو الخارجة منها) بأي شكل من الأشكال، فقد يؤدي ذلك إلى سخونة المدفأة بشكل مفرط ويصبح خطر الحريق موجودا (بالنسبة للمدفآت المزودة بمروحة).
- ❖ يراعى عدم سد أو تغطية فتحات التهوية، أو سد فتحات دخول أو خروج الهواء بوضع الجهاز ملاصقًا لأي سطح . يراعى المحافظة على مسافة متر واحد على الأقل بين جميع الأشياء الموجودة والجزء الأمامي والجانبي للجهاز .باستثناء الأجهزة المصممة للتركيب على الحائط، فيراعى المحافظة على مسافة متر واحد على الأقل من الجزء الخلفي للجهاز أيضًا.

تحذير : يمكن أن يكون هناك خطر نشوب حريق إذا كانت المدفأة مغطاء أو موضوعه بالقرب من الستائر أو أي مواد قابلة للاشتعال.

- ❖ يراعى عدم وضع الجهاز بالقرب من مصدر حرارة مشع .
- ❖ ضرورة عدم استخدام الجهاز في أماكن تُستخدم فيها أو تُخزن فيها مواد قابلة للاشتعال كالبنزين أو الدهانات ومواد الطلاء.
- ❖ يسخن هذا الجهاز أثناء الاستخدام، ولذلك لتجنب الحروق، يراعى عدم ترك الجلد يلامس الأسطح الساخنة مع ضرورة إطفاء الجهاز واستخدم المقابض عند نقله.
- ❖ يمنع استخدام الجهاز لتجفيف الملابس.
- ❖ يراعى عدم ترك الجهاز دون مراقبة أو إشراف أثناء الاستخدام .
- ❖ يراعى عدم السماح بدخول أجسام غريبة إلى فتحات التهوية ، فقد يتسبب ذلك في صدمة كهربائية أو حدوث حريق أو تلف الجهاز .

- ❖ يراعى عدم غمر الجهاز في سائل أو السماح بتسرب السائل إلى داخله، فقد يُسبب ذلك خطر صدمة كهربائية.
- ❖ يجب عدم استخدام هذا الجهاز على سطح مبلل، أو في مكان قد يسقط فيه في الماء.
- ❖ يجب عدم ملامسة الجهاز إذا سقط في الماء. يجب أن يتم إطفائه من مصدر الطاقة وفصله عن الكهرباء فورًا.
- ❖ يجب عدم استخدام الجهاز في حالة حدوث تلف أو قطع في سلك التوصيل أو بعد تعطل الجهاز أو سقوطه أو تعرضه للتلف بأي شكل من الأشكال. و يُرجى مراجعة فني كهربائي مؤهل للفحص، أو إجراء أي تعديلات كهربائية مع ضرورة الصيانة، أو الإصلاح قبل الاستخدام مرة أخرى.
- ❖ يجب عدم استخدام الجهاز إذا كانت اليد مبتلة.
- ❖ هذا الجهاز مُصمم للاستخدام المنزلي فقط، وليس للاستخدام التجاري أو الصناعي.
- ❖ يجب استخدام هذا الجهاز فقط وفقًا لما هو موضح في هذا الدليل وأي استخدام آخر غير مُوصى به من قبل الشركة المُصنّعة، قد يُسبب حريقًا أو صدمة كهربائية أو إصابة مباشرة للأشخاص.
- ❖ من الأسباب الشائعة لارتفاع درجة حرارة الجهاز تراكم الغبار أو الوبر فيه، ولذلك يجب التأكد من إزالة هذه الرواسب بانتظام عن طريق فصل الجهاز عن الكهرباء وتنظيف فتحات التهوية بالمكنسة الكهربائية، إن وُجدت هذه الرواسب.
- ❖ يراعى عدم استخدام هذا الجهاز بجوار النافذة، فقد يُسبب المطر صدمة كهربائية عندما يتسرب إلى الجهاز .
- ❖ يراعى عدم استخدام مواد تنظيف كاشطة مع هذا الجهاز ويجب تنظيفه بقطعة قماش رطبة (وليست مبللة) مغسولة بالماء الساخن والصابون فقط ويجب فصل القابس دائمًا من مصدر الطاقة قبل التنظيف.
- ❖ يراعى عدم توصيل الجهاز بمصدر الطاقة الرئيسي إلى أن يتم تركيبه في مكانه النهائي وضبطه على الوضعية التي سيُستخدم فيها.
- ❖ هذا الجهاز غير مُصمم للاستخدام في الحمامات أو غرف الغسيل أو الأماكن المشابهة التي قد تتعرض للماء أو الرطوبة بشكل مستمر .
- ❖ يتم تشغيل المدفأة دائمًا على سطح أفقي مستو .
- ❖ يتم إطفاء الجهاز ، ثم استخدام المقابض (إن وُجدت) لتغيير موضع الجهاز ونقله لمكان آخر .
- ❖ لا يتم تشغيل الجهاز والسلك ملفوف، فقد يتسبب ذلك في تراكم وارتفاع الحرارة، مما قد يُشكل خطرًا.

- ❖ لا يُنصح باستخدام تمديدات لسلك التوصيل مع هذا الجهاز .
- ❖ يراعى تجنب فصل الطاقة من المقبس بسحب السلك، بل يتم الإمساك بالقابس برفق وعدم الشد بقوة.
- ❖ يتم فصل الجهاز دائمًا عن الكهرباء عند عدم استخدامه.
- ❖ يراعى عدم ترك السلك يلامس الأسطح الساخنة أثناء التشغيل.
- ❖ لا يتم تمرير السلك تحت السجاد أو الموكيت أو المفارش، إلخ. ويجب ترتيب ولف السلك بعيدًا عن الأماكن التي يُحتمل أن يتعثر بها.
- ❖ يراعى عدم لف أو ثني السلك حول الجهاز، فقد يؤدي ذلك إلى إضعاف العازل الموجود حول السلك وتمزقه مما يسبب خطر . يجب التأكد دائمًا من إزالة السلك بالكامل من مكانه قبل الاستخدام.
- ❖ يراعى عدم تخزين الجهاز في صندوق أو مكان مغلق إلى أن يبرد تمامًا.
- ❖ هذا الجهاز غير مخصص للاستخدام من قبل الأشخاص (بمن فيهم الأطفال) ذوي القدرات الخاصة أو الإعاقات البدنية أو الحسية أو العقلية، أو الذين يعانون من نقص الخبرة والمعرفة، إلا إذا كانوا تحت إشراف شخص مسؤول يهتم بسلامتهم أو في حال تلقيهم تعليمات منه بشأن استخدام الجهاز .
- ❖ يجب مراقبة الأطفال الصغار لضمان عدم عبثهم بالجهاز.
- ❖ يجب عدم وضع الجهاز أسفل المقبس الكهربائي مباشرةً لعدم التأثر بالحرارة المرتفعة.
- ❖ يجب عدم استخدام هذا الجهاز مع جهاز برمجة أو مؤقت أو أي جهاز آخر يقوم بتشغيل المدفأة تلقائيًا، فإن ذلك خطر يؤدي إلى نشوب حريق إذا تم تغطية الجهاز أو وضعه بشكل غير صحيح.
- ❖ في حالة تلف سلك توصيل الطاقة، يجب استبداله بواسطة فني كهربائي مؤهل لديه خبرة لتجنب أي خطر .
- ❖ يجب عدم استخدام هذا الجهاز في الهواء الطلق أو على الأسطح المبللة مع تجنب سكب السوائل على الجهاز .
- ❖ لتجنب خطر تغيير ضبط قاطع التيار الحراري بالخطأ عن غير قصد، يجب عدم تزويد هذا الجهاز بالطاقة عبر محول خارجي، مثل المؤقت، أو توصيله بدائرة كهربائية مختلفة.

تعليمات التركيب

1- يتم تركيب القاعدة اليسرى والقاعدة اليمنى كما هو موضح في الصورة أدناه. ثم يتم تمرير سلك الطاقة خلال الفتحة الموجودة في القاعدة .

2- يتم إخراج الصامولة البلاستيكية، ثم لف هذه الصواميل البلاستيكية في اتجاه عقارب الساعة لتثبيت القاعدة بالمدفأة.

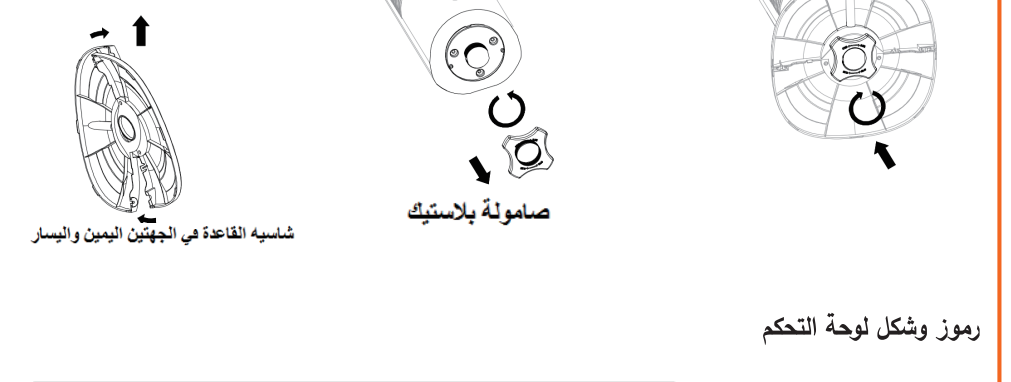

رموز وشكل لوحة التحكم

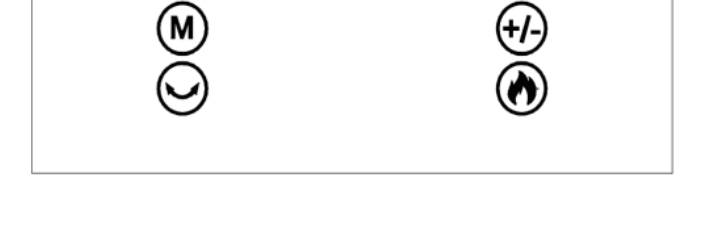

طريقة التشغيل

1- قبل توصيل القابس بمأخذ كهربائي، يجب التأكد من أن التيار الكهربائي في منطقتك يطابق التيار المذكور على ملصق البيانات والمعلومات الخاصة بالجهاز .
2- يتم إخراج المدفأة بحرص واهتمام من الكيس البلاستيكي والكرتون.
3- يتم وضع المدفأة على سطح مستوٍ وثابت.
4- يتم توصيل سلك الطاقة بمأخذ كهربائي بجهد 220-240 فولت تيار متردد.

5- يتم تشغيل المدفأة بالضغط على زر " ⏻ "، ستعرض الوحدة درجة حرارة الغرفة الحالية وستقوم بإطلاق الهواء البارد.

6- عند الضغط على زر " +/- "، ستضيء اللمبة الاقتصادية الموجودة، بعدها يتم البدء بضبط درجة الحرارة المناسبة (وأعلى درجة حرارة يمكن ضبطها تصل إلى 49 درجة مئوية أعلى)، عندما تكون درجة الحرارة المضبوطة أعلى من درجة حرارة الغرفة. سوف تبدأ المدفأة في العمل وسوف يومض رمز ✲ الوقت بلون أبيض وعند الاستمرار بالضغط على زر +/- سيتم ضبط درجة الحرارة لحين الوصول إلى أعلى درجة 49 م وسوف تبدأ في العمل على عدد 2 مستوى للحرارة. وفي هذه الحالة سوف يتحول لون مؤشر ✲ إلى اللون الأحمر. وبمجرد الاستمرار في الضغط على زر +/- تصل درجة الحرارة إلى أعلى مستوى 49 . وتبدأ درجات الحرارة من مستوى 10 درجة.

7- عند الضغط على زر Ⓜ مرة واحدة يكون مستوى الحرارة هو أقل مستوى وسوف تتحول إضاءة رمز ✲ إلى اللون الأبيض. والضغط مرتين على الزر ✲ سوف يعمل على رفع درجة الحرارة وسيتحول اللون مرة أخرى إلى اللون الأحمر. وعند الضغط للمرة الثالثة تعود المدفأة إلى وظيفة إطلاق الهواء البارد.

8- بالضغط على زر ◡ يضيء رمز ◡ ويمكن وقتها تشغيل المدفأة مع وظيفة الذبذبة أي توزيع الهواء أو بدونها.

9- بالضغط على زر ⏰ يضيء رمز ⏰ ويمكن وقتها تشغيل المدفأة على نمط تايمر الوقت من 1-24 ساعة.

10- بعد انتهاء التدفئة ، وعند إيقاف تشغيل المدفأة، يمكنك الضغط على زر" ⏻ " ، في هذه الحالة، سيومض رمز " نصل المروحة"، وعندها سيتوقف التسخين تماما وستعمل المروحة فقط، وبعد ٣٠ ثانية من إطلاق الهواء البارد، ستتوقف المدفأة عن العمل.

11- بالضغط على زر 🔥 يضيء رمز 🔥 ويمكن وقتها اختيار تشغيل المدفأة بتأثير اللهب أو بدون. واللهب مجرد ديكور وشكل جمالي وليس لاستخدامه كمصدر إضاءة. يوجد 7 ألوان موجودة للهب الكربوني وتعمل بطريقة تلقائية.

وظيفة تشغيل الذبذبات (توزيع الهواء)

يحتوي هذا الجهاز على وظيفة التذبذب توزيع الهواء. لتشغيل هذه الوظيفة، يتم الضغط على زر التوزيع ⟳ حتى يضيء المؤشر ⟳ . ولإيقافها، يتم الضغط على زر التذبذب ⟳ مرة أخرى حتى ينطفئ المؤشر.

وظيفة التايمر :

تعمل هذه الوظيفة في جميع الأوضاع. تتيح وظيفة التايمر ضبط واختيار مدة التشغيل من ساعة واحدة إلى 24 ساعة. يؤدي الضغط على زر " ⏰ " إلى زيادة مدة التشغيل بمقدار ساعة واحدة في كل مرة. بمجرد الانتهاء من ضبط التايمر، سيبدأ العد التنازلي للساعات، حيث يعرض على الشاشة الوقت المتبقي للتشغيل حتى تتوقف المدفأة تلقائيًا. الضغط على زر التايمر مرة أخرى بعد أن تُظهر الشاشة 24 ساعة سيعيد ضبط المدفأة مرة أخرى للاستمرار في التشغيل.

تعليمات التحكم في درجة الحرارة:

1- لضبط درجة الحرارة، يتم الضغط على زر " +/- " لزيادة درجة الحرارة المطلوبة (بحد أقصى 49 درجة مئوية)، ثم اضغط على زر " +/- " ومن أجل إعادة الضبط من 10 درجات مئوية إلى 49 درجة مئوية.

2- عندما تنخفض درجة حرارة الهواء درجتين عن درجة الحرارة المضبوطة المختارة، ستبدأ المدفأة بالتسخين الأقل وتنخفض الحرارة.

3- عندما تنخفض درجة حرارة الهواء 4 درجات عن درجة الحرارة المضبوطة، ستبدأ المدفأة بالتسخين المرتفع مرة أخرى.

4- عندما ترتفع درجة حرارة الهواء درجة واحدة أو تكون أكبر من أو تساوي درجة الحرارة المضبوطة، ستبدأ المدفأة بإطلاق الهواء البارد.

5- يمكن ضبط درجة الحرارة من 10 درجات إلى 49 درجة مئوية.

الريموت كنترول:

1-بطارية الريموت كنترول لا تأتي ضمن عبوة تغليف المدفأة ولذلك يرجى توفير 2 حجر بطارية 1.5 فولت بنفسك.

2-دلالة رموز الريموت كنترول تكون كالتالي:

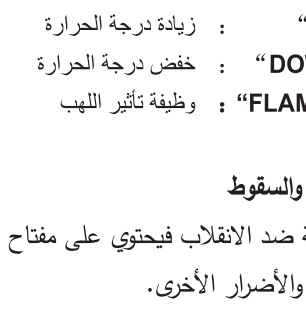

1. "ON/OFF"	:	زر الطاقة الرئيسي
2. "MODE"	:	اختيار نمط التشغيل (بارد – دافئ – ساخن)
3. "SWING"	:	تايمر تحديد مدة التشغيل من 1-24 ساعة
4. "SWING"	:	تشغيل وظيفة توزيع الهواء.
5. "CANCEL"	:	إطفاء الإضاءة لبيئة مناسبة للنوم
6. "UP"	:	زيادة درجة الحرارة
7. "DOWN"	:	خفض درجة الحرارة
8. "FLAMES"	:	وظيفة تأثير اللهب

وظيفة الحماية ضد الانقلاب والسقوط

الجهاز مزود بخاصية الحماية ضد الانقلاب فيحتوي على مفتاح أمان للحماية من الانقلاب، مما يحمي المستخدم من حوادث الحريق والأضرار الأخرى.

الحماية من الحرارة الزائدة

تتوفر للمدفأة خاصية نظام حماية ضد الحرارة الزائدة حيث يتم إيقاف تشغيل الجهاز تلقائيًا في حالة ارتفاع درجة حرارته. على سبيل المثال: عند انسداد فتحات التهوية كليًا أو جزئيًا ، ففي هذه الحالة، يتم فصل الجهاز عن الكهرباء، والانتظار حوالي 30 دقيقة حتى يبرد، ثم يتم إزالة الرواسب التي تسد فتحات التهوية .بعد ذلك، يتم إعادة تشغيله كما هو موضح أعلاه . ومن المفترض أن تعمل المدفأة الآن بشكل طبيعي . إذا استمرت المشكلة، يُرجى التواصل مع خدمة العملاء للحصول على المساعدة.

التنظيف والصيانة

- ○ قبل البدء بعملية تنظيف أو صيانة المدفأة يجب فصلها أولا من مصدر الطاقة.
- ○ يُنصح باستخدام قطعة قماش ناعمة مبللة مع مادة تنظيف مناسبة للتنظيف، ويتم تجنب استخدام قطعة قماش خشنة أو أي أدوات قد تسبب خدش الجهاز ، مع التأكد من عدم وجود أتربة أو غبار أو رواسب في فتحات التهوية أو فتحات خروج الهواء الساخن.

- ○ أثناء التنظيف، يجب الحرص على عدم لمس الأجزاء المسئولة عن التسخين.
- ○ في حال تعطل الجهاز أو انخفاض أدائه، يتم فصله عن مصدر الطاقة والاتصال بفني صيانة معتمد.

تحذير

1) لتقليل مخاطر نشوب حريق ، احتفظ بالمنسوجات أو الستائر أو أي مادة أخرى قابلة للاشتعال بمسافة لا تقل عن متر واحد من مخرج الهواء.
2) لا تضع السخان بالقرب من السرير لأن الأشياء مثل الوسائد أو البطانيات يمكن أن تسقط من السرير وتشتعل بواسطة المدفأة.
3) افصل السخان دائما عندما لا يكون قيد الاستخدام. (يمكن حذف هذا العنصر إذا تم تزويد السخان بمفتاح يعمل على مدار الساعة).
4) قم دائما بتوصيل السخانات مباشرة بمأخذ الحائط / الوعاء لا تستخدم أبدًا مع سلك تمديد أو صنبور طاقة قابل لتغيير موضعه (منفذ / شريط طاقة).
5) لا تمرر الحبل تحت السّجاد. لا تقم بتغطية السلك بسجاد أغطية مماثلة. لا توجه السلك أسفل الأثاث أو الأجهزة. رتب السلك بعيدًا عن منطقة المرور وحيث لن يتم تعثره.
6) تحقق من توصيلات سلك السخان والقابس:
أ) قد يؤدي خلل في توصيلات مأخذ التيار بالجدار أو السدادات المفكوكة إلى ارتفاع درجة حرارة المقبس أو القابس. تأكد من أن القابس مناسب بإحكام في المنفذ.
ب) تسحب السخانات تيارًا أكثر من الأجهزة الصغيرة، وقد يحدث ارتفاع في درجة حرارة المنفذ حتى لو لم يحدث مع استخدام الأجهزة الأخرى.
ج) أثناء الاستخدام، تحقق بشكل متكرر لتحديد ما إذا كان منفذ القابس أو اللوحة الأمامية ساخنًا!
د) إذا كان الأمر كذلك، توقف عن استخدام السخان واطلب من كهربائي مؤهل فحص و / أو استبدال المنفذ (المخارج) المعيبة

- لا يجوز استخدام الجهاز من قبل الأشخاص (بما في ذلك الأطفال) الذين يعانون من ضعف القدرات البدنية أو الحسية أو العقلية ، أو نقص الخبرة والمعرفة ، ما لم يتم منحهم الإشراف أو التعليمات.
- يتم الإشراف على الأطفال لعدم اللعب بالجهاز.
- بيان: لا يوجد السخان مباشرة أسفل مخرج المقبس.
- لا تستخدم السخان مع مبرمج أو مؤقت أو أي جهاز آخر يقوم بتشغيل السخان تلقائيا.
- لا تستخدم هذا السخان في المناطق المحيطة مباشرة بحوض الاستحمام أو الدش أو المسبح.
- لا تستخدم هذا السخان إذا تم إسقاطه.
- لا تستخدمه إذا كانت هناك علامات واضحة على تلف السخان.
- استخدم هذا السخان على سطح أفقي ومستقر ، أو ثبته على الحائط ، حسب الاقتضاء.
- تحذير : لا تستخدم هذا السخان في الغرف الصغيرة عندما يشغلها أشخاص غير قادرين على مغادرة الغرفة بمفردهم ، ما لم يتم توفير الإشراف المستمر.

- تحذير: لتقليل مخاطر نشوب حريق ، احتفظ بستائر المنسوجات أو أي مادة أخرى قابلة للاشتعال على مسافة لا تقل عن ١ متر من مخرج الهواء.
- تحذر تعليمات السخانات المشعة المتوهجة بشكل واضح من الخطر المحتمل للتر كيب بالقرب من الستائر والمواد الأخرى القابلة للاحتراق.

لا تستخدم هذا السخان في المناطق المحيطة مباشرة بالحمام أو الدش أو حمام السباحة
لا تستخدم هذا السخان إذا تم إسقاطه
لا تستخدمه إذا كانت هناك علامات واضحة على تلف السخان
استخدم هذا السخان على سطح أفقي ومستقر ، أو ثبته على الحائط ، حسب الاقتضاء
بيانات للسخانات المشعة المتوهجة بشكل واضح: يجب توفيرها لتنظيف العاكس ، إذا كان ذلك مناسبا
بيان للسخانات ذات البكرات أو الأقدام التي يتم تسليمها بشكل منفصل: كيف يجب إصلاحها

علامة إعادة التدوير

يجب عدم التخلص من الأجهزة الكهربائية مع النفايات التقليدية المعتادة بالطرق التقليدية، بل يجب استخدام أنظمة إعادة التدوير والمراكز المتخصصة في التجميع، وتواصل مع الوحدات المحلية للاستفسار عن أنظمة التدوير المتاحة.
في حال التخلص من الأجهزة الكهربائية بالطرق التقليدية للتخلص من النفايات، قد يؤدي ذلك إلى تسرب مواد خطرة إلى المياه الجوفية وكذلك إلى سلاسل المواد الغذائية، مما يضر على الصحة والسلامة العامة.

تحذيـر: -

تحذير هام!!

هذا المنتج غير مخصص للاستخدام من قبل أي أشخاص يعانون من نقص في القدرات الجسدية والحسيه والعقلية بما في ذلك (الأطفال) أو من تنقصهم الخبرة والمعرفة مالم تتوفر لهم المراقبة وتعليمات استعمال المنتج عن طريق احد الأشخاص يكون مسؤلا عن سلامتهم.

تحذير هام للأطفال!!

المنتج غير مخصص للأطفال وعدم تركهم يلعبون به

التخزين:

عند عدم استخدام المنتج قم بتخزينه في مكان جاف

لأي استفسار عن منتجات شركة ريبون يرجى عدم التردد في الاتصال بخدمة العملاء في العنوان المبين اداه:

ريبـــون الشرق الأوسط _ الرياض المملكة العربيبة السعودية
sales@rebune.com
هاتف:00966-11-4580787
فاكس:00966-11-4389390
الرقم الموحد:920006752

صنع في الصين