



كتيب التعليمات
Instructions Manual



Contact Grill	اسم المنتج Product Name
RE - 5 - 0 9 6	رقم الموديل Model Number



270x220mm
Plate size



BSplug
Wire 0.75 M



1800-2000W
Super Power



Contact Grill

Model:RE-5-096

220-240V,50-60 Hz, 1800-2000W



- FOR HOUSEHOLD USE ONLY -

IMPORTANT SAFEGUARDS

Signal Word Definitions

DANGER— Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury. Usage of this signal word is limited to the most extreme situations.

WARNING— Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

CAUTION— Indicates a potentially hazardous situation, which, if not avoided, may result in minor/moderate injury or product/property damage. It also alerts against unsafe practices.



When using this or any other electrical appliance, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.



WARNING To reduce the risk of fire, electric shock, or serious personal injury:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years
- cleaning and user maintenance shall not be made by children without supervision



- Caution, hot surface, the surfaces are liable to get hot during use.
- Always use the product on a flat, stable, heat-resistant surface.
- The temperature of the accessible surfaces may be very high when the appliance is in use. Make sure not to touch these hot parts of the appliance.
- Use the product in a well-ventilated area. Keep at least 4-6 inches of space on all sides of the product to allow adequate air circulation.
- Do not place the product on or near a gas or electric burner, or inside or on top of a heated oven or other heat source.
- Do not allow the product to touch curtains, wall coverings, clothing, dishtowels, or other flammable materials during its use.
- Do not touch hot surfaces of the product. Do not move the product while it is plugged in. Allow the product to thoroughly cool before handling it.
- Do not use attachments not recommended for use with this product or sold by the product manufacturer.
- Do not use the product near water or other liquids.
- Do not place or drop the product into water or other liquids. If the product falls into water, immediately unplug it from the electrical outlet.
Do not touch or reach into the water.
- Do not leave the product unattended while it is in use. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Appliances not intended to be partially immersed in water for cleaning
- Do not put any stress on the Power Cord where it connects to the product as the Power Cord could fray and break.
- Do not plug or unplug the product into/from an electrical outlet with a wet hand.
- Keep the product and its Power Cord away from heated surfaces.



- Never operate this product if it has a damaged Power Cord or Plug, is not working properly, has been dropped, damaged, or exposed to water or other liquids.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard
- This appliances is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and others working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.



CAUTION— To reduce the risk of personal injury or product/property damage:

- This product is intended for indoor, non-industrial, non-commercial, household use only as a panini maker and healthy grill. Do not use the item outdoors or for any other purpose.
- Do not allow the Power Cord to hang where it may be tripped over or pulled (e.g., over the edge of a table or counter).

SPECIAL INSTRUCTIONS:

- To avoid a circuit overload when using this product, do not operate another high-wattage product on the same electrical circuit.
- A short power supply cord is provided with this product. An extension cord is not recommended for use with this product, but if one must be used:
 - The marked electrical rating of the cord must be at least as great as that of the product.
 - Arrange the extension cord so that it does not hang where it can be tripped over or pulled unintentionally.

Parts



To Use

CAUTION: Do not use this product to cook or defrost frozen food. All food must be completely defrosted before cooking it with this product.

NOTE: During the initial uses of this product, it may produce some smoke. This is normal and will subside with further use.



1. Before using this product for the first time, clean it as described in the "Care and Maintenance" section.
2. Push the Locking Latch nearest the Handle to unlock the product.
3. Open the unit by pulling the Handle up. Slide the angel button on the right arm, push the handle back until the cover rests flat on the counter, the unit will stay in 180 degrees position. Lift the handle and cover to return it to the 90 degrees position or closed position.
4. Close the Plates and turn the unit on by plugging it into a standard electrical outlet. Verify that the Power Indicator Light illuminates in orange. **WARNING:** The Cooking Plates and metal surfaces of the unit will become extremely hot when in use. To avoid a burn hazard, wear heat resistant mitts or gloves and touch only the black portion of the Handle.
5. After the unit preheats for approximately five minutes, the Ready Indicator Light will illuminate in green, indicating the product is ready for use.
6. Use the Handle to lift the Upper Plate. Place food on the Lower Plate using wooden or plastic heat-resistant utensils.
CAUTION: Do not use metal utensils on this product, as they will scratch and damage the Plates' non-stick coating.
7. Use the Handle to lower and rest the Upper Plate on top of the food.
NOTES:
 - The cooking time for different foods depends on the type and thickness of the foods.
 - Foods should be cooked thoroughly before consumption.
8. When the food is cooked as desired, lift the Handle to open the Plates, then remove the food using the utensils. If more cooking will be done at this time, close the Plates to conserve heat.
9. Repeat Steps 7-9 until all cooking is complete, reapplying cooking oil as necessary.
10. Turn off the product by unplugging the Power Cord from the electrical outlet.
11. When the unit has completely cooled, clean and dry it.
12. Lock the unit in its closed position by pressing in the end of the Locking Latch farthest from the Handle.

CLEANING

- Before cleaning, unplug and wait for the appliance and the plates to cool down.
- Wipe the outside with only a slightly moistened cloth ensuring that no moisture, oil or grease enters the cooling slots.
- Do not clean the inside or outside with any abrasive scouring pad or steel wool as this will damage the finish.
- Do not immerse in water or any other liquid.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



التنظيف:

1. قبل التنظيف، افصل القابس وانتظر حتى يبرد الجهاز والأطباق.
2. امسح الجزء الخارجي بقطعة قماش مبللة قليلاً فقط، مع التأكد من عدم دخول أي رطوبة أو زيت أو شحم في فتحات التبريد.
3. لا تنظف الجزء الداخلي أو الخارجي بأي ليفة جلي كاشطة أو أي أداة صلبة، لأن ذلك سيتلف الطبقة النهائية.
4. لا تغمر الجهاز في الماء أو أي سائل آخر.

التخلص الصحيح من هذا المنتج :

تشير هذه العلامة إلى أنه لا ينبغي التخلص من هذا المنتج مع النفايات المنزلية الأخرى في جميع أنحاء الاتحاد الأوروبي. لمنع الضرر المحتمل على البيئة أو صحة الإنسان من التخلص غير المنضبط للنفايات، أعد تدويره بمسؤولية لتعزيز إعادة الاستخدام المستدام للموارد المادية. لإعادة جهازك المستخدم، يرجى استخدام أنظمة الإرجاع والتجميع أو الاتصال ببائع التجزئة الذي تم شراء المنتج منه. يمكنهم أخذ هذا المنتج لإعادة التدوير الآمن بيئياً.



تحذير:-

تحذير هام!!

هذا المنتج غير مخصص للاستخدام من قبل أي أشخاص يعانون من نقص في القدرات الجسدية والحسية والعقلية بما في ذلك (الأطفال) أو من تتقصصهم الخبرة والمعرفة مالم تتوفر لهم المراقبة وتعليمات استعمال المنتج عن طريق أحد الأشخاص يكون مسؤولاً عن سلامتهم..

تحذير هام للأطفال!!

المنتج غير مخصص للأطفال وعدم تركهم يلعبون به

التخزين:

عند عدم استخدام المنتج قم بتخزينه في مكان جاف

لأي استفسار عن منتجات شركة ريبون يرجى عدم التردد في الاتصال بخدمة العملاء في العنوان المبين ادناه:

ريبون الشرق الأوسط _ الرياض المملكة العربية السعودية

sales@rebune.com

هاتف: 00966-11-4580787

فاكس: 00966-11-4389390

الرقم الموحد: 920006752

صنع في الصين

Rebune International Trading Co.

Address: 3rd, Floor, Al Mousa Trading Building, King Fahad Road,

P.O. Box 235185 Riyadh 11332 K.S.A.



للاستخدام:

تنبيه: لا تستخدم هذا المنتج لطهي أو إذابة الأطعمة المجمدة. يجب إذابة جميع الأطعمة تمامًا قبل طهيها بهذا المنتج.

ملاحظة: قد يصدر هذا المنتج بعض الدخان أثناء الاستخدامات الأولية. هذا أمر طبيعي وسيتلاشى مع المزيد من الاستخدام.

1. قبل استخدام هذا المنتج للمرة الأولى، نظفه كما هو موضح في قسم "العناية والصيانة".
2. ادفع مزلاج القفل الأقرب إلى المقيض لفتح قفل المنتج.
3. افتح الوحدة عن طريق سحب المقيض للأعلى. اسحب زر التحكم على الذراع الأيمن، وادفع المقيض للخلف حتى يستقر الغطاء بشكل مسطح على المنضدة، وستبقى الوحدة في وضع 180 درجة. ارفع المقيض والغطاء لإعادته إلى وضع 90 درجة أو الوضع المغلق.
4. أغلق الأطباق وقم بتشغيل الوحدة عن طريق توصيلها بأخذ كهربائي قياسي. تحقق من أن مصباح مؤشر الطاقة يضيء باللون البرتقالي.
- تحذير: ستصبح أطباق الطهي والأسطح المعدنية للوحدة ساخنة للغاية عند الاستخدام. لتجنب خطر الحروق، ارتد قفازات أو قفازات مقاومة للحرارة ولا تلمس إلا الجزء الأسود من المقيض.
5. بعد تسخين الجهاز مسبقًا لمدة خمس دقائق تقريبًا، سيضيء مصباح مؤشر الجاهزية باللون الأخضر، مما يشير إلى أن المنتج جاهز للاستخدام.
6. استخدم المقيض لرفع الطبق العلوي. ضع الطعام على الطبق السفلي باستخدام أدوات خشبية أو بلاستيكية مقاومة للحرارة.
- تنبيه: لا تستخدم أدوات معدنية على هذا المنتج، لأنها ستخدش وتتلف الطبقة غير اللاصقة للأطباق.
7. استخدم المقيض لخفض الطبق العلوي ووضعه على الطعام.

ملاحظات:

- يعتمد وقت الطهي للأطعمة المختلفة على نوع وسمك الأطعمة.
- يجب طهي الأطعمة جيدًا قبل الاستهلاك.
- 8. عندما يتم طهي الطعام حسب الرغبة، ارفع المقيض لفتح الأطباق، ثم أزل الطعام باستخدام الأدوات. إذا كنت ستستمر في الطهي في هذا الوقت، أغلق الأطباق للحفاظ على الحرارة.
- 9. كرر الخطوات 7-9 حتى يكتمل الطهي كله، وأعد وضع زيت الطهي حسب الضرورة.
- 10. أوقف تشغيل المنتج عن طريق فصل سلك الطاقة من مأخذ الكهرباء.
- 11. عندما تبرد الوحدة تمامًا، قم بتنظيفها وتجفيفها.
- 12. افصل الوحدة في وضعها المغلق عن طريق الضغط على طرف مزلاج القفل الأبعد عن المقيض.



- لا تقم أبداً بتشغيل هذا المنتج إذا كان سلك الطاقة أو القابس تالفاً، أو لا يعمل بشكل صحيح، أو سقط، أو تعرض للتلوث، أو تعرض للماء أو سوائل أخرى.
- إذا كان سلك الطاقة تالفاً، يجب استبداله من قبل الشركة المصنعة أو وكيل الخدمة التابع لها أو شخص مؤهل مماثل لتجنب الخطر.
- هذا الجهاز مخصص للاستخدام في المنزل والتطبيقات المماثلة مثل:
 - مناطق مطابخ الموظفين في المتاجر والمكاتب وبيئات العمل الأخرى.
 - بيوت المزارع.
 - من قبل العملاء في الفنادق والموتيلات والبيئات السكنية الأخرى.
 - بيئات المبيت والإفطار.

تنبيه: لتقليل خطر الإصابة الشخصية أو تلف المنتج/الممتلكات:

- هذا المنتج مخصص للاستخدام الداخلي، غير الصناعي، غير التجاري، المنزلي فقط كصناعة ساندويتش بانيني وشواية صحية.
- لا تستخدم هذا المنتج في الهواء الطلق أو لأي غرض آخر.
- لا تسمح لسلك الطاقة بالتدلي حيث يمكن التعثر به أو سحبه (على سبيل المثال، فوق حافة طاولة أو منضدة).

تعليمات خاصة:

- لتجنب زيادة التحميل على الدائرة عند استخدام هذا المنتج، لا تقم بتشغيل منتج آخر عالي الواط على نفس الدائرة الكهربائية.
- يتم توفير سلك إمداد طاقة قصير مع هذا المنتج.
- لا يوصى باستخدام سلك تمديد (وصلة) مع هذا المنتج، ولكن إذا كان يجب استخدام واحد:
 - يجب أن يكون التصنيف الكهربائي المحدد للسلك على الأقل مساوياً لتصنيف المنتج.
 - رتب سلك التمديد بحيث لا يتدلى حيث يمكن التعثر به أو سحبه عن غير قصد.

الأجزاء:





تحذير: لتقليل خطر الحريق أو الصدمة الكهربائية أو الإصابة الشخصية الخطيرة:

- يمكن استخدام هذا الجهاز من قبل الأطفال الذين تبلغ أعمارهم **8 سنوات فما فوق** والأشخاص الذين يعانون من ضعف القدرات البدنية أو الحسية أو العقلية أو نقص الخبرة والمعرفة، إذا تم منحهم الإشراف أو التعليمات المتعلقة باستخدام الجهاز بطريقة آمنة وفهم المخاطر التي تنطوي عليها.
- يجب ألا يلعب الأطفال بالجهاز.
- لا يجوز للأطفال إجراء التنظيف وصيانة المستخدم إلا إذا كانوا أكبر من 8 سنوات وتحت الإشراف.
- يجب إبقاء الجهاز وسلوكه بعيداً عن متناول الأطفال الذين تقل أعمارهم عن 8 سنوات.
- **تنبيه، سطح ساخن، الأسطح عرضة للسخونة أثناء الاستخدام.**
- استخدم المنتج دائماً على **سطح مسطح، مستقر، ومقاوم للحرارة.**
- قد تكون درجة حرارة الأسطح التي يمكن الوصول إليها عالية جداً عند استخدام الجهاز. تأكد من عدم لمس هذه الأجزاء الساخنة من الجهاز.
- استخدم المنتج في **منطقة جيدة التهوية**. اترك مسافة لا تقل عن **4-6 بوصات (حوالي 10-15 سم)** من جميع جوانب المنتج للسماح بتهوية كافية.
- لا تضع المنتج على أو بالقرب من موقد غاز أو كهربائي، أو داخل أو فوق فرن ساخن أو أي مصدر حرارة آخر.
- لا تسمح للمنتج بلامسة الستائر، أو أغشية الجدران، أو الملابس، أو مناشف الصحن، أو غيرها من المواد القابلة للاشتعال أثناء استخدامه.
- لا تلمس الأسطح الساخنة للمنتج.
- لا تحرك المنتج أثناء توصيله بالكهرباء.
- اترك المنتج ليبرد تماماً قبل التعامل معه.
- لا تستخدم الملحقات غير الموصى بها للاستخدام مع هذا المنتج أو التي لم يبيعها مصنع المنتج.
- لا تستخدم المنتج بالقرب من الماء أو السوائل الأخرى.
- لا تضع أو تسقط المنتج في الماء أو السوائل الأخرى.
- إذا سقط المنتج في الماء، افصله فوراً عن مصدر الكهرباء.
- لا تلمس أو تصل إلى الماء.
- لا تترك المنتج دون مراقبة أثناء استخدامه.
- الجهاز غير مخصص للتشغيل بواسطة مؤقت خارجي أو نظام تحكم عن بعد منفصل.
- الأجهزة غير مخصصة للغمر الجزئي في الماء للتنظيف.
- لا تضغط على سلك الطاقة في نقطة اتصاله بالمنتج، حيث يمكن أن يتآكل وينكسر سلك الطاقة.
- لا توصل أو تفصل المنتج بمأخذ كهربائي بيد مبللة.
- أبقِ المنتج وسلك الطاقة الخاص به بعيداً عن الأسطح الساخنة.



رقم الموديل: RE-5-096

المواصفات الكهربائية: 220-240 فولت، 50-60 هرتز، 1800-2000 واط



- للاستخدام المنزلي فقط -

تعريفات الكلمات الإرشادية

خطر : تشير إلى حالة خطرة وشيكة، ستؤدي إلى الوفاة أو الإصابة الخطيرة في حال عدم تجنبها. يقتصر استخدام هذه الكلمة الإرشادية على المواقف الأكثر خطورة.

تحذير: تشير إلى حالة خطرة محتملة، قد تؤدي إلى الوفاة أو الإصابة الخطيرة في حال عدم تجنبها.

تنبيه : تشير إلى حالة خطرة محتملة، قد تؤدي إلى إصابة طفيفة/متوسطة أو تلف المنتج/الممتلكات في حال عدم تجنبها. كما تنبه أيضاً إلى الممارسات غير الآمنة.


إرشادات السلامة الأساسية

عند استخدام هذا الجهاز الكهربائي أو أي جهاز كهربائي آخر، اتبع دائماً احتياطات السلامة الأساسية التالية:

اقرأ جميع التعليمات قبل الاستخدام.



نجمّل اللحظة لك ولبيتك
بمنتجات وأقسام متنوّعة تُلبّي احتياجاتك اليومية

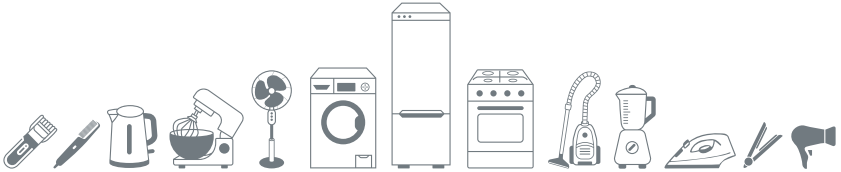

خدمة العملاء



المنصة الترويجية الرسمية