122X185mm 2026.3.5

REBUNE®
BEYOND IMAGINATION

كتيب التعليمات
Instructions Manual

GARMENT STEANER	اسم المنتج Product Name
RE-3-076	رقم الموديل Model Number

2 Steam Levels · 40 Sec · 2.7L Water tank · 2000W Super Power

PRODUCT INTRODUCTION

Features and Purpose:

Thank you for choosing our Garment Steamer. The device is a kind of strong steam ironing machine with cleaning function as a supplement. It is elegant in design, simple, economical, and safe, especially applicable for household, garment, wedding dress, curtain, sofa, hotel, restaurant, etc. The machine irons especially well the pure silk, woolens, chemical fiber, cotton and blending textiles, flattens them fast without damage and sterilizes and cleans them. However, it only asks easy maintenance and repair.

PRECAUTIONS

Safe Protection

1. Thermostat. The thermostat would keep the temperature at a rated value by means of the control current when the tank is short of water.
2. Hot fuse in case the thermostat damages or fails, the hot fuse of protective device gives protection by cutting off the power supply of machine body when the machine reaches a certain temperature.

Warning

- It should be taken care when using the appliance due to the emission of steam.
- Unplug the appliance during filling and cleaning.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not eject the steam directly towards people or animal, or scald may be caused.
- Only use the detachable accessories when there is no steam, and they are cooled down to avoid scalds.
- Conduct the installation in accordance with the instructions. Do not dismantle without authorization.
- The liquid or steam must not be directed towards equipment containing electrical components, such as the interior ovens. Warning

Notices

- Do not operate the machine unless you read this manual thoroughly. The machine can only be used indoors.
- The machine can only be used for the purposes described in this manual. Utilization for other purposes is prohibited.
- The water for the machine shall be domestic potable water to avoid contaminating the textiles. Purified water is recommended.
- Make sure the working voltage of the machine accords with your domestic supply voltage and the machine is connected to power supply mounted with 30mA creepage protection switch. Only the firmly grounded 3-pole socket is applicable for the machine. The rated current shall be not less than 15A.
- Thoroughly stretch the power cords before use. Avoid sharing the same power supply with other high-power electric appliances. Do not use wiring board to prevent fires arising from the wiring board overloaded.
- Before operation, connect all the necessary ironing or cleaning accessories, fill the outer tank to full and then turn on the power supply switch.
- Thoroughly stretch the expansion link to ensure that the steam hose is unobstructed and untwisted and other functions perform well.
- The machine shall be put on a flat and stable place.
- Do not fill hot water in the tank, or the tank would deform. Fill water before operation and observe the water level from time to time. Add water to proper volume in case it is below the designed water level.
- Do not directly put the machine under water tap to fill water.
- Do not fill solutions such as detergent into the tank.
- Keep power cords and steam pipes from metals or other heating elements.
- Do not leave the machine operating without attention.
- The machine shall not be operated by these people (including children): the physically, tactilely or mentally disabled or those who lack of experience and knowledge, unless they are supervised or guided by someone who is responsible for their safety in respect of the application of the machine.
- Children shall be monitored to be prevented from playing with the machine.
- During operation, keep the ironing brush away from people, animal or domestic electric appliance. When the machine is not in use, turn off the steam jet switch and put the ironing brush on the support to avoid steam hurting people or damage things.
- During operation, do not touch the steam jet outlet and steam conduit of the ironing brush or drag the power cords.
- Do not put on floor or distort the steam conduit, or accidents may be caused by the steam jammed in the steam conduit when it is squeezed.
- Do not drag the steam conduit by force or to move the machine, or the steam conduit may be damaged, or steam may leak.

- Do not pull out or plugin the steam conduit when the machine is still hot but only when the machine is cooled down, thus, to avoid scald.
- If the ironing brush falls, has visible damage or is leaking, stop using it.
- To avoid scald by steam, after operation, turn off the power supply, pullout the plug and, when the machine is cooled down, pour out the remnant water, and then have the machine packed and stored. However, let the machine air dried before packing and storage. Do not pull put the plug by dragging the power cord.
- Use dry soft cloth and neutral detergent to clean the machine surface and do not use solvents such as gasoline, alcohol, banana oil, etc. Prevent liquids penetrating the machine.
- Do not soak the machine, power cord or plugin water or other solutions. Do not keep the machine in places which are damp, exposed or of corrosive gases.
- Keep the machine away from flammable or explosive objects.
- Please clean the filter sieve at regular intervals to keep it available. The machine shall be cleaned or maintained from time to time (every 1 month or 20L water is consumed). (See the following sections for the cleaning and maintenance)
- Push the support pole to move the machine. Do not move the machine by force when it is tough to be moved. Discharge the water before checking the wheels. Turn off the power supply and pullout the plug before moving the machine.
- Turn off the power supply and pull out the plug before discharging water from or filling water in the tank. Avoid water leakage. Do not open or take down the tank in use.
- If find any damage on the accessories especially the safe protection and power
- cord, stop using the machine and inform our professional personnel of service center for repair. Do not repair at your own discretion.
- Before cleaning or repairing the machine, turn off the power supply, pull out the plug, release the pressure inside the heating element of the base and let the machine cool down.

Do abide by the following for the safety of yourself and others.

Notices	
Plug the power plugin thoroughly to avoid electric shock, as well as open circuit, short circuit, smoking and flammation caused by overheat of plug.	Use the socket with rated voltage of 220V-240V separately from other electric appliances, otherwise, fire may occur due to heat.
No watering: danger of short circuit and electric shock.	Do not pull or plug the plug with wet hand in respect of electric shock.
Do not use broken or loose socket in respect of electric shock, short circuit and flammation	Keep away from the steam hole to avoid burn.
Do not intend to refit, remove or repair the product in respect of fire, electric shock or other injuries.	Keep it away from the children or others unable to operate.
Do not insert the metal needle into heat dissipation hole or clearance in respect of injury caused by electric shock.	Remove the dust on power plug at regular intervals, otherwise, fire accident may occur due to poor insulation.
Do not put the product in water or damp environment or close to other heat sources, and do not put the inner boiler on the naked fire.	Do not touch the hot part, especially the surface of steam jet of ironing brush during or after the operation.
Hold the plug rather than haul the power cord to pull out the power plug.	Do use the attached power cord which shall not be used for other equipment.
Do not operate on the unstable platform or cushions which could not receive heat in respect of injury or fire caused by fallen ironing brush.	If not in use, pull the power plug out of the socket to avoid electric shock, leakage and fire arising from damages and insulation ageing.
Wash the ironing brush after totally cooling down to avoid scald.	Do not put it close to wall or furniture in case the steam leads to color change or distortion of which. Keep it over 30cm away from the wall and furniture.

DESCRIPTION OF PARTS



A: Iron brush	B: Hook on hanger
C: Pants clip on Hanger	D: Hanger
E: Clip on Aluminum tube	F: Aluminum tube
G: Steam hose	H: Hook on Aluminum tube
I: Connector on steam hose	J: On/off Switch
K: Water tank	L: Water inlet valve on water tank
M: Drain outlet knob	N: Iron board

PRODUCT ACCESSORIES

The product consists of the machine body (including water tank), Iron brush, brush with pants line clip, hanger, telescopic pole, glove, and Iron board.


O. Brush with pants line clip

P. Glove

Power control

PRODUCT INSTALLATION

1. Assemble support pole
   - Take out the machine and support pole.
   - Take out the support pole, insert the support pole into the hole on the machine body until it reaches the bottom.



2. Assemble hanger
   - Insert the hook into hanger
   - Insert the hanger into the top of support poles



3. Adjust the height of support pole
   - Release the clip in the support pole' adjust the support pole into need height, fasten the clip.



4. Assemble Iron brush
   - Take out the iron brush, align the plug of iron brush with and insert it into the corresponding hole on machine body, and tighten it clockwise. After finish use, please pullout the iron brush.



5. Assemble brush with Pants line clip
   - Take out the brush with pants line clip, fix it into the head of iron brush.


Horizontal Iron Vertical Iron

6. Assemble the iron board
   - Insert the tube into the hole on the back of Iron board, when you need horizontal iron
   - Insert the clip behind Iron board into the tube, make iron board fixed on tube, when you need vertical iron



7. Put the water into water tank
   - Open Water inlet valve on water tank, put the water in it and put back the water tank into the machine

PRODUCT OPERATION

Ironing

1. Stand the machine assembled on flat and stable floor. Adjust the height and spread range of the hanger as required and hang the clothes on it. Ensure there is enough water in the water tank and the tank is located properly. Plug the plug into the power socket, turn on the power switch. Let the machine preheat for about 45s, waiting for steam of ironing brush. When the ironing brush shake or move from side to side, water bead may be appeared on the handle of ironing brush (Danger of scalding).


Picture 1

Picture 2

Picture 3

When the ironing brush shake or move from side to side, water bead may be appearing the handle of ironing brush) Danger of scalding).

2. Iron from the main part of clothes, hold the lower hem by hand gently to make the wrinkled part flat and iron the rippled fibers out by the hot steam (as shown in Picture 2)
3. Press gently the metal panel of ironing brush on the clothes, move the brush up and down at such a speed that the steam penetrates the fibers appropriately for hot forming.
4. After ironing the main part, ironing the specific parts from up to down. When ironing the collar, you may fold the whole collar back, hold one end of the collar by hand, move the ironing brush horizontally and, during when, be careful of the hot steam (as shown in Picture 3).5. When ironing the sleeves, pull the sleeves to straight and move the ironing brush along he sleeves (as shown in Picture 4)
5. When ironing the lower hem of clothes, hold one side of the clothes, prop up the lower hem with the extension pole and move the ironing brush horizontally (as shown in Picture 5).
6. After ironing the front of clothes, turn the clothes over to iron its back.

Picture 4
Picture 7

Picture 5



Picture 6

7. When ironing the collar part of the garment, please use the small iron tool to make the collar stiffer, (as shown in Picture 6).
8. Use the button behind Iron boar, let the clip behind Iron board fix on the hanger, fix the small hook-on aluminum pole, during the ironing, iron brush can put into the hook. Adjust the height of the telescopic poles, you can iron more efficiency on the Iron board.
9. Iron board also can be fixed on the telescopic tube, it can be making a support during the ironing, (as shown in Picture 7).

PRODUCT MAINTENANCE

1. Purified water is recommended to avoid contaminating the textiles.
2. The contents of mineral substance differ in various kinds of water, so there would be sediments to respective extents if the ironing machine is applied with water of different qualities, which makes the steam flow lessens, intermits, or even stops. Purified water is recommended to avoid contaminating the textiles.
3. To better maintain the machine, the machine, when used for a certain period, may be cleaned, or maintained as follows, in which we suggest taking both steps together:

Cleaning the water tank

Related parts: Water tank and Tank filter

Cleaning frequency: Clean every 1 month or 20L water is consumed, which period may be prolonged or shortened according to the actual water quality.

Cleaning steps:

1. Screw out counterclockwise the water tank cover.
2. Pour the remnant water out of the tank.

Heat clean instruction.

Garment Steamer if use in long-term high temperature, will produce the calcium.

carbonate and salt powder scale. After long-term using, the scale will cause the pipe.

block, heater operation heavier load, effect the steamer. Specific performance is less.

steam than before or stop to spray steam. To have a better effect of the garment steamer, recommend regular cleaning of steamer heater, remove the scale. In the

calculation of half-hour daily the suggestion for the soft water areas is cleaner on time in two or three months, hard water areas is cleaned one time in two or three months, hard water areas is cleaned one time in one or two months.

Cleaning methods are as follows:

1). Add white vinegar and water into the tank, mixed in a ratio of 1:1 to fill.

2). Put the tank onto machine, plug in the power cord, turn on the switch, let the machine runs for about 10 minutes.

3). After running for 10 minutes, turn off the power, unplug it, remove the mixture.

4). Then add some water into the tank, lift up the machines swinging around a few times, and remove the water. Do this procedure several times repeatedly, until the residual scale and vinegar flavor is removed.

3.Storage

- Keep the machine in a dry, cool, and ventilated place and away from flammable and explosive objects.
- Keep properly the hood of connecting hole and put it back when pulling out the ironing brush after the work is done, to prevent water and dust away from the connecting hole.

FAULT RECOVERY

Fault Recovery		
Fault		
The machine does not work, or the indicator lights switch is not lighted	Cause	Solution
	Power off or fusion of fuse	Check and confirm
	The socket is not connected plugged in properly	Connect to the power supply and ensure the plug is plugged in thoroughly
	Unfavorable connection socket	Check whether the power socket is normal or not
	The power switch is not turned on	Turn on the power switch
The indicator lights on but there is no steam	The water in water tank does not reach the designed water level	Fill water promptly
	The water tank is not installed in position	Install the water tank in position
	Severe Inflection of steam conduit	Straighten the steam conduit
	Water don't flow into boiler	Shaking water tank or replaced the water tank
The accessories, brush is not fastened ironing	Unaligned grip	Realign and fasten the snap close
Less, discontinuous or no steam	The water in water tank does not reach the designed water level	Fill water promptly
	The water tank is not installed in position	Install the water tank in position
	Severe Inflection of steam conduit	Straighten the steam conduit
Less volume of steam	Blockage of filter sieve	Wash the clearing plug at bottom
	Blockage of water tank	Wash the filter sieve of water tank
Water don't flow into boiler	Blockage of water intake	Wash the water intake
	The water tank is not installed in position	Install the water tank in position
Water tank deformation	Used hot water	Replace the water tank
Overflow of water tank	Cracking of water tank	Replace the water tank
	Breakage of seal ring	Replace relevant fittings

If the problems above are still not solved, inform the professionals, and do not dismantle the machine without authorization.

PRODUCT TECHNICAL PARAMETER

Model No.	:	RE-3-076
Voltage	:	220-240V~
Frequency	:	50/60Hz
Power	:	2000W
Tank capacity	:	2700ml
Exit Steam temperature	:	98 °C
Steam rate	:	35g/min (max)
Telescopic pole Max length	:	121cm
Telescopic pole Min length	:	46 CM
Steam hose length	:	106 CM

تحذير: -

تحذير هام!!

هذا المنتج غير مخصص للاستخدام من قبل أي أشخاص يعانون من نقص في القدرات الجسدية والحسية

والعقلية بما في ذلك (الأطفال) أو من تنقصهم الخبرة والمعرفة مالم تتوفر لهم المراقبة وتعليمات استعمال المنتج عن طريق أحد الأشخاص يكون مسؤلا عن سلامتهم.

تحذير عام للأطفال!!

المنتج غير مخصص للأطفال وعدم تركهم يلعبون به

التخزين:

عند عدم استخدام المنتج قم بتخزينه في مكان جاف

لأي استفسار عن منتجات شركة ريبون يرجى عدم التردد في الاتصال بخدمة العملاء في العنوان المبين ادناه:

ريبـون الشرق الأوسط _ الرياض المملكة العربية السعودية
sales@rebune.com
هاتف:00966-11-4580787
فاكس:00966-11-4389390
الرقم الموحد:920006752

صنع في الصين

Rebune International Trading Co.
Address:3rd.Floor,Al Mousa Trading Building,King Fahad Road,
P.O .Box 235185 Riyadh 11332 K.S.A.

	لم يتم تشغيل زر الطاقة	يتم تشغيله
ضوء المؤشر يظهر لكن لا يتولد بخار	الماء الموجود في الخزان غير كافي	تعبئة الماء
	لم يتم تثبيت الخزان في مكانه بشكل مناسب	يتم إعادة تركيب الخزان
	التفاف أنبوب البخار بشدة	ضبط الأنبوب وإعادته لاستقامته
	الماء لا يتدفق في السخان	فحص الخزان أو استبداله
ملحقات فرشاة المكواة غير مثبتة تقطع البخار أو انعدامه	عدم محاذاة المقبض	الفك وإعادة التثبيت
	الماء في الخزان أقل من المستوى المحدد	تعبئة الماء
	التفاف أنبوب البخار	فرده واستقامته
حجم البخار أقل	رواسب تعوق الفلتر	تنظيف الفلتر
	رواسب في الخزان	تنظيف الخزان
الماء لا يتدفق في السخان	رواسب في مدخل الماء	تنظيف مدخل الماء
	الخزان غير مثبت في مكانه	ثبت الخزان بشكل مناسب
خزان الماء به تغير في الشكل	استخدام ماء ساخن	يتم تغييره
زيادة التدفق	تشقق الخزان	تبديل الخزان
	تلف السدادة المانعة للتسرب	تغيير السدادة

في حالة فشل الإجراءات السابقة في حل المشكلة يتم الاتصال بمركز الخدمة والصيانة للفحص ويمنع مطلقا محاولة فك المنتج بنفسك أو بواسطة شخص غير متخصص

المواصفات الفنية:

الموديل	RE-3-076	حرارة البخار	98 درجة مئوية
الجهد	240-220 فولت	معدل البخار	35 جرام بالدقيقة حد أقصى
التردد	60/50 هرتز	أقصى طول للاستاند	121 سم
القدرة	2000 وات	أدنى طول استاند	46 سم
السعة للخزان	2700مليلتر	طول خرطوم البخار	106 سم

3- بعد فترة من استخدام المكواة ينبغي الحرص على صيانتها وتنظيفها بشكل دوري، ويمكن تطبيق الأمرين

تنظيف خزان الماء

يشمل ذلك خزان الماء وفلتر الخزان

يتم تنظيف الخزان في كل شهر أو عند استهلاك المكواة لكمية 20 لتر من المياه يمكن أن تزيد أو تقل الفترة حسب جودة المياه

[illegible]

كابل الطاقة والضغط على زر التشغيل واترك الوقت الكافي لتسخن المكواة حوالي 35 ثانية وانتظار سخونة فرشاة الكي.

2- يتم الكي من وسط الملابس والإمساك بالجزء السفلي بيد ثم كيها برفق بقوة البخار ليتم كيها وفردها بطريقة مناسبة وكي الأنسجة بفعل البخار الساخن كما في شكل 2.

تحذير: عندما تهتز فرشاة الكي أو تتحرك من جانب إلى جانب ربما تجد مياه على مقبض فرشاة الكي يجب الحذر من مخاطر الحروق في هذه الحالة.

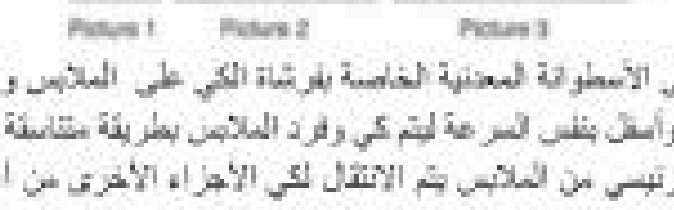
شكل 1 شكل 2 شكل 3

[illegible]

شكل 4 شكل 5 شكل 6 شكل 7

[illegible]

يتكون الجهاز من الجسم الأساسي ويتضمن مستودع الماء وفرشاة الكي والشماعة والشماعة الأصغر، وشدايد وحامل وأدوات الكي الصغيرة وقفاز ولوحة الكي

التحكم في السرعة
فرشاة
قفاز

[illegible]

	إصابات		كهربي
	يراعى غسل فرشاة الكي فقط بعد أن يبرد الجهاز بالكامل لتجنب الحروق.		يراعى إبعاد البخار عن الحوائط والجدران لأنه يؤدي إلى تغيير اللون الخاص بها ولذلك يجب إبعاد المكواة عن الجدران والمفروشات بمسافة 30 سم على الأقل

تركيب المنتج وتوضيح أجزائه

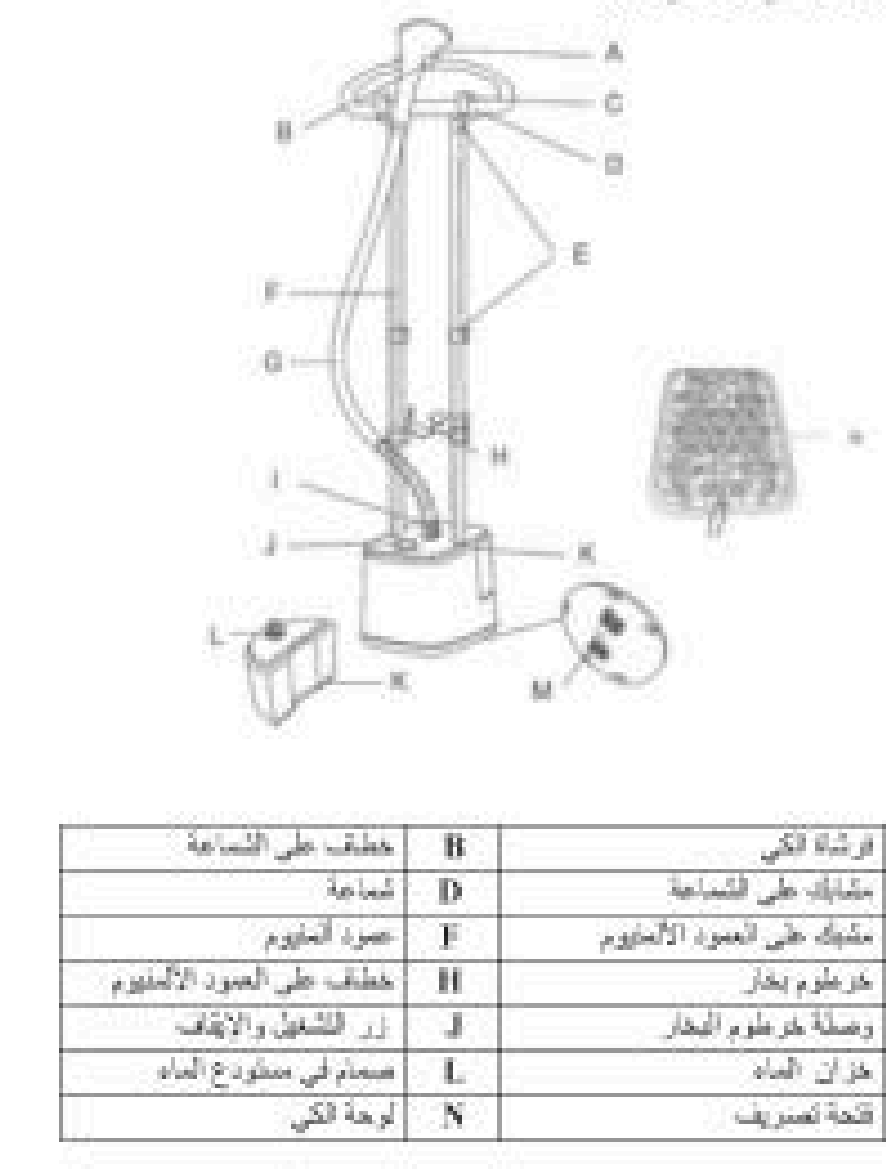

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

REBUNE®
BEYOND IMAGINATION

نجمل اللحظة لك ولبيتك
بمنتجات وأقسام متنوعة تلبي احتياجاتك اليومية