振洲印刷：REBUNE RE-1-132 IM 2024.6.29
Size:122x185mm

REBUNE®
BEYOND IMAGINATION

دليل التعليمات
Instructions Manual

غلاية
Electric Kettle
RE - 1 - 1 3 2

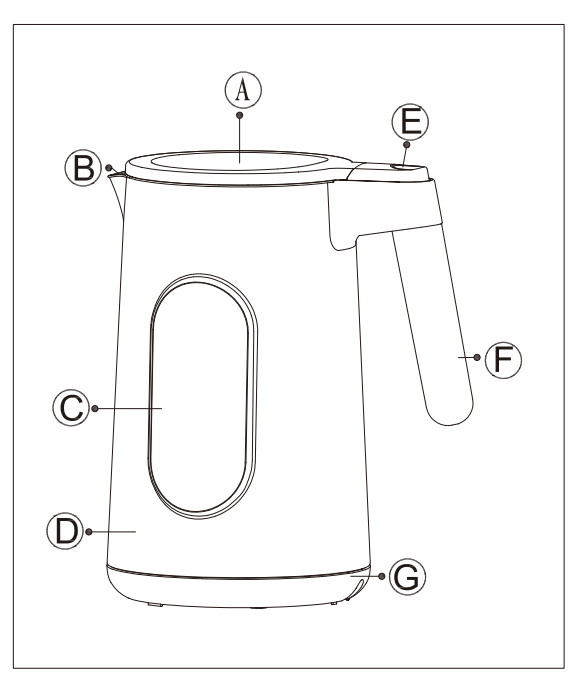

ⒶCover ⒷS.S Body ⒸPCB panel ⒹPlastic Body
ⒺCover starter ⒻHandle cover ⒼBase

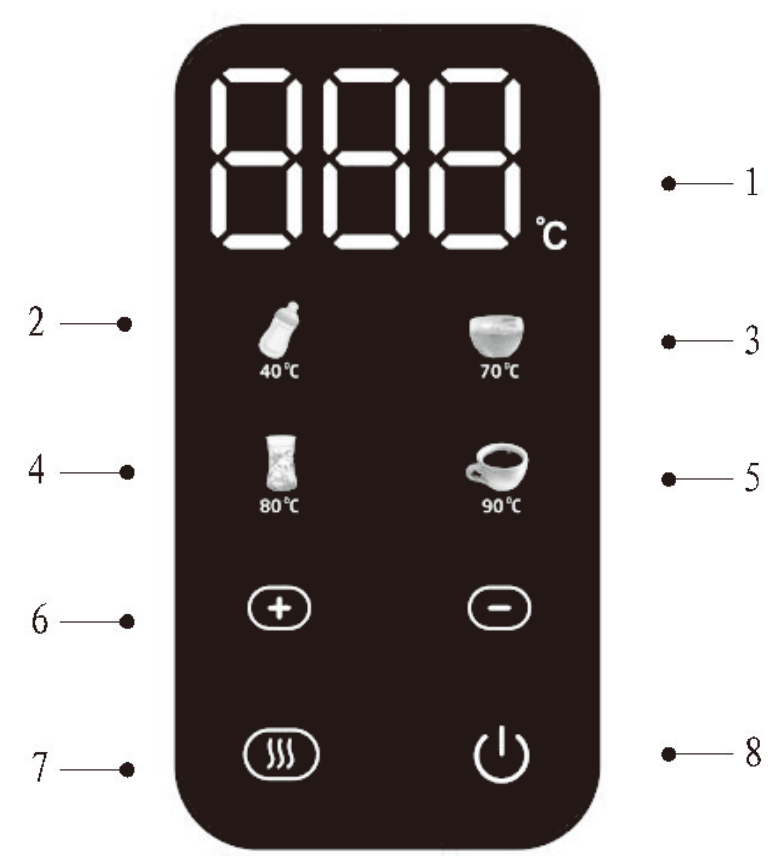

1. Temperature Icon
2. 40℃(Milk)
3. 70℃ (Honey)
4. 80℃ (Green)
5. 90℃ (Coffee)
6. Temperature Increase/Decrease button
7. Keep warm
8. Power (On/Off)

Operation Instruction

Please check whether your socket and power is suitable for this product before use
Do not exceed the maximum line of the mark(1700ml)
It is suggested to boil twice to clean the inner pot when first use

1 . Place the the kettle on a horizontal surface for use
2 . Open the lid and pour water into the kettle
3. Connect with power, enter the setting interface, and press the button for boiling water (you can select the setting temperature you need under the setting interface).
4. Take off the kettle for brewing

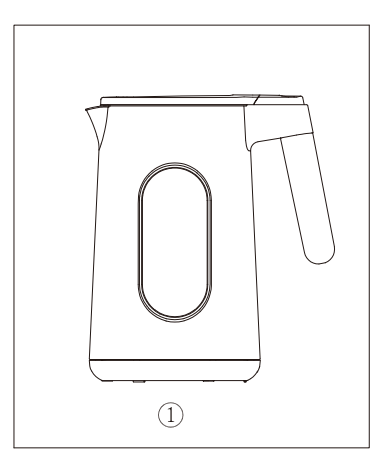
①

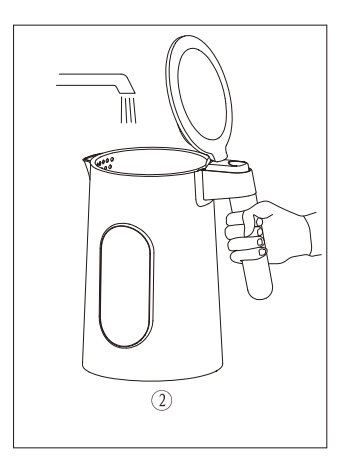
②

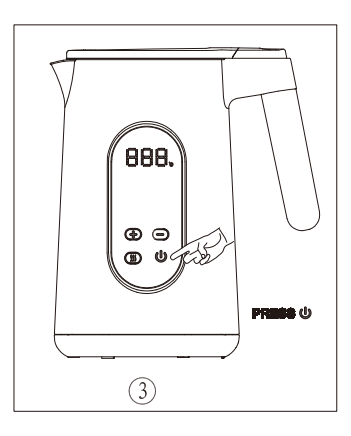

③

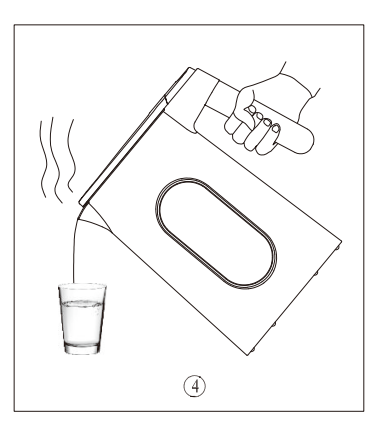
④

When using your kettle, basic safety precautions should always be followed, including the followings:

1. Read all instruction carefully and thoroughly, before any operation of the kettle.
2. Close supervision is necessary when any appliance is used by or near children.
3. Before connecting the kettle, check whether the voltage indicated on the appliance(underside of kettle and base unit) corresponds with the mains voltage in your home. If this is not the case, contact your dealer and not use the kettle.
4. Switch off and unplug from the outlet before filling, emptying or cleaning, or when not in use.
5. Do not overfill as boiling water may be ejected, the maximum level indicator. Fill with cold water only.
6. To avoid against fire, do not operated in the presence of explosive and/or flammable fumes. Such as do not operate or place any party of this appliance on or near gas and electric burner or in a heated oven.
7. Do not let the cord hang over the edge of a table or a counter. Do not let the cord touch hot surface.
8. Never yank on the cord as this may damage the cord and eventually cause a risk of electric shock.
9. If the cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any way, return the appliance completely to your nearest authorized service agent for examination, repair or adjustment.
10. Avoid touching the surface of the hot kettle, use the handle and knobs.
11. To avoid possible steam damage, not face the spout when operating the kettle.
12. If operated on wood furniture, use a protective pad to prevent damage to delicate finishes.
13. To avoid scalding, always ensure the lid is correctly positioned before operation.
14. Scalding may occur if the lid is removed while heating.
15. Remove and replace the lid carefully when hot.
16. Extreme caution must be used when moving the kettle containing hot water. Never lift the kettle by its lid. Always use the body handle.
17. Do not switch your kettle on if it is empty.
18. To protect from electrical hazard, do not immerse this kettle, power base or cord set in any liquid.
19. Use the kettle only with the supplied base unit. Do not use the base unit for other purposes.
20. The kettle should not be used for any purpose other than boiling water. Other liquids or food can contaminate the inside of the kettle。
21. While the water boiling or in the short time after the water boils, please be sure that don't attempt to open the cover for avoid the steam scalding your hand.
22. Please avoid the liquid sprinkling in the LCD board and the pressed key place in the operating process. Because the water possibly can plunge in the product, causes the function to be unusual.
23. Please do not have to add surpasses the maximum water volume the water, because this has the possibility to damage the product, causes the product movement to appear exceptionally.
24. Please regular clean descale or pot bottom residuum, because this possibly can affect the normal use of the product.
25. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

---

26. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
27. Children shall not play with the appliance.

Save the instruction
Instruction for use

1. Before use preparatory work:
   （1）. Before first use, fill the kettle with clean water to maximum capacity and boil. Discard the water and repeat the process.
   （2）. The kettle should always be unplugged when filling or adding water.
   （3）. Fill the kettle with water to desired level. Do not overfill or there will be a risk of spillage or spitting. The water level indicator will assist you to measure the correct amount. You can fill the kettle via the spout or after opening the lid. Do not forget to close the lid after filling, otherwise the kettle will not automatically switch off after use.
   （4）. Do not fill with more than 1.7 liters of water（to "max" indication）.
   （5）. An automatic safety cut-out has been fitted for protection against overheating, it will operate if the kettle is switched on when containing insufficient water. Always ensure the water inside the kettle covers the minimum mark on the water level indicator gauge. If the automatic safety cut-out has operated, switch the kettle off, disconnect from the power outlet and allow the kettle to cool down for 5 to 10 minutes. The refill with and switch on, the kettle will work as normal.
   （6）. After boiling, the kettle switches off automatically.
   Disconnect the kettle from the mains electricity supply.
   Do not open the lid when pouring.
   If the kettle is overfilled ,boiling water may be ejected.
   The kettle is only to be used with the stand provided.
   （7）.This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

Basic Operation:

①Temperature Icon: Show the real-time and setting temperature。

②40℃(Milk): **Under setting interface, Press** 40℃ shortly ,enter the mode of relevant temperature 40°C。

③70℃ (Honey) **: Under setting interface, Press** 70℃ shortly ,enter the mode relevant temperature 70°C。

④80℃ (Green) **: Under setting interface, Press** 80℃ shortly ,enter the mode of relevant temperature 80°C。

⑤90℃ (Coffee): **Under Setting interface , press** 90 ℃ **shortly .** enter the mode of relevant temperature 90°C。

⑥**Temperature Increase/Decrease button :Single press** ⊕ ⊖ ,setting from 40-100°C in every 5°C as level .

⑦ **Keep Warm Key: Under setting interface ,** press the ♨ key once and the buzzer will sound "di" ♨ light in twinkle status. At the same time, after selecting the required setting temperature by pressing the increase/decrease button or directly selecting the 40°C, 70°C ,80°C,90°C button on the setting interface, it will automatically enter the keep warm state. The keep warm time is 2 hours. When the water temperature is lower than the set value of about 5 degrees, the heat will be resumed until 2 hours .

⑧ **Power button: Under Setting interface , press** ⏻ **shortly . and the buzzer sound "DI", and the temperature show** 100°C ,the four buttons ⊕ ⊖ ♨ ⏻ all light on. The temperature icon show the current real time temperature and enter boiling status . After boiled, The buzzer sounds"DI DI" .These three buttons ⊕ ⊖ ♨ lights off , and the temperature show will be off after 30 seconds. The power button switch to breath light .

⑨In the state of keep warm , after boiling water to the set temperature, the function of memory starts. Within ten times of kettle lifting, the water temperature of the kettle should not be less than 8 degrees below the set value for each time, and the memory is effective, that is, the keep warm

---

continues to work and the time of keep warm continues to the last time. Otherwise exit the keep warm

How to care for your kettle

Wipe the exterior of the kettle with a soft, damp cloth or sponge. Remove stubborn spots with a cloth moistened with mild liquid detergent. Do not use abrasive scouring pads or powers.
Never immerse the kettle in water or other liquids.
From time to time, depended on the nature of your water supply, a boiled scale deposit is naturally formed and can be found mostly adhered to the heating element,thus reducing the heating efficiency.
The amount of boiled scale deposited（and subsequently the need to clean or re-scale）largely depends on the water hardness in your area the frequency with which the kettle is used.
Boiled scale is not harmful to your health. But if poured into your beverage, it can give a powdery taste to your drink. Therefore, the kettle should be descaled periodically as indicated below.

Descaling

Under normal use, it is generally necessary to clean and descale at least twice a year, the specific method is as follows:
1. Mix daily vinegar with water in a ratio of 1:2, fill the kettle (the highest water level) to start boiling water, and wait for the kettle to boil
2. Leave the mixture for 12 hours.
3. Pour off the mixture.
4. Fill clean water to the highest water level and restart the boil function.
5. Pour off the boiling water, The scale and mixture has been removed and the cleaning of the kettle is completed.

تحذيـر: -

تحذير هام!!

هذا الجهاز غير مخصص للاستخدام من قبل أي أشخاص يعانون من نقص في القدرات الجسدية والحسيه

والعقيلة بما في ذالك (الأطفال) أو من تنقصهم الخبرة والمعرفة مالم تتوفر لهم المراقبة وتعليمات استعمال الجهاز عن طريق احد الأشخاص يكون مسؤالا عن سلامتهم..

تحذير هـام للأطفال!!

الجهاز غير مخصص للأطفال وعدم تركهم يلعبون به

التخزيـن:

عند عدم استخدام الجهاز قم بتخزينه في مكان جاف

لأي استفسار عن منتجات شركة ريبـون يرجى عدم التردد في الاتصال بخدمة العملاء في العنوان المبين ادناه:

ريبـــون الشرق الأوسط _ الرياض المملكة العربيه السعودية

sales@rebune.com

هاتف:00966-11-4580787

فاكس:00966-11-4389390

الرقم الموحد:920006752

صنع في الصين

من وقت لآخر واعتماد على طبيعة ونقاء الماء الموجود يمكن أن تترسب تكلسات معدنية فتقلل فعالية عمل الغلاية.

يتم العناية بالرواسب وتنظيفها كل فترة ويعتمد ذلك على درجة الماء الموجودة في المنطقة السكنية.

غلي الرواسب المعدنية المتراكمة لا يضر الصحة ولكنها تؤثر على مذاق وطعم المشروبات التي يتم تحضيرها لذلك يتم التنظيف كل فترة وفقا للخطوات التالية:

إزالة الرواسب المعدنية:

في ظل الاستخدام العادي من المهم القيام بازالة الترسبات المعدنية على الغلاية مرتين كل عام وفقا للخطوات التالية:

-1 يتم خلط الخل م الماء بنسبة 1 : 2 لأعلى مستوى من الحد الأقصى وبدء عملية غلي الماء والانتظار لحين تمام العملية.
-2 يترك الخليط لمدة 12 ساعة.
-3 يتم سكب وتفريغ الخليط.
-4 يتم تعبئة الغلاية بالماء النظيف للحد الأقصى وبدء عملية الغليان مرة أخرى.
-5 يتم التخلص من الماء المغلي مع بقايا الرواسب ويعني ذلك اكتمال عملية إزالة الرواسب وجاهزية الغلاية لإعادة الاستخدام من جديد.

الضغط على 90 ° م للقهوة حيث يتم الضغط لفترة قصيرة لتشغيل وضع 90 ° م.

.الضغط على زر رفع أو خفض درجة ⊕ ⊖ للتحكم في درجة الحرارة بين 40° إلى 100 ° بمعدل 5 ° كل مرة.

الضغط على زر الاحتفاظ بالدفء والسخونة حيث يتم الضغط على علامة ♨ حيث يومض زر الاحتفاظ بالدفء أو في حالات تقليل أو زيادة درجة الحرارة أو اختيار الحرارة المحددة من 40 أو 70 أو 80 أو 90 فسوف يعمل وضع الاحتفاظ بالدفء بطريقة تلقائية. يتم الاحتفاظ بالدفء لمدة ساعتين. عندما تقل درجة الحرارة عن القيمة المحددة بحوالي 5 ° سوف تسخن وتستعيد درجة الحرارة و يتم الاحتفاظ بالحرارة لمدة ساعتين.

زر تشغيل الطاقة يتم الضغط لفترة قصيرة وسوف يسمع صوت جرس وتوضح درجة الحرارة 100 ° م وسوف تومض العلامات الخاصة بالمؤشرات الأربعة ⊕ ⊖ ♨ ⏻ وسوف تحدد الوقت والحرارة الخاصة بمستوى الغليان وبعد الغليان سوف يسمع صوت جرس مميز وسوف تظهر 3 مؤشرات فقط توضح الحالة وهي ⊕ ⊖ ♨ وسوف تعرض درجة الحرارة وتغلق بعد 30 ثانية وزر الطاقة سيكون وميض متردد.

الضغط على وظيفة الاحتفاظ بالدفء بعد أن يحدث غليان الماء تبدأ الذاكرة في العمل والاحتفاظ بدرجة الحرارة على 10 مراحل وكل مرة لا تقل درجة الحرارة عن 8 درجات عن القيمة المحددة ويتم الاحتفاظ بالذاكرة والدفء في وضع فعال. ويستمر ذلك لحين الوصول للحد الأدنى فيتوقف الاحتفاظ بالدفء.

كيفية خدمة الغلاية والاعتناء بها:

يتم مسح السطح الخارجي للغلاية بقطعة قماش رطبة أو قطعة إسفنج وإزالة أي بقع بقطعة مبللة أو باستخدام سائل تنظيف لطيف. يمنع استخدام السلك المعدني الكاشط أو أي محاليل كيميائية قوية.

يمنع غمس الغلاية في الماء أو في أي سائل آخر.

---

4) يمنع تعبئة أكثر من سعة الغلاية 1.7 لتر.
5) يوجد ميزة القطع التلقائي للحماية ضد المخاطر الخاصة بزيادة درجة الحرارة عن الحد المناسب. يجب التأكد من وجود ماء يغطي الحد الأدنى المناسب. تشغيل وظيفة قاطع الحماية سيغلق التشغيل تلقائيا وفي هذه الحالة يتم فصل التيار الكهربي عن الغلاية وتركها تبرد بطريقة كاملة لمدة بين 5-10 دقيقة. ثم يتم إعادة تعبئة الماء وإعادة التشغيل وسوف تعمل الغلاية بطريقة عادية.
6) بعد أن يغلي الماء الموجود في الغلاية سوف تفصل بشكل تلقائي.
- يتم فصل الغلاية من مصدر التيار الكهربي.
- عدم فتح الغطاء عند سكب الماء الساخن.
- في حالة التعبئة أكثر من الحد المسموح به سوف ينسكب الماء للخارج مسببا أضرار.
- يجب استخدام الغلاية فقط مع الاستاند الخاص بها .
7) الغلاية مخصصة للاستخدام المنزلي فقط أو الاستخدام الشبيهة والتي تشمل:
- المساحة المخصصة كمطعم في المحلات أو المكاتب أو بيئات العمل.
- المزارع
- نزلاء الفنادق والاستراحات وشقق الإقامة.
- الملحقات المخصصة للإفطار الملحقة بحجرات النوم.

مهام التشغيل الأساسية:

أيقونة درجة الحرارة توضح وتعرض أوضاع درجة الحرارة المتاحة والتي تشمل (40 ° م للحليب حيث يتم الضغط لفترة قصيرة لتشغيل وضع 40 ° م.

الضغط على 70 ° م للعسل حيث يتم الضغط لفترة قصيرة لتشغيل وضع 70 ° م.

الضغط على 80 ° م للمشروبات الخضراء حيث يتم الضغط لفترة قصيرة لتشغيل وضع 80 °

-25 في حالة تلف السلك يجب أن يستبدل بواسطة نوعية جيدة مطابقة للمواصفات بواسطة المصنع أو بواسطة فني متخصص من مركز الخدمة والصيانة أو كهربائي متخصص لديه خبرة لتجنب المزيد من المخاطر.

-26 الجهاز يمكن استخدامه بواسطة الأطفال من عمر 8 سنوات فما فوق في حالة توفير إشراف كامل لهم للتأكد من استخدام الجهاز بطريقة سليمة وفقا للتعليمات وفي حالة إدراكهم لكل مخاطر التشغيل. مهام التنظيف أو الصيانة يجب ألا تتم بواسطة الأطفال ما لم يتم توفير إشراف مع ضرورة أن يكون عمرهم فوق 8 سنوات مع المحافظة على سلك التوصيل بعيدا عن متناول الأطفال الأقل من 8 سنوات. الجهاز يمكن استخدامه بواسطة أصحاب الإعاقات الخاصة الذهنية أو العقلية أو الجسدية أو حالات نقص الخبرة أو نقص القدرة في حالة توفير إشراف كامل لهم بواسطة شخص خبير متخصص لتجنب أي أذى حرصا على سلامتهم.

-27 يراعى تجنب ترك الجهاز للأطفال للعبث به.

يتم الاحتفاظ بدليل التشغيل للعودة له وقت اللزوم

تعليمات للاستخدام:

1-التجهيز للتشغيل قبل استخدام الجهاز:

1) قبل الاستخدام لأول مرة يتم تعبئة الغلاية بماء نقي لعلامة الحد الأقصى ثم غلي الماء ثم تفريغ الماء وتكرار نفس الخطوة.
2) يجب فصل الغلاية من مصدر الطاقة عند التعبئة أو عند إضافة الماء.
3) يتم تعبئة الغلاية بالماء للحد المطلوب. عم تعبئة الماء فوق الحد الأقصى لعدم انسكاب الماء الساخن للخارج. يمكن تحديد مقياس ومعيار الماء بطريقة سهلة . يمكن تعبئة الماء من خلال رفع الغطاء أو من خلال الفتحة الموجودة في الغطاء . يرجى عدم نسيان الغطاء مفتوحا بعد تعبئة الماء وإلا سوف تغلق الغلاية بشكل تلقائي.

-11 للوقاية من حروق البخار يرجى عدم مواجهة البخار أثناء تفريغ الماء.
-12 في حالة التشغيل في أماكن وجود أثاث يراعى استخدام حاجز وقاية لعدم الإضرار بشكل الأثاث.
-13 لتجنب الحروق يجب التأكد من وضع وتثبيت الغلاية بإحكام قبل عملية التشغيل.
-14 قد تحدث حروق في حالة تحريك أو رفع الغطاء أثناء غليان الماء.
-15 يرجى فتح الغطاء بعناية عندما يكون الماء ساخن تجنبا للحروق.
-16 يجب بذل عناية أكبر عند تحريك الغلاية وهي تحتوي على ماء ساخن، يمنع مطلقا رفع الغلاية من الغطاء يتم استخدام المقبض الموجود في جسم الغلاية.
-17 مراعاة عدم تشغيل الغلاية عندما تكون فارغة.
-18 للحماية ضد مخاطر الصدمات الكهربية يرجى عدم غمس الغلاية أو سلك الطاقة في الماء أو أي سائل.
-19 تستخدم الغلاية فقط مع القاعدة الخاصة بها. ولا تستخدم القاعدة لأي غرض آخر.
-20 يمنع استخدام الغلاية لغرض آخر غير غلي الماء. أي أطعمة أو سوائل أخرى قد تلوث الغلاية .
-21 حيث أن الماء يستمر يغلي لفترة بعد الفصل يجب التأكد من عدم التسرع في فتح الغطاء منعا من الأذى بفعل البخار الصاعد.
-22 يرجى تجنب تطاير السائل على لوحة الشاشة البلورية **LCD** لأن الماء يمكن أن يضغط على الوظيفة ويتم تشغيل وظيفة غير مناسبة. مما قد يسبب مشاكل.
-23 يجب مراعاة عدم تخطي الحد المسموح به من الماء وعدم الإضافة فوق هذا الحد لأنه قد يؤدي إلى تلف الغلاية وعدم عملها بطريقة مناسبة.
-24 يجب الحرص على تنظيف الرواسب المتجمعة كل فترة بطريقة منتظمة للمحافظة على الغلاية.

عند استخدام الغلاية الكهربية يجب اتباع مجموعة من تعليمات الأمان والسلامة والتي تشمل البنود التالية:

-1 يُرجى قراءة كل التعليمات بعناية وحرص قبل تشغيل الغلاية.
-2 ضرورة توفير إشراف في حالة استخدام الجهاز بواسطة الأطفال أو بالقرب من أماكن تواجدهم.
-3 قبل توصيل الغلاية يجب الفحص والتأكد من مطابقة مصدر التيار المتوفر في منزلك للجهد الكهربي المسجل على قاعدة الغلاية. في حالة عدم المطابقة يتم الاتصال بمركز الخدمة أو فني متخصص لديه خبرة لحل الأمر .
-4 يرجى إيقاف التشغيل وفصل توصيل التيار الكهربي قبل تعبئة الماء أو تفريغه أو التنظيف أو في حالة عدم استخدام الغلاية.
-5 يُمنع تعبئة الغلاية فوق علامة الحد الأقصى الموضحة وإلا فسوف يؤدي ذلك لانسكاب الماء للخارج. ويجب تعبئة الغلاية بالماء البارد فقط.
-6 لتجنب خطر الحريق يجب عدم تشغيل الغلاية في أماكن قريبة من المواد المتفجرة أو الملتهبة التي تتأثر بالحرارة مثل عدم تشغيل الغلاية أو وضع أي جزء منها بالقرب من المواد الغازية أو الشواية الكهربائية أو الأفران الساخنة.
-7 عدم ترك السلك معلقا على الحواف الحادة والأطراف والأسطح الساخنة.
-8 عدم شد السلك بعنف لأن ذلك يؤثر على السلك ويؤدي لتلفه أو قطعه مما قد يسبب خطر الصدمات الكهربية.
-9 في حالة تلف السلك أو في حالة تعطل التشغيل أو سقوط الجهاز أو أي شكل من أشكال التلف يتم إعادة كامل الجهاز إلى أقرب مركز خدمة معتمد للفحص أو إصلاح الأعطال.
-10 يراعى عدم ملامسة الأجزاء الساخنة في الغلاية واستخدام المقبس والمؤشرات فقط بطريقة مناسبة.

تعليمات التشغيل:

يجب التأكد قبل التشغيل أن التيار الكهربي المتوفر بشدة تناسب الجهد الكهربي للجهاز.

يُمنع زيادة الكمية عن علامة الحد الأقصى وهي تعادل 1700 ملي.

يوصى بالغلي مرتين بشكل تجريبي عند استخدام المنتج لأول مرة لتنظيف الحاوية الداخلية.

-1 وضع الغلاية على سطح أفقي مستوى عند الاستخدام.
-2 يتم فتح الغطاء وصب الماء وإضافته إلى داخل الغلاية.
-3 يتم توصيل سلك الطاقة بالتيار المناسب واختيار وضع التشغيل المناسب والضغط على زر الطاقة لبدء تشغيل وغلي الماء. ويمكن اختيار درجة الحرارة المناسبة).
-4 رفع الغلاية من القاعدة لعمل المشروب المراد.

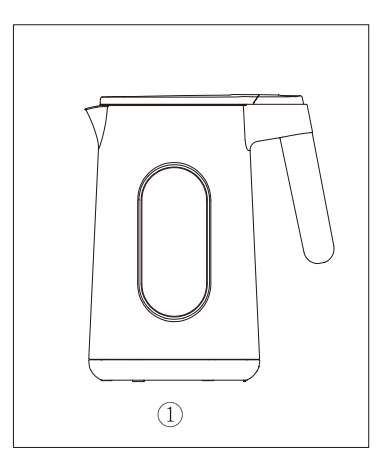
①

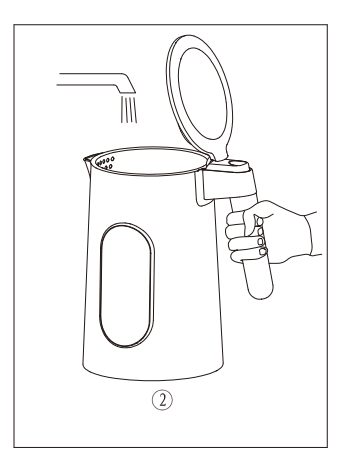
②

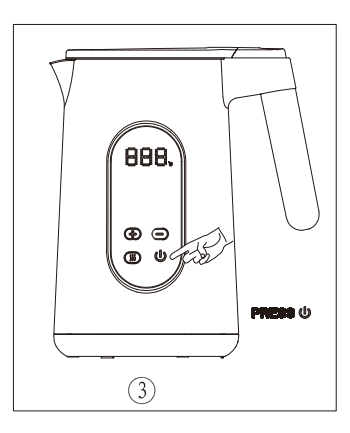

③

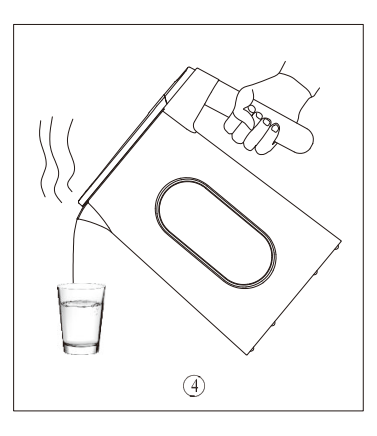
④

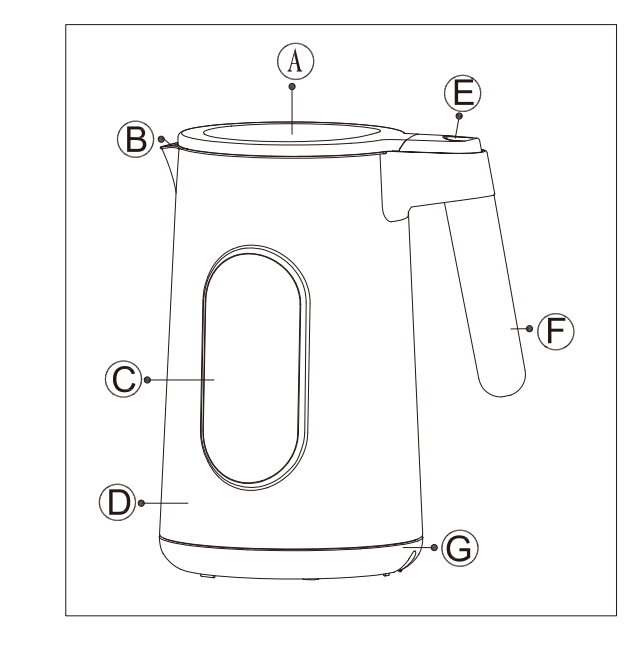

A	غطاء	E	زر فتح وغلق الغطاء
B	جسم الجهاز	F	غطاء المقبض
C	لوحة التسخين بالحث المغناطيسي عالي التردد	G	قاعدة
D	جسم بلاستيكي		

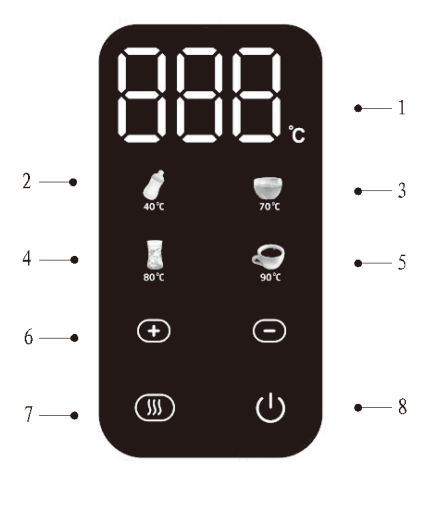

-1 أيقونة درجة الحرارة.
-2 40 ° م (حليب)
-3 70 ° م (عسل)
-4 80 ° م (مشروبات خضراء).
-5 90 ° م (قهوة)
-6 مفتاح رفع أو خفض درجة الحرارة.
-7 الاحتفاظ بالدفء والسخونة.
-8 زر الطاقة (الإيقاف / التشغيل).

REBUNE®
BEYOND IMAGINATION

شركة ريبون العالمية
حساب نشاط تجاري في واتساب
للحصول على خدماتنا استخدم الكود

شركة ريبون العالمية
كتالوج الأجهزة والاواني المنزلية
للاطلاع على منتجاتنا استخدم الكود

فولت 240-220 - هرتز 60-50 - القوة1850-2200وات
Voltage 220-240V - Frequency 50-60Hz - Power 1850-2200W
Rebunesa
www.rebune.com