

Orb - Pit Wall Strategy Manager

User manual - endurance race strategy, live pit wall, fuel planning and crew management

Version 2.2.23

Mullaloo Motorsport Engineering - 2026 Pietro Gambarin

November 2026

Contents

1. Introduction
- 1.1 Who this manual is for
- 1.2 Names and versions
- 1.3 Conventions
- 1.4 What is new since 2.2.3

2. Requirements and installation

3. Starting, stopping and access

4. Demo and simulator - guided tour
- 4.1 What the demo contains
- 4.2 Start the demo
- 4.3 What the simulator does
- 4.4 Simulator options
- 4.5 Guided exercises
- 4.6 Leaving the demo

5. Screen reference
- 5.1 How to read the screens
- 5.2 Strategy, message, information
- 5.3 Status bar
- 5.4 Timeline
- 5.5 Race tab
- 5.6 Race Plan tab
- 5.7 Fuel Plan tab
- 5.8 Scenarios tab
- 5.9 Team tab
- 5.10 Car tab
- 5.11 Garage display
- 5.12 Log tab and saved plans
- 5.13 Setup
- 5.14 Track layout - Collie Motorplex

6. Running a real race weekend

7. How the strategy works

8. Devices and network

9. Data, backup and recovery

10. Troubleshooting

11. Known limitations

12. Reporting feedback

Appendix A - Glossary

Appendix B - Calls and alerts

Appendix C - Version history

1. Introduction

Orb - Pit Wall Strategy Manager (Orb for short) is a self-hosted race engineering application for endurance racing. One laptop runs a small server; the engineer works in a browser on that laptop, and any phone, tablet or TV on the same network can open the same screens view-only. It runs completely offline: no internet and no cloud account are needed at the track. The optional satellite view of the track map uses imagery that the laptop downloads beforehand and keeps (section 5.5). NEW

It continuously answers the questions a pit wall asks during a long race:

- **Should the car stop now?** A single call (STAY OUT, WINDOW OPEN, BOX IN 3 LAPS, NOTIFY DRIVER: BOX BOX ...) recalculated every second.
- **How much fuel is in the car, and how far will it go?** A fuel model that learns from every brim fill and gauge reading.
- **Do we have enough fuel at the track?** A suggested stock to bring, then the stock left against the fuel still needed. NEW
- **What is the plan to the flag?** Stops, fuel loads and driver changes, kept legal against the selected regulations (stint limit, fuel stop minimum, mandatory stops, refuelling under flags), with red flags neutralising the race. NEW
- **What happens at each fuel stop?** Litres, jerry cans, crew by name and a step-by-step procedure for every fuel stop.
- **Who does what?** Driver rotation, crew presence, rest and sleep, refuel crew summoned by name before each fuel stop.
- **What happened?** Every change is written to an append-only log that can be replayed through the whole application.

Orb is developed by Mullaloo Motorsport Engineering - Pietro Gambarin. It connects to the Mullaloo Motorsport Engineering devices in the car: the **Agile** lap timer (laps, micro-sectors, pit lane geofences, pit board messages, flags, GPS track map) and the **Sentinel** brake and tyre temperature and pressure monitor, with its **CIRTS** sensor nodes. Without them, everything can be entered by hand.

1.1 Who this manual is for

Reader	Read first
Testers evaluating the release	Sections 1.4 (what is new), 2, 3 and 4 (install, start, guided demo), then 12 (feedback)
Race engineer / strategist	Everything; sections 5 to 7 in detail
Refuel crew chief	Section 5.7 (Fuel Plan, including the fuel stock) and 6.5 (pit stop workflow)
Crew members using a tablet or TV	Section 3.3 (view-only access) and 5.11 (Garage display)

1.2 Names and versions

Version 2 is a redesign of the user interface of the original version 1.x, following control-room design practice (ISA-101 "high performance HMI"): calm neutral screens, colour only when something needs attention, gauges with limits instead of bare numbers, and every piece of information in exactly one place. Both versions open the same race weekend files, but only one of them can run at a time.

The application was called Pit Wall Pro2 up to 2.1.4 and Pitwall Strategy Manager from 2.2.0. From **2.2.10** it is **Orb - Pit Wall Strategy Manager**, at github.com/redc6t/Orb. From **2.2.9** the in-car devices are called **Agile** (was PLTD) and **Sentinel** (was BTTM). Everything saved under the old names still loads: `.pitwall.json` files

import, the old start/stop scripts' environment variables and the simulator's `--pltd`, `--bttm` and `--pitwall` options still work.

The version number lives in one place (`package.json`); the server console and the footer at the bottom of every page show it, for example *Orb - Pit Wall Strategy Manager v2.2.23 | Mullaloo Motorsport Engineering - 2026 Pietro Gambarin*.

1.3 Conventions

- **Bold** names are buttons, tabs or panel titles, for example **Race control**.
- `Monospace` is a file, command or value you type.
- Clock times are the laptop's local time, shown 24 hour (13:00) by default or 12 hour with am/pm (1:00 pm), chosen in Setup. "Race time" means time since the green flag.
- Durations always carry their units so they cannot be misread: `1h 55m`, `7h 15m`, and under an hour `4m 52s`.
- NEW marks something added or changed since the 2.2.3 manual.

1.4 What is new since 2.2.3 NEW

Version	Change	Section
2.2.4	New README with a guided tour; contributing guide, code of conduct, security policy, accessibility statement, issue and pull request templates.	-
2.2.5	Movable cards on the Race and Car tabs: drag a card by the grip in its header; saved per browser; **Reset layout** restores the default.	5.5, 5.10
2.2.6	`stop-orb.bat` stops a server or simulator left running in the background; `make-demo.bat` runs it first.	3.2, 4.2
2.2.7	Race Plan: **+ auto-gen debrief** on every finished stint - the engineer's written recap of that stint.	5.6
2.2.8	Simulator: sending BOX again no longer delays the simulated stop.	4.3
2.2.9	PLTD renamed **Agile**, BTTM renamed **Sentinel**. Old settings and weekends load unchanged.	1.2, 8
2.2.10	The app is renamed **Orb - Pit Wall Strategy Manager**; scripts `start-orb.bat` / `stop-orb.bat`; exports are `.orb.json`; data folder override `ORB_DATA`.	1.2, 2, 9
2.2.11	The demo resumes from its last lap, so the time Orb was closed does not count. Old `*-pitwall.bat` scripts removed.	4.1
2.2.12	A car issue logged from the Race tab's Attention & feed card shows up there at once.	5.5
2.2.13	**Saved plans**: prepare a weekend early and start a fresh copy of it on race day.	5.12, 6.1
2.2.14	**Fuel stock**: a suggested amount to bring (Setup) and the live stock left against the fuel still needed (Fuel Plan).	5.7, 5.13
2.2.15	**Red flag neutralises the race**: the car is held in the pits until the restart; RED FLAG / RESTART calls. Scenarios follow what really happens (real flags, stops and the red park block on every bar; predicted events used up or slid forward).	5.5, 5.8, 7.3
2.2.16	Scenario **Undo / Redo**; **Clone** a scenario into branches (A1, A2 ...). Fixed: Save assumptions saving a plan file.	5.8
2.2.17	Simulator: a red flag freezes a pit stop; realistic brake and tyre cooling; real Agile live deltas and micro-sectors.	4.3
2.2.18	Shifts editor highlights the block happening right now and scrolls to it.	5.9

2.2.19	This manual, rebuilt for Orb with new screenshots; the manual source is now in the repository (`docs/manual/`).	-
2.2.20	Track map: the preset turns, pits and start/finish are shifted onto the Agile's reference lap, and the card says how far and how well they agree (or that they do not match). Simulator `--gpsShift` .	5.5, 4.4
2.2.21	**Satellite track map** with an offline tile cache on the laptop; **Setup - Track map imagery** with **Download track tiles**.	5.5, 5.13, 6.1
2.2.22	**Collie layout rebuilt from real GNSS laps**: the old preset was about 9.4 km off and turned about 80°.	5.14
2.2.23	The track map is **turned to fit the card**, with a north arrow and a **North up** switch.	5.5

2. Requirements and installation

2.1 What you need

Item	Requirement
Host computer	Windows 10/11 laptop (Linux and macOS also work). Any recent laptop is enough; the reference machine is a Lenovo P52.
Software	Node.js 18 or newer (LTS). Install once from nodejs.org. Nothing else: the one dependency (`ws`) is inside the package.
Browser	Any current Chrome, Edge, Firefox or Safari, on the laptop and on viewing devices. The Race tab shows its three columns side by side on screens at least 1400 px wide; narrower screens stack them.
Network (optional)	For viewing devices and car telemetry: all devices on the same Wi-Fi network as the laptop (at the track: the VDG / MME_AP network, 192.168.0.x).

2.2 Install

1. Install Node.js (LTS) and accept the defaults.
2. Download the code from github.com/redc6t/Orb (green **Code** button, **Download ZIP**) and unzip it to a folder you control, for example `C:\Orb`, or `git clone` the repository. Do not run it from inside the zip.
3. That is all. The `node_modules` folder is included, so no download or internet connection is needed at the track.

File / folder	Purpose
`start-orb.bat`	Starts the server and opens the engineer screen.
`stop-orb.bat`	Stops any Orb server or simulator still running in the background (only Node.js processes on Orb's ports).
`make-demo.bat`	Builds the demo race weekend (section 4).
`start-simulator.bat`	Starts the simulated Agile and Sentinel (section 4).
`data\`	Created on first run: race weekends, logs, saved plans, car library, logo. Back this folder up.
`rules\`	Regulation profiles (B4B Events, BEERS).
`docs\`	Screenshots and the source of this manual.
`package.json`	Holds the version number shown in the console and the page footer.
`README.md`	Overview, troubleshooting and the release notes.

> **Upgrading**
> Unzip the new version into a new folder and copy your existing `data` folder into it. Weekends, plans, cars and logo carry over. A 2.1.x or 2.2.x data folder opens unchanged in 2.2.23; weekends saved with the PLTD/BTTM names are moved to Agile/Sentinel the first time they open.

3. Starting, stopping and access

3.1 Start

Double-click `start-orb.bat`. A console window titled *Orb - Pit Wall Strategy Manager server* opens and prints the addresses, and the browser opens the engineer screen:

```
Orb - Pit Wall Strategy Manager v2.2.23 - Mullaloo Motorsport Engineering - 2026 Pietro Gambarin
Engineer (this laptop): http://localhost:8080
View-only devices:      http://192.168.0.23:8080
Data folder:            C:\Orb\data
```

Leave the console window open for the whole event: closing it stops the server. If the server is restarted it resumes the last race weekend automatically, with nothing lost. On macOS or Linux run `npm start` in the folder.

> **First start: Windows Firewall**
> Windows asks whether Node.js may use the network. Allow **Private networks**. If you refuse, the laptop still works but other devices and the car telemetry cannot connect.

3.2 Stop

Close the console window, or press Ctrl+C in it. Every change is already saved the moment it is made; there is no "save" step. If a server keeps running in the background (closing the window or the app that started it does not always stop it, and the console then says `EADDRINUSE`), double-click `stop-orb.bat`.

3.3 Engineer and view-only access

Device	Can do
The host laptop (opened as `localhost`)	Everything. Badge in the top-right corner: **ENGINEER**.
Any other device	See every screen, run what-ifs locally, browse the log and replay. It cannot change anything (badge **VIEW ONLY**; the server rejects changes).

To let a second laptop make changes, add its IP address to `engineerHosts` in `data\settings.json` and restart. The server port (default 8080) is set in the same file.

4. Demo and simulator - guided tour

The fastest way to learn the application is the demo: a complete race weekend already six hours into a 36-hour race, with a simulated car feeding live data. Nothing in it touches your real weekends.

4.1 What the demo contains

Item	Demo content
Event	DEMO - BEERS 36h Collie: BEERS standing regulations V4, 36-hour race on the Collie Motorplex long circuit (2.55 km, 13 turns, anti-clockwise).
Team and car	Mitsukitty, 2004-2005 Mitsubishi Lancer ES/VR-X 2.0 NA (45 L primary + 30 L secondary tank, jerry cans of 20 L).
People	6 drivers and 2 engineers: **Mal** - owner, every role; **Tanna, Pat, Jared** - drivers, mechanics, full fuel crew, radio (Raceceiver relay), timing; **Driver4, Driver5** - drivers, full fuel crew; **Pietro, Rhys** - engineers: mechanic, timing, radio, race engineering. No driving, no fuel.
Shift plan	Drafted with **Draft shifts from the plan** (section 5.9): drivers rotate through drive, rest, sleep, garage and next in; the two engineers alternate in 6 h groups.
History	Practice session; race started 6 hours before the demo was built; two fuel stops done; Safety Car periods; car issues, a black-flag warning, an engineer off the wall for a 2 h break. Laps carry Sentinel peaks so the stint debriefs work.
Fuel model	Already calibrated from two brim fills (it learned about 19.6 L/h against an 18.75 L/h baseline).
Fuel stock NEW	No stock entered, so Setup shows the suggestion (780 L, 39 cans) and the Fuel Plan works from it.
Scenarios	Scenarios A-F created at the moment the demo was built; A running.
Devices	Pointed at the simulator: Agile at `127.0.0.1:8081`, Sentinel at `127.0.0.1:8082`.

> **The demo keeps its place** NEW
> Each time Orb opens the demo, the race clock resumes from its last lap, so the hours Orb was closed (or open without the simulator) do not count. To start over from the 6-hour mark, run `make-demo.bat` again.

4.2 Start the demo

1. Double-click `make-demo.bat`. It first runs `stop-orb.bat`, so an old server cannot hide the new demo, then builds the demo weekend and makes it the active weekend. It only replaces the DEMO weekend.
2. Double-click `start-orb.bat`. The engineer screen opens on the Race tab.
3. Double-click `start-simulator.bat`. A second console shows the simulated car: `Agile sim: Orb connected`, then a line per lap. Within a few seconds the Agile and Sentinel lights in the status bar turn green and the car dot starts moving on the track map.

From a terminal the same steps are `npm run demo`, `npm start` and `npm run sim`.

4.3 What the simulator does

The simulator pretends to be the two devices in the car, on this laptop, using the same network protocols as the real Agile and Sentinel firmware. The application cannot tell the difference.

Behaviour	Detail

Laps	About 92 s per lap with small random variation, reported exactly like the real Agile (lap number, latched last lap time, live delta, speed, micro-sectors).
Track	The real Collie Motorplex long circuit (section 5.14). In the pits the car follows the real pit lane: along the lane to the pits area, into the fuel area while fuelling, then out to the pit exit. The lap is counted where the car crosses the start/finish line in the pit lane.
Flags and driver pace	Yellow and Safety Car slow the car at once, about 1.35x and 1.6x lap time. **SAVE FUEL** on the pit board adds about 1.8 s per lap, **PUSH** takes about 0.6 s off, until the next stop.
Red flag NEW	On RED the car drives slowly to the pit entry, parks at the box and only leaves when the flag goes back to GREEN. A red flag during a stop freezes it where it is (in the fuel bay if it was fuelling): no fuelling or service under red; on GREEN the stop carries on from the same point.
Follows the engineer	The simulated crew follows the stop handshake: it starts pouring when you press **FUEL ON**, fuels only if the plan or your entry says so, stops when you press **FUEL STOP COMPLETED** and sends the car out on **PIT OUT**. Untouched steps use default timings.
Obeys the pit board	Any pit board message containing BOX brings the car in at the end of the current lap (at least 20 s after the message; sending BOX again does not restart that delay). In the app, BOX BOX is only a driver message. A message containing NO FUEL or DRIVER makes it a stop without fuelling.
Pit stop sequence	PIT ENTRY (25 s) - PITS (10 s, or 3 s after FUEL ON) - FUELLING (fuel minimum + 20 s) - PITS - PIT EXIT (15 s) - RUNNING: the same geofence states the real Agile sends.
Driver acknowledgement	Every pit board message is "shown" on the dash and acknowledged 1.5 to 3.5 s later.
Live delta and micro-sectors NEW	The live delta is the real time lost to the reference lap so far this lap (it grows under a Safety Car or red flag, and shows saving or pushing); there is none in the pit lane. Micro-sectors are recorded as the car crosses each one, including the time a flag costs; nothing runs in the pit lane, and sectors before pit exit on an out-lap stay grey.
Brakes and tyres NEW	Temperatures rise with speed. A parked car cools towards ambient (brakes over a few minutes, tyres more slowly); the pit lane runs cool, and slower laps under flags or fuel saving run cooler. Every 15 to 35 minutes at race pace the front-left brake spikes above 700 °C for 8 s, to exercise the Sentinel alarm and the automatic car issue.
TPMS	About 28.5 psi, rising slightly with tyre temperature.

4.4 Simulator options

Options can be added after the batch file name in a command window (for example `start-simulator.bat --fuelmin 1`), or by running `node tools\simulate.js` with the same options.

Option	Default	Effect
`--lap 92`	from the demo (92 s)	Base lap time in seconds.
`--fuelmin 8`	from the demo (8 min, BEERS)	How long the simulated crew spends fuelling, in minutes. Use 1 for quick tests; the app will then correctly flag the stop as under the regulation minimum.
`--startLap N`	last demo lap	Lap number to continue from.
`--agile 8081` / `--sentinel 8082`	8081 / 8082	Ports of the simulated devices (`--pltd` / `--bttm` still work). If you change them, change the device addresses in Setup to match.
`--orb URL`	`http://127.0.0.1:8080`	Where the server runs, if not on the default port (`--pitwall` still works).

`--gpsShift E,N` NEW	`0,0`	Moves everything the simulated Agile reports by E metres east and N metres north (negative for west and south), to rehearse a track preset that does not sit exactly on the Agile's lap. Example: `--gpsShift 25,-15`.

4.5 Guided exercises

Work through these in order. Each takes a few minutes and covers one part of the application.

Exercise 1 - Read the Race screen (2 min)

1. Look at the status bar: time remaining, elapsed, lap, car state and local time; scenario and flag on the right.
2. In the **Now** column read the call (normally STAY OUT with the time to the next stop), the fuel gauge and the driver's stint gauge.
3. In **Next stop** find what the next stop is, when, how much fuel, who gets in, and who is on the refuel crew.
4. Hover over **Fuel on board** for half a second: a tooltip explains it. Tooltips exist on most labels and settings.

Exercise 2 - Call the car in and run a pit stop (15 min)

1. Watch the call count down (BOX IN 3 LAPS, 2, 1) as the planned stop approaches; on the last lap it becomes NOTIFY DRIVER: BOX BOX with a **+1 lap** button. Press **Send BOX BOX to the driver** (or **BOX BOX** in Race control at any time to stop sooner). The feed shows "Pit board: BOX BOX" with a MESSAGE tag, then the driver's acknowledgement. Nothing changes in the plan.
2. Within one lap the car crosses the pit-entry geofence: car state PIT ENTRY, the call becomes IN PITS, and the centre column becomes pit mode with the **Stop handshake** card on top. Press **PIT IN**: the row reads HANDSHAKE.
3. The driver row is pre-selected with the planned driver. Press **DRIVER CHANGE DONE**.
4. When the crew starts pouring press **FUEL ON**. Fill in the **Fuel stop** card while they fuel: litres and cans, **Filled to brim**, issues fixed. Watch the fuelling bar in the **Pit lane** card fill towards the 8-minute BEERS minimum. Open **Garage display** and **Fuel Plan** to see the crew views.
5. When fuelling ends press **FUEL STOP COMPLETED**, then **PIT OUT**. The stop completes once the car crosses the pit exit. On the Fuel Plan, the stock has gone down by the litres poured.
6. Repeat with another BOX BOX but press nothing: each step turns AUTO as the car moves past it, and the stop is still complete.
7. Open **Race Plan**: both stops appear in the stint table. Click **+ auto-gen debrief** on the stint that just ended.

Exercise 3 - Alerts and car issues (3 min)

1. In **Attention & feed**, press **Ack** on an alert. It moves to the race history.
2. Type an issue in "Log a car issue for the next stop" and press **Log**. It appears at once as a NEXT STOP job, and is listed on the pit stop screen, the Car tab and the Garage display.
3. Wait for (or look in Car for) a Sentinel brake alarm: critical temperatures create a car issue automatically.

Exercise 4 - Safety Car (5 min)

1. Press **SC** in Race control. The flag turns orange and the simulated car slows down; the live delta grows.
2. Under BEERS rules refuelling is closed under Yellow/SC, so if a fuel stop is near the call says STAY OUT - refuelling closed. Under B4B rules the same situation gives BOX NOW.
3. Open **Scenarios**: the Safety Car is drawn on every bar as real past. Press **GREEN** to resume.

Exercise 5 - Red flag (5 min) NEW

1. Press **RED** in Race control. The call reads RED FLAG; the simulated car goes to the pits and parks. Try it during a fuel stop: the stop freezes where it is.
2. Look at the timeline and the Scenarios bars: the plan holds the car in the pits until the assumed restart, with nothing planned inside the red. The driver's stint clock pauses.
3. Press **GREEN**. With the car still parked the call reads RESTART; the simulator carries on from where it stopped.

Exercise 6 - What-if (3 min)

1. Open **Race Plan**. In **What-if** enter a lap time change of +5 (rain) and press **Run**. The stint table and timeline show the result while it is active.
2. Try **Green burn -8 %**: see whether a fuel stop disappears. **Drop one fuel stop** above the table gives the exact saving needed.
3. Press **Clear**. What-if never changes the real plan or the log.

Exercise 7 - Scenarios, Undo and Clone (8 min)

1. Open **Scenarios**. Compare the six bars: where the Safety Car and red flag sit, how many stops each needs, finish fuel, and the lap numbers above each bar.
2. On Scenario B press **Assumptions**. Drag the orange Safety Car to another time and stretch its right edge. Watch the stops re-plan.
3. Press **Undo** on B: the Safety Car goes back. **Redo** puts it back again. NEW
4. Press **Clone** next to B's name: a branch **B1** appears underneath. Change B1 (drag a stop) and compare it with B. NEW
5. Press **Run this scenario** on B1. The status bar shows SCENARIO B1; Race and Fuel Plan follow it.
6. Run A again, then **Remove** B1 and **Reset** B.

Exercise 8 - Fuel Plan and fuel stock (5 min)

1. Open **Fuel Plan**. The timeline shows only the fuel stops of the plan being run.
2. Click a planned stop, for example F5: litres on arrival, litres to add, the jerry cans, the crew. Under **Change the litres** press -5 twice and look at the preview, then **Cancel**.
3. In **Fuel stock at the track** NEW read what was brought, poured, left and still needed. Press **Fuel bought** and add 40 L; the spare goes up. Open **Setup** and look at the suggestion under *Fuel stock for the weekend*.

Exercise 9 - Shifts (3 min)

1. Open **Team** and click **edit** next to a driver in **Shifts & sleep**. The editor scrolls to the block happening now, outlined in cyan. NEW
2. Close it. Press **Draft shifts from the plan** to see the whole rota rebuilt (it asks first).

Exercise 10 - A second device (3 min)

1. On a phone or tablet on the same Wi-Fi, open the "View-only devices" address from the console.
2. The badge shows VIEW ONLY; controls are hidden. Choose **Garage display** for the big-type crew screen.
3. Make a change on the laptop (for example a flag) and watch it appear on the second device within a second.

Exercise 11 - Replay and saved plans (5 min)

1. Open **Log** and press **Start replay**. Drag the slider, or press Play at 60x. Switch to Race and Race Plan: they show exactly what the pit wall knew at that moment. Press **Back to live**.
2. Under **Saved plans** type a note and press **Save plan**. The plan is the weekend as it stood before its first session. NEW

4.6 Leaving the demo

Your own weekends are never changed by the demo. To switch back: **Log** tab, **Weekend files**, press **Open** next to your weekend. To start a real weekend, open **Setup** and press **Start a new weekend instead** (section 6), or **Start a copy** of a saved plan. Close the simulator window when you are done with it.

5. Screen reference

5.1 How to read the screens

The application uses colour sparingly so that anything coloured means something:

Colour	Meaning
Grey / white	Normal. No action needed.
Amber	Warning: something is approaching a limit (fuel window open, stint ending soon, brake in the red band, fuel stock under one can spare).
Red (pulsing if unacknowledged)	Critical: act now (box this lap, fuel at reserve, over a limit, red flag, fuel stock short).
Lilac	Fuel: fuel stops, fuel windows, planned fuel arrival.
Cyan	Strategy items, pinned stops, the selected stop, the current shift block, primary buttons.
Flag colours	The track flag in the status bar (green, yellow, orange Safety Car, red).
Driver colours	Each driver keeps one colour on the timeline, the stint table and the shift plan.

Gauges are bars against their limit: the red tick is the limit (reserve fuel, 15-minute stint warning), the lilac tick a planned value, the white line "now".

5.2 What changes the strategy, and what does not

In the feed and the log, items that change the strategy carry a cyan **STRATEGY** tag, and driver messages a lilac **MESSAGE** tag.

Group	Examples	Effect on the plan
STRATEGY	Geofence events and the stop handshake; track flag (Green, Yellow, SC, Red); +1 lap; driver corrections and rotation; gauge readings; litres set on the Fuel Plan; switching, editing, undoing or cloning a scenario; session start/end.	The plan, the call, fuel estimate, driver times and crew summons are recalculated immediately.
MESSAGE	Pit board: BOX BOX, BOX NEXT LAP, STAY OUT, PUSH, SAVE FUEL, custom text.	None. Shown on the Agile dash and logged with the driver's acknowledgement. BOX BOX does not create a stop: the stop starts when the car crosses the pit-entry geofence.
Information	Car issues, penalties, crew status, tyre measurements, fuel stock movements, notes.	No direct effect on stop timing (crew status and driver availability change who is assigned and the rotation; the fuel stock raises its own alert).

> **Why flags are strategy, not messages**
>
> A track flag changes the strategy because the rules and the car change: under Safety Car or Yellow the car burns less fuel, under BEERS rules refuelling is closed, and the call may become BOX NOW. A red flag neutralises the race and holds the car in the pits. The flag is also shown on the Agile dash, but that is a side effect.

5.3 Status bar




Figure 1 - Status bar

Element	Meaning
Team and car	Team name, car number, car, track. Logo top-left.
Race - remaining	Race time remaining; before the start, time to the planned start. The label also names the session and the regulations.
Elapsed	Time since the green flag.
Lap / Car	Current lap and car state from the Agile geofences: RUNNING, PIT ENTRY, PITS, FUELLING, PIT EXIT.
Local	The laptop's clock.
SCENARIO	Which scenario is running (A unless you switch, or a branch such as B1). Amber when it is not A. Click it to open the scenarios.
Flag	Current track flag (set in Race control; mirrored to the Agile dash).
Agile / Sentinel / UDP	Device connection: green connected, amber connecting or stale data, red offline, dark disabled.
Sound on/off	Mutes the alert chime on this device.
ENGINEER / VIEW ONLY	What this device is allowed to do (section 3.3).

A red or amber line under the status bar means the current call is critical or a warning. At the bottom of every page a footer shows the Mullaloo logo, the product name and version, and the credit line.

5.4 Timeline




Figure 2 - Race timeline with legend

The whole race from green flag to chequered flag. Solid blocks are stints already driven (in driver colour); dashed blocks are planned stints. Lilac ticks are fuel stops, grey ticks other stops. The lilac bar under a planned fuel stop is its fuel window: the earliest to the latest time that stop can be made (hover it for the exact times and laps). The white line is now. Real flags are drawn along the top; a red flag shows as a red block where the car is parked. NEW




Figure 2a - Under a red flag the plan holds the car in the pits until the restart NEW

5.5 Race tab

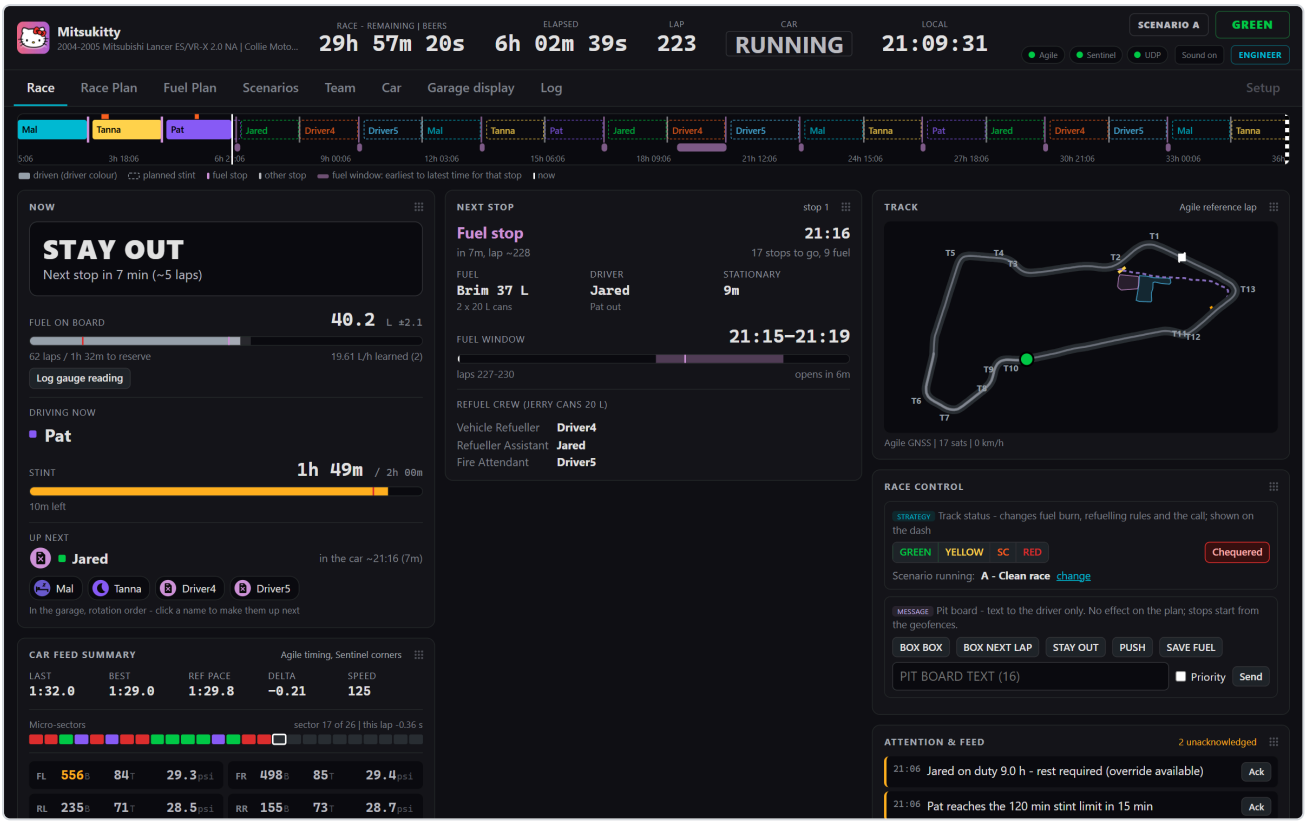


Figure 3 - Race tab: Now, Next stop, and the Track map, Race control and feed on the right

The overview. Three columns, each with one job: **Now** (left, with the **Car feed summary** under it), **Next** (centre), and on the right the **Track** map, **Race control** and **Attention & feed**. That is the default layout; you can move the cards.

Rearranging the cards

Every card on the Race and Car tabs has a small grip (nine dots) at the right of its header. Press and hold it, then drag: the card lifts off the page and follows the pointer, a dashed outline shows where it will land, and the other cards slide out of the way as you move. You can drop a card at any position in any column; hold it near the top or bottom of the window and the page scrolls.

The layout is saved in that browser only, so the engineer's laptop, the garage screen and a tablet can each have their own. Cards that only appear during a stop (stop handshake, fuel stop, pit lane timers) come back where you last put them, or next to the card they normally sit beside, so a pit stop does not reshuffle your layout. **Reset layout**, at the bottom of the page, puts every card back.

Now



Now column

- **The call** - the one instruction to give. See Appendix B for every call.
- **Fuel on board** - estimated litres with uncertainty (the light band). Red tick: reserve floor. Lilac tick: planned arrival at the next fuel stop. Underneath: laps and time to reserve, and the burn rate in use.
- **Log gauge reading** - enter what the fuel gauge or dipstick shows; this re-anchors the estimate and calibrates the model.
- **Driving now** and **Stint** - continuous time behind the wheel against the regulation maximum; amber at 15 minutes left, red at 5. The stint clock pauses under a red flag. NEW
- **Up next** - the next driver and the planned time they get in, then the rest of the rotation with presence icons; the engineer can click a name to make that driver up next.

Icon	Meaning
Steering wheel (cyan)	Driving
Jerry can (lilac)	Available, and on the refuel crew for the next fuel stop
Spanner (grey)	Available in the garage, ready for work on the car
Tick (green)	Available
Bed (purple)	Sleeping
Moon (violet)	Resting
Flag (orange)	On flag duty
Cross / red bar	Offline / unavailable

The call near a stop and +1 lap

From 5 minutes before the planned stop the call counts laps: BOX IN 3 LAPS, 2, 1. On the last lap it becomes NOTIFY DRIVER: BOX BOX with a notification and a one-click **Send BOX BOX to the driver**. Once sent, it reads

BOX THIS LAP with the time sent and whether the driver has acknowledged.

+1 lap keeps the driver out one more lap. The called stop moves one lap later in the running plan and in every scenario; its fuel goes up by one lap's burn, the planned driver change is kept, and the log shows "stint extended +1 lap". Press it again for a further lap. The extension clears when the car next enters the pits. The button is disabled, with the reason in its tooltip, if the extra lap would bring the fuel below the reserve or the stint over the maximum.


Red flag NEW



The call under a red flag

When the flag is RED the call reads **RED FLAG** - race neutralised, car to the pits, engine off, wait for the restart (and "no refuelling" where the rules forbid it). The plan holds the car in the pits from the red until the assumed restart (`strategy.redExpectMin` , 20 minutes by default; once that has passed, always at least 5 minutes more), with no fuel burn, no driving stint and no stop planned inside it; the next stint starts at the restart. The red pit visit is shown as a red stop: it never counts as a mandatory stop and no fuel or driver change from the plan is applied to it. When the flag goes back to green with the car still parked, the call reads **RESTART**.

Next stop

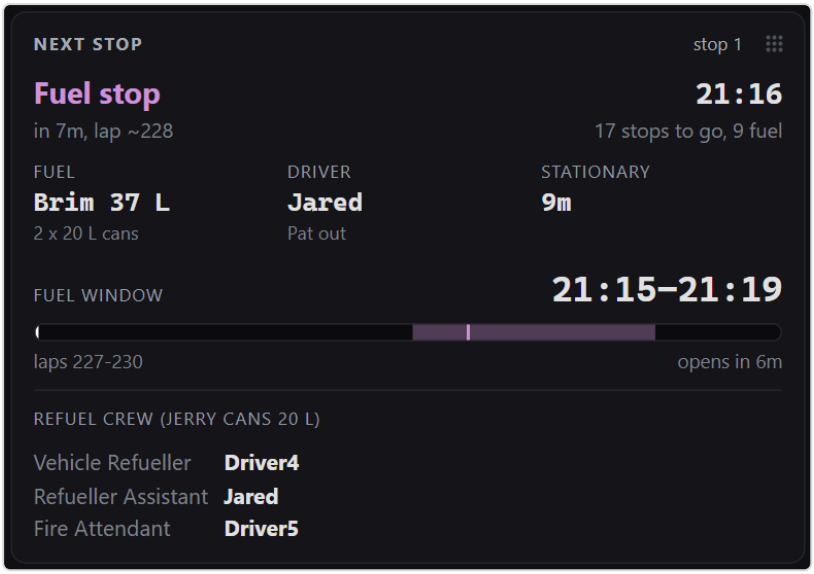

Next stop

Everything about the next planned stop: type and clock time, time and laps to it, stops still to go, fuel to add (and cans), driver change, planned stationary time, the fuel window as a bar against now, and the refuel crew by name. Crew are assigned only from members tagged with that role and currently Available, and never the outgoing driver; the incoming driver is listed as Refueller Assistant (supervising) - see section 7.6. If nobody qualifies, the slot shows **UNASSIGNED** with the reason, who could help, and a **FIX** button that opens the Team tab at **Fix the refuel crew** with one-click fixes (wake a tagged person, or give an available person the missing role). Each fix is logged. When the Agile is offline, manual car state buttons appear here.

Pit mode and the stop handshake


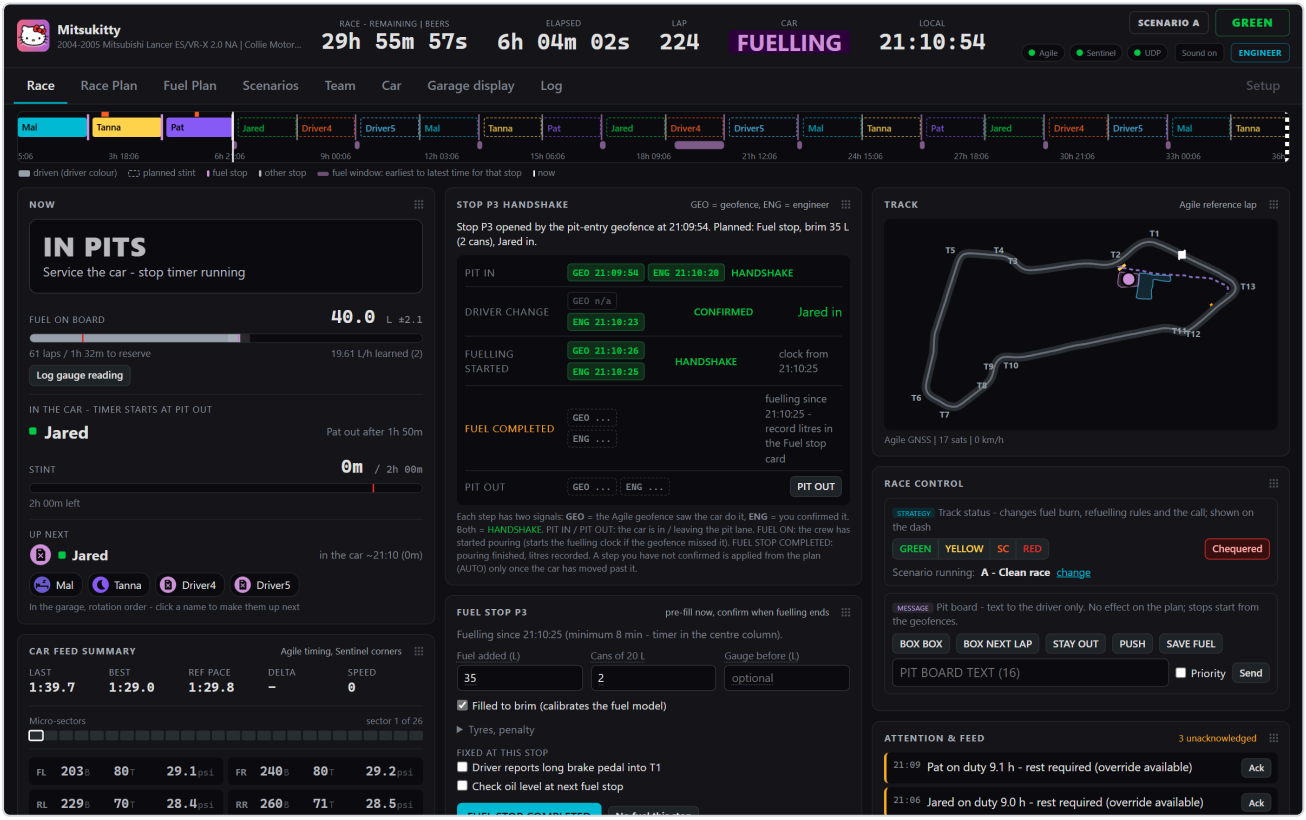


Figure 4 - Pit mode: the centre column becomes the pit stop screen while the car is in the pit lane

When a stop is due, or the Agile pit-entry geofence opens one, the centre column becomes the pit stop screen, top to bottom:

- **Stop handshake** - the five steps of the stop (below).
- **Fuel stop** - the fuel entry, available from pit in: litres and cans pre-filled from the plan, gauge before, **Filled to brim**, tyres, penalty served, issues fixed; buttons **FUEL STOP COMPLETED** and **No fuel this stop**.
- **Pit lane** - fuelling time from the Agile fuel-bay geofence against the regulation minimum (B4B 5 min, BEERS 8 min), time since pit entry against the mandatory-stop minimum where the rules have one, what was planned and what was recorded, the refuel crew and the jobs to check at this stop. **Override car state** (geofence missed) is folded away under the card.

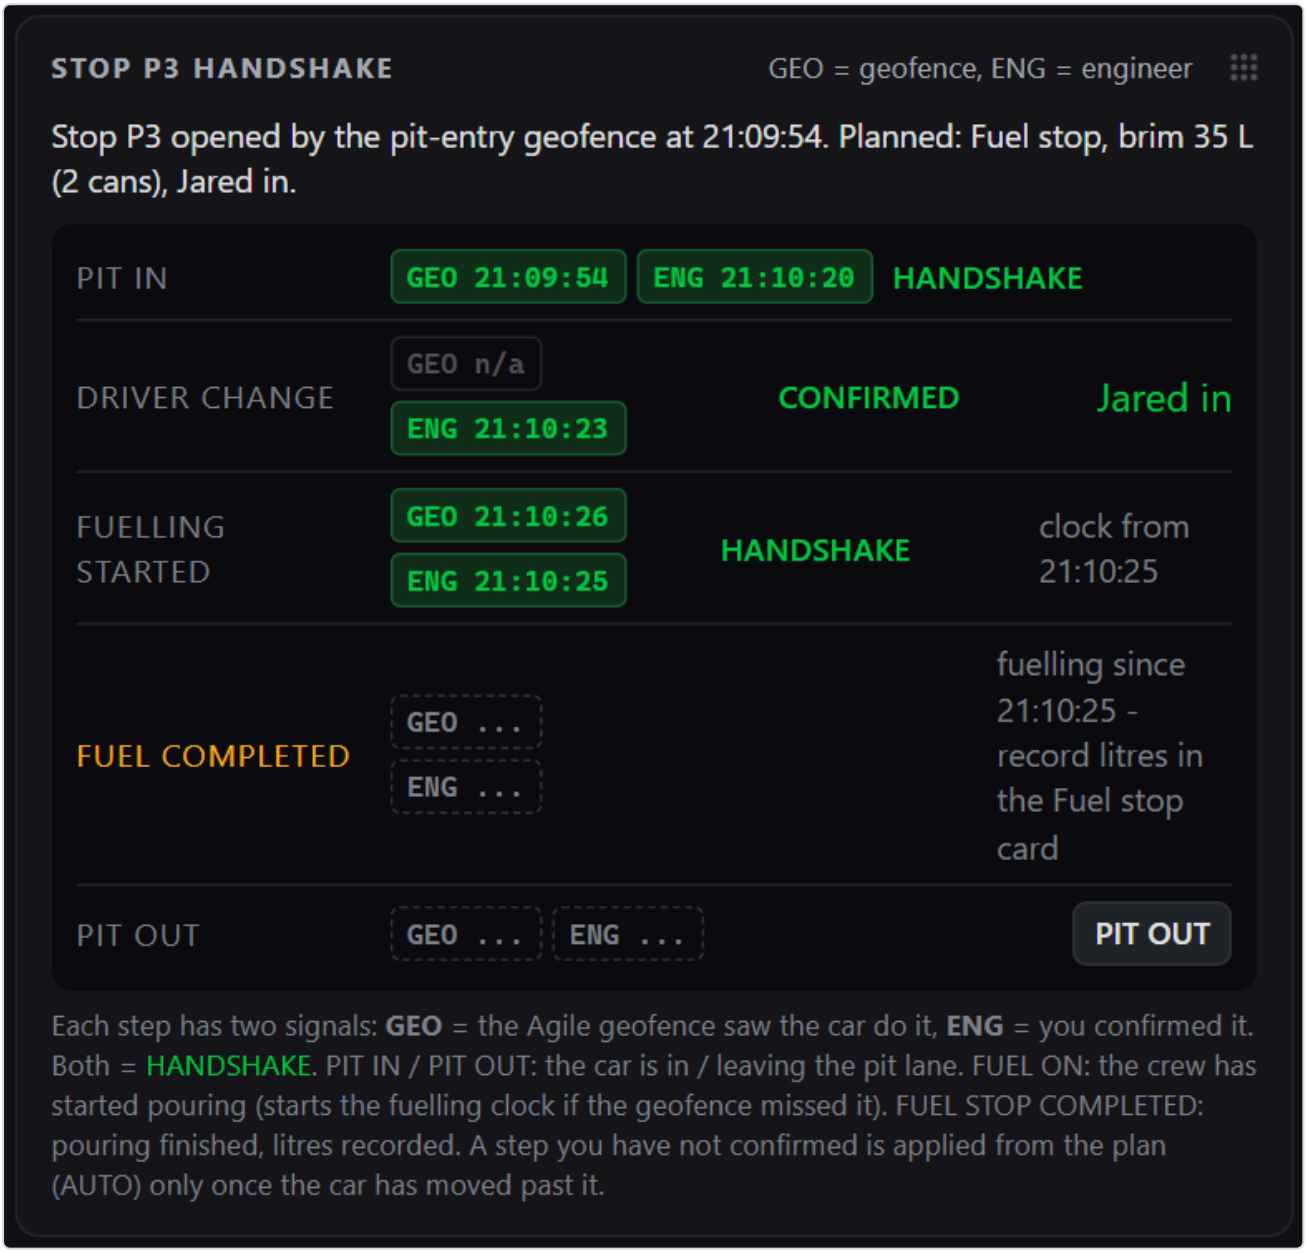


Stop handshake during fuelling: Pit in and Fuelling started are HANDSHAKES, the driver change is CONFIRMED, fuel completed and pit out still to come

Every step has two signals. **GEO** means the Agile geofence saw the car do it; **ENG** means you confirmed it. Both together read **HANDSHAKE**. There are no countdowns: you press each step when you see it done.

Step	GEO	ENG (what you press)
Pit in	pit-entry geofence	**PIT IN**: the car is in the pit lane. If the Agile missed the pit entry, this also opens the stop by hand.


Driver change	none	Choose who gets in (pre-selected from the plan) and press **DRIVER CHANGE DONE**.
Fuelling started	car in the fuel zone	**FUEL ON**: the crew is pouring. Starts the fuelling clock if the geofence missed it.
Fuel completed	car left the fuel zone	**FUEL STOP COMPLETED** in the Fuel stop card: litres and cans recorded. **No fuel this stop** for a driver-only stop.
Pit out	pit-exit geofence	**PIT OUT**: the car is leaving the pit lane.

- Amber "geofence seen - confirm it": the car did it and you have not confirmed yet.
- "Waiting for the geofence": you confirmed and the car has not got there yet.
- A step nobody confirms is applied from the plan (**AUTO**) once the car has moved past it: the planned driver is set and the planned litres are recorded as added (not used to calibrate the fuel model).
- **Not a stop (false trigger)** rejects a false geofence event; the stop is removed from the strategy.
- If the fuel stop was applied automatically, **Correct it** reopens the card; **SAVE CORRECTION** replaces the automatic entry.
- Under a red flag nothing is fuelled or serviced; the stop resumes on green. NEW

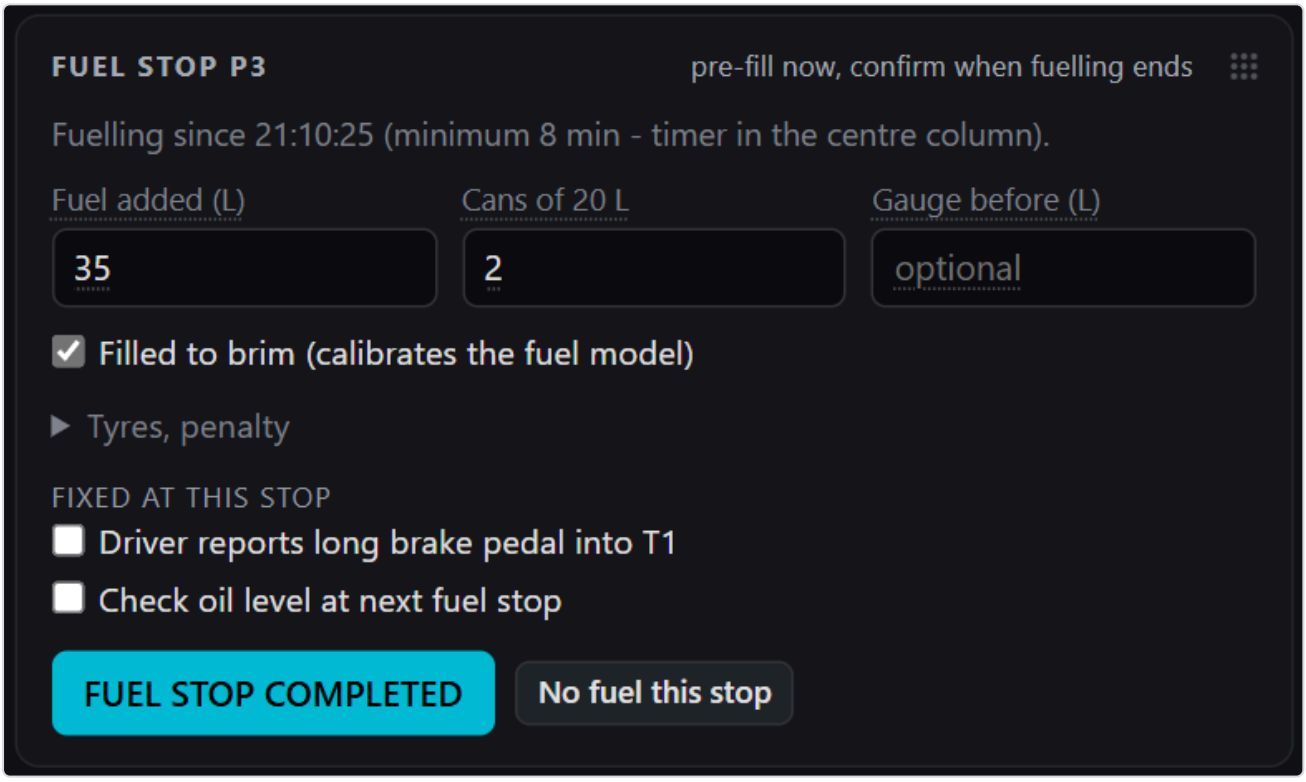


Fuel stop card, available from pit in: pre-fill it while fuelling, then press FUEL STOP COMPLETED

> **Brim fills make the fuel model accurate**
> Whenever the tank is filled until full, tick **Filled to brim**. Each brim fill is an exact measurement of how much fuel the last stint used, and the model recalibrates from it. The litres recorded also come off the fuel stock.

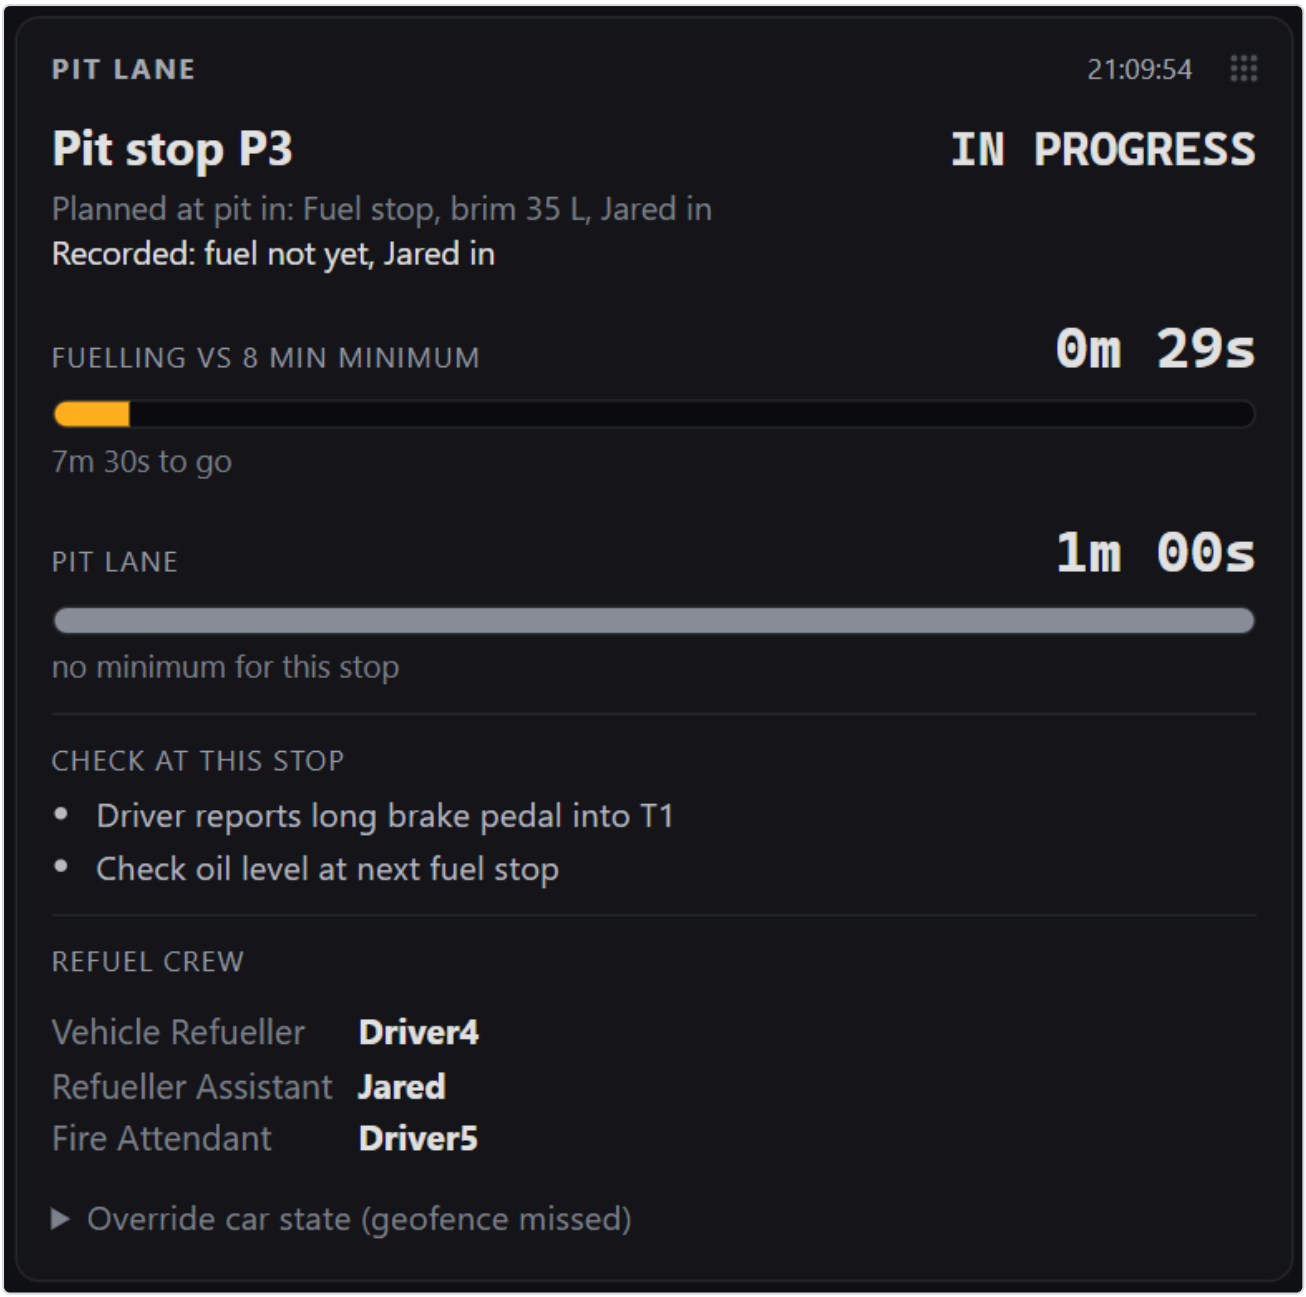

Pit lane card: fuelling against the regulation minimum, planned and recorded, jobs and refuel crew

Track map and Car feed summary

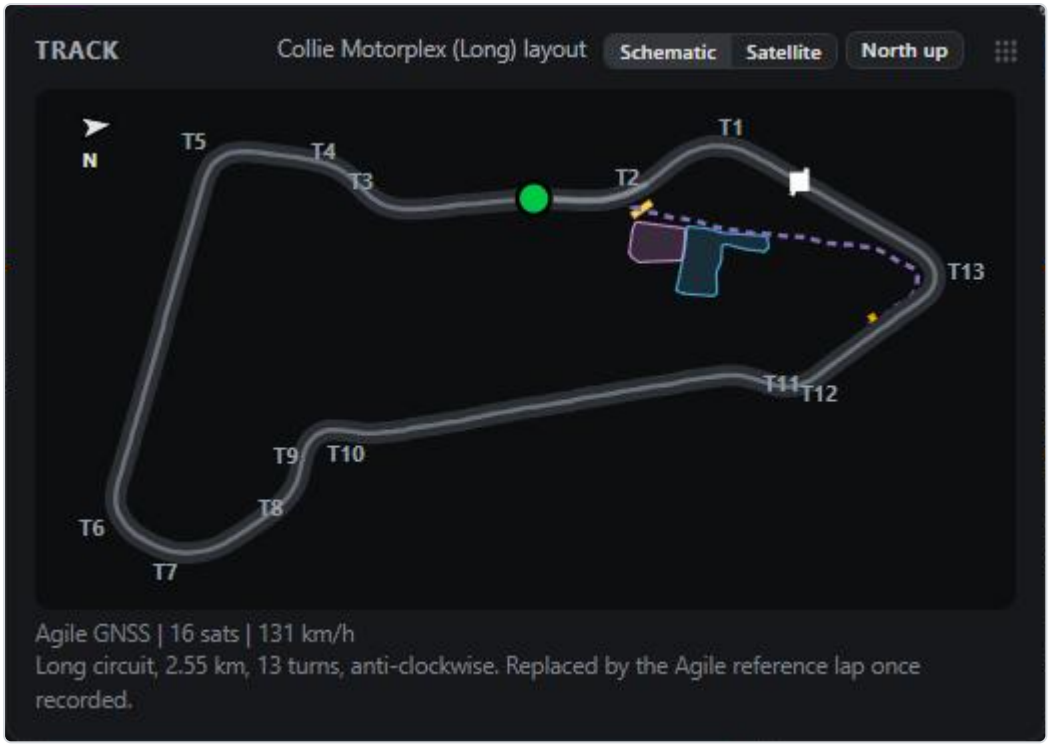

Track map, Schematic view (top of the right column), turned to fill the card NEW

The track map shows the circuit with its turn numbers, the start/finish line and the pit zones; the dot is the car (coloured by car state, grey if the position is old) with a short trail. Until the Agile has recorded its own reference lap the outline comes from the track preset; after that the Agile's recorded lap is used, which is exact for the car's own GPS.


Preset aligned to the Agile lap NEW. When the Agile's lap arrives, Orb slides the preset onto it (a pure shift, no turning or stretching) and moves the preset turn numbers, pit lane, pits, fuel area and start/finish by the same amount. The line under the map says how far it moved and how well the shapes agree, for example *aligned to the Agile lap: shifted 12 m SE, shapes agree within 2 m*. If they do not match (another track, or the Agile somewhere else) the preset overlays are hidden and the line says why; the Agile's own geofences and start/finish are still drawn.



Track map, Satellite view: the same overlays on dimmed imagery, with zoom, Fit, Follow and the north arrow NEW

Schematic or Satellite NEW. The two buttons in the card header switch the view; each browser remembers its choice. Satellite draws the same circuit, geofences, turns, pits, start/finish, car and trail on darkened satellite imagery. **+** / **-** zoom, drag to pan, **Fit** shows the whole track again and **Follow** keeps the car centred. The imagery comes through the pit wall laptop, which fetches each piece once while it is online and keeps it (`data\tiles`); phones and tablets on the pit Wi-Fi get it from the laptop and need no internet of their own. Download the track before the weekend (section 5.13, **Track map imagery**). With no imagery at all (offline and not downloaded) the card shows the schematic with a note and tries again every minute.


Turned to fit, North up NEW. The card is wide and short, so a track that runs north-south is turned to the angle that draws it biggest (Collie: 82°, about twice the size). The **north arrow** in the corner turns with the map. **North up** in the card header, or a click on the arrow in the satellite view, puts north at the top again; each browser remembers it. A live trail with no outline is never turned.

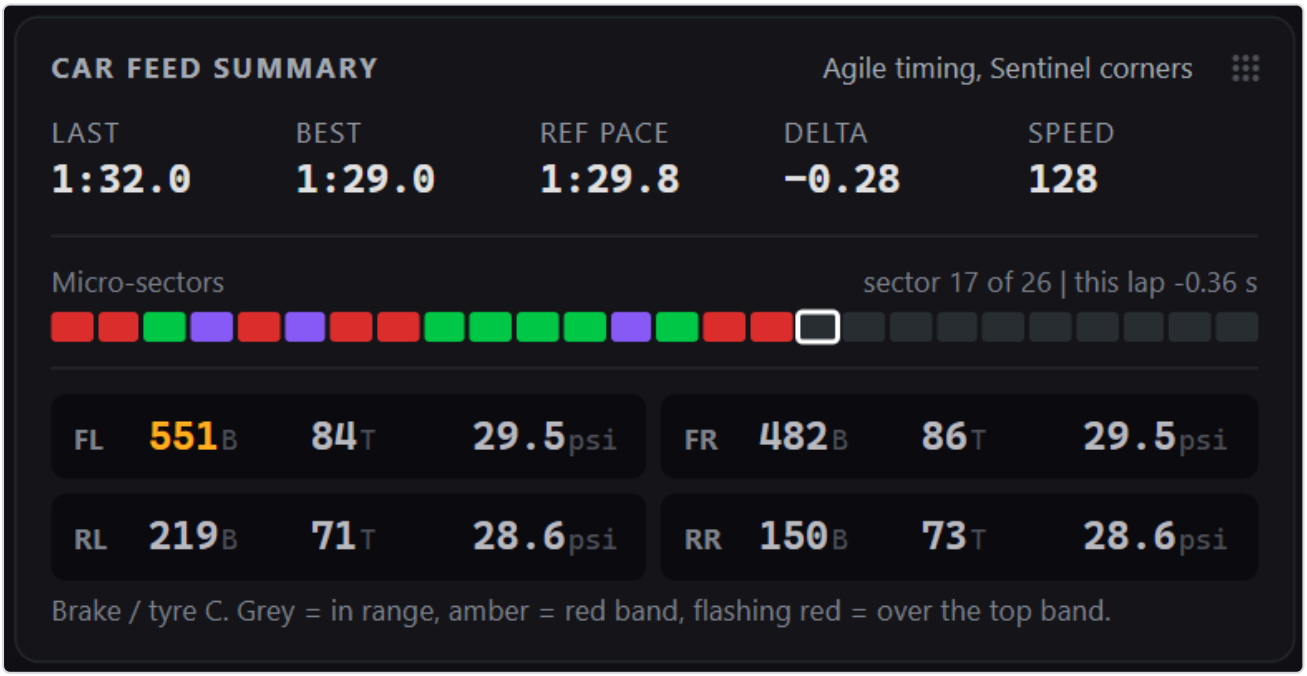

Car feed summary with micro-sectors and the four Sentinel corners

The **Car feed summary** gives last lap, best lap, reference pace (median of recent clean green laps), live delta and speed; the micro-sectors of the current lap (green faster, red slower, purple best, grey not yet run, white outline = the sector the car is in); and the four corners from the Sentinel: brake and tyre temperature and TPMS pressure. Corner values are grey when in range, amber in the Sentinel red band and flashing red above the top band.

Race control (engineer only)

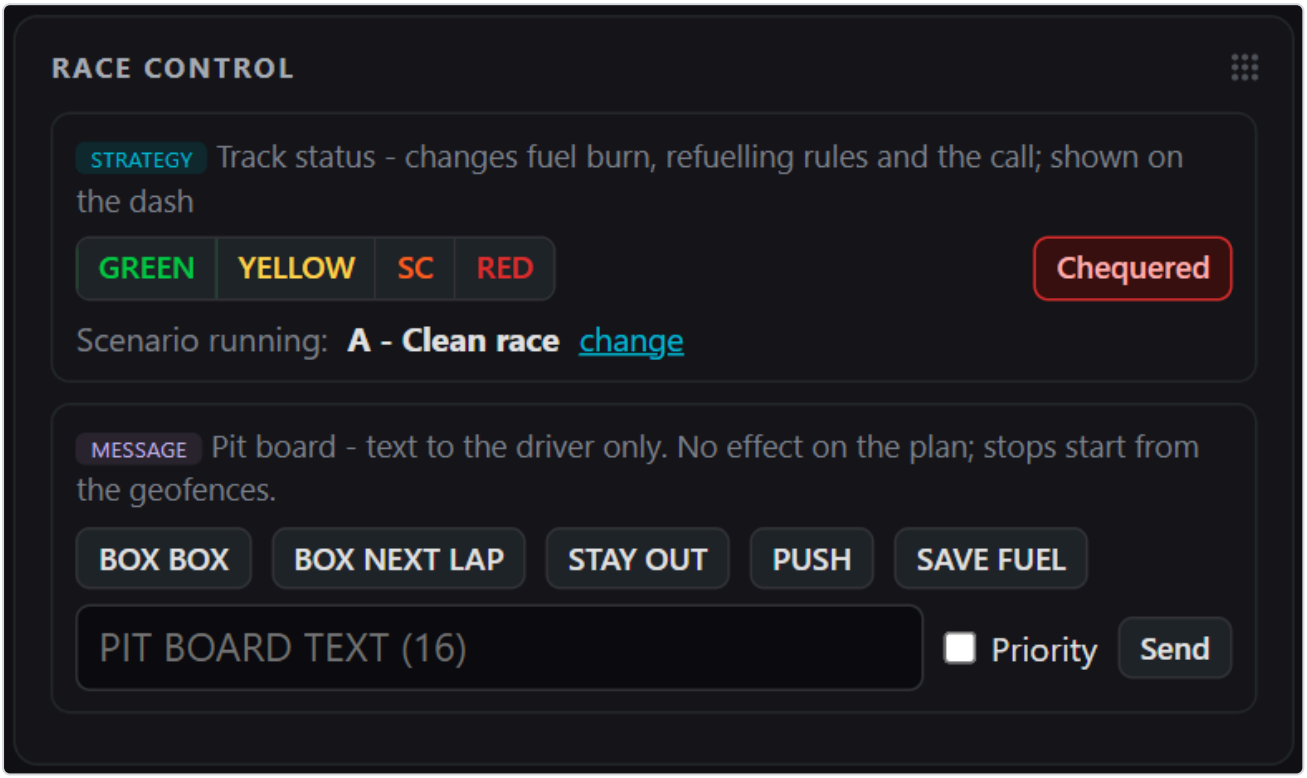


Race control

Before a session: choose the session, start fuel, starting driver and tyre set, and press **Green flag - start session**. During a session the panel has two clearly separated groups:

- **STRATEGY - Track status**: the track flag (changes fuel burn, refuelling rules and the call; also shown on the dash). **Chequered**, and which scenario is running with a link to change it.
- **MESSAGE - Pit board**: presets or up to 16 characters of your own, shown on the Agile dash. **Priority** keeps the message up until the driver acknowledges it. These never change the plan.

Attention & feed

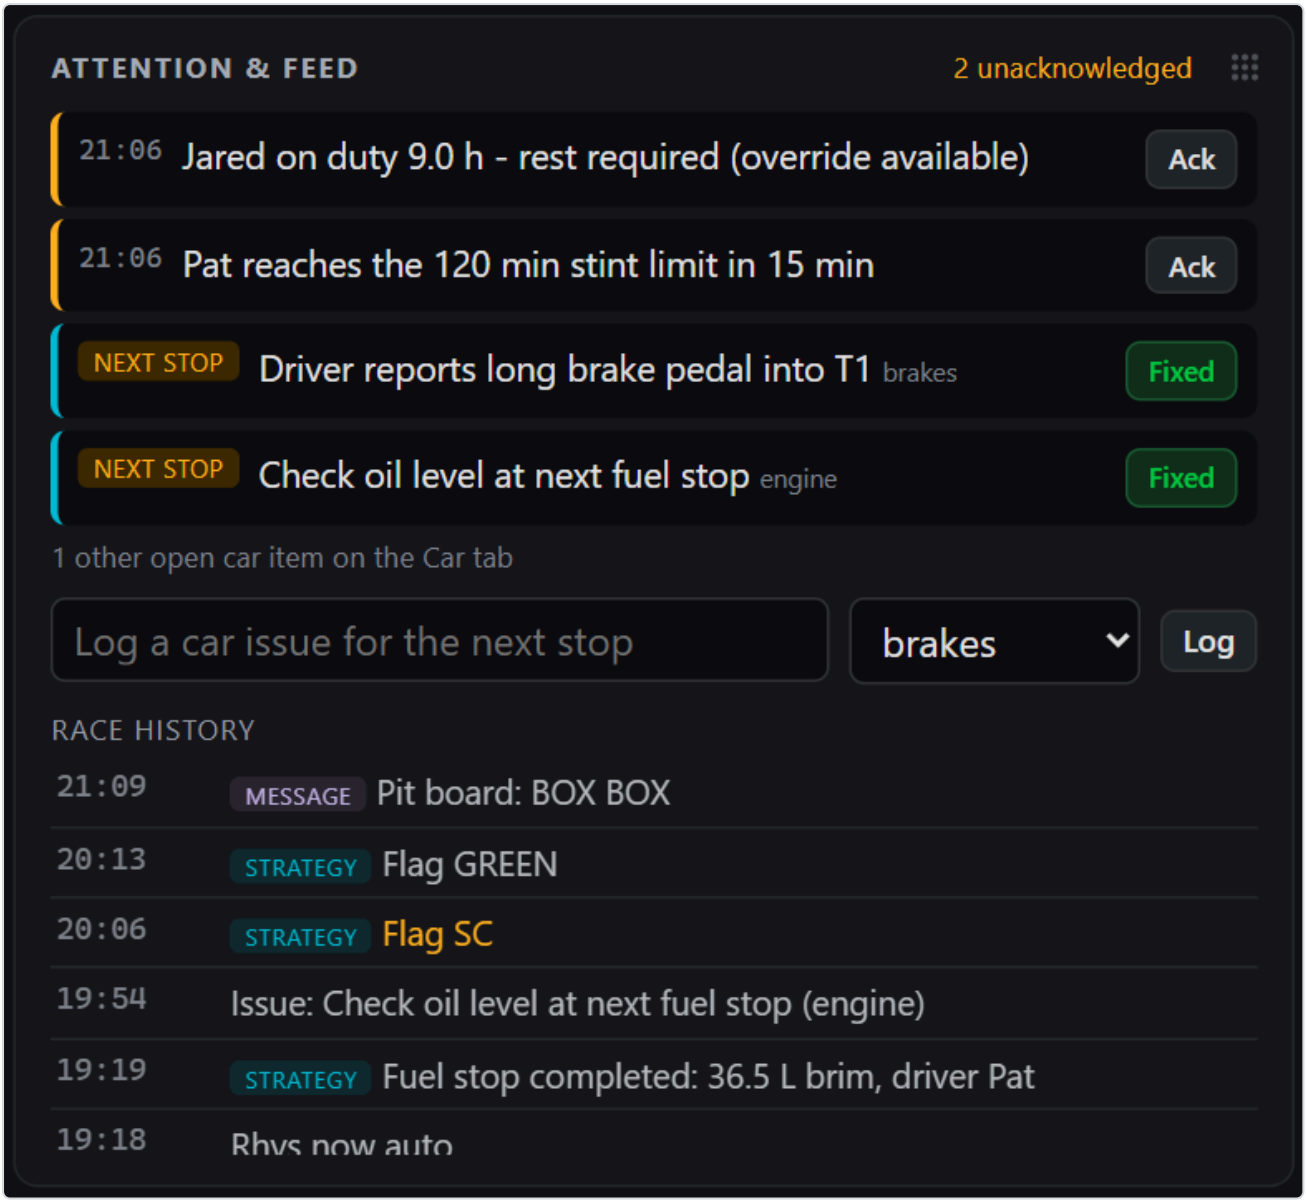

Attention & feed, with the Race history below

The top of the feed is what needs attention: unacknowledged warnings and critical alerts (press **Ack**) and jobs for the next stop (press **Fixed** when done). **Log a car issue for the next stop** adds a job; it appears at once on this card and on the Car tab. NEW Below is the **Race history**: flags, stops, pit board messages and acknowledgements, issues, penalties, crew status changes and acknowledged alerts, newest first, in a short window that scrolls inside its card. Alerts also pop up briefly in the bottom-right corner with a chime.

5.6 Race Plan tab

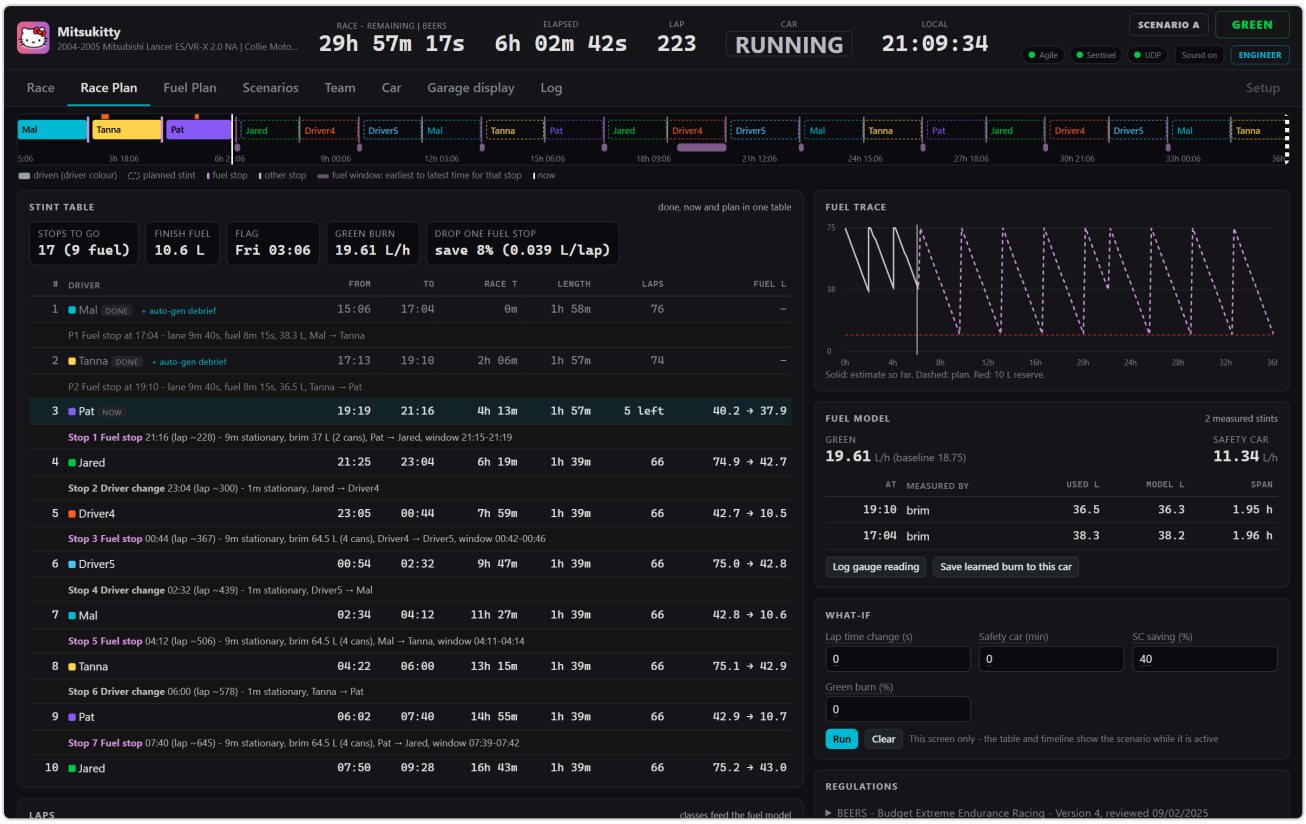


Figure 5 - Race Plan tab

- **Summary** - stops to go (and how many are fuel stops), projected fuel at the flag, flag time, green burn rate, mandatory stops counted, and **Drop one fuel stop**: the fuel saving needed to remove one fuel stop.
- **Stint table** - one table for the whole race: stints already driven (with each completed stop and its lane time, fuelling time, litres and compliance), the current stint (highlighted), and the plan to the flag with every stop inline.
- **+ auto-gen debrief** - on every finished stint: a written recap as the engineer would give it - laps and time in the car, average, best and worst green-flag lap, consistency and drop-off, Safety Cars and flags, incidents, penalties and Sentinel alarms, peak brake and tyre temperature per corner, and the stop that ended it. Click **-** to fold it away. It works in replay too.
- **Laps** - lap history with each lap's class: push, green, slow, SC, pit.
- **Fuel trace** - fuel level over the race: solid so far, dashed planned, red reserve line.
- **Fuel model** - green and Safety Car burn rates, every measurement used to learn them, **Log gauge reading**, and **Save learned burn to this car**.
- **What-if** - lap time change, a Safety Car of N minutes with a fuel saving, or a green burn change. Local to the screen and never saved.
- **Regulations** - the profile in force and its key rules.

5.7 Fuel Plan tab


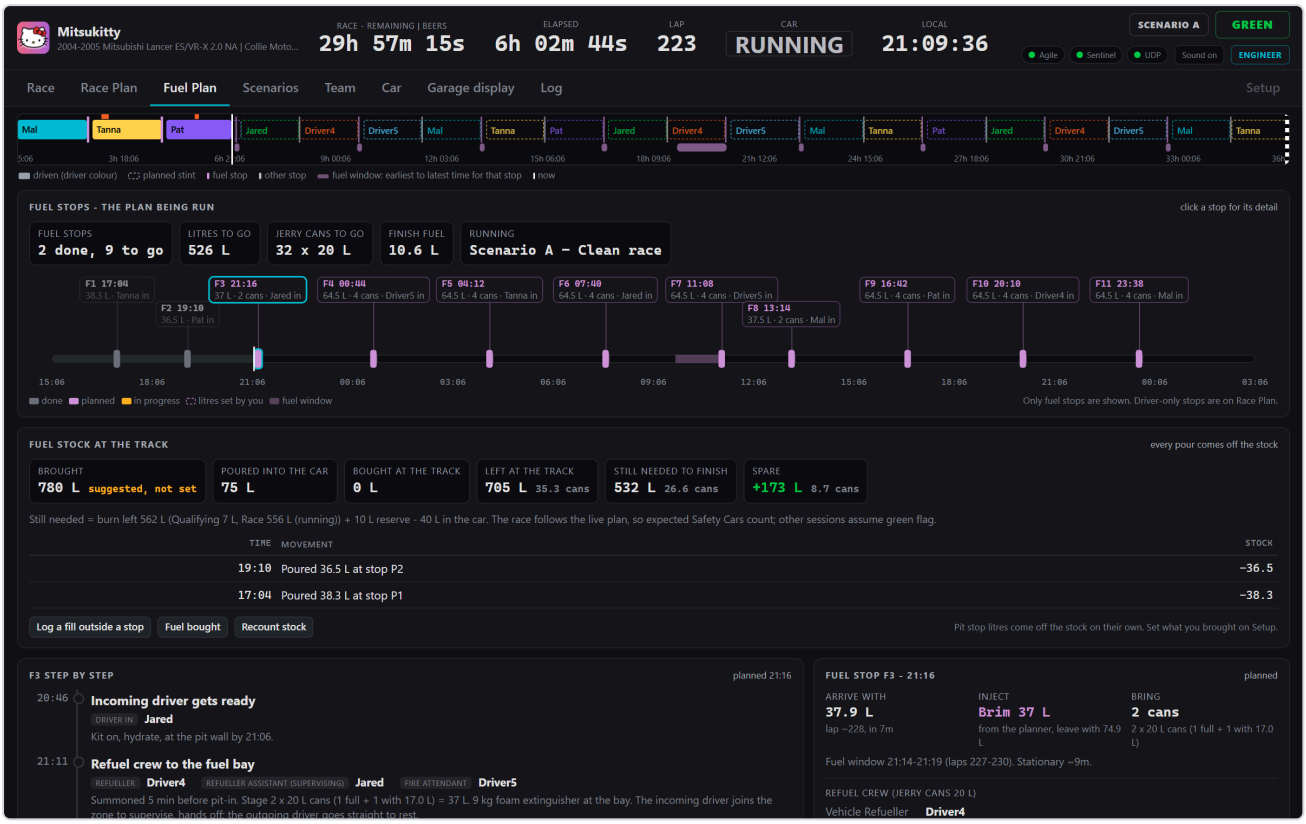


Figure 6 - Fuel Plan tab: the fuel stops of the plan being run, the fuel stock, and the selected stop's procedure

The Fuel Plan is the refuel crew's view of the race. It shows only the fuel stops of the plan being run (the running scenario); driver-only stops stay on Race Plan.

Timeline. Above it: fuel stops done and to go, litres to go, jerry cans to go, finish fuel and the scenario running. Each stop has a short label - number, time, litres, cans and the driver coming in - and a marker: grey done, lilac planned, amber in progress, dashed outline when you set its litres, with its fuel window underneath. Click a stop to select it.

Fuel stock at the track NEW

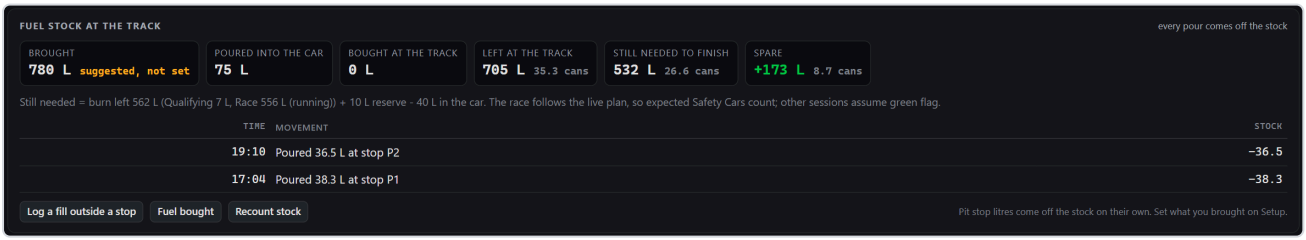

Fuel stock at the track: brought, poured, bought, left, still needed and spare

Tracks the fuel brought to the weekend:

- **Brought** - what you set in Setup (or the suggestion, marked "suggested, not set").
- **Poured into the car** - every pit stop's litres come off the stock on their own, plus fills logged outside a stop.
- **Bought at the track** and **Left at the track**, in litres and cans.
- **Still needed to finish** - the burn left for every remaining session (the race through the live plan, so expected Safety Cars count; other sessions assume green flag), plus the reserve, less the fuel in the car. The line under the chips shows the sum.

- **Spare** - left minus still needed. Amber when under one can is spare; red, with an alert, when the stock will not last.

The movements table lists every pour, purchase and recount. Buttons: **Log a fill outside a stop** (for example between sessions), **Fuel bought** (fuel bought at the track) and **Recount stock** (spills or part cans: sets the stock to what you count).


Stop detail and procedure



Detail of the selected fuel stop, with the litres editor

- litres on arrival, litres to add (inject), and litres on leaving;
- jerry cans to bring, for example 4 x 20 L = 3 full + 1 with 4.5 L;
- the fuel window and the planned stationary time;
- the refuel crew by role (the incoming driver marked supervising), and the driver change;
- who else attends: pit wall engineer, radio (Raceceiver relay), lap timing, mechanic.

Crew for later stops is forecast from the shift plan at that time. The next stop uses whoever is available now.

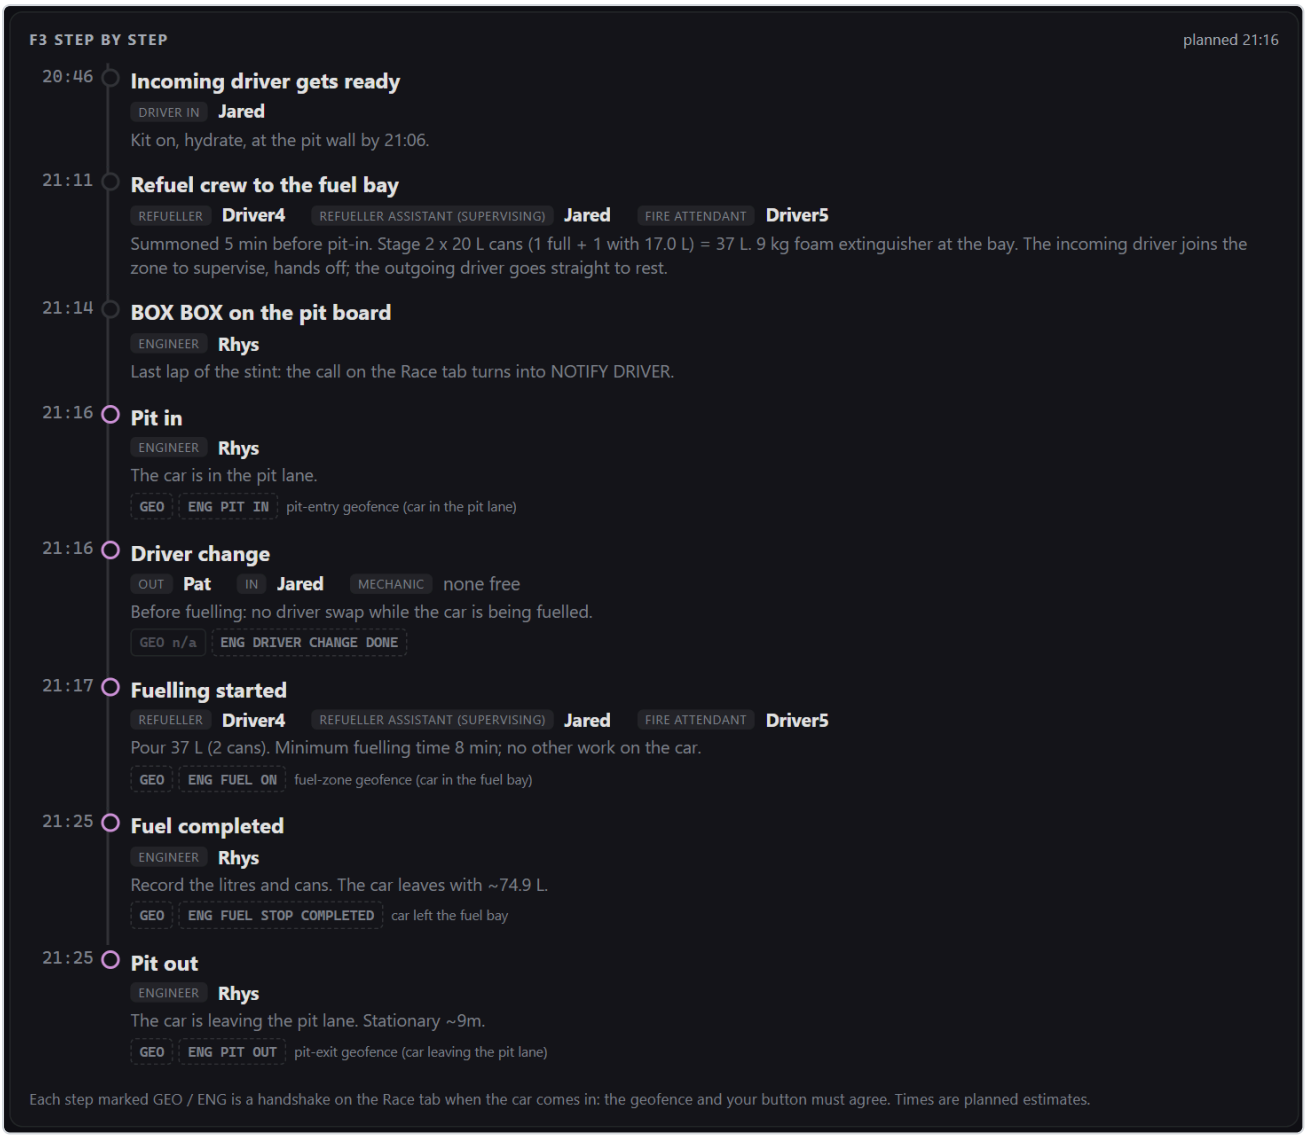

Step by step: the procedure for the selected stop, with times, names and each step's GEO / ENG handshake

Step by step gives the procedure for that stop from the incoming driver getting ready and the refuel crew going to the bay (summoned 5 minutes before pit-in, cans and the 9 kg foam extinguisher staged) through BOX BOX, pit in, driver change, fuelling started, fuel completed and pit out, with planned times and names.

Change the litres of a stop with -5, +5, Brim or by typing. A preview shows where every later fuel stop moves, the fuel stop count and the finish fuel, before anything is changed. **Apply to the running plan** re-plans the running scenario with that amount (capped by the tank and the per-stop limit); **Back to planner litres** removes it. Applied changes can be undone with **Undo** on the Scenarios tab.

5.8 Scenarios tab




Figure 7 - Scenarios: Scenario B, its branch B1 (edited, with Undo available) and C, D, E

Six "what could happen" scenarios side by side. Each starts from a template created at the moment the scenarios are created; event times are then fixed until you move them.

Scenario	Assumption
A - Clean race	No incidents: the plan as it stands.
B - Safety car	One 20 min Safety Car around the middle of what is left.
C - Early SC + sin bin	A 15 min Safety Car soon, then a 15 min sin bin penalty.
D - Mechanical	An unplanned 25 min repair stop.
E - Chaos	A 30 min red flag, then two 15 min Safety Cars.
F - Driver down	The up-next driver unavailable for the rest of the race.

Each bar is the whole race. Above it, the estimated lap number; below it, the clock time. On the bar: driven stints dim, the plan from now in driver colours, stops as ticks (lilac = fuel), fuel windows underneath, and the scenario's events along the top (orange Safety Car, red Red flag, purple repair or sin bin). Chips give stops, fuel stops, total stationary time and finish fuel; warnings appear under the bar.

The real past on every bar NEW

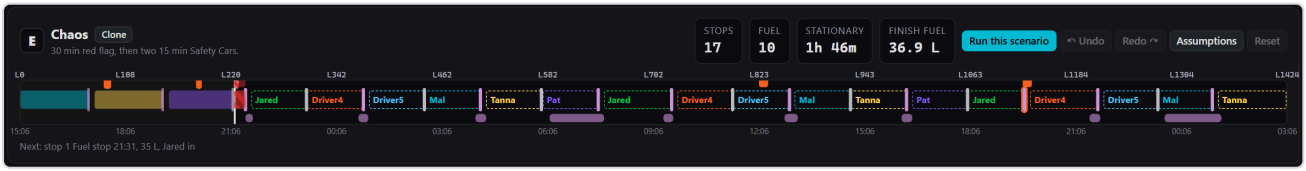

Scenario E after a real red flag: the real flags and the RED park block are drawn on every bar

Every bar, and the Race timeline, show the same real past: Safety Cars, yellows and red flags as solid bars (a flag still out projected forward), a RED block in the driver lane for the time parked, and the stops really made. So the scenarios converge as the race goes on. A predicted Safety Car or red flag is **used up** when a real one of the same kind comes out after the scenario was made. A predicted event whose time passes without it happening **slides forward** to the next likely spot (evenly between now and the scenario's next event, or the flag; shown with a dashed outline), and is dropped once it no longer fits before the flag.

Working with a scenario

- **Box under the Safety Car.** If a Safety Car starts and a stop is due within the next 45 minutes, the scenario takes that stop under the Safety Car (orange ring) and re-plans every other stop around it.
- **Drag a stop** along the bar to move it. That stop and every stop before it are pinned (cyan ring); every later stop re-plans live while you drag, and a (!) appears if the arrangement breaks a limit.
- **Move the fuel to another stop:** drag a fuel stop and drop it onto another stop. Both keep their times and driver changes; only the fuel moves.
- **Click a stop** to make it a fuel / no-fuel stop, or unpin it and the stops after it.
- **Assumptions** opens assumptions mode: drag a Safety Car, red flag, repair or sin bin to another time, or drag its right edge to change its length. The editor below the bar lists the events with exact start times and lengths, plus a lap time change and unavailable drivers; **Save assumptions** stores them.
- **Undo / Redo** NEW step back and forward through every change to that scenario (Save assumptions, adding or removing an event, dragging an event or a stop, moving fuel, litres set on the Fuel Plan, clearing dragged stops, Reset), up to 50 per scenario. A new change clears Redo. The buttons are always there, greyed out when there is nothing to step through. The history is part of the event log, so it is the same on every screen and survives a restart.
- **Reset** brings the scenario back to its original events and removes every dragged stop and litres setting. An **edited** badge shows which scenarios differ from their original.
- **Run this scenario** makes it the live strategy. The call, Next stop, Fuel Plan, timeline, refuel crew summons, prepare alerts and Garage display all follow it, and the status bar shows its letter.

Branches: Clone NEW



Branch B1, cloned from Scenario B and then edited

Clone, next to each scenario's name, copies the scenario as it is now into a branch drawn indented under its family: A1, A2 ... for A, B1 for B. A clone of A1 becomes the next A number. A branch is a full scenario: it can be run, edited, undone and compared side by side with the main line; **Reset** returns it to how it was when cloned. **Remove** deletes a branch that is not running.

> **Race Plan what-if vs Scenarios**
> The what-if on the Race Plan tab is a quick look on one screen and is never saved. Scenarios are saved, shared with every device, logged, and one of them is always the one running.

5.9 Team tab


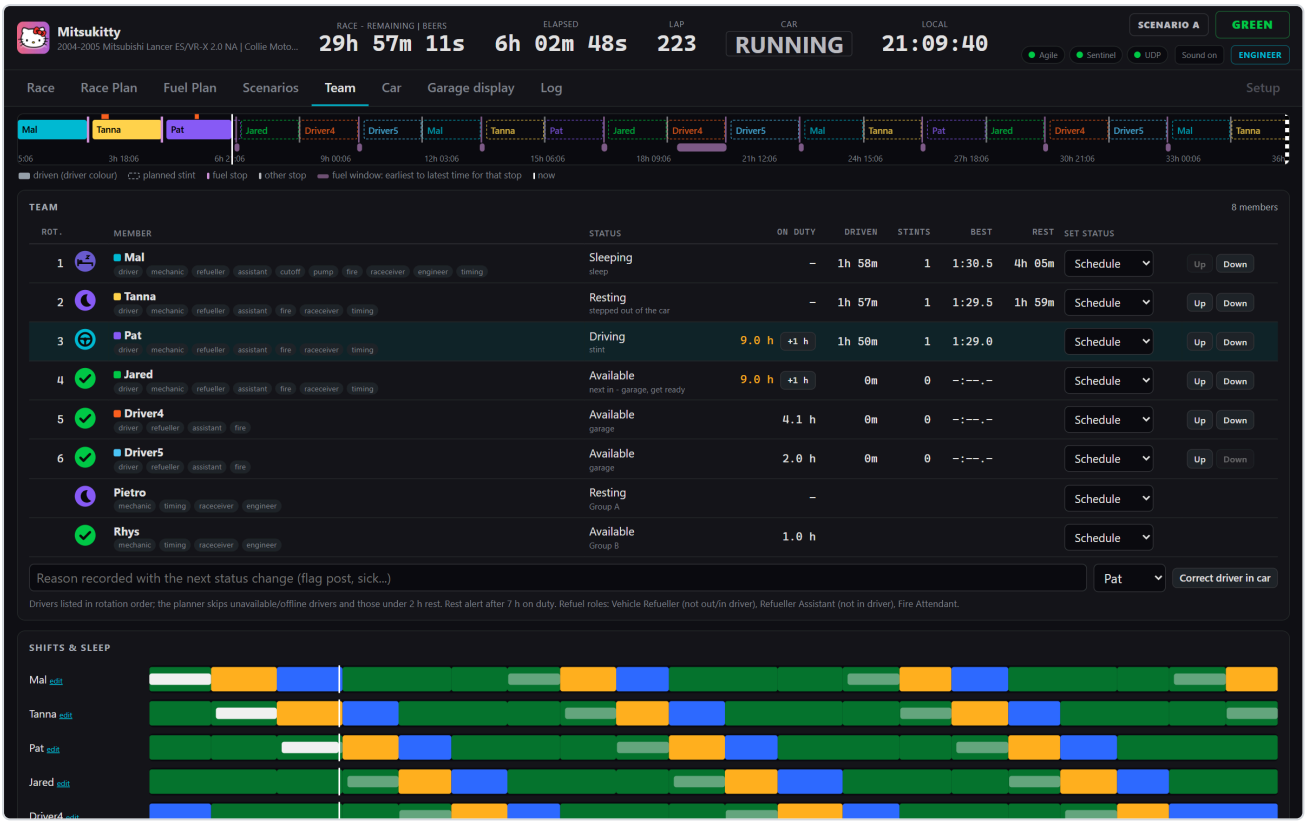


Figure 8 - Team tab: roster, then Shifts & sleep

One table for every team member. Drivers come first in rotation order (**Up**/**Down** to change it); the planner follows this order, skipping drivers who are unavailable, offline or have not rested enough. For each member: presence icon, roles, status (with what the shift plan has them doing), hours on duty (amber when rest is due, **+1 h** to override for a contingency), and for drivers time driven, stints, best lap and time since their last stint.

Status	Meaning
Available	On duty. Can be assigned to the refuel crew.
Driving	In the car (automatic).
Resting	On a break. Not assigned. The outgoing driver is set Resting automatically at pit in.
Sleeping	Asleep. Not assigned; FIX can wake them if a refuel role is empty.
Offline	Away from the track.
Flag duty	Marshalling at a flag point (enter the post in the reason box).
Unavailable	Sick, injured, or otherwise out; the planner removes a driver from the rotation.
Schedule	Follow the shift plan below (removes a manual status).

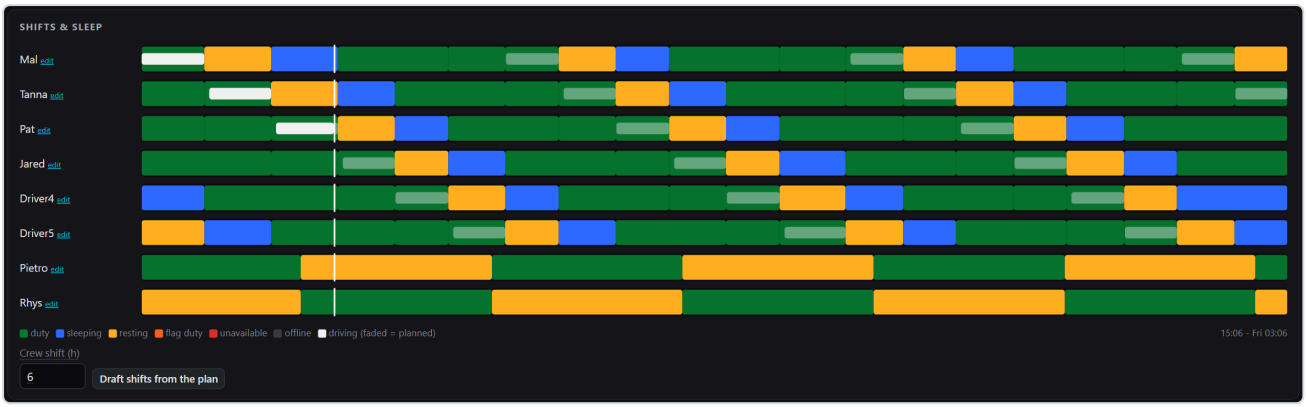


Shifts & sleep

The **Shifts & sleep** chart shows each person's blocks over the race: green duty, amber resting, blue sleeping, orange flag duty, red unavailable, dark grey offline, white driving (faded = planned).

Draft shifts from the plan replaces every block with a complete rota built from the plan being run (it asks first). Drivers are rostered stint by stint: the driver in the car is driving and the next driver in is on duty in the garage getting ready; the driver who has just stepped out rests, and the one before sleeps (races of 12 hours or more); at least two drivers wait in the garage for mechanical work and the fuel crew; any extra drivers sleep. Other crew run in two alternating groups of the **Crew shift** length. The refuel crew for each planned fuel stop is on duty from 5 minutes before pit-in to pit-out, chosen from who is in the garage, so the plan does not wake anyone for a stop.

Editing one person's shifts NEW

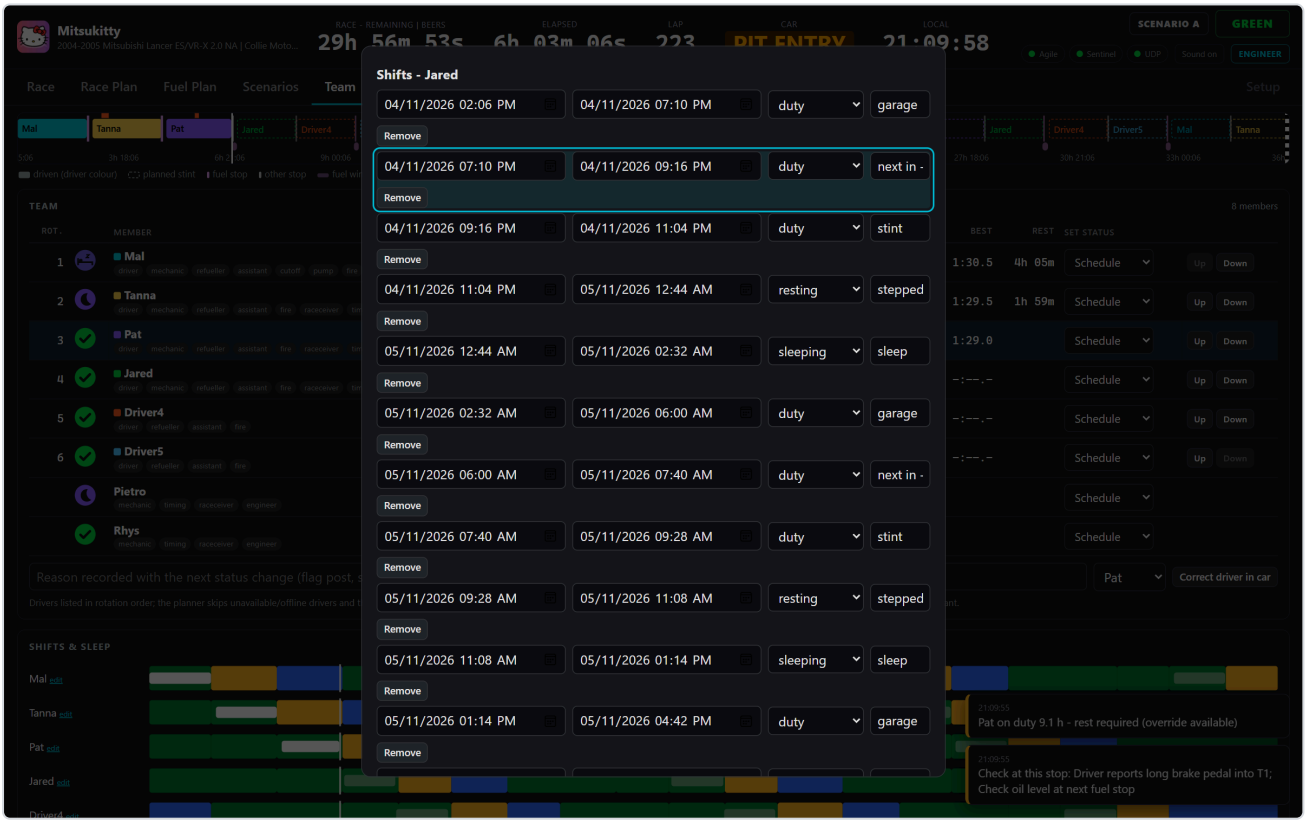

The shifts editor opens on the block happening now, outlined in cyan

Click **edit** next to a name to open that person's blocks: start, end, kind and note for each, with **Remove**, **Add block** and **Save**. The block happening right now is outlined in cyan and the editor scrolls straight to it.

5.10 Car tab


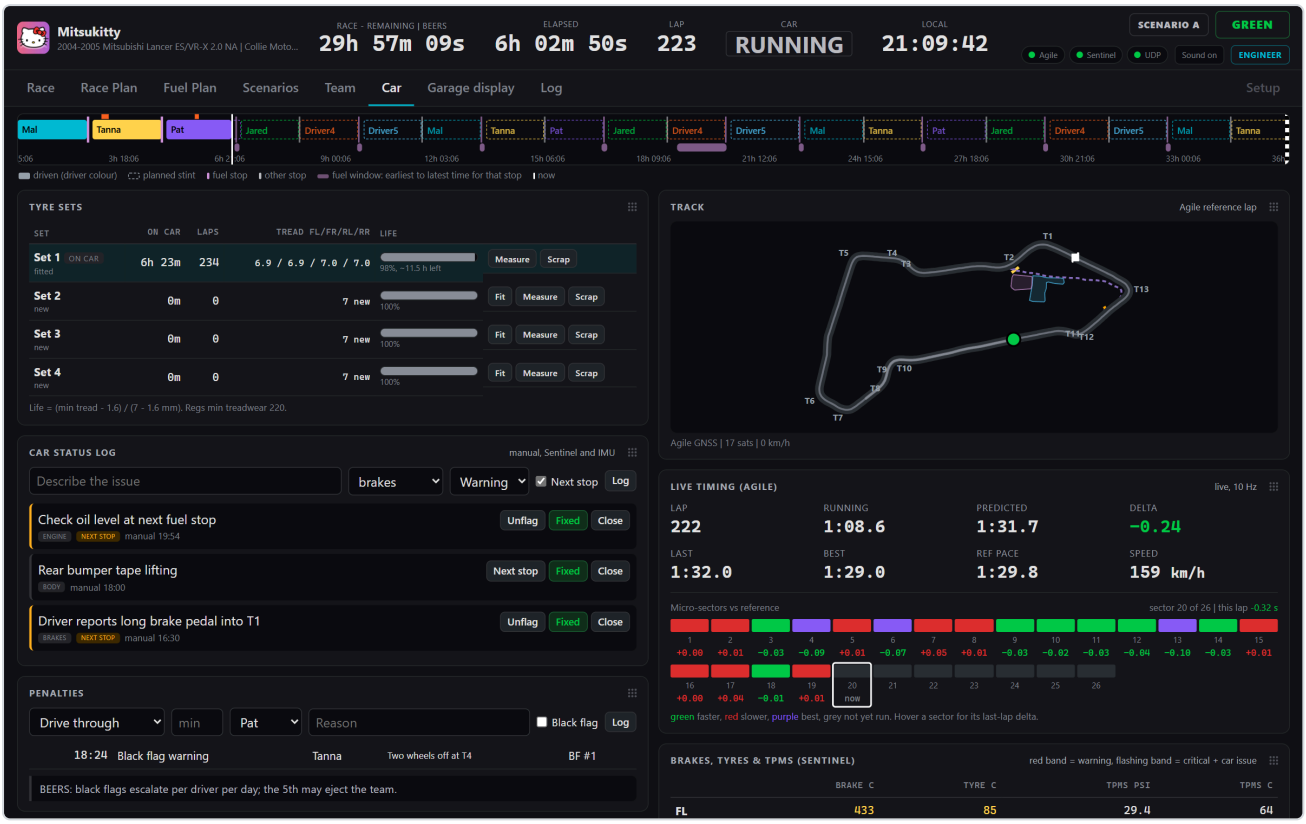


Figure 9 - Car tab: Tyre sets, Car status log and Penalties on the left; Track, Live timing and Sentinel on the right

Left column: **Tyre sets** (time on the car, laps, last tread measurement and life bar; Fit, Measure, Scrap), **Car status log** (every issue, manual or automatic, with category, severity, whether to deal with it at the next stop, and its history; Next stop/Unflag, Fixed, Close) and **Penalties** (drive-through, stop-and-go, sin bin, black-flag warnings and time penalties per driver; black flags counted per driver per day for the BEERS escalation).

Right column: **Track** (the same live map as on the Race tab), **Live timing (Agile)** and **Brakes, tyres & TPMS (Sentinel)** with the device's own colour bands, thresholds and alarm history. The cards can be moved as on the Race tab.

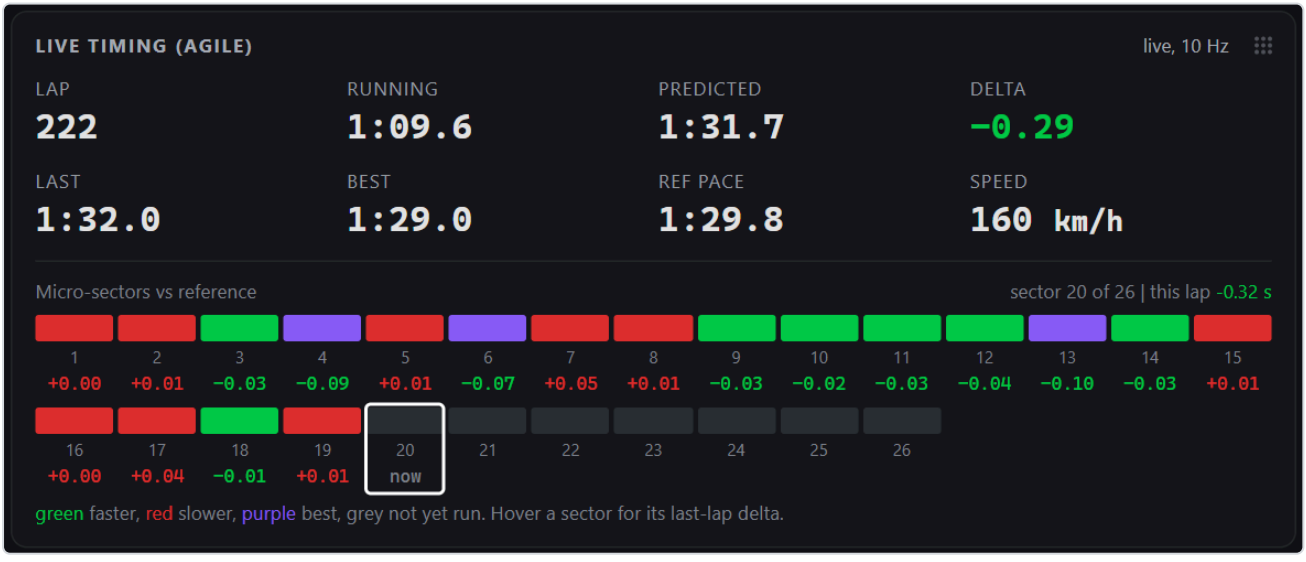

Live timing (Agile) with the micro-sector grid

Live timing shows lap number, running lap time, predicted lap, delta, last, best, reference pace and speed, updated live at 10 Hz. The micro-sector grid shows every sector of the Agile's reference lap with its colour

(green faster, red slower, purple best, grey not yet run), its number and its delta for the current lap; the sector the car is in is outlined. In the pit lane there is no live delta and sectors before pit exit stay grey.

5.11 Garage display

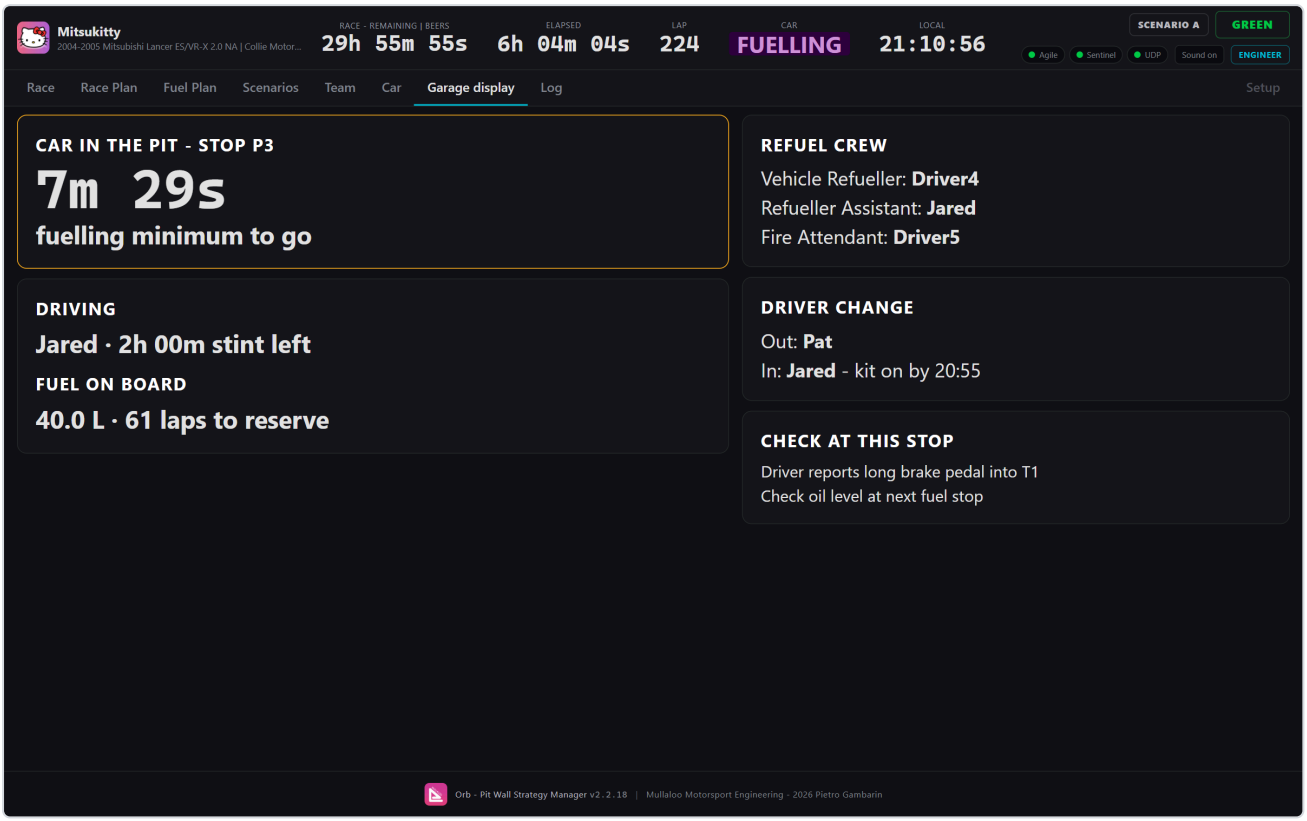


Figure 10 - Garage display during a stop

A big-type screen for the crew, meant for a TV or tablet in the garage. Between stops it shows the countdown to the next stop, its type and fuel, the driver and fuel on board. When the car is in, it shows the fuelling minimum counting down. Alongside: the refuel crew by name, the driver change (with the time to have kit on), the jobs to check at this stop, and a warning when refuelling is closed by the flag. An unassigned refuel role shows a FIX button on the engineer's screen.

5.12 Log tab and saved plans


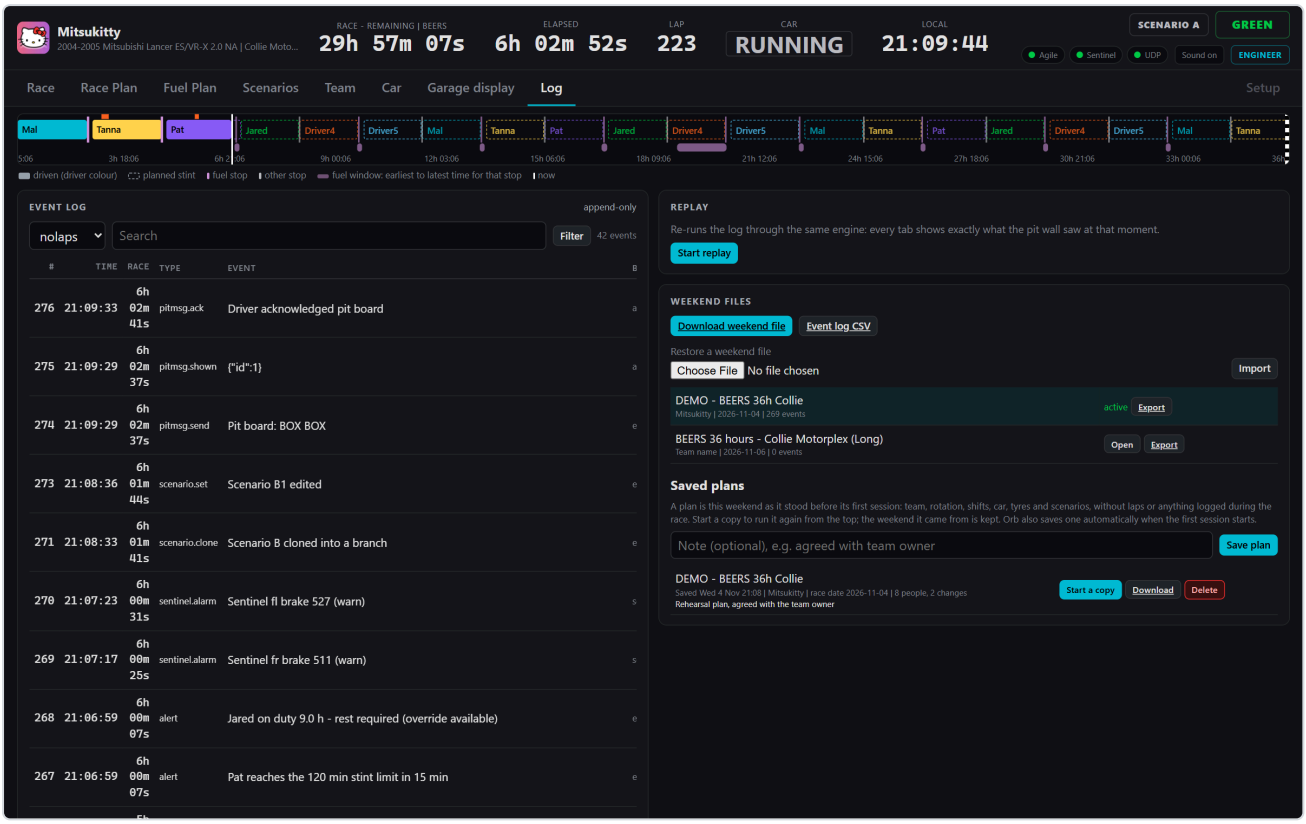


Figure 11 - Log tab: event log, replay, weekend files and saved plans

- **Event log** - every change ever made, in order, with clock and race time and who made it. Filter by type or search text. Scenario clones and edits, fuel stock movements and handshake steps are all here.
- **Replay** - re-runs the log through the application: every tab shows what the pit wall saw at that moment. Slider, Play at 1x to 1200x, jump 10 minutes, **Back to live**.
- **Weekend files** - download the weekend file (`.orb.json` : setup and complete log), the event log as CSV, restore (import) a weekend file (old `.pitwall.json` files import too), and open other weekends.

Saved plans NEW

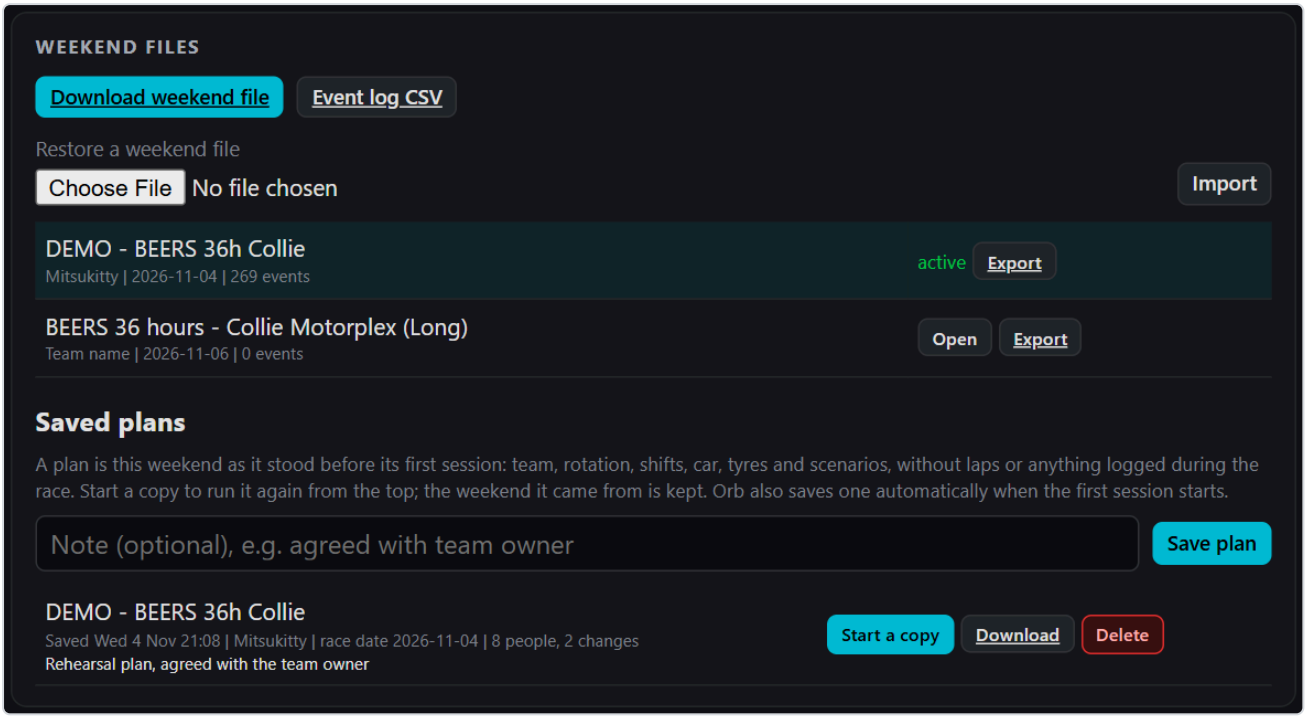

Weekend files and Saved plans

Prepare a weekend days early and start it fresh on race day. **Save plan** stores the open weekend as it stood before its first session - team, rotation, shifts, car, tyres and scenarios, but no laps, alerts, device data or anything logged during a run - in `data\plans\` as `<date>_<time>_<name>.orb.json`, with an optional note. Each plan offers:

- **Start a copy** - opens a new weekend from that plan; the weekend it came from is kept. So you can rehearse with the simulator and still go back to the clean plan.
- **Download** - the plan file, which imports on another laptop like any weekend file.
- **Delete** - moves it to `data\plans\deleted\`.

Orb also saves a plan automatically (`..._auto.orb.json`) the moment a weekend's first session starts. Plans are also offered on the New race weekend screen.

5.13 Setup


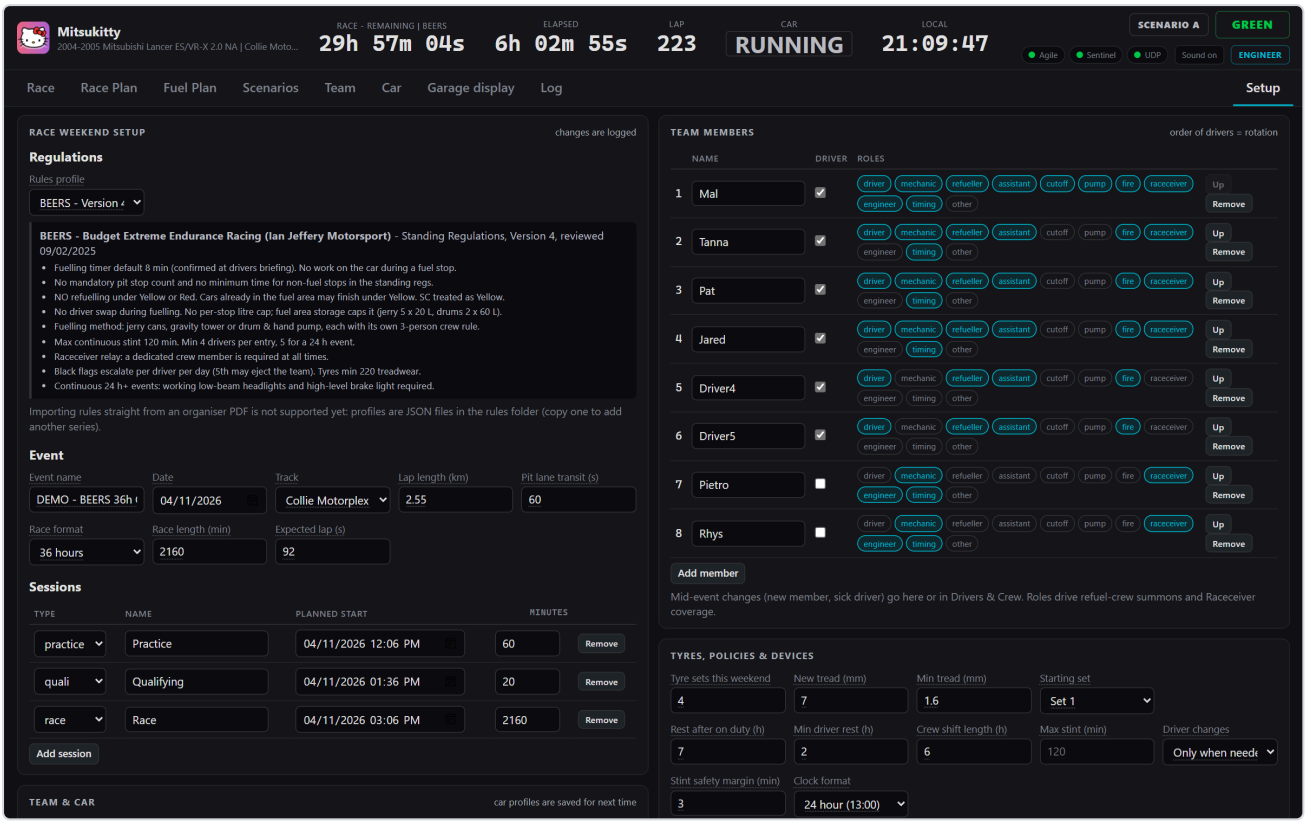


Figure 12 - Setup

Opened from **Setup** at the right of the tab bar. On the first start it is the only screen, and it creates the race weekend. Later it edits the weekend; every change is logged. Every field has a tooltip: what it is, and what raising or lowering it does.

Section	Fields
Regulations	Rules profile (B4B Events or BEERS) with its version and key rules.
Event	Name, date, track (the Collie Motorplex preset includes the long-circuit outline and turn numbers), lap length (distance races), pit lane transit time, race format (7 h, 12 h, 24 h, 36 h, 1000 km, custom), race length, expected lap time.
Sessions	Practice, qualifying, race (and more) with planned start and length.
Team & car	Team name, number; car profile from the library; tank sizes and unusable fuel; reserve floor; **Tank sizes confirmed**; baseline green and Safety Car burn for this track; refuel method; pour rate; driver change time; save car to library.
Fuel stock for the weekend NEW	Safety margin on the burn (%, default 10), fuel in the car on arrival, and **Fuel we bring**. The suggestion: every session at the green-flag burn, plus the margin and the reserve, less the fuel already in the car, rounded up to whole cans, with the sum spelled out. **Use the suggestion** fills it in.
Team members	Name, driver yes/no, roles (driver, mechanic, refueller, assistant, cutoff, pump, fire, raceceiver, engineer, timing, other). Drivers' order is the rotation.
Tyres, policies & devices	Tyre sets, new and minimum tread; rest after hours on duty; minimum driver rest; crew shift length; max stint; when to change drivers; stint safety margin; fill to brim; clock format; Agile, Sentinel and UDP addresses.
Branding	The Mullaloo Motorsport Engineering logo is built in; upload a PNG/SVG only to replace it, **Use default logo** to go back.

Track map imagery NEW	Engineer only. **Download track tiles** stores the satellite imagery of the track and 400 m around it (the Agile's lap if there is one, else the track preset, else around the car's last position), from zoom 14 up to the best the provider has there, and reports progress, then *Ready offline*. Tile URL, attribution and max zoom set the imagery source (Esri World Imagery by default; **Use the default source** goes back). Check the provider's terms of use for your team. Where the provider has no imagery that close (at Collie, above zoom 18), the map uses its closest real zoom.
Checks	Warnings before you race: too few drivers for the format, tank over the regulation maximum, tank sizes not confirmed, refuel roles nobody holds, no Raceceiver relay (BEERS), headlights for 24 h+ races.

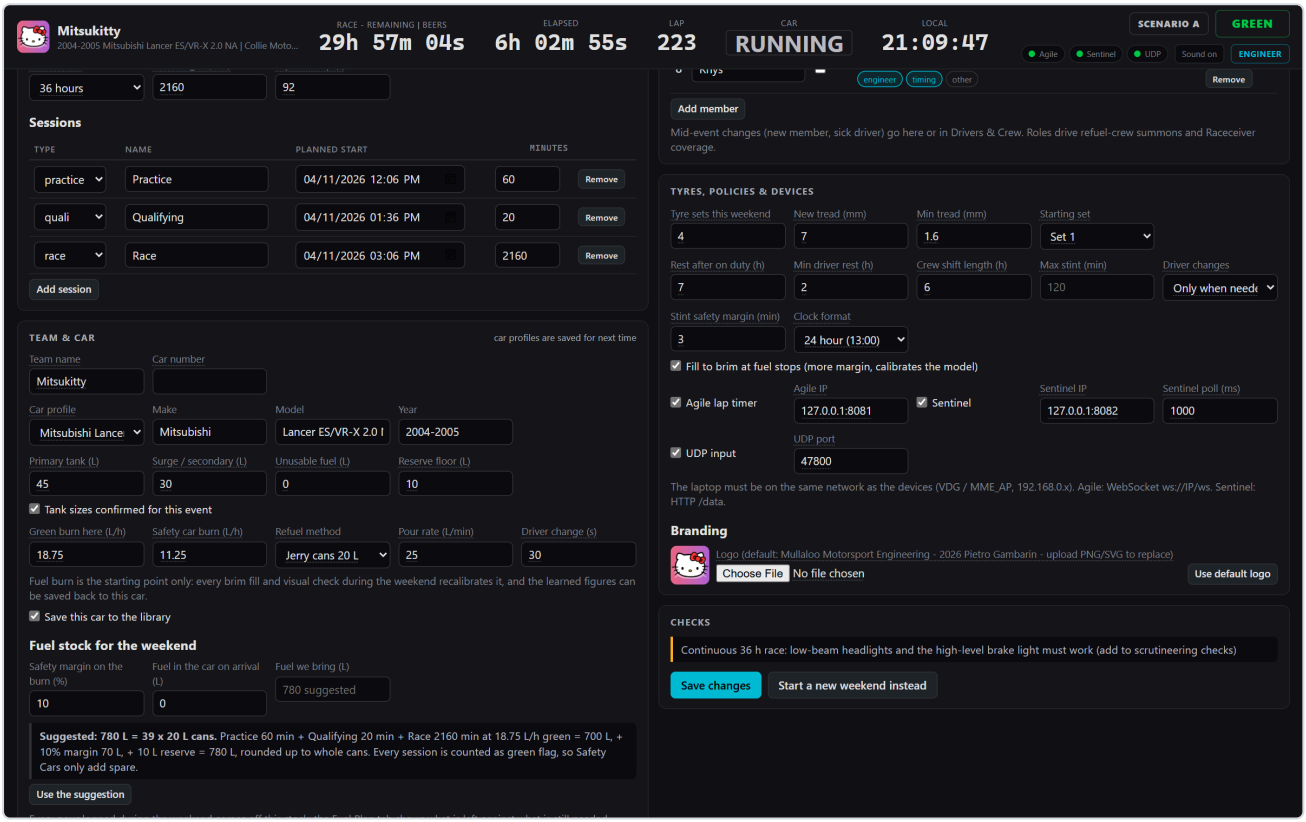

Fuel stock for the weekend, with the suggestion worked out NEW

5.14 Track layout - Collie Motorplex long circuit

The Collie Motorplex preset is the long circuit: 2.55 km, 13 turns, run anti-clockwise, start/finish on the straight between T13 and T1. NEW From 2.2.22 the centreline is the median of 11 laps of Sentinel GNSS (10 Hz, 12-16 satellites) recorded at the 26 April 2026 Collie test: 2.543 km, and the laps agree within about 1.3 m. It lies on the asphalt in satellite imagery. The turn numbers, pit lane, pits area, fuel area, pit entry and exit lines and the start/finish line come from the earlier traced layout and the team's mark-ups of the pit complex, turned onto the GNSS line (the shapes agree within 2.3 m); the turns and start/finish sit on the line. The pit geometry is good to about 5-8 m. The pit lane is about 460 m from entry to exit and runs alongside the start/finish straight; the pits area comes before the fuel area, then the exit.

> **Fixed in 2.2.22**
>
> Before 2.2.22 the preset was drawn about 9.4 km north-east of the circuit and turned about 80°. Weekends created before then keep their settings, but the map now always draws the Collie layout from the current track file.

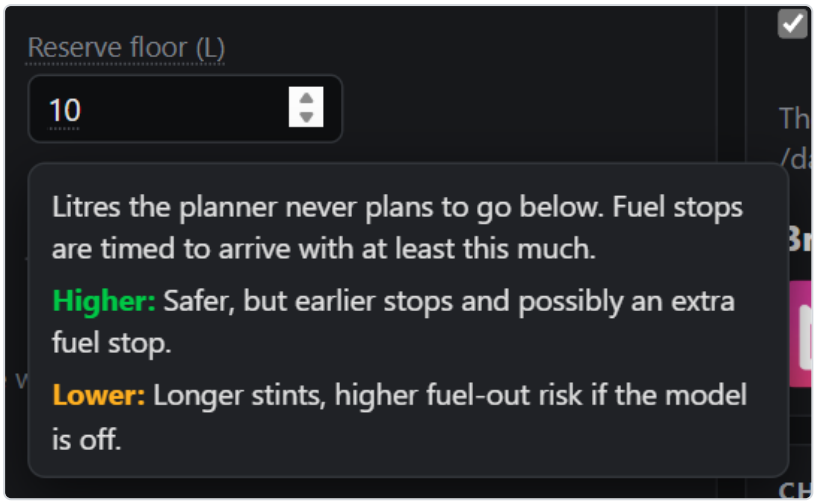


Figure 13 - Collie Motorplex long circuit, official layout (red). The grey link is the short-circuit connection and is not part of the long circuit.

The map uses the preset until the Agile has recorded its own reference lap, then the Agile's lap (exact for the car's GPS). Turn numbers, the pit lane and the start/finish line are moved onto the Agile's lap (section 5.5) and stay on the map whenever they line up with it. At the track the Agile's recorded lap and its stored geofences are what the app uses.

6. Running a real race weekend

6.1 Before the weekend

1. Start the server (with no weekend active, Setup opens; otherwise **Setup - Start a new weekend instead**).
2. Choose the regulations, track, format and sessions. Enter team, car and tank sizes; tick **Tank sizes confirmed** once checked on the car.
3. Enter every team member and tag their roles. For jerry-can fuelling you need people tagged `refueller`, `assistant` and `fire`. The outgoing driver is never on the crew and the incoming driver takes the assistant role (supervising), so tag at least three or four people with each fuel role; for BEERS also `raceceiver`.
4. Under **Fuel stock for the weekend** check the suggestion and set what you will bring. NEW
5. Clear all warnings in **Checks**, then **Create race weekend**.
6. In **Team**, press **Draft shifts from the plan** and adjust blocks as needed. Open **Fuel Plan** and check the crew forecast for each fuel stop.
7. In **Log - Saved plans** press **Save plan**. Rehearse with the simulator if you like; on race day press **Start a copy** on the plan for a clean weekend. NEW
8. While you still have internet, open **Setup - Track map imagery** and press **Download track tiles** until it reads *Ready offline*, so the satellite map works at the track. NEW

6.2 At the track: connect the car

Join the laptop to the car network (VDG / MME_AP, 192.168.0.x). Read the IP addresses on the Agile and Sentinel screens and enter them in **Setup - Tyres, policies & devices**, then **Save changes**. Starting from the demo weekend, these are the fields to change:

Description	Current setting	Target setting
Agile lap timer	ticked	no change
Agile IP	`127.0.0.1:8081` (simulator)	IP shown on the Agile screen, e.g. `192.168.0.41`
Sentinel	ticked	no change
Sentinel IP	`127.0.0.1:8082` (simulator)	IP shown on the Sentinel screen, e.g. `192.168.0.40`
Sentinel poll (ms)	1000	no change
UDP input / port	ticked / 47800	no change

The Agile and Sentinel lights turn green within seconds. The track map appears once the Agile has recorded its reference lap. Close the simulator if it is still running.

6.3 Starting a session

In **Race control** select the session, enter the actual fuel in the car, the starting driver and the tyre set, and press **Green flag - start session** when the session goes green. Practice and qualifying are recorded too: their laps and fuel measurements help the model before the race, and the fuel they use comes off the stock. Orb saves an automatic plan when the weekend's first session starts.

6.4 During the race - routine

- Glance at the call and the Attention list; acknowledge alerts once handled.
- Set the flag in Race control whenever race control changes it; the call accounts for refuelling rules under each flag, and a red flag holds the plan until the restart.

- About 30 and 15 minutes before a driver change, the next driver gets a "prepare" alert; 5 minutes before a fuel stop the refuel crew is summoned by name.
- At every stop: confirm the handshake steps and record the fuel (litres, brim, driver in, fixes).
- Log a gauge reading whenever someone reads the fuel gauge.
- Keep crew statuses current; assignments update immediately.
- Log fuel bought and any fill outside a stop on the Fuel Plan, and recount the stock now and then.
- Use the Garage display on a TV and the Fuel Plan on the crew chief's tablet.

6.5 Pit stop workflow

Moment	What happens	Engineer action
Stop near	From 5 min before the planned stop the call counts laps: BOX IN 3 LAPS, 2, 1. On the last lap: NOTIFY DRIVER: BOX BOX. Refuel crew summoned 5 min before pit-in; the incoming driver joins them in the fuel zone.	Press **Send BOX BOX to the driver**. To keep the car out, press **+1 lap** instead.
Pit entry	PIT ENTRY geofence opens the stop (GEO); the handshake card appears; pit lane timer starts. The outgoing driver is set Resting.	**PIT IN** (or **Not a stop**). Brief the crew from "Check at this stop".
Driver out	Outgoing driver leaves the car before fuelling and goes straight to rest.	Check the driver row, **DRIVER CHANGE DONE**.
Fuelling	Fuel bay geofence (GEO): fuelling timer against the minimum. The incoming driver supervises, hands off.	**FUEL ON** when pouring starts. Fill in the Fuel stop card.
Fuel done	Car leaves the fuel zone (GEO). The litres come off the fuel stock.	**FUEL STOP COMPLETED**.
Pit exit	PIT EXIT geofence: stop closed and checked; plan recalculated. Anything not confirmed is applied from the plan (AUTO).	**PIT OUT**, then check the new next stop.
Red flag in the stop NEW	No fuelling or service under red; the stop waits where it is.	Wait for GREEN, then carry on from the same step.

> **If the Agile misses a geofence**
> Use **Override car state** under the Pit lane card (or the manual car state buttons in Next stop when the Agile is offline). The stop timers follow these buttons exactly as they follow the Agile.

6.6 After the race

Press **Chequered**. In **Race Plan - Fuel model**, press **Save learned burn to this car** to keep the measured consumption for the next event at this track. Read the stint debriefs. In **Log** download the weekend file and the CSV for the debrief, and back up the `data` folder.

7. How the strategy works

7.1 Fuel model

Burn starts from the car's baseline for the track (green and Safety Car litres per hour). Every lap is classified by its time against the live reference pace: push, green, slow, Safety Car or pit lap; stationary time in the pits burns nothing. Each brim fill or gauge reading is a measurement of the fuel actually used since the previous one; a regression then refits the green and Safety Car rates, with the baseline as a starting point. A stint that used more than 10% more or less than predicted raises an alert. The estimate shows its uncertainty, which grows with time since the last measurement.

7.2 Planner

From the current moment to the flag, the planner searches the number of stops, how many of them are fuel stops and where they fall, and picks the plan with the least total time stationary while respecting:

- fuel range and the reserve floor;
- the maximum continuous stint (minus the safety margin);
- the maximum litres per stop (regulation cap or fuel-area storage);
- mandatory stops and their minimum duration (B4B);
- the minimum fuel stop time and pour rate;
- driver rotation, availability and minimum rest.

On long races with short fuel range (for example the BEERS 36 h), this typically alternates driver-only stops with fuel stops, which saves a large amount of stationary time.

7.3 Red flags and scenarios NEW

A live red flag neutralises the race: from the red until the assumed restart (`strategy.redExpectMin`, 20 min; once that has passed, always at least 5 minutes away) the car is parked in the pits, nothing burns, no stint is driven and no stop is planned. The red pit visit never counts as a mandatory stop and gets no automatic fuel or driver change from the plan. The driver's continuous time pauses.

A scenario is the planner plus assumptions. Safety Car windows lower the burn rate (and a stop due within 45 minutes is taken under the Safety Car), assumed red flags stop the burn, repair stops and sin bins are forced stops of fixed length, and unavailable drivers are removed from the rotation. All scenarios share the real past (real flags, the red park block and the stops made). A predicted Safety Car or red is consumed by a real one of the same kind; one that does not happen moves forward to the next likely spot, or is dropped if it no longer fits before the flag.

Stops you drag are pinned: the planner keeps them where you put them, with their fuel and driver choice, and searches the best plan only for the time after the last pinned stop. Litres set on the Fuel Plan are kept the same way. Every change is recorded with an undo history per scenario (up to 50 steps).

7.4 Windows and calls

A fuel window opens at the earliest time the car could stop, fill up and still reach the next fuel stop (or the flag), and closes at the latest time before the reserve floor or the stint limit. The call is recalculated every second from the plan, the fuel estimate, the stint time and the flag; Appendix B lists every call.

7.5 Driver time and +1 lap

A driver's continuous time stops when the car stops in the pits. Once the driver change is confirmed, the Now column shows the new driver as "In the car - timer starts at pit out", with the outgoing driver's final time

beside it. While the car is in the pits no stint-limit or fuel-window alerts are raised. A driver who stays in the car through a stop keeps counting from where it paused.

+1 lap holds the called stop one reference lap later in the running plan and every scenario. It is allowed only if the fuel on arrival stays at or above the reserve floor and the stint stays within the maximum. The stop's fuel grows by one lap's burn; the planned driver change is kept. The extension ends when the car next enters the pits.

7.6 Crew, refuel crew and shifts

- Presence states: Available, Driving, Resting, Sleeping, Offline, Flag duty, Unavailable, each with a reason. A manual status overrides the shift plan until set back to Schedule.
- Rest: rest alert after 7 h on duty (Setup), with a 1 h contingency override. Drivers need the minimum driver rest (2 h by default) before the planner puts them back in the car.
- Prepare alerts for the next driver at 30 and 15 minutes.
- Refuel crew summoned by name 5 minutes before a fuel stop. Only members tagged with the role and currently Available are assigned, the most constrained role first, preferring non-drivers.
- The golden rule at a fuel stop: the outgoing driver steps out and goes to rest - never on the refuel crew. The incoming driver enters the fuel zone as Refueller Assistant, supervising only.
- If nobody qualifies, the slot shows UNASSIGNED with the reason; nobody is ever assigned silently.

7.7 Fuel stock NEW

Suggested stock = (sum over sessions of length x green-flag burn) x (1 + margin) + reserve - fuel in the car on arrival, rounded up to whole cans. Live: left = brought + bought - poured (pit stops, fills outside a stop), or the last recount adjusted since. Still needed = burn for every remaining session (race from the live plan) + reserve - fuel in the car. Spare = left - still needed.

7.8 Regulation profiles

Rule	B4B Events (Mar 2026 + 7 h supplementary)	BEERS (Standing Regulations V4, 09/02/2025)
Fuel stop minimum	5 min	8 min (confirmed at the briefing)
Mandatory stops	5 stops of at least 5 min	None
Fuel per stop	Max 80 L	Limited by fuel-area storage (jerry cans 5 x 20 L, drums 2 x 60 L)
Refuelling under Safety Car	Allowed	Not allowed (treated as Yellow)
Refuelling under Red	Not allowed	Not allowed
Max continuous stint	120 min	120 min
Drivers	3 to 6	Min 4, min 5 for 24 h+
Other	Contact = 15 min sin bin	Raceceiver relay required at all times; black flags escalate per driver per day; headlights for 24 h+; no driver swap during fuelling

Profiles are JSON files in the `rules` folder. Importing directly from an organiser's PDF is not supported.

8. Devices and network

Device	Connection	Used for
Agile lap timer	WebSocket to `ws://AGILE-IP/ws` (10 Hz live data, flag state, pit board shown / acknowledged); HTTP `/data` (completed lap time, position at 2 Hz), `/refpath`, `/geozones`, `/sf/get`	Laps, live timing and micro-sectors, car state from geofences (stop timers and the GEO half of the handshake), position and track map, pit board messages and driver acknowledgements, flags shown on the dash
Sentinel with CIRTS sensors	HTTP `/data` polled every second, `/config` for thresholds	Brake and tyre temperatures, TPMS, alarms; GPS position as a fallback for the map
Other devices	JSON over UDP, port 47800	Simulator, future devices (e.g. an IMU impact sensor)

UDP messages are one JSON object per datagram:

```
{"t":"lap","n":12,"ms":91234,"pitted":false}      {"t":"carstate","cs":"PITS"}
{"t":"flag","flag":"SC"}                          {"t":"fuel","litres":32.5}
{"t":"impact","g":4.2,"lat":-33.36,"lon":116.15}
{"t":"issue","cat":"engine","sev":"warn","text":"Oil temp high"}
```

Sentinel alarms: a value in the Sentinel red band is logged as a warning; above the top (flashing) band it is critical and automatically creates a car issue flagged for the next stop. Each alarm level repeats at most every 5 minutes per corner.

9. Data, backup and recovery

Path (inside the data folder)	Content
`settings.json`	Port, engineer hosts, last weekend (resumed automatically), satellite imagery source
`cars\`	Car library with learned fuel profiles per track
`events\<id>\config.json`	The weekend as created
`events\<id>\events.jsonl`	Every change, one line each: the race log and replay source (scenario undo history and fuel stock movements included)
`events\<id>\car_config.json`, `driver_schedule.json`	Readable snapshots
`plans\<date>_<time>_<name>.orb.json` NEW	Saved plans (and `_auto` plans saved at the first session)
`plans\deleted\` NEW	Plans you deleted
`branding\`	Your logo
`tiles\` NEW	Satellite imagery cache for the Track map, one folder per imagery source. Safe to delete; download it again before the weekend.

- Changes are written to disk the moment they are made; a power cut loses at most the last change.
- The weekend file (**Log - Weekend files - Download**) contains the setup and the complete log; **Import** restores it on any machine.
- To keep the data folder somewhere else, set the environment variable `ORB_DATA` (`PITWALL_DATA` still works).
- Copy the data folder to a USB stick or a second laptop at least once per session during long events.

10. Troubleshooting

Symptom	Cause and fix
Console window closes immediately	Node.js is not installed or too old. Install Node.js 18+ (LTS).
"Reconnecting to Orb server" banner	The server stopped or the network dropped. Restart `start-orb.bat`; the weekend resumes.
Old or mixed-up weekend after a restart, or `EADDRINUSE`	An earlier server is still running in the background. Double-click `stop-orb.bat`, then `start-orb.bat`.
Other devices cannot open the page	Firewall blocked Node.js (allow on Private networks), wrong address (use the one printed in the console), or devices on a different network.
VIEW ONLY on the laptop	You opened it via its network address. Use `http://localhost:8080` on the host.
Cards are in odd places or a card seems missing	The cards were rearranged in this browser. Press **Reset layout** at the bottom of the Race or Car tab. A card that only shows during a stop appears again at the next stop.
Race tab columns stacked	The window is narrower than 1400 px. Maximise the browser or zoom out (Ctrl and minus).
Agile or Sentinel light red	Wrong IP, laptop not on the car network, or device off. Check the IP on the device screen and in Setup.
Agile amber ("stale")	Connected but no live data for 3 s: weak Wi-Fi or the device is busy.
No track map / no micro-sectors	The Agile has no reference lap yet; it records one after the first clean lap. The live trail is drawn meanwhile.
Satellite view shows the schematic with "No satellite imagery here" NEW	The laptop is offline and this area was not downloaded. When online, press **Setup - Track map imagery - Download track tiles** until it reads *Ready offline*.
The map says the preset "does not match the Agile lap" NEW	The Agile's lap is a different track, or the Agile is somewhere else (a test away from the circuit). The Agile's own lap and geofences are still drawn; only the preset's turns, pits and start/finish are hidden.
The map is sideways NEW	It is turned to fill the card; the arrow shows north. Press **North up** in the card header for north at the top.
Handshake step stays amber	The geofence saw the step and you have not confirmed it. Press the step's button, or leave it: it becomes AUTO once the car moves on.
+1 lap greyed out	The extra lap would bring the fuel below the reserve or the stint over the maximum; the tooltip gives the reason.
Refuel crew UNASSIGNED	Nobody is tagged with that role, or everyone tagged is resting, sleeping, offline, driving or barred by the rules. Press **FIX**, or tag more people in Setup.
Fuel estimate drifting	No measurement for a long time. Log a gauge reading or tick **Filled to brim** at the next fuel stop.
Fuel stock "suggested, not set" or red NEW	Set what you bring in **Setup - Fuel stock for the weekend**; log purchases with **Fuel bought** and spills or part cans with **Recount stock**.
A scenario change was a mistake NEW	Press **Undo** on that scenario (**Redo** puts it back), or **Reset** to the original.
Call says RESTART NEW	The red flag is over and the car is still parked: send it out.

Demo times look wrong	Restart Orb (`stop-orb.bat` , then `start-orb.bat`): the demo resumes from its last lap. To start it over, run `make-demo.bat` .
Simulator: "address in use"	Another simulator is still running. Close it, or start with `--agile` / `--sentinel` on other ports and update Setup.
Changes not accepted	Replay is active (press **Back to live**) or the device is view-only.

11. Known limitations

- Tested against the simulator. The device adapters follow the Agile and Sentinel firmware exactly but have not yet been used with the real devices on a live car.
- Regulation profiles cannot be imported from PDF; they are JSON files.
- Impacts can only be received over UDP; the Agile does not send them.
- GPS positions are live only and not stored in the log, so replay has no map.
- The race clock keeps running under red flags (profile setting `clock.stopsOnRed`).
- The red-flag restart time is an assumption (`strategy.redExpectMin`) until the flag actually goes green.
- One server at a time: versions 1.x and 2.x use the same port and the same data folder.
- Crew for fuel stops after the next one is a forecast from the shift plan; the real crew is assigned from who is Available at the 5-minute summon.
- The fuel stock counts every session at the green-flag burn; Safety Cars outside the race plan only add spare.
- The Collie preset's pit geometry is good to about 5-8 m (the circuit outline itself comes from real GNSS laps). The Agile's recorded lap and geofences take over at the track. NEW
- The satellite view needs its imagery downloaded while online (**Download track tiles**); without it, offline, the card shows the schematic. Satellite imagery can itself be a few metres off true GNSS. NEW

12. Reporting feedback

When something is wrong or unclear, open an issue at github.com/redc6t/Orb/issues or send the following. The weekend file and the CSV let the problem be replayed exactly.

```
Orb - Pit Wall Strategy Manager v2.2.23 - test report
Tester:
Date / time of the problem (laptop clock):
Weekend: demo / real (name):
Screen and panel:
What I did:
What I expected:
What happened:
Screenshot: attached
Weekend file (.orb.json) and event log CSV: attached (Log tab - Weekend files)
```

Useful things to test: the full pit stop handshake, confirmed and unconfirmed; +1 lap on the last lap; a red flag during a fuel stop and the restart; scenario Undo/Redo and branches; the fuel stock through a whole race, with a purchase and a recount; saving a plan and starting a copy of it; changing the litres of a fuel stop; a driver marked Unavailable mid-race; drafting shifts and checking who is called for each fuel stop; a Safety Car under both rule sets; restarting the server mid-race; two or three viewing devices at once; a long run with the simulator.

Security problems: report privately as described in `SECURITY.md`. Accessibility barriers: see `ACCESSIBILITY.md`.

Appendix A - Glossary

Term	Meaning
Agile	The MME GPS lap timer and pit board display in the car (was PLTD).
Branch	A scenario cloned from another (A1, B1 ...), to try a change and compare.
Brim fill	Filling the tank until full. Gives an exact measurement of fuel used.
Call	The single instruction shown at the top of the Now column.
CIRTS	The CAN infrared temperature sensor node at each corner of the Sentinel network.
ENG	The engineer's half of a stop handshake: the step's button was pressed.
Fuel stock	The fuel the team has at the track, in litres and cans.
Fuel window	Earliest to latest time a fuel stop can be made without breaking fuel or stint limits.
GEO	The geofence half of a stop handshake: the Agile saw the car do the step.
Geofence	A zone stored in the Agile (pit entry line, pits, fuel bay, pit exit line); crossing it changes the car state.
Handshake	A stop step confirmed by both the geofence (GEO) and the engineer (ENG).
Mandatory stop	A stop the regulations require (B4B: at least 5 stops of at least 5 minutes).
Micro-sector	One of the short sections the Agile splits its reference lap into; each is timed against the reference.
Plan (saved)	A weekend as it stood before its first session, stored to start fresh copies from.
Raceceiver	Race-control radio receiver; BEERS requires a crew member relaying it at all times.
Red park block	The time the car is held in the pits under a red flag, drawn in red on the timeline and scenarios.
Reference pace	Median of recent clean green laps.
Reserve floor	Fuel the plan never goes below.
Sentinel	The MME brake and tyre temperature and pressure monitor (was BTTM).
Stint	Continuous time one driver spends driving.
Stint extension	+1 lap: the called stop moved one lap later by the engineer.
Stationary time	Time the car is stopped in the box.
Up next	The next driver to get in the car.
What-if	A scenario calculated on screen only; never saved.

Appendix B - Calls and alerts

B.1 Calls

Call	When
PRE-RACE	Race not started; the plan is built from the planned start.
PRACTICE / QUALIFYING	A non-race session is shown.
STAY OUT	Normal running; shows minutes and laps to the next stop.
WINDOW OPEN	The next fuel stop's window is open; shows when it closes.
BOX IN N LAPS	Less than 5 minutes left to the planned stop: laps to go.
NOTIFY DRIVER: BOX BOX	The planned stop is at the end of this lap and the driver has not been told yet. Send BOX BOX, or press +1 lap.
BOX THIS LAP (amber)	Last lap, BOX BOX already sent; shows when it was sent and whether the driver acknowledged.
BOX THIS LAP (red)	Fuel at reserve, or the driver at the stint limit.
BOX NOW (caution)	Yellow / Safety Car and a stop is near: stopping under caution loses less time (only where refuelling is allowed under that flag).
STAY OUT - refuelling closed	A fuel stop is near but the flag forbids refuelling.
IN PITS	The car is in the pit lane.
RED FLAG	Race neutralised - car to the pits, engine off, wait for the restart (no refuelling where the rules forbid it).
RESTART NEW	Red flag over, car still parked: send it out for the restart.
CHEQUERED	Race finished.

B.2 Alerts

Alert	Level	Action
Notify driver to BOX BOX	Warning	Send BOX BOX on the pit board.
Fuel at reserve	Critical	Box this lap.
Projected finish / stop below reserve	Critical	Review the plan; consider saving fuel or an extra stop.
Consumption +/-N% vs model	Warning / critical	The model has recalibrated; check the new plan.
Fuel window OPEN / closes in 5 min	Warning / critical	Prepare or make the fuel stop.
Refuel crew to the fuel bay	Warning (critical if a role is unassigned)	Crew to the fuel bay; fix any UNASSIGNED role.
Refuelling CLOSED under flag	Warning	Hold the fuel stop until the flag allows it.
Fuel stock tight (under one can spare) / SHORT NEW	Warning / critical	Buy fuel, recount, or plan to save fuel.
Driver reaches stint limit in 30 / 15 / 5 min; over max stint	Info / warning / critical	Plan the driver change.
Prepare (next driver) at 30 / 15 min	Info / warning	Next driver: kit on, hydrate, ready.

On duty N h - rest required	Warning	Send the person to rest, or override for 1 h.
No Raceceiver relay on duty (BEERS)	Critical	Put a raceceiver-tagged member on duty.
Check at this stop	Warning	Jobs listed for the stop in progress.
Sentinel brake / tyre alarm	Warning / critical	Critical creates a car issue for the next stop.
Stop fuel time under the minimum	Critical	Possible penalty: inform the team manager.
Stop does NOT count toward mandatory stops (B4B)	Warning	Another stop of the minimum length is needed.

Appendix C - Version history

Version	Change
2.2.23	Track map turned to fit the card; north arrow and North up.
2.2.22	Collie layout rebuilt from real GNSS laps.
2.2.21	Satellite track map with an offline tile cache; Download track tiles.
2.2.20	Preset turns, pits and S/F aligned to the Agile lap; simulator `--gpsShift`.
2.2.19	Manual rebuilt for Orb; source kept in `docs/manual/`; fresh screenshots.
2.2.18	Shifts editor highlights the current block.
2.2.17	Simulator: red flag freezes a stop; realistic brake/tyre cooling; real Agile deltas and micro-sectors.
2.2.16	Scenario Undo/Redo; Clone into branches; Save assumptions fix.
2.2.15	Red flag neutralises the race; scenarios follow what really happens.
2.2.14	Fuel stock: suggested amount and live stock vs needed.
2.2.13	Saved plans.
2.2.12	Car issues logged from the Race tab show up at once.
2.2.11	Demo resumes from its last lap; old pitwall scripts removed.
2.2.10	Renamed Orb - Pit Wall Strategy Manager.
2.2.9	PLTD renamed Agile, BTTM renamed Sentinel.
2.2.8	Simulator: repeated BOX no longer delays the stop.
2.2.7	Stint debriefs on the Race Plan.
2.2.6	Stop script for stale servers.
2.2.5	Movable cards on the Race and Car tabs.
2.2.4	README tour and community files.
2.2.0 - 2.2.3	Fuel Plan tab, stop handshake, +1 lap, shift draft, larger text, Car tab live map and timing.
2.1.x	Draggable scenarios, lap countdown call, stop gates, Collie preset.
2.0	UI redesign following ISA-101 practice.

Orb is free and open source software, released under the GNU General Public License v3.0. Designed and developed by Pietro Gambarin, Mullaloo Motorsport Engineering. The satellite map uses Leaflet 1.9.4 (BSD-2-Clause) and leaflet-rotate 0.2.8 (GPL-3.0), bundled in `public/vendor/` with their licences; the default imagery is Esri World Imagery, credited on the map.