User Guide

CineBrain Pro 1.0 · PDF version

CONTENTS

1. Getting started
2. Exposure Wheel
3. Focus and depth of field
4. Viewfinder
5. Color
6. Scouting: frames, project info, archive, PDF
7. Light Plan
8. Questions and limits

1 · Getting started

CineBrain Pro is an exposure and depth-of-field wheel for photography and cinema, a director’s viewfinder that shows your lens’s frame through the iPhone camera, a light meter, a gel and filter calculator, and a scout archive with a light plan for every frame you save.

First launch

A five-screen introduction (FIG. 01–05) shows the main ideas. Tap **Skip** to leave it at any time. You can watch it again in **Project Setup › Introduction**.

Help on every screen

The small **?** at the top right of each main screen opens a short explanation with three to five steps and a **Full guide** link to the matching part of this page.


Permissions


- **Camera** — the viewfinder, metering and saving frames.
- **Location, while using the app** — the sun’s position and light times. Optional.
- **Photos, add only** — saving frames to your photo library.
- **Microphone and Speech Recognition** — asked the first time you hold a note’s microphone; only for voice notes, recognized on your iPhone. Optional.

LiDAR, compass and motion sensors need no permission. Nothing leaves your iPhone; see the privacy policy.

Language and units

The app follows your iPhone’s language (English or Turkish); you can choose a different one for this app alone in **Settings › CineBrain Pro › Language**. Distances use meters or feet according to your region; switch in the subject distance card or in Project Setup.

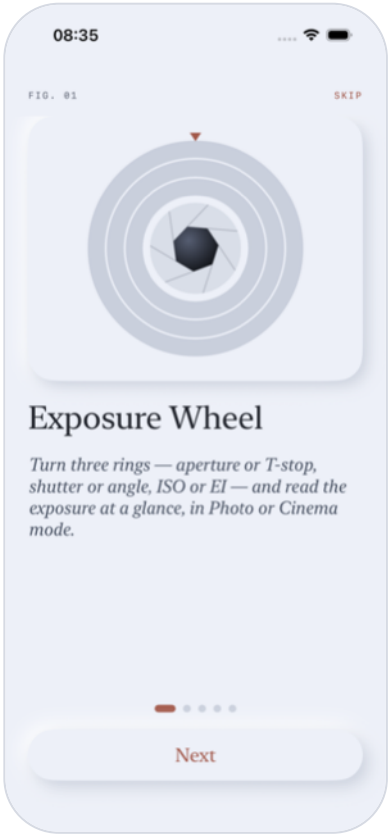


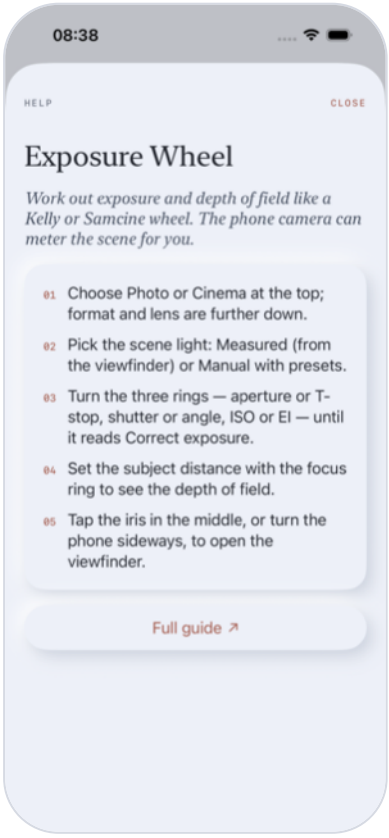

INTRODUCTION · HELP SHEET

FIELD NOTES

2 · Exposure Wheel

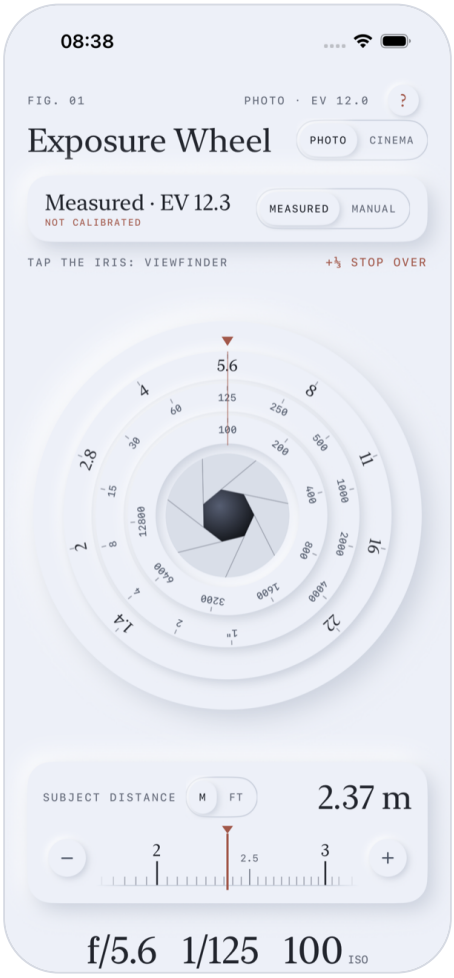

EXPOSURE WHEEL

Photo or Cinema

The switch next to the title changes the wheel. The app opens in Cinema the first time and then in whichever mode you used last; each mode remembers its own format, frame rate, filters, shutter and ISO. **Photo** uses f-stops, shutter speeds (1 s to 1/4000) and ISO. **Cinema** uses T-stops, shutter angle (360° to 11.25°) with a frame rate, and EI. Switching resets shutter and sensitivity to sensible defaults (1/125 · ISO 100, or 180° · EI 800 with ND 0.9) and sets the aperture to match the scene.

Scene light

- **Measured** — read by the iPhone camera while the viewfinder is open. The wheel keeps the last reading when you close it.
- **Manual** — choose Sunny (EV 15), Overcast (12), Indoor (8) or Night (5).
- **Spot** appears after you use “Expose for this point” in the viewfinder.

The small **not calibrated** note opens the meter calibration (see Project Setup). Under the card, the wheel tells you how many stops over or under the current settings are, in thirds of a stop.

The rings

Drag the rings round: outer — aperture or T-stop (1.4 to 22); middle — shutter or angle; inner — ISO or EI (100 to 12800). Each step clicks lightly. Tap the iris in the middle, or turn the phone sideways, to open the viewfinder. The EV at the top right is the EV of the current settings, filters included.

Below the wheel

- The **filters** line (when filters are mounted) and the **subject distance** card — see Focus.
- Aperture, shutter and ISO in large type, then the **depth of field** card: near and far limits, hyperfocal distance, sensor size, crop factor, circle of confusion and the lens's approximate horizontal angle of view at the current focus distance, and the frame's approximate width × height at the focus distance (e.g. "Frame at 3.00 m: ≈1.44 × 0.60 m"). The viewfinder shows the same size under the active frame's label and the circle of confusion next to the depth of field ("Sharp 2.77–3.27 m · CoC 0.025").
- The **color temperature** card opens Color.
- **Format** — Photo: Micro 4/3, APS-C, Full frame, Medium format. Cinema: Super 16, Super 35, Full Frame (35.9 × 24 mm), Large format, 65 mm. **Frame rate** (Cinema): 24 to 120.
- **Filters** — add with *+ Add filter*: ND 0.3–2.1, polarizer (≈1⅔ stops), 85 and 85B (⅔), 80A (2), 81A (⅓), diffusion ⅛–1 (no light loss) or a custom loss in stops. Tap a filter to remove it. The total loss counts in the exposure.
- **Lens** — 8 to 600 mm.
- **Set aperture for the scene** picks the aperture or T-stop closest to correct exposure.

FIELD NOTES

3 · Focus and depth of field

The focus ring

The subject distance card works like a lens focus scale: drag the ruler left or right under the copper index. The scale is logarithmic — close distances are spread out, far ones bunched up. Drag slowly for fine steps, fast to move quickly. Each step gives a light tap; whole meters or feet give a firmer click. Dragging the ruler never scrolls the page.

Steps (meters)
1 cm up to 2 m · 5 cm from 2 to 5 m · 10 cm from 5 to 10 m · 50 cm from 10 to 30 m · then ∞.

Steps (feet)
1″ up to 6′6″ · 2″ up to 16′6″ · 4″ up to 33′ · 1′6″ up to 100′ · then ∞.
The **– / +** buttons move one step of the current range; hold them to repeat, faster the longer you hold. Tap the large value to type an exact distance (for example 2.37 m, or feet and inches), or choose ∞. The **m / ft** switch changes the unit.

In the viewfinder

The same distance appears in the viewfinder under **Focus** (tap it in the value strip), and the iPhone camera focuses at about that distance. On iPhones with LiDAR, **Measure distance** — the round button with a crosshair at the end of the focus ring — measures the point in the center of the frame (up to about 5 m) and writes it in. iPhones with two rear cameras show **Estimate distance** instead, worked out from the depth data of the two cameras. On iPhones with one rear camera there is no button; set the distance by hand. In short: LiDAR on LiDAR models; an approximate estimate from depth on dual-camera models; manual entry on other models. Estimates are marked ≈ here, in the viewfinder and in the frame's details. In every case the *Distance measuring offset* in Project Setup is added for the distance between phone and sensor plane.


Depth of field

Depth of field uses the circle of confusion of the chosen format and is shown to the centimeter below 10 m (for example 2.31–2.48 m), or in feet and inches.

The circle of confusion is an assumption; it has no single correct value, and the standard you choose changes the result. CineBrain works out hyperfocal distance and depth of field with the circle of confusion on the sensor; it does not take print or screen enlargement into account.

Depth-of-field marks on the ring


Like the depth-of-field scale on a lens barrel, the focus ring shows two short copper lines on either side of the index: the near and far limits of sharpness for the current lens, aperture or T-stop, format and distance. The space between them is lightly filled, and the limits are written beside the lines in small mono type (to the centimeter below 10 m, or in feet and inches). When the far limit reaches infinity — you are focused at or beyond the hyperfocal distance — the band runs with an arrow to the ∞ end instead of a far line. If a limit is off the visible part of the ring, its value waits at the edge with an arrow. The marks follow the logarithmic scale and update as soon as you change the lens, aperture, format or distance; in the viewfinder they use the aperture chosen under Exposure.

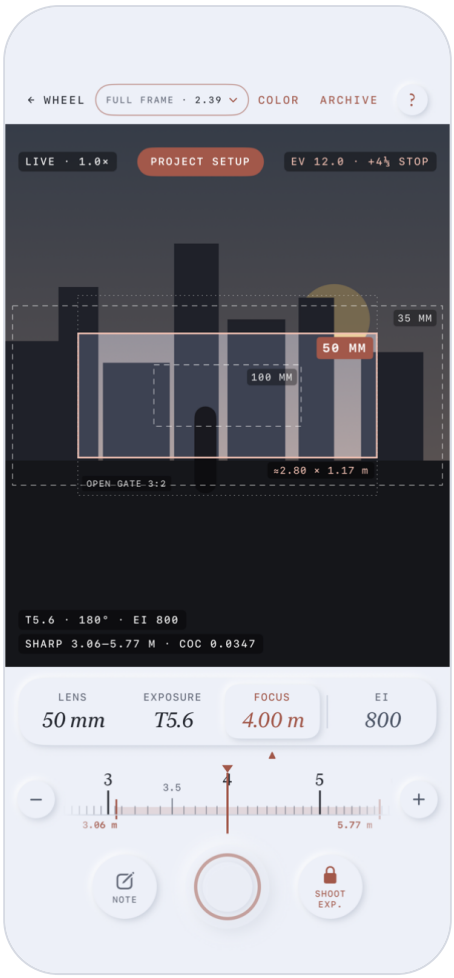

VIEWFINDER · FOCUS

FIELD NOTES

4 · Viewfinder

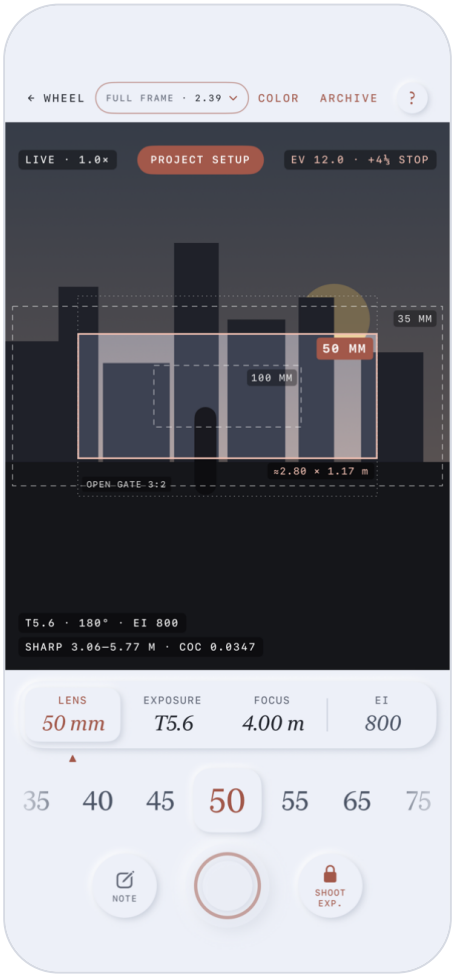

VIEWFINDER · FULL FRAME 2.39 · OPEN GATE 3:2

What you see

The iPhone camera zooms so that the active lens's frame (copper, in the chosen aspect ratio) and its protect lines fill the picture — almost edge to edge in landscape, full width in portrait. The iPhone switches between its ultra-wide, wide and telephoto cameras by itself. Outside the frame is darkened; neighboring lenses are drawn as dashed frames with their focal lengths. A dotted line shows the whole format — the **open gate**, from the format's recorded width × height (e.g. *Open gate 3:2* for Full Frame 35.9 × 24 mm); the chosen ratio sits centered inside it and never goes beyond it. Under the active frame's label, *≈2.80 × 1.17 m* is the frame's size at the focus distance, in the chosen ratio; if it would cover another label it moves below or inside the frame. If your lens is wider than the phone can show, ◂ **Wider** ▸ appears.

Top of the screen

- **← Wheel**, the format label, **Color**, **Archive** and **?**. The format label shows the sensor format, the ratio, the anamorphic squeeze and how many protect ratios are on (e.g. *Super 35 · 2.39 · 2× · +2*). It sits in a capsule with a copper outline and a small arrow; tap it to change them.
- **Live · 1.4×** — the phone's zoom (1× = main camera).
- The copper **scene · shot** button (**Project Setup** when there is no project) — opens Project Setup.
- **EV · stops** — the scene light and how far the settings are from correct exposure.

Bottom of the screen

- **Value strip** — **Lens · Exposure · Focus** and, after a thin divider, **EI** (or ISO; display only). Tap a value to change it: the selected one is raised and copper with a small copper arrow under it, and the picker below switches to it.
- **Lens** — the picker lists the focal lengths (of the lens pack, if one is chosen); the selected one sits in a raised copper box and the others fade toward the edges. If yours isn't in the list, **Custom…** at the end takes any value from 1 to 2000 mm, decimals too (52.3 or 52,3); it is remembered with the mode's settings.
- **Exposure** — choose an aperture or T-stop to preview: the picture brightens or darkens to show the over- or underexposure. The frame you save records this value.
- **Focus** — the focus ring with – / +, and at its end a round crosshair button: **Measure distance** (LiDAR) or **Estimate distance** (dual-camera iPhones; none on single-camera iPhones, see Focus).
- **Action row** — the shutter in the middle, **Note** on the left and the saved-exposure switch on the right (a closed lock for **Shoot exp.**, an open lock for **Normal exp.**), the same size and the same distance from the shutter.

Format, aspect ratio and anamorphic

The first time you open the viewfinder in a mode, it asks **Which format does your camera record in?** and lists that mode's formats with their sensor sizes (e.g. Super 35 · 24.89 × 18.66 mm). Tap yours. Photo and Cinema are asked separately, since each mode keeps its own format. Once you have picked a format here, on the wheel or in Project Setup, the question doesn't come back; if you swipe it away without choosing, it asks again next time.

Tap the format label (in landscape, the ratio on the rail) to open **Format & Ratio**:

- **Format** — the sensor format of the current mode (Photo or Cinema). In the lens list, pick the focal length engraved on your lens: everywhere in the app (viewfinder, wheel, archive, PDF) the lens is its real focal length, never a 35 mm equivalent; the angle of view is worked out from it and the format. Focusing closer narrows the frame a little: the viewfinder frame, the saved frame and the angle follow the focus distance (a thin-lens estimate — with a 50 mm about 3% narrower at 3 m, 10% at 1 m, 21% at 0.5 m). Real lenses "breathe" differently, so treat it as approximate.
- **Aspect ratio** — 1.33 (4:3), 1.66, 1.78 (16:9), 1.85, 2.00, 2.20, 2.39, 1:1, and 4:5 and 9:16 for vertical social video, or **Custom** (0.50–3.00 in steps of 0.01). The frame is the largest area of that ratio that fits the sensor: a ratio wider than the sensor is cut from the top and bottom, a narrower one from the sides. The horizontal angle of view and the frame lines follow from it.
- **Anamorphic squeeze** — Spherical, 1.3×, 1.5×, 1.8× or 2×. With an anamorphic lens the horizontal angle widens by the squeeze; the frame and angle of view are worked out on the desqueezed picture, and the chosen ratio is the ratio of the desqueezed picture.
- **Protect** — up to two extra ratios for shoot & protect (e.g. 16:9 for TV and 9:16 for social). Each is the largest area of that ratio on the sensor, drawn as a thin dashed line with a small label in its top-left corner.

The ratio, squeeze and protect lines you pick here last **only for this session**: Project Setup keeps its own value (shown at the top of the panel). **Back to Project Setup** drops the change; **Save to Project Setup** makes it the new setting. The format is the same setting as on the wheel and in Project Setup.

Spot metering

Tap anywhere in the picture to meter that point; a ring and its EV appear. **Expose for this point** makes it the scene light (source Spot) and sets the wheel's aperture to match. × returns to average metering.

Contrast map

Tap **Contrast** (top left of the picture) to measure up to five points of the scene, one after another. Each tap meters that point with the phone's auto exposure and waits until it settles (a small spinner shows on the point); the value is the median of the readings over half a second. If it hasn't settled after 3 seconds, the last reading is used and marked ≈. On iOS 26 and later, where the phone supports it, a small metering rectangle is used and its angle is shown as *Spot ≈ 4°*; on earlier systems the angle can't be read, so it says *Spot ≈ ?*.

- **Key** — the first point is the key and sits on Zone V. Tap a point to make it the key or, on the key, to choose its zone (0–X); hold a point to delete it; **Clear** removes them all.
- **Differences** — next to each point: its number and its difference from the key in stops, rounded to the nearest third (*2 · +1⅔*); the full value is used for the calculations. Zone = key zone + difference (1 stop = 1 zone), shown on the thin zone scale (0–X) on the right edge, where Zones II–VIII — the range that still holds texture, ±3½ stops around a Zone V key — are marked. Points outside it say **No texture**.
- **SBR** — the brightest minus the darkest point, against the target in Project Setup (default 7 stops): *SBR 6⅓ · Target 7*; above the target it turns copper.
- **Expose for key** — sets the scene light so the key lands on its zone: scene EV = key EV − (key zone − 5). Skin placed on Zone VI gets one stop more exposure.

Closing Contrast returns the camera to its previous metering. A frame saved with the contrast map on keeps the points, the key and its zone, the SBR, the target, the calibration and the spot angle; the frame details, the PDF and the copy in Photos show the numbered points, a zone summary and the SBR.

The phone's meter is accurate to about ⅓ stop. Differences are not affected by calibration; for absolute values, set Meter calibration against a reference light meter.

Sun marker

With location and compass, a copper disc shows where the sun is in the picture, or an arrow at the edge points to it (kept clear of the info lines at the top and bottom). **Backlight** appears when the sun is inside the frame. If the marker is off, center the real sun horizontally and tap **Align** next to it; fine-tune in Project Setup › Compass correction.


Saving a frame

Press the round copper shutter. The screen flashes and "Saved · Scene 12 · Shot 3" appears. The frame is cropped to the active lens's frame in the chosen ratio and saved in the archive with the lens, format, aspect ratio, anamorphic squeeze, protect ratios, exposure, filters, focus distance, depth of field, date, project, day, scene and shot, and — when available — location and compass heading. It is also added to Photos, with an info strip below it if you turned that on. With "Advance the shot number with each frame", the shot number goes up by one. The **Note** button left of the shutter (on the right-hand rail when the phone is sideways) is always there: it opens the note of the last saved frame, to write or dictate (see Voice notes).


The round button right of the shutter (on the rail in landscape) chooses the exposure of the saved frame: **Shoot exp.** (closed lock, default) keeps the simulated exposure you see in the viewfinder, so an underexposed setting is saved dark; **Normal exp.** (open lock) lets the phone expose correctly for a moment before saving — good for recording the framing and the location. The frame's details show which one was used (*Saved exposure*).

Protect ratios are drawn on the saved frame as thin dashed lines with a small label — in the frame details, the PDF and the copy in Photos. A protect area larger than the frame shows only the lines that fall inside it (e.g. the sides of 9:16 on a 2.39 frame). Turn this off in Project Setup › Export.

Turn the phone sideways for the landscape layout: the controls move to a rail on the right with the same layout — the values in a 2 × 2 grid (Lens · Exposure / Focus · EI), the picker, and Note · shutter · saved exposure at the bottom (icons only) — and Focus shows a vertical focus ring (∞ at the top) with the same depth-of-field marks and – / + buttons.

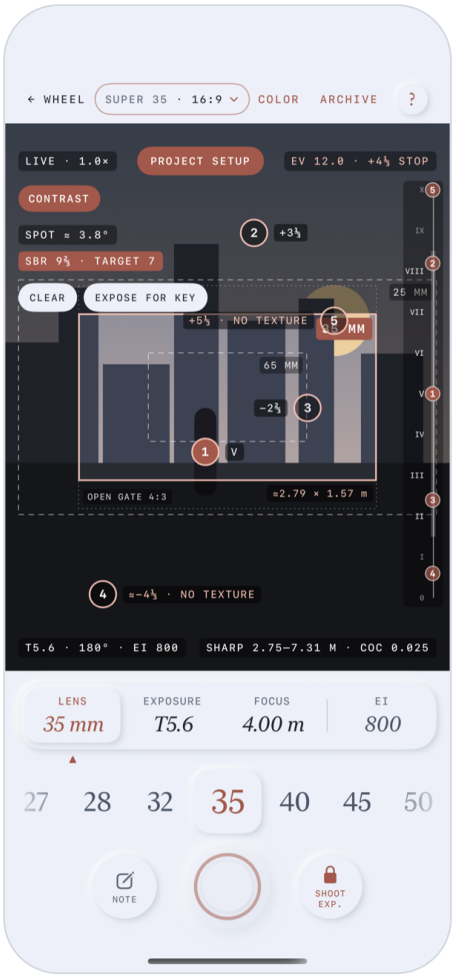


VIEWFINDER · CONTRAST MAP

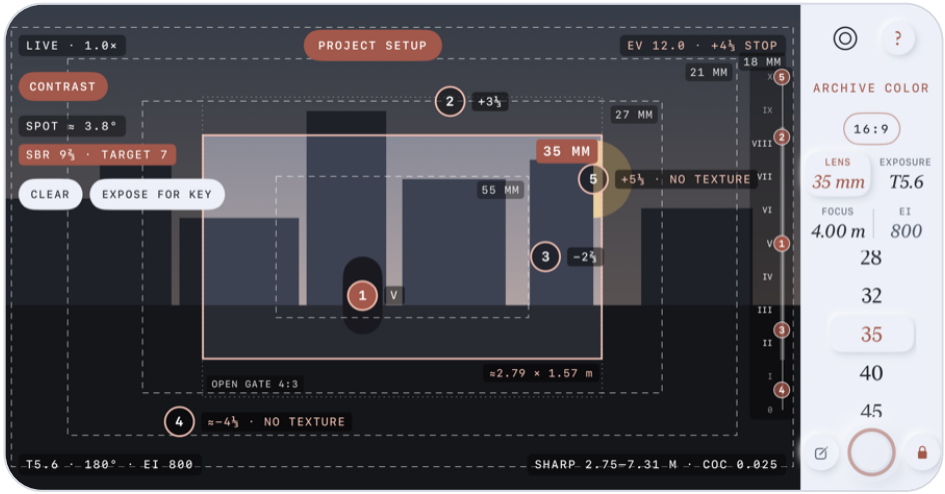

VIEWFINDER · CONTRAST MAP, LANDSCAPE

FIELD NOTES

5 · Color

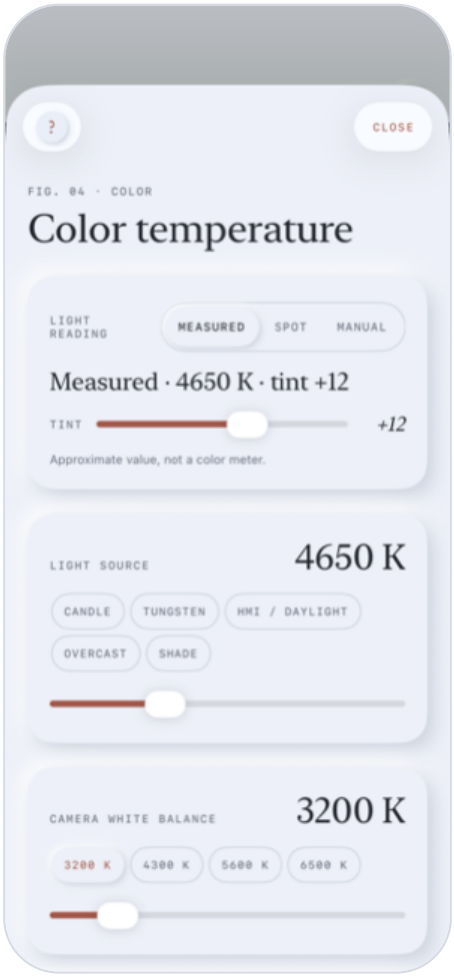

COLOR TEMPERATURE

Open **Color** from the color temperature card on the wheel or from the viewfinder.

Light reading

- **Measured** — the iPhone camera's automatic white balance, read live while the viewfinder runs.
- **Spot** — the viewfinder opens with "Tap a white or grey surface"; the color of that spot is measured and sent back here.
- **Manual** — Candle 1900 K, Tungsten 3200 K, HMI / Daylight 5600 K, Overcast 6500 K, Shade 7500 K, or the slider (1500–12000 K). Changing a value by hand switches the source to Manual.

The tint slider (−50 to +50) can be adjusted by hand. The reading is approximate — the phone is not a color meter.

Camera and mired shift

Set the camera’s white balance (3200, 4300, 5600, 6500 K or the slider). The mired shift is camera minus light: plus means the light is too blue (warm it with CTO), minus means it is too warm (cool it with CTB).


Suggestions

- **Gels on the light** — Rosco or LEE, one gel or a pair, with product numbers, the shift, what remains and the resulting color temperature.
- **Or a filter on the lens** — 85, 85B, 85C, 81A–C, 80A–C, 82A with their filter factors. **Mount on the lens** adds 85, 85B, 80A or 81A to the wheel’s filters.
- **Green · magenta** — from the tint: Plus or Minus Green, full, ½ or ¼ (Rosco 3304/3315/3316 and 3308/3313/3314; LEE 244–246 and 247–249). Tint is roughly in CC units.

Rosco values are as published. LEE publishes conversions; its mired shifts here are calculated from them. Camera filters use Wratten values.

FIELD NOTES

6 · Scouting: frames, project info, archive, PDF

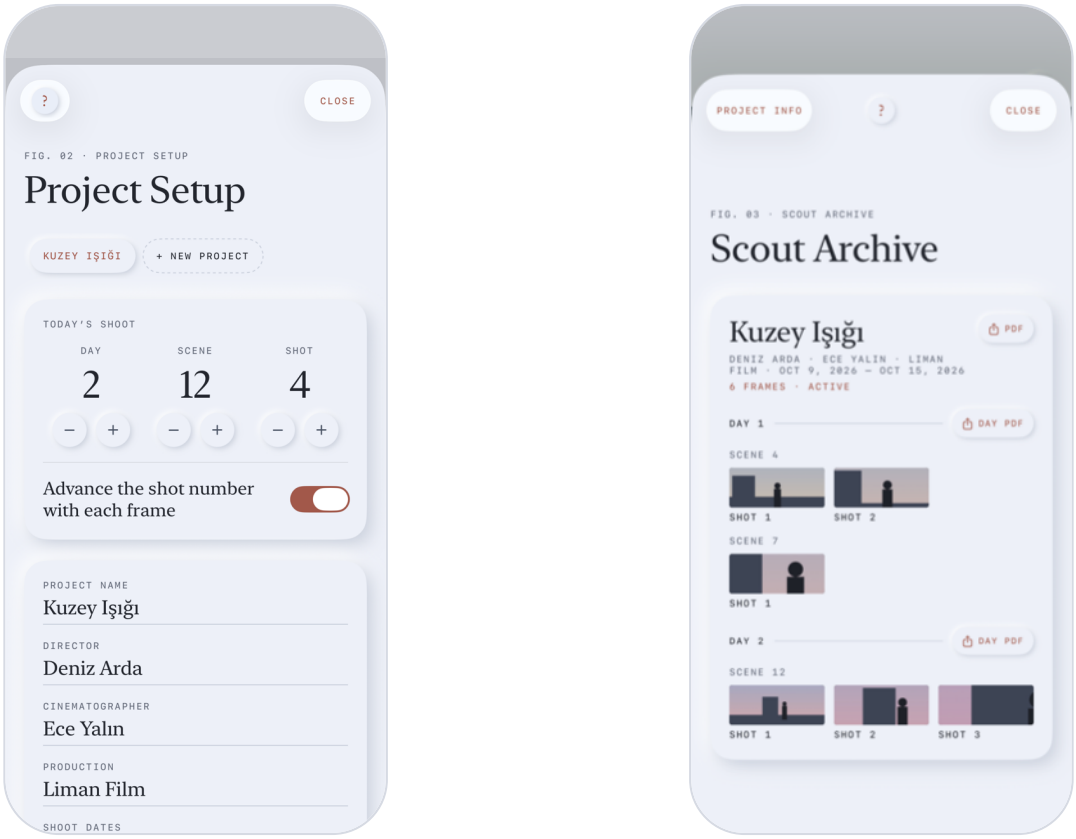

PROJECT SETUP · SCOUT ARCHIVE

Project Setup

Open it from **Project Setup** at the top of the Exposure Wheel, the copper scene · shot button in the viewfinder, or **Archive › Project Setup**. Everything set here stays as it is until you change it here — switching modes or trying something in the viewfinder doesn't reset it.


- **Projects** — tap a project to make it active; *+ New project* creates one. New frames go to the active project.
- **Today's shoot** — day, scene and shot counters with – / +; *Advance the shot number with each frame*.
- **Credits** — project name, director, cinematographer, production and shoot dates; they appear in the archive and on the PDF cover.
- **Delete project** — its frames stay in the archive.

Settings (in Project Setup)

- **Format** — the sensor format for Photo and for Cinema; each mode keeps its own.
- **Camera and recording mode** (Cinema only) — optional, under the Cinema formats. **Camera** starts at *None — generic format*, which keeps the formats above. Pick an ARRI camera (ALEXA 35 and 35 Xtreme, ALEXA Mini LF, ALEXA LF, ALEXA 65, ALEXA 265, ALEXA Mini, AMIRA, ALEXA SXT W) and then its **Recording mode**: the frame, the aspect ratio placement, the angle of view, the frame size at the focus distance, the viewfinder frames and the circle of confusion (from the recording area's diagonal) then use that mode's recording area in millimeters, e.g. ALEXA 35 · 3.8K 2.39:1 = 23.325 × 9.77 mm. The format label in the viewfinder reads *ALEXA 35 · 3.8K 2.39:1*. When the recording area is smaller than the camera's open gate, the viewfinder draws both: the open gate dotted and the recording area as a thin solid line labeled with the mode. Anamorphic modes (Ana 2x, Ana., Anamorphic) set the squeeze to 2× and it can't be changed; in the other modes your squeeze setting stays. A small ⓘ marks values that were worked out from ARRI documents or confirmed by a single source. Picking a generic format, on the wheel or here, sets the camera back to None. Saved with the project; older projects open with None.
- **Frame** — aspect ratio, anamorphic squeeze and protect lines for the viewfinder and saved frames. With an active project it is also saved with the project and comes back when you pick that project again.
- **Distance unit** (m or ft) and **Distance measuring offset** (±100 cm; plus if the camera's sensor is behind the phone). It applies to LiDAR readings and to depth estimates.
- **Lens pack** — your own sets of lenses: tap **New lens pack**, give it a name and tap the focal lengths engraved on your lenses in the grid (tap again to remove one; the count shows above the grid). For a value not in the grid, tap **+ Custom mm** and enter it, with a decimal point or comma (52.3 or 52,3), 1–2000 mm; it joins the grid and can be removed the same way. Save needs a name and at least one lens. Each mode (Cinema, Photo) has its own choice; the first option, **All**, shows every lens as before. With a pack chosen, the wheel and the viewfinder list only its lenses, and **Custom…** stays available for any other value. If the selected lens is not in the new pack, the nearest focal length is chosen; a custom value you typed is kept. The choice is remembered and saved with the project. Tap a pack to edit it (its lenses come up selected) or delete it.
- **Circle of confusion** — the blur size depth of field is worked out with. There is no single standard: **ASC** (default) uses Super 35 0.025 mm and Super 16 0.015 mm; **Cooke** Super 35 0.025 mm and Super 16 0.0125 mm; for the other cinema formats (Full Frame, large format, 65 mm) both use 0.025 mm × format diagonal / 31.11 mm,

the Super 35 diagonal; **Zeiss d/1500** is the format diagonal / 1500; **Custom** takes 0.005–0.1 mm. Photo formats have their own choice and never use the Super 35 scaling: **Zeiss d/1500** (default: format diagonal / 1500, about 0.029 mm on full frame; H. H. Nasse, "Depth of Field and Bokeh", Carl Zeiss), **Canon** (full frame 0.035 mm, APS-C 0.019 mm; Canon Europe Pro, "Depth of field"; offered only for those two formats) or **Custom**; ASC and Cooke are cinema standards and are not offered there. For comparison, the 1982 Guild Kelly calculator used 0.0359 mm for 35 mm. The value in use is shown with its standard ("CoC 0.025 mm · ASC", "CoC 0.0288 mm · Zeiss"). Saved with the project.

- **T–f difference** — 0, ⅒ or ⅓ stop (default 0). Cinema lenses are marked in T-stops, but depth of field depends on the f-number, which is a little smaller. Exposure (the wheel, EV, ND) always uses T. With a difference set, Cinema-mode depth of field and hyperfocal distance use f = T / 2^(difference/2) and are shown with ≈; at 0 they are worked out from T and the wheel notes that the real depth of field may be a little shallower.
- **Meter calibration** — ±3 stops in thirds. Meter the same scene with a light meter and the viewfinder and enter the difference.
- **Contrast target (SBR)** — the scene range the viewfinder's contrast map compares the brightest and darkest points with, in thirds of a stop (default 7), e.g. your camera's usable dynamic range.
- **Compass correction** — ±45°.
- **Export** — add an info strip (project, scene/shot, format, aspect ratio, anamorphic and protect ratios, lens, exposure, depth of field) under frames saved to Photos, ending with CINEBRAIN PRO; **Draw protect lines on saved frames** (on by default); and **Frames per page** for scout reports (1 or 2).
- **Introduction** — watch the tour again, or open this guide.

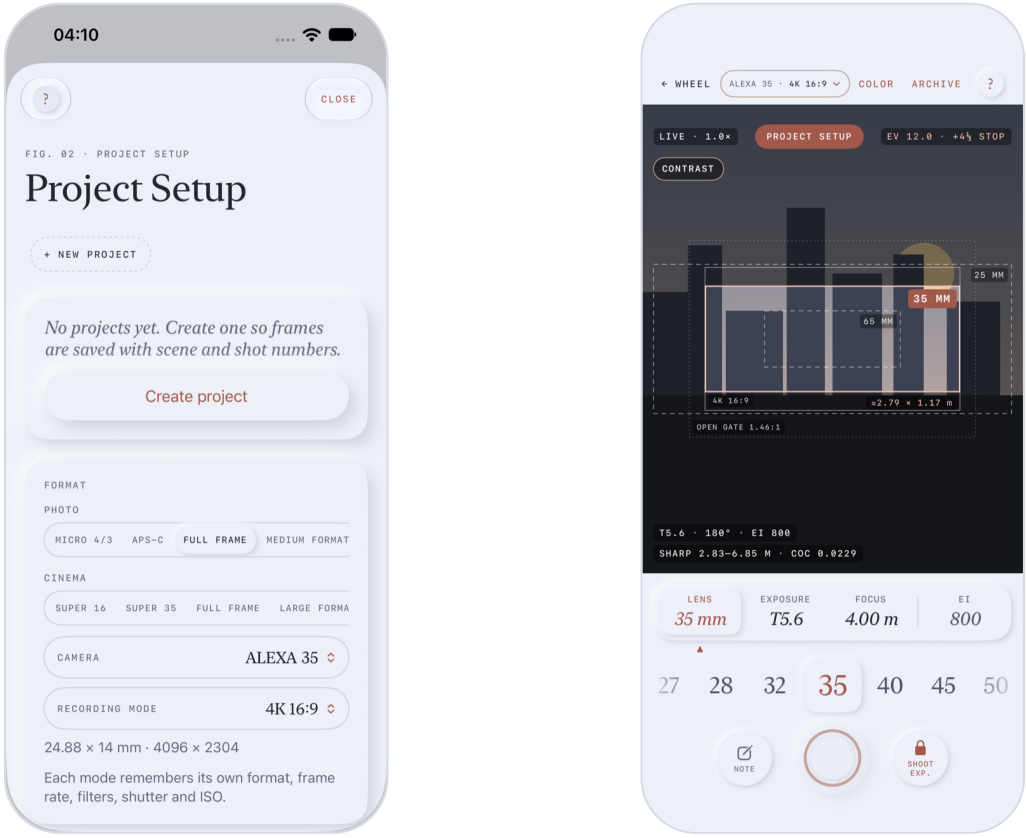

PROJECT SETUP › CAMERA AND RECORDING MODE · VIEWFINDER: ALEXA 35 4K 16:9 WITH A 2.39 FRAME

Scout Archive

Open it with **Archive** in the viewfinder. Frames are grouped by project (the active one first), then by day and scene, with the shot number under each thumbnail. Tap a frame for its details; touch and hold to delete it.

Frame details

The saved frame, each detail in its own box (format and aspect ratio separately), the Light Plan, the location visual and a note field that saves itself.

Location visual

Three pictures of the place can go into the PDF, to the left of the light times:

- **Sketch — Add sketch**: take a photo of a hand-drawn plan or pick one from Photos (the system picker hands over only the photo you choose; no photo library access is asked). **Replace sketch** and **Delete sketch** change it.
- **Map** — when a frame has a location and the iPhone is online, a satellite image of about 150 m around the camera (north up) is saved with the frame, so the PDF can be made offline later. On it: the camera (copper dot), the lens's field of view as a

cone, the sun's direction for each hour from sunrise to sunset with the hour, the sun's direction when the frame was saved, and a 50 m scale. If there was no connection, **Get the map** in the frame details fetches it. The Apple Maps logo stays on the image.

- **Sun diagram** — the sun's path that day seen from above, hour marks, the frame's field of view and the sun at the frame time.

Show in the PDF picks one; without a choice the order is sketch, map, sun diagram. A portrait sketch keeps its proportions. The light times list stays in every case.



PDF · SKETCH AND SATELLITE MAP BESIDE THE LIGHT TIMES

Voice notes

Next to **Note** there is a microphone. Touch and hold it, speak, and release: what you said is added to the end of the note. The same note card opens from the **Note** button beside the viewfinder's shutter, for the last saved frame. Notes are recognized in the app's language (English or Turkish), on your iPhone only: the sound is not recorded and nothing is sent anywhere. The first time, the app asks for Microphone and Speech Recognition access; hold the button again once you have allowed it. If your iPhone cannot recognize the app's language on the device, the microphone is not shown and you type the note.

PDF scout report


PDF makes a report for the whole project, **Day PDF** for one day. Then pick **Frames per page** and tap **Make PDF**; the share sheet sends it where you like. The cover carries the credits. Your choice is remembered for the next export and can also be set in

Project Setup › Export.

- **1 · full page** — a large picture with every detail, the best light times and a wide lined notes area (or the note).
- **2 · side by side** — two frames, each with all its details, light times and notes area.

FIELD NOTES

7 · Light Plan

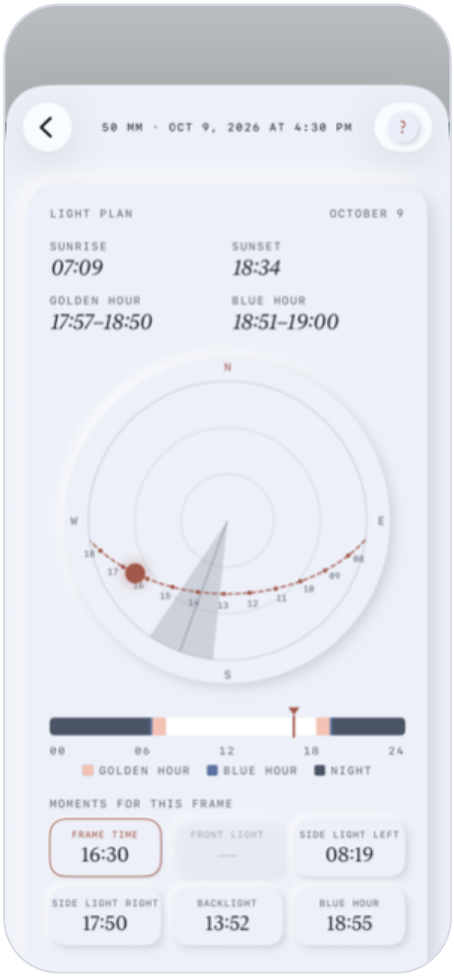

FRAME DETAILS · LIGHT PLAN

Every frame saved with a location has a light plan for that day and place, calculated on the phone (NOAA solar formulas).

- **Sunrise, sunset, golden hour** (sun between −4° and 6°) and **blue hour** (−6° to −4°); evening times are shown.
- **Sun dial** — north up, overhead in the center, horizon at the edge. The dashed copper line is the sun's path with hours; the grey wedge is the frame's direction, as wide as the lens's angle of view.
- **Day line** — night, blue hour, golden hour and day. Drag along it to pick a time.
- **Moments for this frame** — Frame time, Front light, Side light left and right, Backlight and Blue Hour: the best time of day for each, preferring a low sun. "—" means it does not happen that day. Tapping one moves the sun on the dial.

For the chosen time you see the sun’s direction and height, where it is relative to the frame, an estimated light level (a rough EV for a clear sky) and suggested settings: in Cinema the angle, frame rate and EI stay and the ND (then the T-stop) changes; in Photo the ISO and filters stay. For backlight it suggests opening about one stop for faces. **Set the wheel to this time** loads that light, lens, format and settings into the Exposure Wheel (the scene light becomes Manual).

Moments that depend on direction need the compass heading of the frame.

FIELD NOTES

8 · Questions and limits

Does it need the internet?

No. Everything, including the sun calculations and the PDF, runs on the iPhone. Only the satellite map of a frame needs a connection: it is fetched when the frame is saved (or later with **Get the map**) and then kept with the frame.

Where are my frames?

In the app on your iPhone, and in Photos if saving there worked. They are part of your device backups. Deleting the app deletes its archive.

How accurate is the meter?

The reading comes from the iPhone camera's own exposure and can differ slightly from a light meter. Compare once and enter the difference in Meter calibration.

How accurate is the color reading?

Approximate. Use a color meter for critical work. If green light (fluorescent) suggests Plus instead of Minus Green, please tell us.

LiDAR and estimated distance

LiDAR (Pro models) measures up to about 5 m. LiDAR on LiDAR models; an approximate estimate from depth on dual-camera models; manual entry on other models. Estimates are marked ≈:

- **Depth** — iPhones with two rear cameras compare the two pictures. Best on a detailed surface within a few meters; plain walls, glass and dark scenes are hard.

LiDAR and depth measuring pause the preview for a moment. If an estimate is off by the same amount every time, set the Distance measuring offset to correct it. The frame's details show how its distance was found (*Distance measured*); a distance you set by hand is not marked.

Compass and sun marker

The iPhone compass is usually within 5–10° and can be disturbed by metal nearby; use Align or Compass correction. The sun marker needs location.

The viewfinder frame

Choose the ratio by tapping the format label; 2.39:1 is the default. Anamorphic lenses see wider by their squeeze, so they reach “Wider” sooner. Lenses wider than the phone’s ultra-wide camera show “Wider”; very long lenses use digital zoom.

Frames without a light plan

Frames saved without location (or before the app had location access) have no light plan; frames without a compass heading have no direction-based moments.

Frames in Photos

The app asks only to add photos and never reads your library. Saved frames are added to your library, not to an album; you can put them in an album yourself in Photos.

FIELD NOTES

CONTACT · SUPPORT

Questions and support

support@cinebrain.app

CINEBRAIN PRO · © 2026 ARAS DEMIRAY