

# TORNADO



موديل  
**FP-1000SG**

دليٌل التسويق  
مذبحة الطعام


شكراً لاختيارك مذبحة طعام تورنادو

الطبخ المذاق المميز هو عالم تجاري مستدام حادثة شركه الارabi

**ELARABY**

19319 [www.elarabygroup.com](http://www.elarabygroup.com)

PN:B907030M

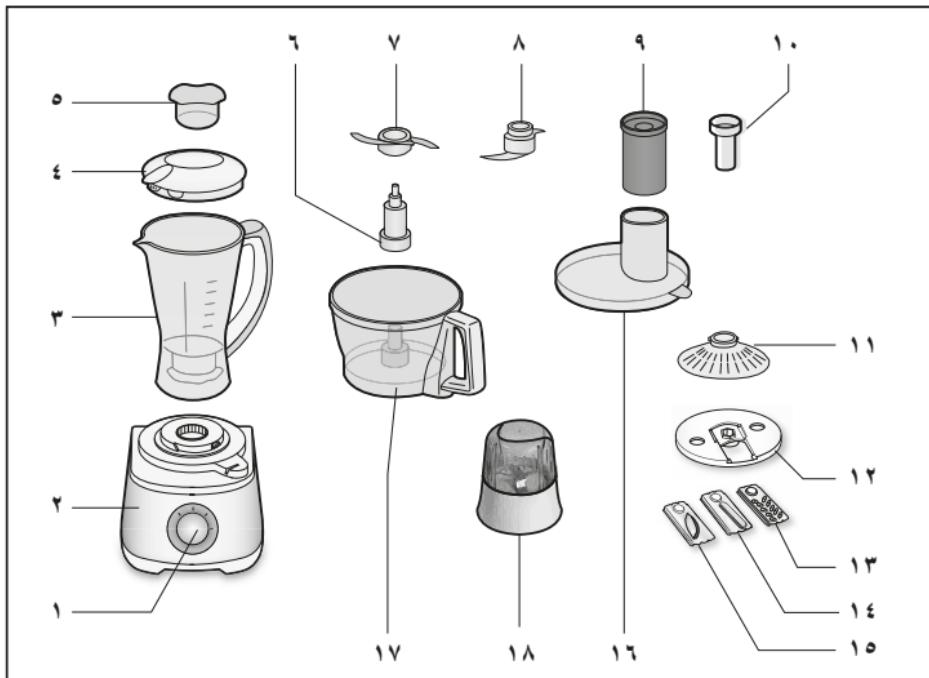

شكل (١)



شكل (٥)



شكل (٤)




شكل (٣)



شكل (٢)



شكل (٩)

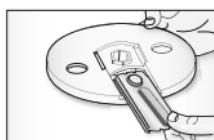

شكل (٨)



شكل (٧)



شكل (٦)



شكل (١٣)



شكل (١٢)



شكل (١١)



شكل (١٠)

## تنبيهات مهمة

اقرأ هذه التعليمات قبل الاستخدام يجب التقيد ببعض الاحتياطات أثناء استعمال الأجهزة الكهربائية ومنها ما يلي :

١- تأكيد من أن الجهد في نظامك الكهربائي الذي ستوصى عليه الجهاز يتتطابق مع النظام الكهربائي للجهاز فإن أي خطأ في التوصيل يبطل الضمان .

٢- تفادى ترك الجهاز من دون مراقبة وهو لا يزال متصل بالتيار الكهربائي بل يجب عليكم فصله عن التيار بعد كل استعمال .

٣- قوموا بوضع الجهاز فوق سطحية ثابتة ومنبسطة أثناء الاستعمال .

٤- لا تترك الجهاز عرضة عوامل الطبيعية (المطر والشمس الخ ) .

٥- تجنبوا تلامس السلك الكهربائي بسلكوطيات ساخنة وساخنة .

٦- إن هذا الجهاز غير معبد للاستخدام بواسطة الأشخاص ذوي القدرات الجسدية والعقلية والنفسية المحدودة ( بما في ذلك الأطفال ) .

٧- لا تغمر أبدا جسم المنتج والتقبس وسلك الكهرباء في الماء أو في أي سوائل أخرى . استخدم فقط قطعة من القماش المبلل لتنظيفهم .

٨- يجب إيقاف الجهاز وفصله عن التيار قبل تركيب أو فك الملحاقات وقبل التنظيف .

٩- تأكيد من تجفيف يديك جيدا قبل الاستخدام أو ضبط المفاتيح الموجودة بالجهاز ، وقبل لبس القابس والتوصيل الكهربائي .

١٠- لا تلمس أبدا الأجزاء أثناء التشغيل .

١١- تنبية: ركب الشفرة قبل إدخال المواد الغذائية . قبل فتح الغطاء انتظر إلى أن تتوقف الشفرة تماما وفصل الجهاز عن مصدر التيار الكهربائي .

١٢- لا تشغل الجهاز وهو فارغ .

١٣- لا تستخدمن الجهاز إذا تلفت الشفرة .

١٤- لا تدخل أبدا سوائل في داخل الإناء .

١٥- لا تستخدمن الجهاز فرم مواد غذائية ذات صلابة عالية ( مثل مكعبات الثلج أو اللحم بعظمة ) .

١٦- قم بملء إناء الخلاط قبل توصيله بمصدر التيار الكهربائي .

١٧- لا تنقل الجهاز مستخدما الإناء الذي تم تركيبه ، كما أن يد الإناء لا يجب أن تستخدم في نقل الجهاز .

١٨- الشفرات حادة جداً لهذا يجب التعامل معها بحذر . امسكها دائمًا من الجزء البلاستيكى .


١٩- لا تضع المواد الغذائية بآيديك داخل الجهاز ، استخدم دائمًا مكبس الطعام .

٢٠- لنزع الفيشة من عن المقبس قوموا بمسكها بحزن من القرب ولا يجب عليكم أبدا سحبها من السلك .

٢١- في حالة وجود ضرر أو عطب بالسلوك الكهربائي ، يجب أن يتم إستبداله من قبل الشركة المصنعة او من قبل مراكز الخدمة المعتمدة التابعة لها . أو على أية حال من قبل فني مؤهل وذلك تفادياً حدوث وقوع أي خطر .

٢٢- تم تصنيع الجهاز لإستعمال منزلي فقط ولذا يجب عدم إستعماله في إطار صناعي أو تجاري . قوموا بالاحتفاظ بهذه التعليمات .

## وصف الأجزاء (شكل ١)

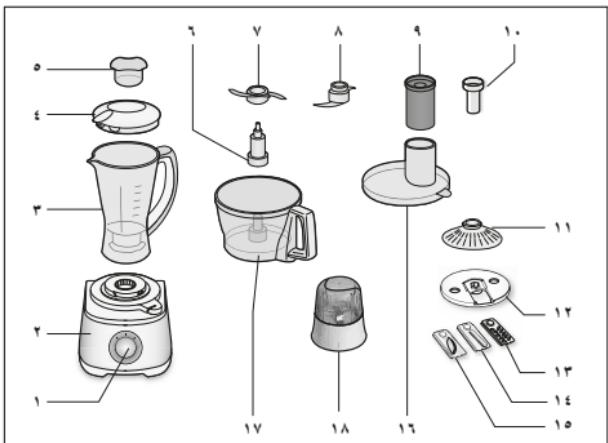

١- مفتاح التشغيل .

٢- جسم المحرك .

٣- الدورق .

٤- غطاء السورق .

٥- سدادة غطاء الدورق .

٦- عمود تركيب الشفرة .

٧- شفرة الفرم .

٨- شفرة العجن .

٩- مكبس الطعام .

١٠- وحدة ضغط الطعام الصغيرة .

١١- قرق الخفق .

١٢- حامل الشفرة .

١٣- شفرة التقطيع لشرائح رقيقة .

١٤- شفرة الشرائح .

١٥- شفرة التقطيع لشرائح طولية .

١٦- الغطاء .

١٧- الإناء .

١٨- المطحنة .

الجهاز مزود بادة تتحقق التسخين في حالة أن يكون الخطاء (١٦) غير مغلق بشكل صحيح وإناء الجهاز (١٧) والدورق (٣) كبديل له، لم يتم إدخالهم على النحو الصحيح.

إرشادات الاستخدام

تنبيه: قبل تنظيف الجهاز وقبل تركيب أو فك الملحقات تأكد أن الجهاز مفصل عن مصدر التيار الكهربائي وأن مفتاح التشغيل ((علم الموضع)) .

- ضع الإناء<sup>(١٧)</sup> على جسم المحرك (٢) وثبته بإدارته في عكس اتجاه عقارب الساعة بحيث يتم تشحيم الطرف الصغير الموجود في الجزء السفلي من المقاييس، الفتتحة المحددة على جسم المحرك بشكا، مينا: (الشكا) ٢.

- قم بتركيب عمود تركيب السفينة (٦) على المحور المركزي لللاناء (١٧) (شكل ٣).

الخنق . العحن . الفرم

إذا كنت ترغب في استخدام الجهاز كمفرمة ركب الشفرة المعديّة (٧) على عمود تركيب الشفرة (٦) أو للجعن ركب الشفرة البلاستيكية (٨) مع جعل الفتحات الداخلية بقاعدة الشفرة تتوافق مع العلامات الموجودة على الدعامة مع الضغط عليها لأسفل (الشكل ٤).

تنبيه: الشفرات حادة جداً . تعامل معها بحذر .

ـ إن كنت ترغب على العكس في خفق بياض البيض أو القشدة ، قم بتركيب الأداة الملحقة (١١) على عمود تركيب الشفرة (٦) كما هو موضح في (الشكل ٥) .

- تنبية: قبل البدء في التشغيل، تأكد من أن إماء الجهاز (١٧) والقرص (١١) قد تم تنظيفهم تماماً من أي أثار زيد أو صفار يبيض قطعة الأطعمة إلى قطعة صغيرة (٠.٥ - ١.٥ سم) وإدخاله إلى إماء الجهاز (١٧) وأن كنت تردد القيام بعملية حمّى، أدخل المكبات.

<sup>١٧</sup> تنبية: لاتقم بـأدخال أطعمة تتعدي أقصى مستوى محمد على الآباء (١٧).

الخطاء بشكل متزايد، وهو يتشكل ببرادته في عكس اتجاه عقارب الساعة (الشكل ٦).

- شغل الجهاز مع اختيار سرعة دوران الشفرة من خلال مفتاح التشغيل (١).
- الجهاز متوقف عن العمل فوراً (٢).

**الجهاز موجود بستة سرعات، من سرعة (١) وانتهى سرعة (٦).**

**الأمثل بالضغط لوقت قصير للغاية (٣٢ ثانية).**

**للبشة:** لاستخدام البهارات لا تمر من ٣ تالية موصدة . انتظر دقيعين على الأهل قبل البدء في الاستخدام مرة أخرى .

**للحصول على عملية فرم ناعمة ومتجانسة قم بجازالة الطعام ، إذا لزم الأمر من علي جدران الإناء وضعه في المنتصف**

**تنبيه:** لا تقم بإزالة الأطعمة من على جدران الإناء أثناء تشغيل الجهاز .  
باستخدام المعققة .

قم ولا يطفأ الجهاز وانزع قابس التغذية الكهربائية .  
لتتنبيه: لتجنب الحرائق والأضرار بالجهاز، أبق يديك والأوعية بعيداً دائمًا عن الشفرات والأقراص أثناء الحركة .

**تنبيه:** لا تستخدم أصبعك لإزالة الأطعمة من على جدران الإناء والجهاز في طور التشغيل .  
استخدم دائمًا الملعقة المرفقة .

- لا تضع سوائل للمساعدة في مزج الخليط المراد فرمته . إذا كانت هناك ضرورة لإضافة أي مواد غذائية أخرى أثناء الاستخدام، استخدم الثقب الموجود بالغطاء (١٦) ادفع الأطعمة التي تم إدخالها بالاستعانة بوحدة ضغط الطعام (٤) فقط

أو مع الوحدة الصغيرة (١٠) (الشكل ٧).  
تنبيه: لا تدخل أبداً الطعام في الإناء بيديك. استخدم دائمًا مكبس الطعام.

6

Journal of Oral Rehabilitation 2006; 33: 1079–1086 © 2006 Blackwell Publishing Ltd

- ادخل الشفرة المراد استخدامها، شفرة التقطيع إلى شرائح (١٤) ، شفرة التقطيع لشرائح رقمية (١٣) أو شفرة التقطيع لشارائح طبولة (١٥) على القرص الحامل للشفرة (٢) بطريقة تجعل الفتحة الموجودة على الشفرة في منتصف القرص (الشكل ٨).

- ركب القرص الحامل للشفرة (١٢) كله على عمود تركيب الشفرة (٦) ، ممسكا به من الثقوب الخاصة علي أن تكون الشفرة في اتجاه القرص (الشكل ٩).

- ادخل المخطاء (١٦) أعلى الآباء (١٧) وقم باتمام ما تم شرحه في قبة (القرص) المعجن (المخفة) .

الخلاط استخدامات

**تنبيه:** قبل تنظيف الجهاز أو قبل تركيب أو نزع الملحاقات ، تأكد من أنه قد تم فصل الجهاز عن شبكة التغذية الكهربائية وأن مقبض التثبيت ( ) على الموضع ( )

- ٣- أدخل الدورق (٣) على جسم المحرك (٢) وقم بادارته في نفس اتجاه عقارب الساعة حتى يتم تعشيقه بحيث يتم تعشيقه  
الفتحات الموجودة على الدورق في الثقوب الخاصة الموجودة على جسم المحرك بشكل ممتاز (الشكل ١٠) .  
تنبيه: الشفرات حادة جداً لذا يجب توخي الحذر عند استخدامها.

- قم بتركيب الغطاء (٤) على الدورق (٣)، بصف الفتحات الموجودة على الخلأط مع الثقوب الموجودة على الغطاء وثبته بإدارته  
٢- اتجاه عقارب الساعة (الشكل ١١).

- أدخل الأطعمة المجهزة في السابق من خلال الثقب الموجود على الغطاء (٤)، بدون تجاوز أقصى مستوى محدد على الدورق (٣)، ثم أدخل السدادة (٥) على الغطاء (٤) بالضغط عليها برفق إلى أسفل و إدارتها في عكس اتجاه عقارب الساعة لثبيتها (الشكل ١٢).

- شغل الجهاز مع اختيار سرعة دوران الشفرة عن طريق مقبض التشغيل (١) الجهاز مزود بسرعتين ، أقل سرعة (١) و أقصى سرعة (٢) .

- من الممكن أيضا اختيار التشغيل المتقطع بلف المقيد (١) عكس اتجاه عقارب الساعة لتنشيطها (الشكل ١٢).
  - شغل الجهاز مع اختيار سرعة دوران الشفرة عن طريق مقيد التشغيل (١) الجهاز متزود بسرعتين ،

- من الممكن أيضا اختيار التشغيل المتقطع بلف المقبض (١) عكس اتجاه عقارب الساعة على الوضع (٢) يتحقق الاستخدام الأمثل بالضغط لوقت قصير للغاية (٣/٢ ثانية ) .

**النقطة الرابعة:** لا تستخدم الجهاز لأكثر من ٣٠ ثانية متواصلة . انتظر دقيقتين على الأقل قبل البدء في الإستخدام مرة أخرى .

- الطعام الموجود على جدران الدورق (٣) ووضعه في المنتصف باستخدام المعلقة .

**تنبيه:** يجب عدم إزالة المواد الغذائية من على جدران الإناء أثناء تشغيل الجهاز .

-**تتبّه:** لا تضع في الخليط أكثر من ٣٠٠ جرام من المفاواكه أو الخضروات الصلبة في كل مرة.

**تنبيه:** لتجنب خروج السواقي من الخليط أثناء التشغيل يجب عدم وضع أكثر من ١٠٠٠ ملي لتر من الشوربة أو الخضروات المهرولة أو أي سواقي آخر.

٤- تتبّيه : ركب دائم المغطاء (٤) قبل البدء في الخلط .  
٥- تتبّيه : قبل البدء في خلط السوائل الفاترة افتح سدادة غطاء الخلاص (٥) .

لا تدخل أبداً سوائل ساخنة في الخليط.

## تعليمات استخدام المطحنة

- تنبية : تأكيد من فصل الجهاز عن شبكة التغذية الكهربائية قبل تركيب المطحنة وأن مقبض التشغيل (١) على الوضع (٠).
- أدخل المطحنة (١٨) على جسم المحرك وقم بإدارته في عكس اتجاه عقارب الساعة حتى يتم تعشيقه بحيث يتم تعشيق الفتحات الموجودة على المطحنة في الثقوب الخاصة الموجودة على الجسم المحرك بشكل ممتاز (الشكل ١٣).
- يستخدم المطحنة في تقطيع (فرم) الخضراوات المطازجة والحبوب والتوايل .
- بالإضافة إلى هذا يمكن استخدامها لخلط كميات صغيرة لتحضير طعام الأطفال أو طحن حبات البن .

## التنظيف

تنبيه:

- إفصل الجهاز عن مصدر التيار الكهربائي .
- لا تغمراًبدا جسم الجهاز أو سلك الكهرباء والقباس في الماء أو أي سوائل أخرى .
- جميع الشفرات حادة جدا ، تعامل معها بحذر شديد .
- فك جميع الملحقات المستخدمة يعكس اتجاه اللف المستخدم في التركيب والذي تم توضيحه سابقا .
- تنبية : بعد التنظيف جفف كل جزء جيدا قبل تركيبه .
- يمكن غسل جميع الملحقات في غسالة الأطباق بالرف العلوي على درجة حرارة لا تتعدي ٥٠ درجة متوية (١٢٢ درجة فهرنهايت ) .
- لتنظيف وحدة المحرك (٢) استخدم قطعة قماش مبللة قليلا .
- تنظيف إناء الدورق (٣) : قم بملء الدورق بالماء الفاتر والصابون .
- أغلق الغطاء (٤) والسدادة (٥) .
- شغل الدورق على السرعة القصوى لمدة ٣٠ ثانية أشطف الدورق .
- وكرر العملية إذا لزم الأمر .

## وصفات طعام

الوصفة الرئيسية لعمل العجين :

- ١٠٠ جم دقيق
- ٦٠ جم ماء
- أقصى كمية دقيق ١٦٠ جم
- الزمان : ٦٠ ثانية

تنبيه : من فضلك قومي بمسح جوانب وعاء العجن بالزيت عند استخدام محضرة الطعام .

## Instructions for mill use

**WARNING:** Make sure that the appliance is not connected to the mains power and the operating switch (1) is set to (0) before connecting the mill.

- Fit the mill (18) onto the main body (2) and turn it into clockwise so that it clicks into place when the tabs on the mill fit into the relevant slots on the main body (Fig.13)
- The mill attachment can be used to chop fresh herbs or dried spices .  
In addition it can be used for blending small quantities of other ingredients such as preparing baby food or grinding coffee beans.

## Cleaning

**WARNING:** Always unplug the appliance from the mains power supply .

**WARNING:** Never place the main body , plug or power cord in water or other liquids

**WARNING:** The blades are extremely sharp .

Always handle them with care.

- Remove all of the attachments used ,working in the opposite order to the way they were fitted
- All attachments can be washed in the top rack of the dishwasher, at a Maximum temperature of 50°C/122°F
- Wipe the main body (2) clean with a slightly damp cloth .
- To clean the blender (3): fill the blender with lukewarm water and detergent and fit the lid (4)and filler cap (5);operate the blender at maximum speed for 30 seconds.  
Rinse and repeat,if necessary.

**WARNING:** After cleaning ,dry all parts thoroughly and refit them.

## Recipes

### Basic recipe for yeast dough

1000 g flour

600 g water

The maximum quantity of flour is 1600 g working period:60 s

### Note:

Please paint some oils on the container wall when use the function of food processor.

## Slicing

**WARNING:**The blades are sharp ; handle with care .

- Fit the required blade , the slicing blade (14) , shredding blade (13) or chip blade (15) into the blade disc (12) so that the hole in the blade is in the centre of the disc (Fig.8).
- Fit the blade disc (12) onto the blade support (6) , gripping it by the slots,with the blade facing upwards (Fig .9).
- Fit the lid (16) over the bowl (17) and proceed as described in the section “chopping ,mixing or whisking ”.

## Instructions for blender use

**WARINING:**Before cleaning the appliance and installing or removing attachments , make sure that it is not connected to the mains power and that the operating switch (1) is set to “0” .

- Fit the blender (3) onto the main body (2) and turn it clockwise so that it clicks into place when the tabs on the blender fit into the relevant slots on the main body (Fig.10) .

**WARINING:**The blades are very sharp ; handle with care .

- Fit the lid (4) onto the blender (3), bringing the tabs on the blender into line with the slots in the lid and lock it into place by turning it clockwise (Fig.11) .
- Insert the previously prepared foods through the hole in the lid (4),without exceeding the maximum level marked on the blender (3),then insert the filler cap (5) into the lid (4) .pressing it down gently and turning it anticlockwise to lock it in place (Fig.12).
- Switch on the appliance , selecting the blade rotation speed with the operating switch (1). The appliance has two speeds: minimum «1» and maximum «2» .

It is also possible to select pulse operation by turning the dial(1) anticlockwise to «P».For the best use of this function, only turn the dial for a very short time (2-3sec.) .

**WARINING:**Never operate the appliance for more than 30 seconds at a time . Wait at least 2 minutes before operating it again .

**WARINING:**For softer fruit and vegetables (e.g.,bananas), start at slow speed and then increase the speed as required .For firmer fruit or vegetables (e.g., carrots), use the maximum speed .

- For a smoother result, switch off the appliance , unplug it from the mains power , remove the lid (4) and use a spatula to move the foods aways from the sides of the blender (3) and towards the centre .

**WARINING:**To prevent accidents or damage to the appliance , always keep hands and cooking utensils well away from moving blades or cutting discs .

**WARINING:**Never remove foods from the sides of the blender while the appliance is operating .

- Repeat the above steps for processing other foods .

**WARINING:**Never place more than 300g of firm fruit or vegetables into the blender at any one time .

**WARINING:**To prevent liquid spills, never place more than 1000 ml of soups , Mashed Vegetables or Other Liquids .

**WARINING:**Always fit the lid (4) before starting the blender .

**WARINING:**Before blending warm liquids , always remove the blender filler cap (5) Never place hot liquids inside the blender .

**WARNING:**The appliance is fitted with a device to stop it from operating if the lid (16) is not correctly locked into place and the bowel (17) or alternatively, the blender (3), is not correctly inserted.

## Instructions for use

**WARNING:**Make sure that the appliance is unplugged and that the control switch (1) set to "0" before cleaning it or fitting or removing attachments .

- place the bowl (17) on the main body (2) and lock it into place by turning it anticlockwise so that the tab on the bottom part of the handle clicks into the slot in the main body (Fig.2).
- Fit the blade support (6) onto the central shaft in the bowl (17) (Fig.3).

### Chopping , mixing or whisking

-To use the appliance as achopper, fit the metal blade (7) onto the blade support (6) , while for mixing , fit the plastic blade (8) by making sure that the slots inside the base of the blade are in line with the notches in the support and pressing the blade downwards (fig.4).

**WARNING:** The blades are sharp ; handel them with care .

-To use the appliance to whisk egg whites or whip cream, fit the special attachment(11) onto the blade support (6) , as illustrated in Fig .5.

**WARNING:** Before starting the appliance , make sure that the bowl(17) and the disc (11) are perfectly clean and without any traces of butter or egg yolk .

- Cut the foods into small pieces(1.5 x 1.5 cm) and place them inside the bowl (17) or for mixing , insert the ingredients.

**WARNING:** Never add foods over the maximum level marked on the bowl(17) .

- Fit the lid (16) over the bowl (17) so that the tabs inside the bowl fit into the relevant notches into the lid ; lock the lid by turning it anticlockwise until it clicks into place (Fig. 6).

**WARNING:** Make sure that the lid is firmly locked into place before starting the appliance -Plug the appliance into the mains power.

-Start the appliance , selecting the rotation speed of the blade using the operating switch(1) . The appliance has two operating speed : minimum "1" and maximum "2"

**WARNING:** When using the appliance for mixing or whisking , the recommended operating speed is "2" It is also possible to select the pulse function by turning the dial(1) anticlockwise to the setting " P" For the best use of this function , only turn the dial for a very short time (2-3 sec.).

**WARNING:**Never operate the appliance for more than 30 seconds at a time .

Wait at least 2 minutes before operating it again.

-For smoother , finer chopped foods, remove the food , if necessary , from the sides of the bowl with a spatula, pushing it towards the centre .

**WARNING:**Never remove foods from the sides of the bowl while the appliance is operating . Switch off the appliance first and unplug it from the mains power .

**WARNING:**To prevent accidents or damage to the appliance , always keep hands and cooking utensils well away from moving blades or discs .

**WARNING:**Never use fingers to remove foods from the sides of the bowl while the appliance is operating . Always use the spatula provided .

### Never add liquids to mix the chopped foods together .

- If it is necessary to add foods during appliance operation, use the opening in the lid (16). Push the food down with the pusher (9) on its own or together with the small pusher (10) (Fig.7).

**WARNING:**Never insert foods by hand . Always use the pusher To stop the appliance , turn the switch (1) to "0".


## important safeguards

READ THESE INSTRUCTIONS BEFORE USE :The necessary precautions must be taken when using electrical appliances, and these include the following :


- 1- Make sure that the voltage on the Appliance rating plate corresponds to that of the mains electricity.
- 2- Never leave the appliance unattended when connected to the power supply ; unplug it after every use .
- 3- Always place the appliance on a flat , level surface during use .
- 4- Never leave the appliance exposed to the elements (rain, sun , etc ....).
- 5- Make sure that the power cord does not come into contact with hot surfaces.
- 6- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge ,unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety .
- 7- Never place the appliance body , plug or power cord in water or other liquids; always wipe clean with a damp cloth.
- 8- Always unplug the power cord from the electricity mains before fitting or removing single attachments or before cleaning the appliance.
- 9- Always make sure that your hands are thoroughly dry before using or adjusting the switches on the appliance , or before touching the power plug or power connections.
- 10- Never touch moving parts .
- 11- WARNING : Always fit the blade before inserting the food . Before removing the lid , unplug the appliance and make sure that the blade has stopped moving .
- 12- Never operate the appliance when empty.
- 13- Never use the appliance if the blade is damaged .
- 14- Never place liquids inside the bowl .
- 15- Never use the appliance to chop excessively hard foods (e.g., ice cubes or meat on the bone ).
- 16- Prepare the blender goblet with the foods to be blended and fit it to the power base before plugging in the appliance.
- 17- Never pick up or carry the appliance by the bowl when fitted . in other words , the bowl handle must never be used to carry the appliance .
- 18- The blades are sharp. Handle them with care .  
Always hold them by the plastic parts.
- 19- Never introduce foods by hand . Always use the pusher .
- 20- To unplug the appliance , grip the plug and remove it directly from the power socket . Never pull the power cord to unplug the appliance .
- 21- To prevent any risks , if the power cord is damaged, it must be replaced by the manufacturer,its Authorized service centers or a similarly qualified person.
- 22- This appliance is designed for home use only and may not be used for commercial or industrial purposes.

### Description of parts (fig.1)

- 1- Operating switch
- 2- Main body
- 3- Blender
- 4- Blender lid
- 5- Blender lid filler cap
- 6- Blade support
- 7- Chopping blade
- 8- Mixing blade
- 9- Pusher

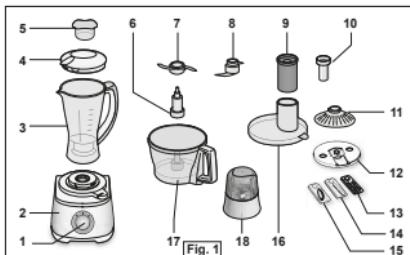


- 10- Small pusher
- 11- Whisking disc
- 12- Blade disc
- 13- Shredding blade
- 14- Slicing blade
- 15- Chip cutting blade
- 16- Lid
- 17- Bowl
- 18- Mill

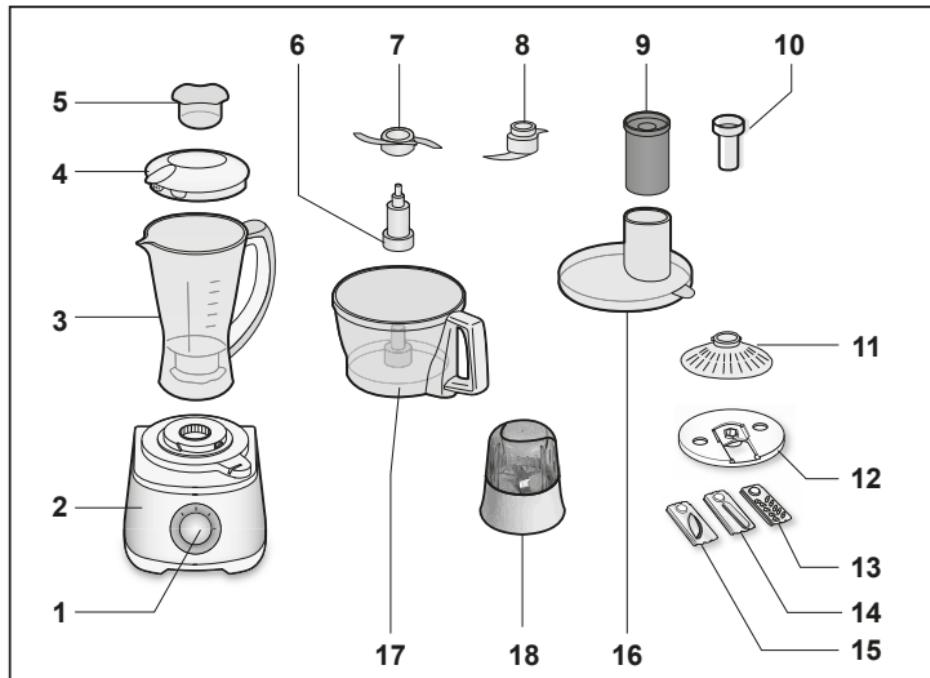

**Fig. 1**



**Fig. 2**

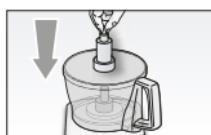

**Fig. 3**




**Fig. 4**




**Fig. 5**



**Fig. 6**

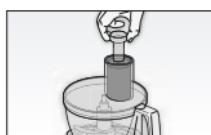

**Fig. 7**

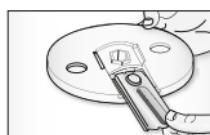

**Fig. 8**



**Fig. 9**




**Fig. 10**



**Fig. 11**



**Fig. 12**

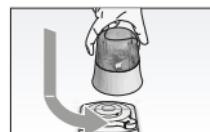

**Fig. 13**

Food Processor  
**OPERATION MANUAL**

**Model**  
**FP-1000SG**



Thanks For Choosing Tornado Food Processor

**ELARABY**

✉ 19319 [www.elarabigroup.com](http://www.elarabigroup.com)  
Tornado

PN:B907030M

This brand **TORNADO** is a private trademark of ELARABY company