

# TORNADO



العامية تورنيدو ملابس غسل آلة تورنيدو ملابس غسل آلة تورنيدو ملابس غسل آلة

شكراً لاختيارك غسالة فول أوتوماتيك تورنيدو

موديل

TWT-TLN10LWT  
TWT-TLN10LSL  
TWT-TLN12LWT  
TWT-TLN12LDS

تسلاه فول أوتوماتيك  
قليل التشغيل

**ELARABY**

24/7 19319  www.elarabygroup.com  
Tornado Elaraby

PN:W63E7005201T

# المحتويات

|            |                              |                         |
|------------|------------------------------|-------------------------|
| ١١.....    | وضع حماية الاختباري          | التحذيرات               |
| ١٢.....    | وضع الضبط المسقوف            | التبيهات                |
| ١٣.....    | وظيفة استكمال العملة         | وصف الأجزاء             |
| ١٤.....    | بعد استرداد الانقطاع للتيار  | كمية المنظف الموصى بها  |
| ١٥.....    | دليل الملابس المعدة لغسيل    | وصف لوحه التحكم         |
| ١٦.....    | الصيانة                      | كيفية التشغيل           |
| ١٧.....    | التركيب                      | التجفيف بالدوان السريع  |
| ١٨-١٩..... | قبل استدعاء فني الصيانة      | (تجفيف الحوض)           |
| ٢٠.....    | طريقة معالجة الأعطال الطارئة | دورات خاصة لغسل الملابس |
| ٢١.....    | المواصفات                    | وضع حماية الأطفال       |

## التحذيرات

التحذير: هذه البنود مهمه حيث يؤدي التشغيل الخاطئ الى حدوث اصابات.



لا خاول مطلقاً لبس الملابس الموجودة في سلة التجفيف إلا عندما توقف السلة عن التجفيف بشكل كامل قد تلتف الملابس حول يديك حتى لو كانت السلة تتحرك ببطء قم باتخاذ الاحتياطات بشكل خاص في حالة وجود الأطفال.



مطلقاً لا تسمح للأطفال بالنظر إلى السلة أو اللعب حول الغسالة.

لا تضع حامل أو صندوق بالقرب من الغسالة.

فمن المتم سقوط الأطفال في الحوض ومن الممكن أن حدث لهم إصابات أو غرق.

تجنب تماماً وضع يديك في الغسالة عند استخدام الماء الساخن.

لا خاول مطلقاً تفكك أو تعديل الغسالة.

فمن المتم اندلاع حريق أو حدوث صدمة كهربائية أو قصور في الأداء يؤدي إلى حدوث إصابات استشر مركز الصيانة التابع لك.

استخدم مصدر تيار كهربائي مناسب كما هو موجود بمواصفات الغسالة.

فمن المتم اندلاع حريق أو حدوث صدمة كهربائية.

فمن المتم أن يتسبب استخدام مصدر تيار غير مناسب في سخونة مصدر التيار الكهربائي بصورة شديدة. ويؤدي إلى اندلاع حريق.

افصل الكابل من منبع التيار الكهربائي قبل محاولة صيانة الغسالة.

لا تمكك الكابل ويديك بمللتين. فمن المتم أن يؤدي ذلك إلى حدوث صدمة كهربائية أو قصور في الأداء مما يسبب الإصابات.

لا تستخدم مطلقاً كابل كهربائي أو مصدر كهربائي به عيوب.

فمن المتم أن يتسبب حدوث صدمة كهربائية أو قصور في الأداء ويؤدي إلى حدوث إصابات بالغة أو اندلاع حريق.

لا تقم باتفاق كابل التيار.

لا خاول إلفال أو قطع أو تعديل كابل التيار أو تعرضه للإتوات أو السحب أو إلى الربط بشكل قوي وكذا لا تقم بفك الجزء العدلي. ولا تقم

بوضع أشياء ثقيلة على السلك أو وصل السلك إن القيام بذلك هذا الإجراء يسبب اندلاع الحريق أو حدوث صدمة كهربائية.

في حالة تلف سلك الطاقة . يجب استبداله من قبل الشركة المصنعة أو وكيل الخدمة أو شخص مؤهل من أجل جنب الخطأ.

لا تضعها في الحمام أو في منطقة تتعرض فيها لأنشعنة الشمس القوية.

يؤدي هذا إلى حدوث صدمة كهربائية أو تلف الدائرة الكهربائية أو صدأ.

لا تدع الماء يلامس أجزاء متعددة من الهيكل الخارجي.

يؤدي هذا إلى حدوث صدمة كهربائية أو تلف الدائرة الكهربائية.

لا تضع مواد منتهية على السلة.

لا تضع الكبروسين أو المازوتين أو البنزين أو التتر أو الكحول أو أي مواد مشابهة لذلك أو أية ملابس منقوعة في مثل هذه المواد داخل السلة.

فمن المتم تسبب في انفجار أو اندلاع حريق.

قم بمسح أي غبار أو قاذورات موجودة على التنوءات الدقيقة لطرف كابل التيار.

فمن المتم أن يتسبب الغبار المتكون أو القاذورات لاندلاع حريق.

لا تعرض الأجزاء البلاستيكية إلى اللهب.

فمن المتم أن يتسبب ذلك في اندلاع حريق.

تأكد من تصريف الماء بشكل صحيح.

استخدام الغسالة مع تصريف الماء بشكل خاطئ يمكن أن يؤدي لرجوع الماء في الغسالة وحدوث صدمة كهربائية أو اندلاع حريق.

# التنبيهات

تنبيه: هذه البنود مهمه حيث يؤدي التشغيل الخاطئ الى حدوث اضرار او تلف بالغسالة.

لا تسحب السلك عند فصله من مصدر الكهرباء.

امسك الفيشة وليس السلك لفصلها.

يمكن أن يؤدي هذا إلى حدوث صدمة كهربائية أو قصور في الأداء يؤدي لأضرار بالغة.

لاتستخدم ماء تزيد درجة حرارته عن 65 درجة متوية.

يمكن أن يتسبب الماء الساخن في حدوث قصور في الأداء وتعطل الغسالة، حيث يمكن أن تسبب في صدمة كهربائية.

لا خاول غسيل أو سطيف الملابس المضادة للماء.

يؤدي هذا إلى اهتزاز غير عادي أو حدوث إصابة أثناء دورة التجفيف.

\* تشتمل هذه معاطف الوقاية من المطر ملابس صيد الأسماك (المواكت والبنطلون مقاوم للماء). ملابس التزلق على الجليد والأكياس المعدة للنوم...الخ.

لا تسفلق أو تضع أثنياء ثقيلة على الغسالة.

يمكن أن يؤدي مثل هذا العمل إلى حدوث أضرار بسبب الانحناء أو الكسر.

اسحب الفيشة إلى الخارج إذا قررت عدم استخدام الغسالة لفترة طويلة من الزمن.

يمكن أن يؤدي الإهماق في هذا الإجراء إلى حدوث صدمة كهربائية أو تلف الدائرة الكهربائية بسبب تلف العازل.

لا تضع يديك أو أشياء أخرى تحت الغسالة أثناء التشغيل.


يمكن أن تسبب الأجزاء المتحركة في إصابة بالغة.

قبل الاستخدام، تأكد من فتح الصنبور وعدم ارتفاع خرطوم التزويد بالماء أو وجود تسرب للماء.

يمكن أن تسبب المسامير القلويتو المفكوكة أو توصلات الخرطوم المفكوكة لتسرب الماء أو الأضرار الأخرى.

يجب عدم إعاقة الفتحات بواسطة سجادة عند تركيب الغسالة على أرضية مكسوّة بالسجاد.

## وصف الأجزاء

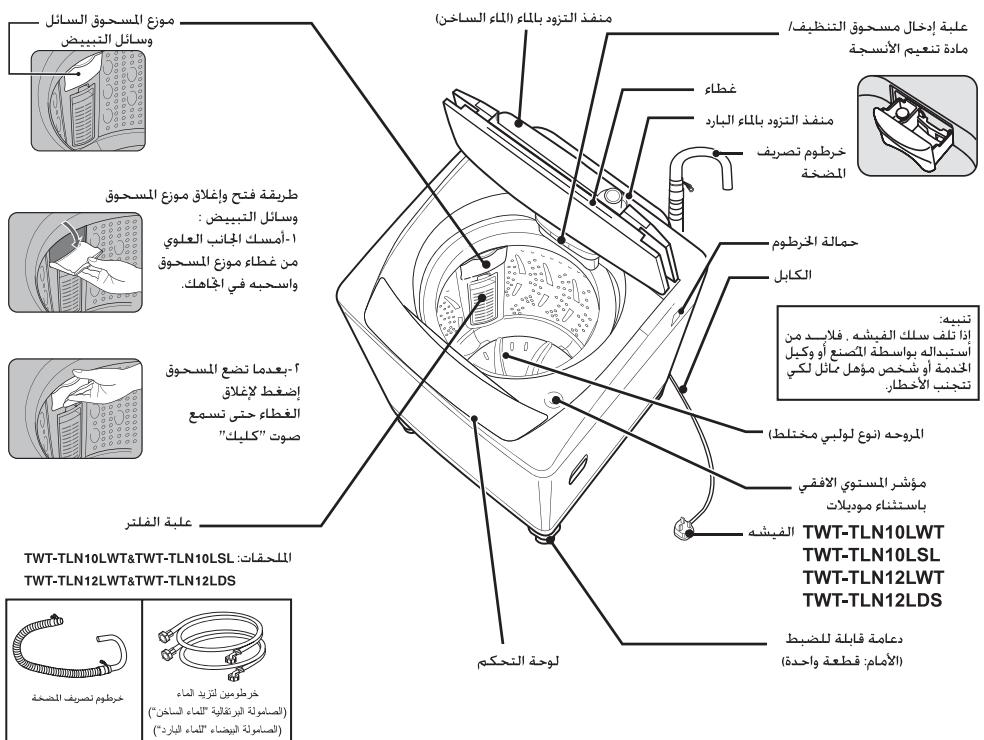

# كمية المنظف الموصي بها

## وحدة العرض الرقمية


|   |
|---|
| <br><b>بعد بدء التشغيل</b><br>المادة المنظفة<br>إذا كان القطاع مفتوحاً تقوم<br><b>الرسالة بعرض كمية المادة المنظفة الموجهة</b><br>عرض ٤ ملعقه من المادة المنظفة<br>يتم عرض الكمية المزدوجة باستخدام ملعة القباس المرفقة.<br>مع علبة المادة المنظفة<br>تشير المعلقة الكاملة من المادة<br>المنظفة إلى ٥٥ لتر من المادة المستهلك<br>- يعتمد على نوع مواد التنظيف. قد يختلف مقدار استهلاك<br>المادة باختلاف الملاعق اضافة كمية المادة المنظفة تبعاً لمادة التنظيف<br>المستخدمة.<br><b>بعد بدء التشغيل</b><br>إذا كان القطاع مغلقاً يتم<br>عرض الوقت المتبقى<br>حتى نهاية دورة الغسيل.<br><b>الوقت الاحتياطي حتى<br/>         انتهاء دورة التسخين</b><br>يتم عرض عدد الساعات<br>المضبوطة مسبقاً.<br><b>إذا حدث خطأ</b><br>يتم عرض رمز الخطأ |
|---|

## كمية المنظف الموصي بها

| النوع المركز    | النوع الخفيف    | سائل          | مسحوق  | الضبط اليدوي<br>للسنو الماء | القيمة |
|-----------------|-----------------|---------------|--------|-----------------------------|--------|
| تقريباً ٣٦ ملتر | تقريباً ٥٢ ملتر | تقريباً ٥٥ جم | ٧٧ لتر | ٧٩ لتر                      | ١,٤    |
| تقريباً ٢٩ ملتر | تقريباً ٨٧ ملتر | تقريباً ٤٨ جم |        |                             | ١,٣    |
| تقريباً ٣٠ ملتر | تقريباً ٤٧ ملتر | تقريباً ٤٤ جم | ١١ لتر | ١٧ لتر                      | ١,٢    |
| تقريباً ٣٧ ملتر | تقريباً ٤١ ملتر | تقريباً ٤١ جم |        |                             | ١,١    |
| تقريباً ٣٧ ملتر | تقريباً ٣٧ ملتر | تقريباً ٣٧ جم | ٣٧ لتر | ٣٧ لتر                      | ١,٠    |
| تقريباً ٣٣ ملتر | تقريباً ٣٠ ملتر | تقريباً ٣٣ جم |        |                             | ٠,٩    |
| تقريباً ٣٠ ملتر | تقريباً ٤٠ ملتر | تقريباً ٣٠ جم | ٤١ لتر | ٤٧ لتر                      | ٠,٨    |
| تقريباً ١١ ملتر | تقريباً ١٦ ملتر | تقريباً ٢١ جم |        |                             | ٠,٧    |
| تقريباً ١٤ ملتر | تقريباً ٤٠ ملتر | تقريباً ٢٢ جم |        |                             | ٠,٦    |
| تقريباً ٩ ملتر  | تقريباً ٢٧ ملتر | تقريباً ١٥ جم | ٢١ لتر | ٢١ لتر                      | ٠,٥    |
|                 |                 |               |        |                             | ٠,٤    |

## مؤشر "الرغوة المكتفة".

• يضيء وينبض مؤشر "الرغوة المكتفة" عندما  
يبدأ تشغيل الغسالة.

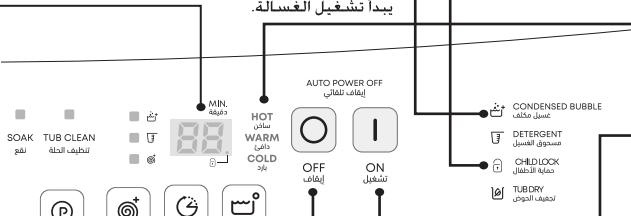

## العرض الخاص بوضع حماية الأطفال

• بعد اختبار هذا الوضع سوف يضيء المؤشر " ."

## مؤشر درجة حرارة الماء

• تعرف على درجة حرارة الماء من خلال إضاءة  
اللمبة.

## مفتاح "الطاقة الكهربية"

• اضغط هذا المفتاح لتشغيل / إيقاف تشغيل الطاقة الكهربية.  
• متوقف الطاقة فلتليه بعد ١٢ ثانية من انتهاء العملية أو بعد  
١٠ دقائق من عدم التشغيل.

## مفتاح "درجة الحرارة"

• اضغط هذا المفتاح عند الرغبة في  
اختبار درجة حرارة الماء.

## مفتاح " البرنامج "

• عند ضغط هذا المفتاح، سوف يضيء المؤشر.  
البرنامج الذي يلائم الملابس المعدة للغسيل.

## مفتاح "التجفيف بالدوران السريع/ خفيف المروحة"

• اضغط هذا المفتاح لتصرف الماء من السلة أو خفيف السلة.

## مفتاح "ضبط مسبق"


• يمكن ضبط الوقت لجميع عمليات الغسيل مسبقاً.

## دليل درجة حرارة الماء

|      |  |
|------|--|
| ساخن | المالبسقطنية ذات الألوان الناتحة، والملابس المصنوعة من نسيج الكتان<br>اللمسكي أو الخفيف.<br>الملابس المصنوعة من الأنسجة المقاومة للأنكماش، ومن الألياف الصناعية.<br>الأنسجة السيسوكية أو الزيتية.    |
| دافئ | الملابس السوداء أو ذات الألوان غير الناتحة، الملابس المصنوعة من الألياف<br>اللسانية ذات الألوان الأبيض والملون.<br>الملابس المصنوعة من الأنسجة المقاومة للأنكماش ذات الأنسجة العاديّة أو<br>الخفيفة. |
| بارد | الملابس العاديّة أو المصنوعة من أنسجة خفيفة.   |

# وصف لوحة التحكم


- لوحة التشغيل الخاصة بموديلات **TWT-TLN10LWT & TWT-TLN10LSL , TWT-TLN12LWT & TWT-TLN12LDS** .
- فيما يلي عرض للوحة التشغيل الخاصة بموديلات **TWT-TLN12LWT & TWT-TLN12LDS** .
- يختلف عن قيم مستوى الماء المعروضة، فإن العناصر الأخرى تتشابه في موديلات **TWT-TLN12LWT & TWT-TLN12LDS** .
- فيما يتعلق بتنفسير (مستوى الماء) فإن المحتوى الذي يوجد داخل الأقواس ( ) ينطبق كذلك على موديلات **TWT-TLN10LWT & TWT-TLN10LSL**

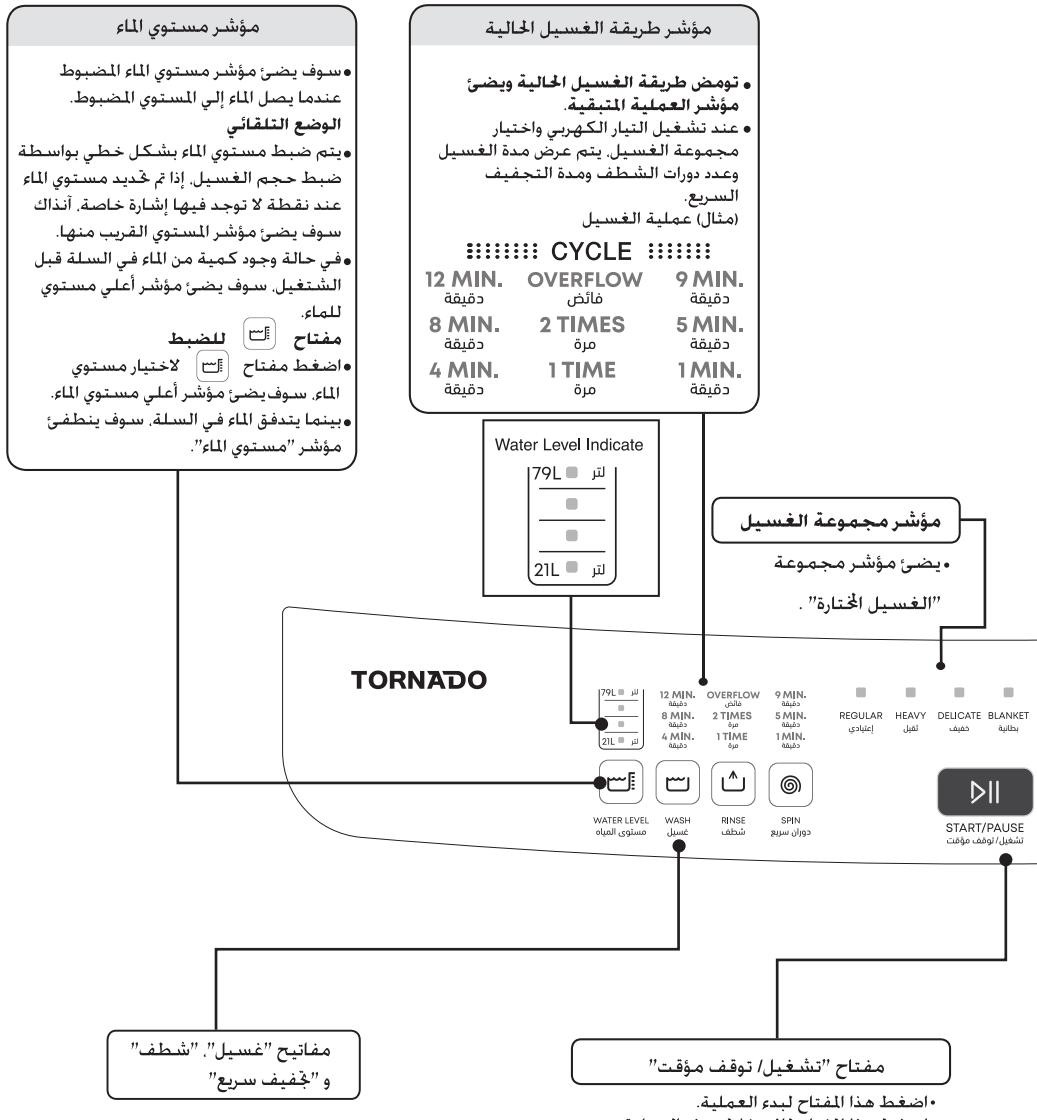





# التجفيف بالدوران السريع (تجفيف الخوض)

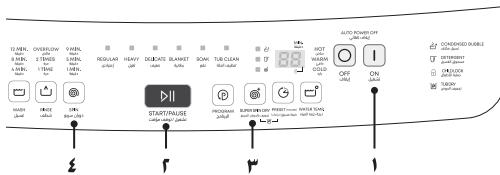

## كيفية استخدام تجفيف الدوران السريع

**١** قم بتشغيل التيار الكهربائي "الطاقة الكهربائية" وضع ملابس الغسيل في السلة.

**٢** اضغط مفتاح لاختيار البرنامج.

- عند ضبط دورة "لطيف بطنية" "تنظيف الخوض" من دورة "دوران سريع"، لا يمكن اختيار دورة "التجفيف بالدوران السريع".

**٣** اضغط مفتاح واختر المدة المرغوبة.

- بعض مؤشر "التجفيف بالدوران السريع" يتيح عرض مدة التجفيف السريع ٤ دقائق.

**٤** اضغط مفتاح


- تعمل المروحة قبل دخول الماء الآمن في السلة. تقوم الغسالة بتحديد كمية الملابس المعدة للتجفيف وعرض مقدار المادة المنقذة (حينما يكون الغطاء مفتوحاً).

**٥** ضع المادة المنقذة كما هو معروض وإغلاق الغطاء.

- إذا كان الغطاء مفتوحاً أثناء التشغيل، فسوف تتوقف الغسالة عن العمل قبل بدء الغسيل أو التجفيف السريع.

بعد التشغيل: سوف يتطلق صوت المنبه عندما تنتهي الغسالة من العملية.

- أغلق الصنبور ونظف مجعع النساء.

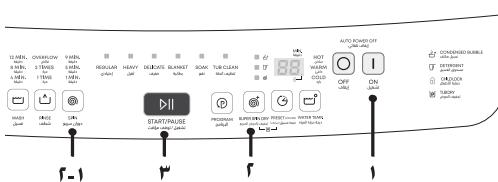

## كيفية استخدام تجفيف الخوض

**١** قم بتشغيل التيار الكهربائي "الطاقة الكهربائية".

**٢** بعد ضغط مفتاح اضغط مفتاح لاختيار المدة.

- سوف يضي مؤشر "التجفيف بالدوران السريع" مؤشر "٩ دقائق".

- يرجى ضبط المدة على ٣٠ دقيقة عند رغبتك ب اختيار دورة "تجفيف الخوض".

**٣** إغلاق الغطاء وضغط مفتاح

بعد الانتهاء من العملية، سوف يصدر صوت ببب.

## دورة التجفيف بالدوران السريع

اختر "تجفيف الدوران السريع" مع دورة (غسيل، شطف، تجفيف سريع).

## ■ كمية الملابس المعدة للغسيل/ دورة واحدة من التجفيف السريع

أقل من ٥٠ كجم

## ■ ضبط الوقت للتجفيف السريع

• يمكنك ضبط التجفيف السريع بدوياً وفقاً إلى الدليل التالي:

إذا رغبت بتقليل مدة الملابس الجففة في الغرفة ٤٥ دقيقة.

إذا رغبت بتجفيف الملابس الصناعية ٩٠ دقيقة.

## ■ الملابس التي لا يمكن استخدامها مع التجفيف بدون تجفيف.

• برنامج "التجفيف بالدوران السريع" يستغرق مدة طويلة من التجفيف بسرعة عالية. يرجى عدم تشغيل التجفيف السريع للملابس التالية:

• الملابس التي تحتوي على بقع من الدم.

• الملابس التي من السهولة إكمالها (مثل البليوزات، الملابس القطنية ١٠٠٪ أو القمصان)

• الملابس ذات الألوان غير ثابتة.

• الملابس المقاومة للماء.

## دورة تجفيف الخوض

### ■ عند استخدام "تجفيف الخوض"

بعد استخدام دورة "تجفيف الخوض" لمدة ٣٠ دقيقة، يمكنك

إزالة أي قطرات للماء باقية في السلة لحمايتها من البكتيريا.

يرجى إجراء عملية تجفيف الخوض مرة كل أسبوع.

لا تضع ملابس الغسيل أثناء تجفيف الخوض.

## تنبيه

• تعتمد كمية البكتيريا الموجودة في السلة سواء كانت قليلة أو كثيرة على عملية الغسالة.


• في حالة وجود البكتيريا في السلة، فإنه من الصعب إزالتها باستخدام "تجفيف الخوض" لذا يجب عليك دائمًا استخدام دورة "تجفيف الخوض".

# دورات خاصة للغسيل

12 MIN. دقائق  
8 MIN. دقائق  
4 MIN. دقائق

OVERFLOW فاقد  
2 TIMES مرة  
1 TIME مرة

9 MIN. دقائق  
5 MIN. دقائق  
1 MIN. دقائق

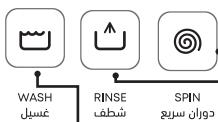

اختر "تجفيف سريع": 9/5/1 دقيقة  
اختر عدد دورات الشطف

اختر مدة الغسيل: 12/8/4 دقيقة

## التغيير لكل حالة من الحالات

١ افتح الغطاء وضع الملابس المعدة للغسيل في السلة،  
واختر الدورة المرغوبة.

٢ اضبط الدورة الخاصة التي تريدها ( ).

## المفتاح

- غسل فقط
- أذب المنظف قبل الاستخدام.
- إعادة استخدام ماء الغسيل.
- غسل الملابس بألوانها  
ال مختلفة ومن ثم وضعها في  
 التجفيف السريع معًا.
- شطف الملابس المخضولة فقط.  
(تجفيف سريع قبل الشطف)
- شطف وتجفيف سريع. (تجفيف  
 سريع قبل الشطف)
- اختيار الدورة المرغوبة.  
غسل وشطف وتجفيف  
 سريع من الغسيل إلى التجفيف السريع
- تجفيف سريع فقط. (التصريف  
 قبل التجفيف السريع)
- تقوم بتصريف ماء العروض،  
(فتح الغطاء، وبعد عرض  
 ينوقف التيار الكهربائي)  
E2"

٣ مفتاح

في الأول، إن مقدار كل دورة هو إعداد قياسي. بإمكان المستخدم تغيير مدة الغسيل، والشطف والدوران السريع لكل دورة بواسطة ضغط المفاتيح. يمكن ضبط الدورة حسب رغبتك. مثل جفيف سريع فقط أو إعادة استخدام ماء الغسيل / المادة المنظفة.

عندما تبدأ الغسالة بالتشغيل من "شنطف" ثم، يتم ضبط الماء على أعلى مستوى.

٤ يتم ضبط الشطف بواسطة ضغط مفتاح

|                          |                        |
|--------------------------|------------------------|
| شنطف ساكن                | ١ مرة                  |
| شنطف<br>فائز             | ١ مرة و فائز           |
| شنطف ساكن<br>(٢ مرّة)    | ٢ مرّة                 |
| شنطف<br>فائز<br>(٢ مرّة) | ٣ مرّة و فائز          |
| شنطف ساكن<br>(٢ مرّة)    | ١ مرّة و ٢ مرّة        |
| شنطف<br>فائز<br>(٢ مرّة) | ١ مرّة و ٢ مرّة و فائز |

٥ للشطف "٣ مرات و فائز"، سوف تضي المؤشرات (١مرة) و (٢مرة) وفائز.

لتغيير كل دورة.

دورة "الطيف"

غسيل: اختر من ١٢/٨/٤ دقيقة

شنطف: اختر من "١" و "٢" مرّة "وفائز"

تجفيف سريع: اختر من ٥/٥١ دقائق

دورة "بطانية"

غسيل: اختر من ١٢/٨/٤ دقيقة

شنطف: اختر من "١" و "٢" مرّة "وفائز"

تجفيف سريع: اختر من ٩/٥١ دقائق

دورة "عنق"

لا يمكن اختيار مدة "غسيل". "شنطف". "تجفيف سريع".

غسيل: "٨ دقائق"

شنطف: "٢" مرّة

تجفيف سريع: "٥" دقائق

وقت النقع

٦ إذا رغبت بتغيير وقت النقع اضغط على مفتاح " البرنامج "

وغير الوقت.



مؤشر ٣ ساعة:

مؤشر ٢ ساعة:

مؤشر اساعة:

مؤشر اساعة:

مؤشر اساعة:

# وضع حماية الأطفال (في حالة وجود أطفال صغار)

## وضع حماية الأطفال

هذا الموديل مجهز بوضع "حماية الأطفال" بعد ضبط هذا الوضع على "تشغيل" وفتح الغطاء تقوم الغسالة بتنبيهك في حالة سقوط الطفل في حوض الغسيل يرجي اتخاذ الفعل الضروري لسلامة الطفل وبسرعة. في حالة وجود أطفال صغار يحتاجون لعناية خاصة، اضبط هذا الوضع على "تشغيل"

خذلني: انتبه للأطفال الصغار لا تترك الغطاء مفتوحاً ولا تدع الغسالة ملوءة بالماء. لا تسمح مطلقاً للأطفال بالنظر إلى السلة أو اللعب حول الغسالة. لا تضع حامل أو صندوق الخ بالقرب من الغسالة.

### كيفية استخدام وضع حماية الأطفال

#### ضبط وضع حماية الأطفال

اضغط على مفتاح  لتبدأ الغسالة بالتشغيل باتباع التعليمات أدناه:

احتفظ بمفتاح  مضغوطاً مع ضغط مفتاح  مرة أخرى.  
يصدر المنبه صوتاً ويصبح مؤشر وضع حماية الأطفال فعالاً.



عند ضبط وضع حماية الأطفال، يتم تخزينه في الذاكرة.

يعتبر قفل حماية الأطفال بثابة (جهاز سلامه للأطفال) في حالة سقوط الطفل في سلة الغسيل بشكل غير مقصود. سوف تقوم وظيفة حماية الأطفال بإصدار ضوضاء للتنبيه للمشكلة، فتتوقف الغسالة عن التشغيل وتقوم بتصرف الماء.

عند صدور الضوضاء من المنبه، افتح الغطاء وتحقق من الحالة الموجودة في الداخل.

#### إلغاء وضع حماية الأطفال

احتفظ بمفتاح  مضغوطاً مع ضغط مفتاح  مرة أخرى.

يصدر المنبه صوتاً ويتم إلغاء مؤشر حماية الأطفال.



يمكن إلغاء وضع حماية الأطفال حتى أثناء التشغيل

إضافة ملابس الغسيل أو المادة المنظفة أثناء وضع حماية الأطفال. افتح الغطاء ومن ثم أضف الملابس المعدة للغسيل أو المادة المنظفة بسرعة مع صدور صوت المنبه. إغلاق الغطاء.

إذا بقي الغطاء مفتوحاً، يبدأ التصريف بعد حوالي 5 ثواني.

سوف لا تعمل الغسالة إذا استمر الغطاء مغلقاً بعد انقضاء 5 ثواني.

في مثل تلك الحالة، قم بالغاء وضع حماية الأطفال أو قم بإنقاف تشغيل التيار الكهربائي. ثم اضبط وضع حماية الأطفال مرة أخرى.

إذا توقف صوت المنبه، قم بالغاء وضع حماية الأطفال. ثم بعد فتح الغطاء، أضف الملابس المعدة للغسيل أو المادة المنظفة. إغلاق الغطاء

واضبط وضع حماية الأطفال مرة أخرى.

وتذكر من إعادة ضبط وضع حماية الأطفال بعد إلغاءه.

#### تشغيل وضع حماية الأطفال

- إذا تم فتح الغطاء أثناء التشغيل في وضع حماية الأطفال، سوف يصدر المنبه صوتاً ويتوقف التشغيل. لاحقاً إذا استمرت الحالة لمدة خمس ثوانٍ، يتم تخيده على أنه منه وبدأ تصرف الماء. ويستمر المنبه بإصدار الصوت ما لم يتم غلق الغطاء خلال 5 ثوانٍ، أو بعد اكتشاف المنبه مالم يتم إيقاف التيار الكهربائي أو إلغاء وضع حماية الأطفال.

- إذا تم تشغيل الغسالة وكان الغطاء مفتوحاً بتم التزود بالماء للحظات، عندما يصل الماء إلى المستوى الحدودي، مع ذلك، يصدر المنبه صوتاً وبعد حوالي 5 ثوانٍ، يعمل وضع حماية الأطفال.

# الوضع الاختياري

ينطبق المحتوى الوارد داخل الأقواس ( ) على سلسلة TWT-TLN10LWT & TWT-TLN10LSL تأثيراً.



إذا كانت كمية المياه قليلة أو كثيرة

إذا كنت تشعر أن كمية الماء قليلة.

إذا كنت تشعر أن كمية الماء كثيرة.

قم بتشغيل "الطاقة الكهربية" مع الضغط على مفتاح "مستوى الماء".

يتم ضبط كمية الماء تلقائياً بحيث تلائم كمية ملابس الغسيل إذا كنت تشعر بأن كمية الماء قليلة أو كثيرة، يكفي ضبطها كما يلي.

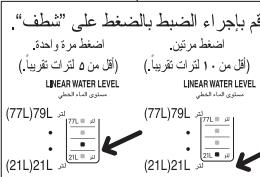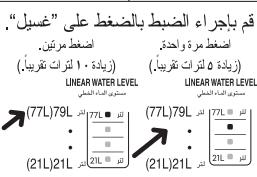

قم بيقاف تشغيل "الطاقة الكهربية". (انتهاء الضبط)

\* اضبطة مرة واحدة يتم تسجيلة في الذاكرة، لا تحتاج لضبطها لكل دورة من دورات الغسيل.

إذا رغبت بإيقاف تشغيل صوت المنبه

١ اضغط مفتاح البرنامج مع الاستمرار ثم اضغط مفتاح الطاقة الكهربية. بعد صدور نغمة المنبه لثلاث مرات يتم إيقاف تشغيل صوت المنبه.

٠ يمكن إيقاف تشغيل صوت نغمة المنبه



اضغط



اضغط مع الاستمرار

إذا رغبت بتغيير الشطف البسيط إلى شطف ساكن

١ لتشغيل الغسالة

أضغط مفتاح



أضغط مفتاح

واحتفظ به مضغوطاً لمدة ٣ ثوانٍ، سوف يسمع صوت المنبه و يتم ضبط الدورة خلال ٥ ثوانٍ.

بالنسبة للشطف البسيط، يحتاج مرتين للعملية، ولكن بالنسبة للشطف الساكن، تحتاج إلى واحدة فقط.

اضغط



اضغطه مع الاستمرار لمدة ٣ ثوانٍ

تابع، بعد ذلك تتوقف الغسالة.  
تابع هذه التعليمات لدورة الشطف البسيط، وسوف تسمع صوت المنبه.


بعد الضبط، سوف تختفظ الغسالة بالضبط في الذاكرة.

لهذا ليس من الضروري إعادة ضبطها في كل مرة.

# وضع الضبط المسبق


## كيفية استخدام وضع الضبط المسبق

- ١ قم بتشغيل "الطاقة الكهربية".
  - وضع الملابس المعدة للغسيل في السلة واختر الدورة أو مستوى الماء الذي تفضله اضبط دورة الغسيل الخاصة.
  - ٢ ضبط مفتاح "ضبط مسبق" لتوقيت المضبوط مسبقاً.
  - ٣ يمكّنك تغيير الوقت المعروض من ساعة واحدة إلى ١٢ ساعة بمقدار ساعة واحدة لكل ضغطة.

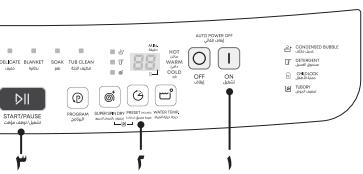


### المنظف السائل

- قم بوضع المادة المنظفة وفقاً إلى دليل المادة المنظفة ومن ثم إغلاق الغطاء.

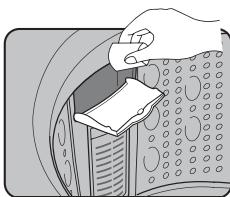

### المادة المنظفة (٢٥ جم/٣٠٠ لتر)

- قم بسحب علبة المادة المنظفة، ثم ضع المادة المنظفة بشكل مستوى في العلبة. ثم إغلاق العلبة.

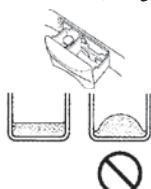

- لضبط وضع "ضبط/ إعادة ضبط مسبق" عندما ترغب بحذف الضبط المخزن بالذاكرة. قم بإيقاف تشغيل "الطاقة الكهربية". إذا رغبت في تغيير الوقت المضبوط مسبقاً.
- لثبيت الوقت المضبوط مسبقاً
  - عندما تفتح غطاء الغسالة يتم عرض الوقت المضبوط مسبقاً، أو اضغط مفتاح "ضبط مسبق".
  - يختلف وقت الانتهاء بين الوقت المضبوط مسبقاً والوقت الفعلي وذلك حسب ضغط الماء وحالة التصريف.

## وظيفة استكمال العملية بعد (استرداد الانقطاع للتيار)

- إذا كان هناك إنقطاع للتيار الكهربائي أثناء العملية. تقوم الغسالة بحفظ العملية المتبقية. بعد عودة التيار الكهربائي، يمكنك إستكمال تلك العملية.


### ١ قم بتشغيل "الطاقة الكهربية"

- ٤ مؤشرات الحالة أو النظام الخاص بالعملية المتبقية سوف يومض وسيسمع صوت صفارة لمدة ٥ ثوان.

### ٢ اضغط مفتاح ▶||

- ملاحظة في حالة "الضغط المسبق" إذا حدث إنقطاع للتيار الكهربائي قبل أن تبدأ الغسالة بالعمل، ستقوم بالغاء وقت الضبط المسبق لذلك لا بد من أن تقوم بإعادة ضبط الوقت مرة أخرى.

### ٣ اضغط مفتاح ○ لإزالة جميع العمليات المتبقية.

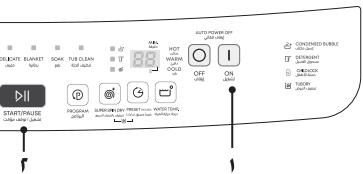

# دليل الملابس المعدة للفسيل

## عند استخدام منظف سائل ومببض


للغسيل المحدد بوقت قم بوضعه في الفتحة الخاصة بإدخال مسحوق الغسيل في علبة مسحوق الغسيل.

**المبيض المحتوى على الكلور**  
يجب تخفيف المبيض المحتوى على الكلور بثلاثة أضعافه من الماء. قم بإضافة المبيض مباشرةً في سلة الغسيل بشكل تدريجي أثناء الغسيل.  
تجنب وضع المبيض على الغسيل مباشرةً حتى لا يتسبب ذلك في زوال الألوان وتلف الأنسجة.

**تنبيه:**

تجنب وضع المبيض على لوحة التحكم، في حالة سقوطه على لوحة التحكم قم بمسحها في الحال.

تأكد من قراءة التعليمات الخاصة بسائل الغسيل والمبيض ونطبيقها بشكل صحيح  
**فتحة إدخال المنظف السائل / المبيض السائل**

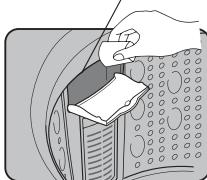

**سوائل التنظيف والمببضات السائلة**  
قم بسكب كل من سائل التنظيف والمبيض مباشرةً في سلة الغسيل بشكل تدريجي أثناء الغسيل.

**مسحوق التبييض**


قم بإضافة مسحوق التبييض مباشرةً في سلة الغسيل بشكل تدريجي أثناء الغسيل.

## عند استخدام مادة تنعيم الأنسجة

**تنبيه**

- تأكد من غلق الموزع بشكل كامل. لا تضع مادة المبيض في الجزء العلوي من الموزع، إذا تم استخدام مبيض زائد. يصبح من المتعذر إزالة المبيض بشكل كامل.
- تأكد من عدم سكب مادة تنعيم الأنسجة على لوحة التشغيل. إذا سقط على السطح المخارجي بشكل غير مقصود. قم بتنظيفه فوراً.
- لا تترك مادة تنعيم الأنسجة في الموزع لفترة طويلة فقد تتسبب في أن يصبح السطح المخارجي خشنًا.

**بعناية إقرأ إرشادات مادة تنعيم الأنسجة لغرض استخدامها مباشرةً.**

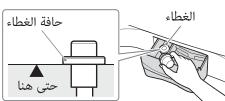

قم بوضع مادة تنعيم الأنسجة في موزع مادة تنعيم الأنسجة بواسطة تقدير الكمية من عاشرة مقدار المادة المنظفة.  
تدفق مادة تنعيم الأنسجة تلقائياً إلى داخل الموزع أثناء الشطف النهائي.

- قد يبقى بعض الماء الخفيف في الداخل وذلك بسبب الأنابيب المركب. هذا ليس شيء غير عادي.
- عند استخدام مادة تنعيم الأنسجة المركبة. قم بتخفيفها بالماء بمقدار واحدة إلى ثلاثة من المادة المركبة قبل وضعها داخل العلبة.


# الصيانة

## علبة الفلتر

قم بتنظيف حاجز النسالة في نهاية التشغيل.

### كيفية الفك

امسک الجانب العلوي من علبة الفلتر واضغط لأسفل واسحبه في نفس الوقت.

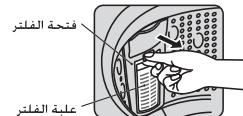


### كيفية التركيب

امسک علبة الفلتر مع جعل الجزء العلوي منها لأعلى. ضع الجزء السفلي من علبة الفلتر في حامل الفلتر ثم اضغط عليه حتى تسمع صوت "تکة".




### كيفية التركيب

- (1) اضبط علبة الفلتر على غطاء المرشح كما يلي.
- (2) اضغط على علبة غطاء الفلتر حتى تسمع صوت "تکة".

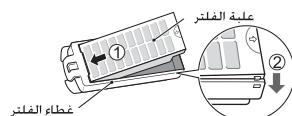


■ عندما يكون صمام الفلتر بالداخل يحدث ارتخاء في غطاء الفلتر.

※ إذا حدث ارتخاء في صمام الفلتر، لا يمكن جمع النسالة.  
① اضبط صمام المرشح على علبة الفلتر مع محاذاة تغره وخدمه مع تغور وحدب علبة الفلتر.

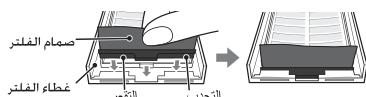

② ادخل جويف صمام الفلتر إلى البند الموجود في منتصف غطاء الفلتر.

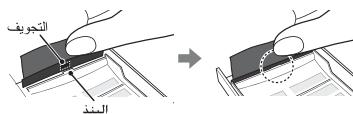

## علبة الفلتر

### فتحة الفلتر


امسک الجانب العلوي من علبة الفلتر واضغط لأسفل واسحبه في نفس الوقت.



## غطاء الفلتر

### كيفية الفك

أدفّع الفلتر ثم حرك علبة الفلتر في إتجاه السهم الموضح في الشكل التالي (1) لفكه (2). قم بتنظيف الجزء الداخلي من فتحة الفلتر وعلبة الفلتر.

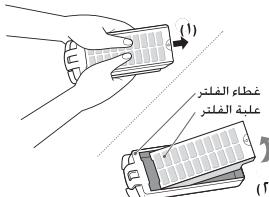

※ - عندما يصعب فك علبة الفلتر بسبب النسالة الملتصقة،  
بالها بالمااء لتلين النسالة.



## موقع مادة التنظيف/المبيض



قم بتجفيف أو غسل أي بواعي لمواد التنظيف.

إذا كان من الصعب إزالة جزء من مواد التنظيف، استخدم دورة "تنظيف الخوض".

● قبل أن تضع مادة التنظيف في موقع مادة التنظيف/المبيض، قم بإزالة أي ماء في مدخله. وجود أي ماء متبقى ربما يؤدي إلى تصلب مادة التنظيف والتصاقها.


# الصيانة

## علبة المادة المنظفة/ مادة تعقيم الأنسجة

آخر العلبة لتنظيفها. بالإضافة إلى ذلك، قم بمسح أي قاذورات من منفذ التزود بالماء.

### طريقة إعادة التركيب

- ١ قم بإعادة تركيب الغطاء على العلبة.
- ٢ قم بوضع العلبة مرة أخرى بشكل مائل بنفس طريقة الفك.
- ٣ ضعها وإضغط عليها بشدة خلال الحواف الموجودة.

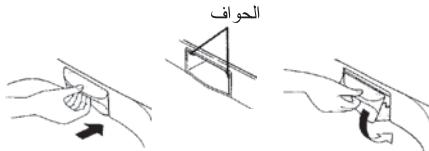

٤ قم بفك غطاء علبة المادة المنظفة/ مادة تعقيم الأنسجة. تأكد من إعادة الغطاء بعد فكه إذا تم تشغيل الغسالة بدون وجود الغطاء في موضعه. لا يمكن إدخال مادة تعقيم الأنسجة.

## تنظيف الجسم الخارجي للغسالة واللوحة

قبل إجراء أية صيانة على الغسالة، تأكد من مصدر التيار.

يمكن تنظيف الجسم الخارجي ولوحة التحكم بواسطة مسحها بقطعة قماش ناعمة منقوطة بالماء.

(يمكن تنظيف القاذورات التي من الصعب إزالتها باستخدام قطعة قماش ناعمة منقوطة بمنفذ متعدد).

تنبيه: لا تقم بتنظيف الجسم الخارجي أو لوحة التحكم بالبنزين أو الشروق أو مواد التنظيف الكيميائية الأخرى. استخدام مثل هذه المواد يمكن أن يسبب إزالة الألوان أو تلف الأجزاء.

## تنظيف الموضع

### دورة "تنظيف الموضع"



- عادةً استخدم مادة منظفة.
- يجب أن تكون كمية المنظف أكثر من كمية الماء المتبقي لدليل القياسات.

#### ١ قم بتشغيل الطاقة الكهربية.

#### ٢ اضغط مفتاح واختار تنظيف الموضع.

#### ٣ اضغط مفتاح .

#### ٤ لا يظهر مؤشر تنظيف جميع المؤشرات.

عندما تبدأ الروحة (لوحة التجفيف) بالتجفيف، أضف منظف النبيض من نوع الكلور حوالي ٣٠٠ ملتر إلى السلة.

• أضف عند أول مرة لاستخدام الماء.

• لا تضع أية ملابس أثناء تشغيل برنامج "تنظيف الموضع".

#### ٥ اغلق الغطاء.

• إذا كان الغطاء مفتوحاً أثناء التشغيل، سوف يتوقف التشغيل قبل عملية التصريف والشطف.

#### ٦ إنتهاء عملية "تنظيف الموضع"

تصدر نغمات التبليه عند الانتهاء من العملية.

قد تتسبب القاذورات التي تتم إزالتها من الملابس أو الماء المتبقي في سلة الغسيل بالتجفيف بالارتفاع الكهربائي أو مشاكل في تصريف الماء، مثل هذه القاذورات المتبقية من عملية الغسيل سوف يجعل ملابس الغسيل غير نظيفة. إذا واجهتك مثل هذه الحالة، يرجى استخدام برنامج "تنظيف الموضع" مرة كل شهر لإزالة نفاثات الخدوش من السلة.

### عملية "تنظيف الموضع"

حوالي ١١ دقيقة إدخال الماء والدوران (١)

حوالي ٣٠ دقيقة التنق

حوالي ٣ دقائق غسل

حوالي ٣ دقائق التصريف والدوران السريع (٢)

حوالي ١١ دقيقة إدخال الماء والدوران (١)

حوالي ٣ دقائق الشطف

حوالي ٣ دقائق التصريف والدوران السريع (٢)

١ تقوم الروحة بالتجفيف السريع لثأر زلة مستوى الماء بشكل تدريجي، بالنسبة لماء الحوض، قد تختلف العملية قليلاً.

٢ يدور الماء لثأر تصريفة الخارج

٣ لا تستخدم برنامج "تنظيف الموضع" باستمرار.

٤ إذا وجدت كمية كبيرة من القاذورات داخل السلة، قم باستخدام منظف السلة من الكلور الخاص للغسالات. يرجى إتباع التعليمات الموجودة على حقيبة المنظف.

# الصيانة

## المحوض (حوض مصنوع من الاستانلس ستيل لا يصدأ)

- لا نضع أشياء معدنية في الغسالة مثل ديابيس الشعر.
- بعد تصريف الماء، يتم تصريف الماء الذي فيه صدأ. هذا سوف يسبب جمجم الصدأ في داخل الغسالة، نظفها مرة أخرى بماء نظيف.



- \* لا تستخدم فرشاة معدنية لأن يمكن حدوث خدش للهيكل وسهولة حدوث صدأ.

- صدأ الاستانلس ستيل غير قابل للصدأ من الأعبيادي عدم صدأ المصنوع من الاستانلس ستيل الذي لا يصدأ. مع ذلك، فمن الممكن احتمال حدوثه، يرجى اتباع التوصيات أدناه لتفادي الصدأ.

## التركيب

### اختيار موقع التركيب

تجنب وضع الغسالة في مكان تتعرض فيه لأشعة الشمس.



- قد يتسبب ذلك في تشوه الأجزاء البلاستيكية أو تغيير ألوانها.

تجنب وضع الغسالة في مكان تجمد فيه أثناء الطقس.



- اترك مسافة خمس من الجوانب و ٠ سم من خلف الغسالة التي تقرب سطح عمودي.



- عند وضع الغسالة قربة من الجدران أو الأشياء الأخرى.
- فقد يتسبب اهتزازها أثناء التشغيل في اهتزاز هذه الأشياء.

- تنبيه: احرص على وجود مساحة كافية خلف الغسالة لأن أكثر من ١ سم، وإنما قد يتلوى خرطوم تصريف المضخة فيتسبّب ذلك في حدوث مشاكل أثناء تصريف المياه وذلك في الموديل المجهز بمضخة.

قم بوضع الغسالة في مكان مستوى ثابت

- من الخطورة وضع الغسالة في موضع غير مستقر لأنها يمكن أن تتحرك أثناء الاهتزاز.
- سوف يزداد الصوت الصادر من الغسالة عند اهتزازها أثناء الاستخدام.



- عندما يتم نقل الغسالة، قم بمسك المقابض الموجودة على الجانبين. توحد أجزاء متحركة وأجزاء كهربائية وأجزاء فولاذية والتي يمكن أن تسبب صدمة كهربائية أو حدوث إصابات.



### عند تقطيع الغسالة

- لا تستخدم الغطاء المصنوع من فينيل الكلوريك، في بعض الأحيان يسبب تلف الأجزاء الراتنجية والسطح المصبوغ. عندما تستخدم الغطاء المصنوع من فينيل الكلوريك، ضع قطعة قماش بين الغسالة والغطاء.

### إذا أصبح الماء الملوء غير جيد



فك خرطوم التزويد بالماء

١-أغلق حنفيّة الماء

٢-تشغل "تشغيل" مفتاح القدرة واضغط مفتاح

"تشغيل توقف مؤقت".

٣-بعد الإشارة إلى مستوى الماء، حل صمولة المطرطم الموجودة في أعلى الغسالة وفكها.



قد توجد عوائق خارجية أمام مدخل الماء، ففك خرطوم التزويد بالماء ونظف المرشح بواسطة فرشاة.

- إذا فكك منبع الماء بشكل مهم، قد يناثر الماء، لذلك، استعمل الطريقة التالية.

### في حالة جمود الماء



١-املأ السلة بالماء الدافئ حتى يغطي المروحة بشكل كامل.

تم

٢-اتركه حوالي ٣٠ دقيقة.

تم

٣-تحقق من إمكانية خرىك المروحة بواسطة اليد.

تم

- قم بتصريف جميع الماء الموجود في السلة، وخرطوم التصريف وخرطوم التزويد بالماء بعد استعمال الغسالة.


# التركيب

التركيب لموديل : TWT-TLN10LWT & TWT-TLN10LSL , TWT-TLN12LWT & TWT-TLN12LDS


## التركيب

اضبط الأرجل بحيث يكون جسم الغسالة مستوياً


٣ قد يتم استخدام ثقل متصل بجبل للتأكد من أن الغسالة في وضع مستوي. إذا أصبحت المسافة متطابقة بين A و B يكون المستوى الأفقي مضبوط.

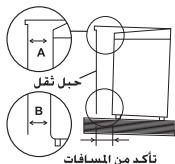

٤ عندما يكون من الصعب ضبط ارتفاع الرجل بسبب انحدار الأرض أو عدم تساوتها ضع لوحه بسمك كافي لمنع كسر الأرجل وللسماح بضبط الرجل في وضع مستوي.

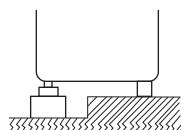

٥ بعد فك صامولة الضبط. اضبط رجل الغسالة إلى الارتفاع المناسب عن طريق لفها ثم قم بإحكام ربطة رجل الغسالة بصامولة الضبط مرة أخرى.

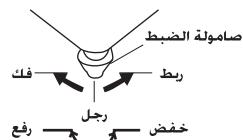


# التركيب

التركيب لموديل : TWT-TLN10LWT & TWT-TLN10LSL , TWT-TLN12LWT & TWT-TLN12LDS

## تركيب خرطوم مصرف المضخة

تنبيه:

- لا تستخدم الغسالة بدون خرطوم التصريف.
- توخحذر عند تنظيف الخرطوم، قد يتمزق الخرطوم.
- ينبغي لا يزيد ارتفاع خرطوم التصريف عن ١م من الأرضية.
- تنبه إلى تسرب المياه عند نزع خرطوم مصرف المضخة.

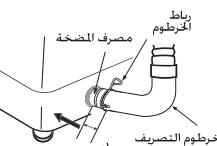


دخل خرطوم مصرف المضخة إلى أبعد مسافة ممكنة ثم أحكم ثبيته باستخدام رباط الخرطوم الملحق.

ثبّت الخرطوم بإحكام، قد يؤدي التثبيت غير السليم للخرطوم إلى حدوث تسرب.

ثبّت رباط الخرطوم على مسافة ١م من القاعدة كما هو موضح بالشكل.

## ثبيت خرطوم تزويد الماء إلى صنبور المياه

- صاملولة مدخل الخرطوم للماء الساخن هي الصاملولة ذات اللون الأحمر والصاملولة البيضاء للماء البارد. كما هو موضح في الشكل رقم ١.
- احكم صاملولة الخرطوم الموجودة في نهاية خرطوم تزويد المياه إحكاماً أمناً إلى صمام سحب المياه، كما هو موضح بالشكل رقم ٢.

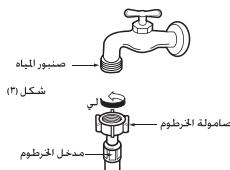

احكم صاملولتي الوصلة بدواياً إحكاماً جيداً كما هو موضح في الشكل ٣.

ملحوظة: قم بخفض درجة حرارة صنبور مياه الماء الساخن إلى أقل درجة ممكنة.

تنبيه: تأكد من توصيل المراطيم إلى صمامات السحب الصحيحة: مدخل الخرطوم للماء البارد موصل إلى صمام الماء البارد، والماء الساخن إلى الماء الساخن.

## تركيب سلك الأرضي

- تأكد من تركيب السلك الأرضي للغسالة عند التركيب. عند توصيل أو فصل سلك الأرضي، تأكّد أولاً من فك الفيشنة.
- إذا كانت الغسالة تتضمن كابل ذو موصلين قم بتوسيع كابل السلك الأرضي بارضي صحيح قبل توصيل كابل التيار الكهربائي بالبريزه.
- في حالة كابل بشكل ٢ قل بج بحسب ديوس الأرضي الموجود في الفيشنة بنقطة صحية في البريزه.
- لا تقم بتوصيل الأرضي في أي من المواقع التالية حتى أثر طرف من الطروف.
- لا توصل الأرضي بأنابيب الغاز حيث توجد خطورة في تسرب حريق أو انفجار.
- لا توصل الأرضي بخطوط الهاتف أو قضبان مانعة البرق. وهناك خطورة أثناء ثورات الرعد أو البرق.
- وذلك بالنسبة لأنابيب الماء تحت الأرضي والمصنوعة من البلاستيك لا تضع قضبان الأرضي بالقرب منه.

## تركيب سلك الأرضي

كابل من ذو قلبين عند استخدام الطرف الأرضي على مأخذ التيار المتزدّد AC:

تأكد من توصيل سلك الأرضي بطرف الأرضي بشكل سليم.

في حالة عدم وجود طرف الأرضي:

- يوصى باستخدام قضبان الأرضي الاختيارية والمتوفرة.
- يجب تثبيت قضيب الأرضي في الأرضية الرطبة قدر الإمكان.



\* من أجل سلامتكم وتجنب مخاطر الحريق يجب عدم توصيل المنتج بواسطة مشترك والتوصيل مباشر على بريزه الكهرباء.

\* هذا المنتج للاستخدام المنزلي فقط.

## قبل استدعاء فني الصيانة

| العلاج   | التحقق  | عند                          |
|--|---|------------------------------|
| يرجى فيما إذا حدث انقطاع بالتيار الكهربائي أو قطع جهد الفيوز، قم بسحب فيتون التيار الكهربائي للخارج، ثم ادخلها مرة أخرى وقم بتشغيل التيار الكهربائي. | <ul style="list-style-type: none"> <li>هل انقطع التيار الكهربائي؟</li> <li>هل تم فصل قاطع الدائرة الكهربائية أو الفيوز العومي؟</li> <li>هل تم إدخال فيتنغ الغسالة ببرقة التيار المتعدد؟</li> <li>هل تم تشغيل مفتاح التيار الكهربائي "تشغيل"؟</li> </ul> | عدم التشغيل                  |
| يرجى تصحيف ميلان أو عدم استقرار الملابس الغسيل في الغسالة.   | <ul style="list-style-type: none"> <li>هل يوجد ميلان بالملابس المعدة للغسيل؟</li> <li>هل تم تركيب الغسالة على سطح مائل أو غير مستوي؟</li> </ul>   | صدر الوضاء                   |
| إزالة هذه المادة.  | <ul style="list-style-type: none"> <li>هل تم غسل لصقات أو دبابيس للشعر أو مواد معدنية مع الملابس المعدة للغسيل؟</li> </ul>  |                              |
| اضبط الخلقة الداخلية لوصلة الخرطوم أو تغيير شكل الصببور (راجع صفحة ١٨)   | <ul style="list-style-type: none"> <li>هل شكل الصببور مناسب؟</li> </ul>   | تسرب الماء                   |
| اعد تركيب فوهة الماء (راجع صفحة ١٨)  | <ul style="list-style-type: none"> <li>هل تم ربط الخرطوم وحل الفوهة؟</li> </ul>   |                              |
| اعد تركيب خرطوم التزويد بالماء (راجع صفحة ١٨)  | <ul style="list-style-type: none"> <li>هل صامولة مدخل الماء مفتوحة؟</li> <li>هل تمت إعادة موصل خرطوم التزويد بالماء؟</li> </ul>   |                              |
| أعد ضبط صوت المنبه النهائي لتشغيله بالرجوع إلى "إذا (غيت) بإيقاف تشغيل صوت المنبه النهائي (صفحة ١١)"   | <ul style="list-style-type: none"> <li>إذا قمت بتشغيل التيار الكهربائي وضغط مفتاح "تشغيل" فوراً يمكن أن لا يصدر صوت المنبه.</li> <li>هل تم إيقاف تشغيل المنبه النهائي؟</li> </ul>   | عدم صدور نغمات انتهاء المنبه |

قائمة الإشارة للأخطاء  
في حالة سماع صوت المنبه وظهور الإشارات التالية على شاشة العرض كما هو مبين.

| العلاج   | الفحص   | شاشة العرض |
|--|---|------------|
| ● بعد التحقق، افتح وإغلاق الغطاء.<br>● اضغط مفتاح "تشغيل/توقف مؤقت".   | <ul style="list-style-type: none"> <li>بخصوص خرطوم التصريف.</li> <li>هل الخرطوم متثبت بشكل صحيح؟</li> <li>هل الخرطوم مقلوب بشكل أفقى؟</li> <li>هل حدث انسداد في الخرطوم؟</li> <li>هل الخرطوم تاليف؟ هل طرفه معرض للماء؟</li> <li>هل يوجد عائق في خرطوم التصريف؟</li> </ul>                |            |
| ● إغلاق الغطاء.  | ● هل الغطاء مفتوح؟  |            |
| ● قم بتصحيف حمولة الملابس المعدة للغسيل والحركة الارتفاعية للغسالة، ثم إغلاق الغطاء.   | <ul style="list-style-type: none"> <li>هل حمولة الملابس الغسيل متوازنة؟</li> <li>هل ملابس الغسيل غير مستقرة أو تم وضعها على أرضية مائلة؟</li> </ul>   |            |
|  | <ul style="list-style-type: none"> <li>هل حدثت أي أعراض قد تكون شبيهة إلى [E 3] - 1 ؟</li> <li>أنظر قسم [E 3] - 1 أعلى.</li> </ul>  |            |
| ● وبعد الفحص، افتح واغلق الغطاء<br>● واضغط مفتاح "تشغيل/توقف مؤقت".  | <ul style="list-style-type: none"> <li>هل صبورة الماء مغلقة؟</li> <li>هل حدث انسداد لأبوب الماء أو حدث انقطاع بخدمة الماء؟</li> <li>هل مرشح الماء / مجمع الغسالة الخاص بمنفذ التزويد بالماء مسدوداً بالفائزوات؟ إذا كان معدل الخاص بتدفق الماء قليل للغاية، فرسو يتم عرض "E5".</li> </ul> |            |
| ● تأكد من توصيل مدخل الماء الساخن مع صمام الماء البارد أو العكس؟<br>الماء الساخن → يشير الصمام إلى "ساخن"<br>الماء البارد → يشير الصمام إلى "بارد" | <ul style="list-style-type: none"> <li>هل تم تبديل مدخل تزويد الماء الساخن مع صمام الماء البارد أو العكس؟<br/>(مدخل الماء الساخن → صمام سحب الماء البارد)<br/>(مدخل الماء البارد → صمام سحب الماء الساخن)</li> </ul>  |            |

إذا لم يتم حل المشكلة بعد الفحص، افضل الفيضة واستدعاء خدمات الصيانة

## قبل استدعاء فني الصيانة

الأمور التالية لا تعتبر خللاً

| التحقق:  | عندما:  |
|--|---|
| • هذا ماء فحسب وهو متبقى من عملية فحص الغسالة قبل شحنها من المصنع  | تستخدم غسالتك لأول مرة و يتم تصريف مقداراً ضئيلاً من الماء خارج خرطوم التصرف.                           |
| • يسبب أن الأجزاء الكهربائية تشع حرارة.  | دفع في لوحة التحكم أثناء التشغيل  |
| • يسبب عدم توازن ملابس الغسيل، فإليها تدور ببطء.   | تدور الروحة ببطء  |
| • هذا يسبب شبكة أسلاك مصد ر التيار المنزلي، إذاً تغير مصابيح الفلورسنت، فإن هذا سوف يحسن من الحالة.  | تهمض مصابيح الفلورسنت أثناء عملية الغسيل والتنفيف.  |
| • يسبب عدم توازن الحمل وتشغيل مفاتيح الأمان. سوف يتم استثناف دورة التجفيف بعد التزود بالماء، والتتجفيف وتصحح الحمل الغير منتزن.  | أثناء التجفيف يتم التزود بالماء بصورة مفاجئة أو يتم الشطف.  |
| • هذا يسبب بقاء الماء من قبل الغسالة لاغراض الحفاظة على التوازن ولا تشhir إلى حدوث خلل.  | يصدر صوت تدفق الماء المتبقى من الغسالة بعد الانتهاء من دورة (تجفيف سريع)، يصبح استخلاص التجفيف غير كاف. |
| • يوجد توقف قصير قبل أن تبدأ الغسالة بالتجفيف بسبب تشغيل فعالية صمام التصريف.  | أثناء وضع التجفيف، لا تعمل الغسالة فوراً بعد الانتهاء من وضع التوقف المؤقت                              |
| • قد تسمع صوت منقطع نفخ (صوت "كون") أثناء عملية التجفيف، هذا الصوت لغرض تنابع التحكم، وليس دليلاً على وجود الخلل.  | إذا تم تشغيل وإيقاف تشغيل الغسالة أثناء دورة التجفيف.   |
| • انتظر حتى يصبح الماء نظيفاً، يمكن استخدام مبيض من نوع (الهيبروجين، .. الخ)، عندما يتتصق الصاد المعدني بالملابس البيضاء اللون جنب استخدام مبيض مخصص للملابس الملوونة. سوف     | بعد انقطاع التزود بالماء أو ظهور ماء مع صدأ معدني   |
| • إذا تم ضبط وضع "حماية الأطفال" على "تشغيل". وكان الغطاء مفتوحاً أثناء تشغيل الغسالة. سوف تصدر نغمات التنبيه، افحص داخل الغسالة اضغط مفتاح "الطاقة الكهربائية" لإيقاف تشغيله. | لا ينوقف المتبه   |

## طريقة معالجة الأعطال الطارئة

في حالة حدوث أي أعطال عند تشغيل الغسالة، يرجى فصل التيار عن الغسالة وإرسالها إلى مركز الصيانة التابع لنا للمعالجة، ولدوعي السلامة لا تقم بفك الغسالة بنفسك.

### المواصفات

| الطراز                             |         | النوع                                |
|------------------------------------|---------|--------------------------------------|
| غسالة اتوماتيكية بالكامل           |         | نظام الغسيل                          |
| دوامات                             |         | المورات                              |
| أعتيادي - غسيل ثقيل - لطيف - نقع   |         | ضغط حنفيه الماء                      |
| ٣ - ١٠٠..٣ ملغاً بascal            |         | مدة التشغيل للغسالة                  |
| الدورة الاعتيادية للغسالة ٥٥ دقيقة |         | الارتفاع                             |
| ١٠٧X١٨٣X١٠٧                        |         | (المقدار القياسي) مستوى الماء الاعلى |
| ٧٩ لتر                             | ٧٧ لتر  | الاستهلاك القياسي للماء              |
| ١٨٠ لتر                            | ١٧٧ لتر | سعة الغسيل                           |
| ١٢ كجم                             | ١٠ كجم  | الوزن                                |
| ٤١ كجم                             |         |                                      |

# BEFORE CALLING THE SERVICEMAN

The following are not malfunctions.

| When:  | Check:  |
|--|---|
| The first time you use your washing machine, a small amount of water may drain out of the drainage hose. | <ul style="list-style-type: none"><li>This is merely water lift over from the performance inspection performed on your washing machine before it was shipped from the factory.</li></ul>  |
| During operation the control panel gets warm.  | <ul style="list-style-type: none"><li>Because of the electronic parts radiate heat.</li></ul>   |
| The pulsator rotates bit by bit.   | <ul style="list-style-type: none"><li>Because of preventing the laundry unbalancing, it rotates bit by bit.</li></ul>   |
| During washing and rinsing, lamps flickers.  | <ul style="list-style-type: none"><li>It is the cause of the power source wiring in a house. If fluorescence light be changed, it may improve condition.</li></ul>  |
| During spinning, suddenly supplying the water or rinsing.  | <ul style="list-style-type: none"><li>Because load unbalance occurred and safety switch operated. The spin will cycle resume after supplying water, rotating and correcting the unbalanced load.</li></ul>                          |
| Sloshing sounds of remaining water coming from your washing machine after SPIN cycle has been completed. | <ul style="list-style-type: none"><li>They are made by water retained by the machine for the purpose of maintaining balance and do not indicate malfunction.</li></ul>  |
| After pausing the machine during the spin cycle, it will not starts immediately.                         | <ul style="list-style-type: none"><li>There are a short pause before the machine begins to spin as the drainage valve opens sufficiently.</li></ul>   |
| If operates the machine at spinning on and off.  | <ul style="list-style-type: none"><li>You may hear intermittent motor sound ("coo" sound) in spinning process occurs, this is a sound which occurs in order to control rotation, and not a malfunction.</li></ul>                   |
| After water supply shut off or water with iron rust appears.   | <ul style="list-style-type: none"><li>Wait for water becomes clean. Returning type bleach can be used (hydrohiter etc.) when iron rust adhered to the white colored clothes. Avoid using the bleach for colored articles.</li></ul> |
| The buzzer does not stop.  | <ul style="list-style-type: none"><li>If the CHILD LOCK mode is set to ON, and the lid is opened while the machine is in operation, the buzzer beeps. Check inside the washing machine. Press POWER to turn it off.</li></ul>       |

## HANDLING METHOD FOR EMERGENCY

When the machine takes on abnormal operation, please disconnect the power plug and send it to our service agency for handling. Never disassemble the machine by yourself, for safety reasons.

## SPECIFICATIONS

| Model                                      | TWT-TLN10LWT & TWT-TLN10LSL      | TWT-TLN12LWT & TWT-TLN12LDS |
|--|----------------------------------|-----------------------------|
| Type                                       | Fully automatic washer           |                             |
| Washing System                             | Vortex type                      |                             |
| Cycle                                      | Regular-Heavy wash-Delicate-Soak |                             |
| Water Tap Pressure                         | 0.03~1 Mpa                       |                             |
| Rated Period of operation                  | Regular cycle 55 min             |                             |
| Overall dimension                          | 607*683*1007                     |                             |
| Standar amount of water (High water level) | 77 L                             | 79 L                        |
| Standar water consumption                  | 177 L                            | 180 L                       |
| Washing capacity                           | 10 kg                            | 12 kg                       |
| Weight                                     | 41 kg                            |                             |

# BEFORE CALLING THE SERVICEMAN

| WHEN                                | CHECK   | TREATMENT  |
|-------------------------------------|---|--|
| <b>does not operate</b>             | <ul style="list-style-type: none"> <li>• Is there a power outage?</li> <li>• Is the circuit breaker or fuses cut off?</li> <li>• Is the machine's plug properly inserted into an AC socket?</li> <li>• Is the power switch ON?</li> </ul> | Please confirm whether a power failure or fuse breaker is cut. Then draw out power supply plug, insert once again and turn the power switch on.                                    |
| <b>making noise</b>                 | <ul style="list-style-type: none"> <li>• Is there the inclination of the laundry?</li> <li>• Is your washing machine installed on an inclined or uneven surface?</li> </ul>   | Please correct the inclination or non stability of laundry in the washing machine.   |
|                                     | <ul style="list-style-type: none"> <li>• Are there match sticks, hairpins or metal objects being washed with the laundry?</li> </ul>  | Remove them.   |
| <b>water leak</b>                   | <ul style="list-style-type: none"> <li>• Is the faucet shape suited?</li> <li>• Are the hose coupling and the nozzle loose?</li> <li>• Is the water inlet nut loose?</li> <li>• Is the water supply hose connector clogged?</li> </ul>    | Adjust the inside ring of the hose union or change faucet shape (Refer to p. 17)<br>Re-attaching the water (Refer to p. 17)<br>Re-attaching the water supply hose (Refer to p. 17) |
| <b>does not beep the end buzzer</b> | <ul style="list-style-type: none"> <li>• If you turn the power on and press START pad immediately, it may not beep the end buzzer.</li> <li>• Is the end buzzer turned off?</li> </ul>  | Reset the end buzzer sound to turn on refer-ring to "If you wish to turn off the end buzzer sound. (p. 12)"  |

## Error Indication List

In the case the buzzer sounds and the display indicates as shown below.


| LED SHOWN                   | CHECK  | TREATMENT   |
|-----------------------------|--|---|
|                             | About the drainage hose<br><ul style="list-style-type: none"> <li>• Is the hose mounted correctly?</li> <li>• Is the hose routed horizontally?</li> <li>• Is the hose frozen?</li> <li>• Is the hose damaged? Is the end exposed to water?</li> <li>• Is the drainage hose clogged?</li> </ul>         | <br><ul style="list-style-type: none"> <li>• After checking, open and close the lid once. Press the "START/HOLD" button.</li> </ul>   |
|                             | <ul style="list-style-type: none"> <li>• Is the lid open?</li> </ul>   | <br><ul style="list-style-type: none"> <li>• Close the lid.</li> </ul>  |
| <br>Display interchangeably | <ul style="list-style-type: none"> <li>• Is the laundry loaded evenly?</li> <li>• Is the laundry unstable or placed on an incline floor?</li> </ul>  | <br><ul style="list-style-type: none"> <li>• Correct the load status of the laundry and the backlash of the machine, then close the lid.</li> </ul>                                 |
| <br>Display interchangeably | <ul style="list-style-type: none"> <li>• Are there any symptoms occurring that are similar to those of  - ?</li> </ul> <p>See the section of  -  above.</p>  | <br><ul style="list-style-type: none"> <li>• After checking, open and close the lid once, press the "START/HOLD" button.</li> </ul>   |
|                             | <ul style="list-style-type: none"> <li>• Is the faucet closed?</li> <li>• Is the water pipe frozen or the water service interrupted?</li> <li>• Is the water filter/lint collector at the supply port clogged with dirt? If the flow rate of the water is too small "E5" will be displayed.</li> </ul> | <br><ul style="list-style-type: none"> <li>• After checking, open and close the lid once, press the "START/HOLD" button.</li> </ul>   |
|                             | <ul style="list-style-type: none"> <li>• Is water supply alternate?<br/>(Hot water → cold intake valve)<br/>(Cold water → hot intake valve)</li> </ul>   | <br><ul style="list-style-type: none"> <li>• Check water supply correct or not<br/>Hot water → intake valve indicate "HOT"<br/>Cold water → intake valve indicate "COLD"</li> </ul> |

If the problem is not solved despite checking, unplug the power plug and request repair.

# INSTALLATION

## Installing the pump drain hose from Model TWT-TLN10LWT & TWT-TLN10LSL , TWT-TLN12LWT & TWT-TLN12LDS

- Insert the pump drain hose in as far as it will go, then use the accessory hose band to secure it tightly.
- Secure the hose tightly. An improperly secured hose may cause leakage.
- Lock hose band distance to cabinet about 10 mm as figure.

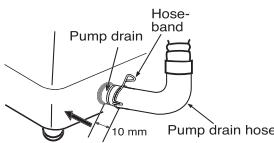

### Caution:

- Do not use the machine without the drain hose.
- Be careful in rubbing the hose. The hose may be torn.
- The maximum height of the drain hose should be at 1.2 m from the floor.
- Be careful about water leak when take off pump drain hose.

## Attaching the water supply hose to the faucet

- Inlet hose for hot water is "Orange" hose nut, for cold water is "White" hose nut as fig. 1.
- Tighten the hose nut on the end of water supply hose securely to the water supply port as fig. 2.
- Twist the hose nut to the faucet as fig. 3.

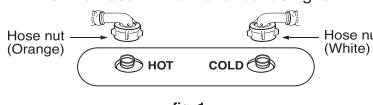


fig. 1

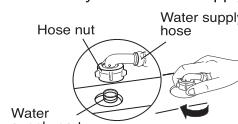


fig. 2

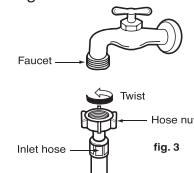


fig. 3

### Hints

- For faucet of hot water, lower its temperature as low as possible.
- Make sure the hoses are connected to the correct intake valve, Cold to Cold and Hot to Hot.
- The old inlet hose should not be reuse.

### Caution

## Installing the ground wire

- Be sure to ground your washing machine when installing. When connecting or disconnecting the ground wire, be sure to first remove the power plug from the AC socket.
- In case of the machine with two conductor cord connect the ground wire to a proper ground before plugging the power cord into the socket.
- In case of -3core cord the ground pin in the plug should be connected to the proper point of the socket.  
Do not connect the ground wire in any of the following places under any circumstances:
  - Do not connect the ground to gas piping. There is a danger of fire or explosion.
  - Do not connect the ground to telephone lines or lightning rods. There are dangerous during thunder or lightning storms. Also, as underground water pipes are often made of plastic, don't place grounding rods near them.

## Installing the ground wire

### Two-core flexible cord

#### When using the ground terminal on an AC outlet:

Ensure that the ground wire is securely connected to the ground terminal.

When there is no ground terminal:

- An optionally available grounding rods is re-commended for use.  
The grounding rod should be planted in the dampest ground possible.

\* For your safety and avoiding any fire dangers , you must not connect the device by an extension plug to electricity source and connect the device directly to electricity source .

\* This device for home use only .




# INSTALLATION

For Model TWT-TLN10LWT & TWT-TLN10LSL , TWT-TLN12LWT & TWT-TLN12LDS


## INSTALLATION

Adjust the legs so that the body of your washing machine is level.


- 1** After loosening the adjusting leg nut , adjust the leg to the proper height by turning it . Then tighten the adjusting leg nut securely once again.

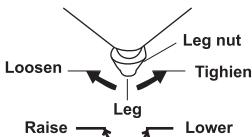

- 2** When the leg height is difficult to adjust because of floor slope or unevenness, place a board of sufficient thickness to prevent breakage under the affected legs to allow adjustment to a level position.

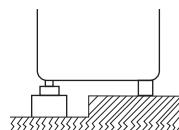

- 3** A weight attached to a string may be used to check to ensure that your washing machine is level. If show the same gap between A and B that is the horizontal level.

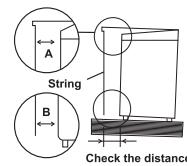

# MAINTENANCE

## If the stainless steel wash basket rusts for external reasons

Please clean the rust by a soft cloth or a soft cloth with a cream cleaner.

- \* Do not use metallic brush because the body may scratch and easily rust.

### ■ Stainless rust

The stainless tub usually prevents the rust. However, there is possible to have it. Please follow the recommendation below to prevent rust.

- Do not put the metallic objects into the machine, e.g. Hair clip.
- After draining the water, the rusted water will be drained. This will caused the accumulated rust inside the washing machine. Clean it again with clean water.



# INSTALLATION

## Choosing an installation location

### Install your washing machine in a level, stable place.

- It is dangerous to place the washing machine in an unstable location since it may move during vibration.
- It will increase the sound produced by the machine when it vibrates during use.



### When you move washing machine, hold the handles on the sides.

There are moving parts, electrical parts and steel plates which may cause electrical shock or injury.

- Never touch on the cabinet bottom by hands.
- Never lift at the cabinet bottom by hands.



### When the machine is covered.

Do not use the cover made of chloric vinyl. Sometimes it damages resinous parts and painted surface. When you use the cover made of chloric vinyl, put the cloth between the machine and the cover.

### Avoid place where the machine is exposed to direct sunlight.

- Plastic parts may become deformed or discolored.



### Avoid places where the machine may become frozen during cold weather.



### Allow a space of at least 5 cm from the sides and 10 cm. from the back side of the machine to the nearest vertical object.

- When placed too near to walls or other objects, the vibration of the machine during operation may cause them to shake.




**Caution:** Be careful for backside space (must more than 10 cm.), otherwise the pump drain hose may be bend effect to water drain problem.

## If the filling water becomes not good

The water inlet may be blocked by foreign objects. Remove the water supply hose and clean the filter with a brush.

- If you remove the water supply carelessly, water may splash. Therefore, use the following procedure.

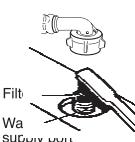

### Removing the water supply hose

- 1 Turn the water faucet off.
- 2 Turn the power switch ON and press the START/HOLD button.
- 3 After indicating the water level, loosen the hose nut of the machine top and remove it.



## In case of water may freeze

Drain all water from the basket, drainage hose and water supply hose after using the machine.

### If the water is frozen

- Fill warm water into the basket until the pulsator is completely covered. Leave it for 30 minutes. Then check to see whether the pulsator can be turned by hand.



# MAINTENANCE


## Detergent/Softener case

Remove the case to clean it. In addition, wipe away any dirt from the water supply port.

### Removing the case

#### 1 Removal procedure;

Pull the detergent /softener case toward you, then lift it for removal.

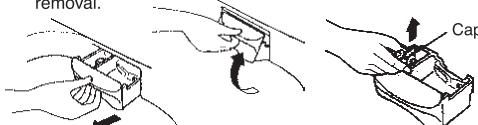


#### 2 Remove the cap of the detergent/softener case. Make sure to put back the cap after removing the cap. If the washing machine operates without the cap in place, the softener does not enter.

### Remounting procedure

#### 1 Mount the cap of the insertion case

#### 2 Lift the case obliquely in the same way as you remove it, and insert it deeply along the guides.

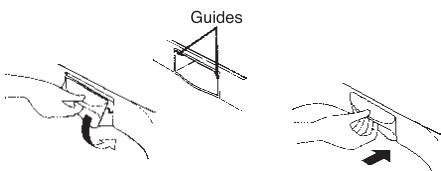

## Washing machine body and panel

Before performing any maintenance on your washing machine, be sure to remove the electrical plug from its power source.

The main body and control panel may be cleaned by wiping with a soft cloth soaked in water.

(Hard-to-remove dirt may be cleaned by wiping with a soft cloth soaked in a mild detergent.)

**Caution:** Never clean the body or control panel with benzine, thinner, cleanser, or other chemical cleaners. Use of such chemicals can discolor or damage parts.

## Cleaning the tub

### "TUB CLEANING" course

The dirt from clothes or waste water on the wash/spin basket will cause the smell or the problem of water draining. Such dirt from the washing process will then make the laundry dirty. If you are in such case, please use "Tub Cleaning" program once a month. Or in case the clothes have been starched, please use the "Tub Cleaning" program to remove the dirt of the starch from the basket.

#### "Tub Cleaning" Process

|                        |              |
|------------------------|--------------|
| Water intake/Stir (*1) | about 11 min |
| Soak                   | about 20 min |
| Wash                   | about 3 min  |
| Drain/Spin (*2)        | about 3 min  |
| Water intake/Stir (*1) | about 11 min |
| Rinse                  | about 3 min  |
| Drain/Spin (*2)        | about 3 min  |


\*1 The pulsator spins while the water level increases gradually. For the tub water, the operation may slightly differ.

\*2 The water spins while draining out.

- Do not use "Tub Cleaning" program continuously.

- If there is a great amount of dirt inside the basket, you had better use the chlorine-type basket cleaner for the washing machine. Please follow the instruction labeled on the cleaner bag.

- Normally use soap powder.
- The amount of detergent must be more than the guided Standard Detergent Amount.

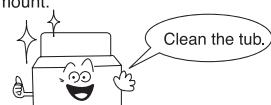

#### 1 Turn the POWER on.

#### 2 Press the button and select TUB CLEANING.

#### 3 Press the button.

- No indicator will light off.

#### 4 When the pulsator (spinning board) starts to spin, add the chlorine-type whitening detergent about 300 ml. to the basket.

- Add it at the first used water.
- Do not put any clothes in the basket during the "Tub Cleaning" program.

#### 5 Close the lid.

- If the lid is opened during the operation, the operation will stop before the draining and rinsing process.

#### Finish "Tub Cleaning" process.

- Beeping when the operation is finished.


# MAINTENANCE

## Cassette Filter

### Clean the lint trap at the end of operation.


#### ■ How to remove

Hold the upper side of the cassette filter, and push down and pull it at the same time.

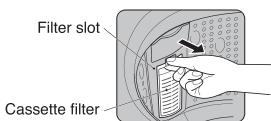


#### ■ How to remove

Turn over the filter, and then slide the filter case in the arrow direction of the following figure 1 to remove it 2 .  
Clean inside the filter cover and the filter case.

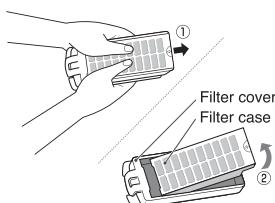

※ When it is difficult to remove the filter case due to lint attached, wet it with water to soften the lint.

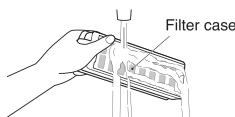

#### Cassette filter

#### ■ How to set in


Hold the filter case with its top side up. Put the lower side of the filter case in the filter stand, and then push it until a "click" sound is heard.



#### Filter cover

#### ■ How to set in


- 1 Set the filter case to the filter cover as follows.
- 2 Press down the filter cover case until a "click" sound is heard.

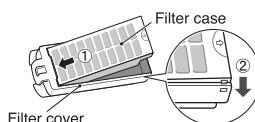


#### ■ When the filter valve inside the filter cover is loosened

※ If the filter valve is loosened, lint may not be collected.

- 1 Set the filter valve to the filter case while aligning its concavity and convexity to those of the filter case.

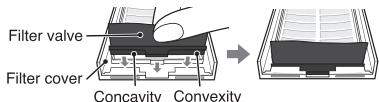

- 2 Insert the groove of the filter valve to the click at the center of the filter cover.

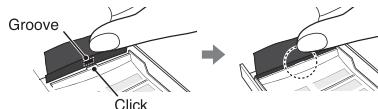

## Detergent/Bleach Dispenser

### Wipe or Wash out any remaining detergent.

If there is any remaining detergent hard to be removed, use the "TUB CLEANING" course.

- Before put detergent or bleach to in the detergent/bleach dispenser, remove water in its inlet.  
With any remaining water, detergent may be hardened and attached.



# LAUNDRY GUIDE


## When using liquid detergent and bleach

**Carefully read the directions given in the manual for the liquid detergent and bleaching agent and use them correctly.**

### Liquid detergents and liquid bleaches

Load the liquid detergent and the bleaching agent directly into the wash basket dissolving both little by little using the running water for washing. For timer-reserved washing, insert both into the dispenser.

Liquid detergent / bleaching agent insertion slot

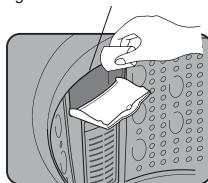

In case of reserving washing, pour the bleach into the powder detergent part of the "powder detergent/finishing agent insertion case".

### Chlorine-based bleaching agent

- To use a chlorine-based bleaching agent, dilute it with water three times as much. Load the bleaching agent into the wash basket by dissolving the bleach gradually using the running water for washing.
- Avoid putting the bleach directly and also applying it directly to the laundry. These actions cause discoloration and/or cloth damage.

### NOTICE:

- Be careful not to spill the bleach onto the operating panel. If you inadvertently spill the bleach, wipe it away at once.



### Powder bleaching agent

- Load the bleaching agent directly into the wash basket dissolving the bleach little by little using the running water to be for washing.

## When using softener

**Carefully read the directions of the softener in order to use it correctly.**

- Pour the softener into the softener dispenser by estimate its amount from the detergent amount display.
- The softener will automatically flow into the tub during the final rinse.

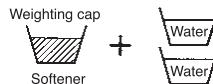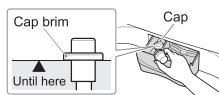

**Because of its tube-like structure, there may be the dilute water remaining inside. This; however, is not abnormal.**


- If the concentrated softener is used, dilute it with water one third of its original concentration before pouring it into the insertion case.

### NOTICE

- Make sure to close the dispenser completely. Do not pour the bleach on the upper part of the dispenser. If excessive bleach is used, then the whole bleach runs away inevitably.
- Be careful not to spill the softener onto the operating panel. If you inadvertently spill the finishing agent, with it away immediately.
- Do not leave the softener in the case for an extended period. The finishing agent may become hard.

# PRESET MODE

## How to use preset mode

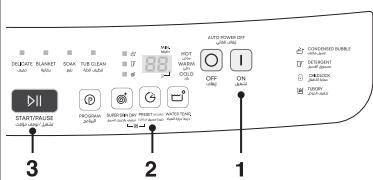

### TO SET/RESET PRESET MODE

- Turn the POWER off when you want to delete memory. If you wish to change preset time, turn the POWER off. And then set to new preset time.

### TO CONFIRM PRESET TIME

- Display preset time when you open the lid or press the PRESET button.
- The finished times for the preset and the actual times are different because of the water pressure and the drainage condition.

#### 1 Turn the POWER on.

- Put the laundry in the basket and select your favorite cycle or water level. Set the custom wash cycle.

#### 2 Press the PRESET button to preset the time.

- The displayed time can be changed from 2 to 12 hours by increasing 1 hour per press.


#### 3 Press the **>||** button.

- Check if the faucet is on.

#### 4 Put the detergent according to the detergent guide and then close the lid.


##### DETERGENT (25g/30L)

Pull the detergent case, then place the detergent evenly in the case. Then shut the case.

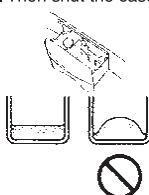


##### LIQUID DETERGENT

Pour the liquid detergent into the bleach dispenser.

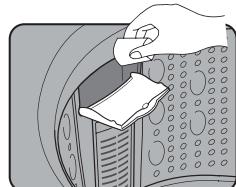

# RESUME FUNCTION (POWER FAILURE RECOVERY)

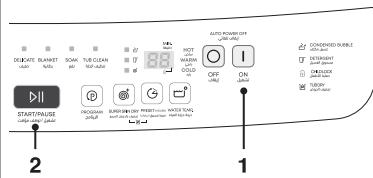

If a power failure occurs during operation, the washer memorizes the remaining process. After the electricity recovers, you can resume it.

#### 1 Turn the POWER on.

- The progress and course indicators of the remaining process will be flashing, and the buzzer sounds for 5 seconds.

#### 2 Press the **>||** button.

**NOTE** • For "PRESET MODE", if the power failure occurs before the machine starts operating, the machine will cancel the preset time. Therefore, you have to reset the time.  
• Press the **○** button to clear the remaining process.

# OPTION MODE

The contents in ( ) also apply to TWT-TLN10LWT & TWT-TLN10LSL

## If you feel the amount of water is less or much

Water level is automatically set to suit the amount of laundry. If you feel the amount of water is less or much, you can adjust it as the following.

If you feel the amount of water is much.



Turn the POWER on with pressing the WATER LEVEL button.



Adjust by pressing RINSE.

Press twice.

Press once.

(Decrease approx. 10L.) (Decrease approx. 5L.)

LINEAR WATER LEVEL

LINEAR WATER LEVEL

ستوى الماء الخطى

ستوى الماء الخطى

(77L)79L

(77L)79L

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

</

# CHILD LOCK MODE (if you have small children)

## CHILD LOCK mode

This model is equipped with CHILD LOCK mode. After this mode is set to ON, the washer will alarm if the lid is opened during the operation. If you find the accident such as children's falling into the wash tub, please take necessary safety action urgently.

If there are small children who require attention, set this mode ON.

**WARNING:** Pay attention to small children. Do not leave the lid open. Do not leave the washer filled with water. Never allow children to look into the basket or play around the washer. Do not place the stand or box etc. near the washer.

## HOW TO USE CHILD LOCK MODE

The CHILD LOCK mode (child safety equipment) considers the case in which a child falls into the wash basket by accident. This CHILD LOCK function gives an alarming noise about the trouble, ceases operation and drains water.

**When the buzzer makes a noise, open the lid and check the condition inside.**

### The operation of the CHILD LOCK mode


- If the lid is open during the operation in the CHILD LOCK mode, the buzzer will sound and operation will stop. Subsequently if that state persists about 5 seconds, it will be detected as an alarm and the water will be drained. The buzzer will continue sounding, unless the lid is close within 5 seconds, or after alarm detection, unless power is turned off or the CHILD LOCK mode is canceled.
- If the machine is started with the lid open, the water will be supplied for a while. When water reaches a certain level; however, the buzzer will sound and then after about 5 seconds, the CHILD LOCK mode will work.

### Setting the CHILD LOCK mode

Press the button, then the washing machine begins operating, follow the instruction below:

Hold down the button, press the button once again.

A buzzer will sound and the CHILD LOCK mode indicator will be activated.

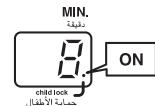


Once the CHILD LOCK mode is set, it is stored in memory.

### Cancelling the CHILD LOCK mode

Hold down the button, press the button once again.

A buzzer will sound and the CHILD LOCK mode indicator will be canceled.

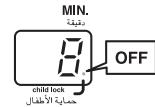

Once the CHILD LOCK mode can be canceled even during the operation.

### Adding Laundry or Detergent during the CHILD LOCK mode

Open the lid and then after adding laundry or detergent quickly with the buzzer sound, close the lid.

If the lid remains open, draining will start after about 5 seconds.

- The washing machine will not operate if the lid is close after the elapse of 5 seconds. In such case, cancel the CHILD LOCK mode or turn the POWER off. Then set the CHILD LOCK mode once again.

If the sounding buzzer is disturbing, cancel the CHILD LOCK mode. Then after opening the lid, add laundry or detergent, close the lid and set the CHILD LOCK mode once again.

- Remember to reset the CHILD LOCK mode after the cancellation.

# CUSTOM WASH CYCLES

At first, the value for each cycle is the standard setting. The user can change the time of washing, of rinsing and of spinning on every cycle by pressing the buttons. The cycle can be set as you desire, e.g. spin only, reuse the washed water/detergent.

- When the washer start to operate from "RINSE", the water level will be at the highest.
- The settings for rinsing by pressing the  button

|                   |                          |                  |
|-------------------|--------------------------|------------------|
| ONCE              | Static rinsing           |                  |
| ONCE, OVERFLOW    | Overflow rinsing         |                  |
| TWICE             | Shower rinsing (2 times) |                  |
| TWICE, OVERFLOW   | Shower rinsing (2 times) |                  |
| 3 TIMES           | Shower rinsing (2 times) | Static rinsing   |
| 3 TIMES, OVERFLOW | Shower rinsing (2 times) | Overflow rinsing |
|                   | Overflow rinsing         | Overflow rinsing |

- For "3 TIMES, OVERFLOW" rinsing, the indicators of "1 TIME" "2 TIMES" and "OVERFLOW" will light up.

## ■ The change for each cycle.

### DELICATE courses

WASH : Select from 4/8/12 min

RINSE : Select "1 TIME" to "2 TIMES", "OVERFLOW"

SPIN : Select 1/5 min

### "BLANKET" cycle

WASH : Select from 4 / 8 / 12 min.

RINSE : Select from "1 TIME" to "3 TIMES",  
OVERFLOW".

SPIN : Select from 1 / 5 / 9 min.

- For the rinsing of "BLANKET" cycle: The "OVERFLOW" indicator will light off when there is "Shower rinsing 2 times" or "Static rinsing". The "OVERFLOW" indicator will light up when there is "Overflow rinsing".

### "SOAK" cycle

- The time of "WASH" "RINSE" and "SPIN" cannot be selected.

WASH : "8 MIN"

RINSE : "2 TIMES"

SPIN : "5 MIN"

### Soaking time

- If it is desired to change the foam soaking time, press the "program" button and change the time.

3 hrs ————— 2 hrs ————— 1 hr

Indication of 3 hrs: 

Indication of 2 hrs: 

Indication of 1 hr: 

## "REGULAR" "HEAVY WASH" cycles

|         |          |        |
|---------|----------|--------|
| 12 MIN. | OVERFLOW | 9 MIN. |
| 8 MIN.  | 2 TIMES  | 5 MIN. |
| 4 MIN.  | 1 TIME   | 1 MIN. |



Select "SPIN": 1, 5, 9 min.

WASH سغب RINSE شطف SPIN دوار سريجع

Select the number of rinsing cycles

Select the time of WASH: 4, 8, or 12 min.

- 1 Open the lid and put the laundry in the basket. And select the desired cycle.

- 2 Set the custom wash cycle ( , ,  ).

| Conditions  | Cycle               | Button  |
|---|---------------------|---|
| • Re-use the detergent.   | WASH only           |    |
| • Melt the detergent before use.  |                     |   |
| • Re-use the washed water.  | WASH and RINSE      |    |
| • Wash clothes with different soil separately and then spin all together.       | WASH and SPIN       |     |
| • Rinse the washed laundry only. (Spin before rinse.)                           | RINSE only          |    |
| • Both rinse and spin. (Spin before rinse.)                                     | RINSE and SPIN      |     |
| • Select the desired cycle from washing to spinning.                            | WASH RINSE and SPIN |    |
| • Spin only. (Drain before spin.)   | SPIN only           |    |
| • Drain the water from the tub. (Open the lid. After "E2" displays, power off.) | DRAIN only          |    |

- 3 Press the  button.

# SUPER SPIN DRY (TUB DRY)

Select "SUPER SPIN DRY" from the (WASH, RINSE, SPIN) cycle.

## ■ The amount of laundry/once of spin


Less than 5.0 kg

## ■ Setting time for spinning

- You can manually set the time of spinning according to the following guide:
  - If you would like to shorten the time of drying clothes in the room: 45 min
  - If you would like to almost dry the synthetic clothes: 90 min

## ■ The clothes which cannot be performed spin drying

- "SUPER SPIN DRY" program will use a long time to spin with high speed. Please do not spin the following clothes:
  - Easily color bleeding clothes
  - Easily wrinkled clothes (e.g. blouse, %100 cottons, or shirts)
  - Easily transformable clothes
  - Waterproofed clothes

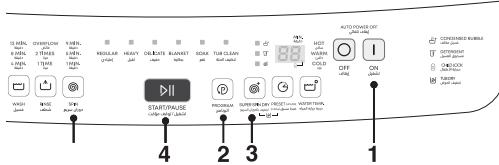

### 1 Turn the POWER on and put the laundry in the basket.

### 2 Press the button to select the program.

- At the set of "DELICATE" "BLANKET" "TUB CLEANING" without "SPIN" cycle, you cannot select "SUPER SPIN DRY".

### 3 Press the button and select the desired time.

- The "SUPER SPIN DRY" indicator will light on and the "9 MIN" spinning time will display.

### 4 Press the button.

- The pulsator will operate before the water is let into the basket. The washer will estimate the amount of laundry and display the detergent amount (while the lid is open).

### 5 Put the detergent as the display and close the lid.

- If the lid is open during the operation, the washer will stop before washing and spinning.

**After the operation:** the buzzer will beep when the washer completes the operation.

- Turn off the faucet and clean the lint collector.

## "TUB DRY"

### ■ When using "TUB DRY"


After using "SUPER SPIN DRY" for 30 minutes, you can remove all the drops of water left in the basket to protect from the bacteria.

Please perform tub drying once a week.

- Do not put the laundry during the spin cycle.

### CAUTION

- The amount of bacteria in the basket is less or much up to the operation of the washer.
- If there is bacteria in the basket once, it cannot easily removed by using "TUB DRY". So you should usually use "TUB DRY" cycle.

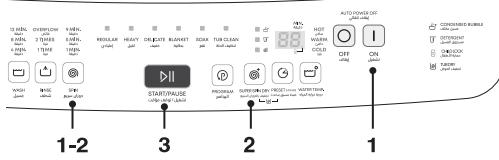

### 1 Turn the POWER on.

### 2 After pressing the button, press the button to select the time.

- The "SUPER SPIN DRY" and "9 MIN" lamps will light up.
- Please set the time at 30 minutes if you would like to select "TUB DRY" cycle.


### 3 Close the lid and press the button.

After the end of operation, there will be a beep.

# HOW TO OPERATE

## WASHING OF BLANKET

## TEMPERATURE TABLE

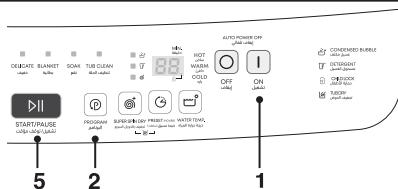

### Type and amount which may be washed.

Double size

(180 cm x 230 cm or less)

%100 synthetic fiber

Type: Mayer, Tuft, Down cloth

Weight: 5.0 kg or less for TWT-TLN12LWT & TWT-TLN12LDS


4.2 kg or less for TWT-TLN10LWT & TWT-TLN10LSL

- All wool blankets and regular electric blankets should NEVER be washed. Washable electric blankets should be washed according to the washing instruction given in the user's manual that accompany them when purchased.

- If the blanket will not go into washing net because of fiber length of thickness, it can not be washed.


### Folding blankets

- Remove waste or thread from blanket.
- Fold the blanket in six lengthwise.  
Fold it once again the same way.

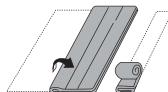

### Insert a blanket to the net

- Roll up the blanket.
- Roll the blanket up loosely except Mayer type blanket.
- Place the blanket into the blanket net hem-side first, and close the fastener.

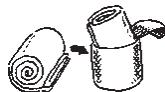

### Washing period may become longer with drainage condition.

**1 Turn the POWER on.**

**2 Press the button and select "BLANKET".**

**3 Pour the liquid detergent in the wash basket.**

**4 Put a large item placed in the blanket washing net in the washing basket.**

**5 Close the lid and press the button.**

### Take the blanket out after washing completed.

- Open the blanket net fastener and put at the center of the blanket. Then take out the blanket from net.

### The change for water temperature.


For each program, temperature of water should be automatically setting and user can set by manual as table.

| Cycle        | Water temp. Initial setting | Water temp. for manual setting |
|--------------|-----------------------------|--------------------------------|
| REGULAR      | WARM                        | HOT / WARM / COLD              |
| HEAVY WASH   | WARM                        | HOT / WARM / COLD              |
| DELICATE     | COLD                        | COLD                           |
| SOAK         | COLD                        | WARM / COLD                    |
| BLANKET      | COLD                        | HOT / WARM / COLD              |
| TUB CLEANING | COLD                        | COLD                           |

- Wash temperature to be selected is illuminated a complete cycle on the control panel.
- Temperature for wash is able to change for your washing style but for rinse is not able to change because of energy saving.


# HOW TO OPERATE

Preparation For Model WT-TLN10LWT & TWT-TLN10LSL , TWT-TLN12LWT & TWT-TLN12LDS

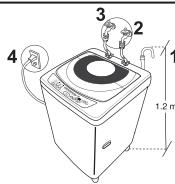

- 1 Set pump drain hose for drain. (maximum height should be 1.2 m from floor)
- 2 Set the water supply hose correctly. (Refer to page 18)
- 3 Turn the water faucet on.
  - Make sure that there are no sign of water leakage at water tap or inlet valve.
- 4 Connect the power plug.

## "REGULAR" "HEAVY WASH" "DELICATE" "SOAK"

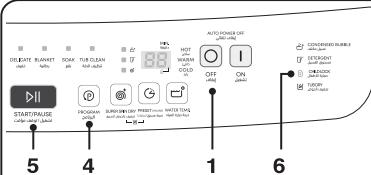

### "REGULAR" cycle

Water level, water current and time are automatically selected according to the quantity and type of laundry detected automatically. Put the laundry evenly and confirmly. If it is not, the lower water level water may be set.

### "HEAVY WASH" cycle

It is especially for heavy soiled clothes. It washes with stronger water current.

### "DELICATE" Course

This Couse Is for delicate Clothes such as blouse or lingerie to wash gently with very mild water flow.

Cloth weight : 2KG or less

### "SOAK" cycle

This method is used to wash clothing which easily absorbs stain and clothes with noticeable stains.

- The time requirement is 3 ,2 ,1 hour.
- Rinsing is set to "OVERFLOW RINSE".

### 1 Turn the POWER on.

- "REGULAR" and "CONDENSED BUBBLE" cycles will be selected automatically.

### CONDENSED BUBBLE

The washer starts flowing water at the low level to absorb the concentrated detergent into the laundry in order to remove the dirt efficiently.

### 2 Turn the POWER on.

- The "REGULAR" lamp will light up.

### 3 Put the laundry in the basket.

- In case of selecting "SUPER SPIN DRY" cycle, please see page 8 for details.

### 4 Press the button to select "REGULAR" "HEAVY WASH" "HEAVY RINSE" "SOAK".

### 5 Press button.

- The pulsator automatically detects the laundry amount, and indicates the amount of concentrated detergent suitable for the laundry amount.

### 6 Put in the detergent according to the detergent guide.

### 7 Close the lid.

- If you keep the lid opening, the cycle will stop before spin.
- Avoid your finger caught when closing the lid.

### Cycle end

The power turn off automatically.

- A "beep" sound will be heard when operation is finished.

\* If you add the laundry during washing, be sure to press button.

After stopping the basket, put the laundry in it.

\* If the CHILD LOCK mode is set to ON, and the lid is opened while the machine is in operation, the buzzer beeps and the CHILD LOCK indicator flashes then the machine starts draining water.

# RECOMMENDED DETERGENT AMOUNT

## Digital Display Unit

### After starting the operation

If the lid is open, the washer will display the guided detergent amount.

Detergent

1L  
1.1

Display 1.4 spoon of the detergent

### The amount of supply using the measure spoon accompanying the compact detergent is displayed.



One spoonful of detergent denotes about 55L of water consumption

※ Depending on the kind of detergents, amount of water consumption by one spoonful changes. Adjust the detergent volume according to the particular detergent in use.

### After the start of operation

If the lid is closed, the estimated residual time to the end of washing will be displayed.

MIN.  
55

### Reservation of the time to complete washing

The preset hours are displayed.

1  
1

### If an error occurs.

An error code will be displayed.


E  
L

## The estimated amount of washing

| Amount /spoon<br>cup | Manual Water Level Setting   |                             | Detergents (normal type) |              | Softener      |                   |
|----------------------|------------------------------|-----------------------------|--------------------------|--------------|---------------|-------------------|
|                      | TWT-TLN12LWLT & TWT-TLN12LDS | TWT-TLN10LWT & TWT-TLN10LSL | Powder                   | Liquid       | Normal Type   | Concentrated Type |
| 1.4                  | 79 L                         | 77 L                        | Approx. 52g              | Approx. 52mL | Approx. 94 mL | Approx. 32mL      |
| 1.3                  |                              |                             | Approx. 48g              | Approx. 48mL | Approx. 87 mL | Approx. 29mL      |
| 1.2                  | 67 L                         | 66 L                        | Approx. 44g              | Approx. 44mL | Approx. 80 mL | Approx. 27mL      |
| 1.1                  |                              |                             | Approx. 41g              | Approx. 41mL | Approx. 74 mL | Approx. 25mL      |
| 1.0                  |                              |                             | Approx. 37g              | Approx. 37mL | Approx. 67 mL | Approx. 23mL      |
| 0.9                  |                              |                             | Approx. 33g              | Approx. 33mL | Approx. 60 mL | Approx. 20mL      |
| 0.8                  | 47 L                         | 46 L                        | Approx. 30g              | Approx. 30mL | Approx. 54 mL | Approx. 18mL      |
| 0.7                  |                              |                             | Approx. 26g              | Approx. 26mL | Approx. 47 mL | Approx. 16mL      |
| 0.6                  |                              |                             | Approx. 22g              | Approx. 22mL | Approx. 40 mL | Approx. 14mL      |
| 0.5                  |                              |                             |                          |              |               |                   |
| 0.4                  | 21L                          | 21L                         | Approx. 15g              | Approx. 15mL | Approx. 27 mL | Approx. 9mL       |

## "CONDENSED BUBBLE" Indicator

The "CONDENSED BUBBLE" indicator will light up and off when the washer starts the operation.

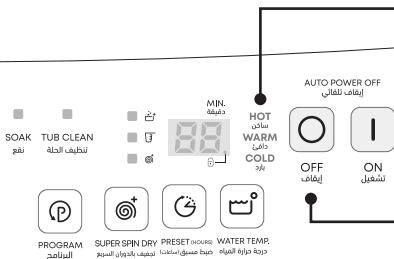

## "PROGRAM" button

- When pressing this button, a lamp will light up. Then select the program suitable with the laundry.

## "SUPER SPIN DRY/TUB DRY" button

- Press this button to evaporate the water from the basket or to dry the basket.

## "PRESET" button

- You can preset the time of all washing process.

## CHILD LOCK Mode Display

- After selecting this mode, "●" will light up.

## Water Temp. Indication

- Water temperature is shown by lamp turned on.

## "POWER" button

- Press this button to power on/off.
- Power is automatically turned off about 15 seconds after the end of operation, or about 10 minutes later if the operation is not on.

## "WATER TEMP." button

Press this button when select water temperature.

## WATER TEMPERATURE GUIDE

| WATER TEMPERATURE | USED FOR  |
|-------------------|---|
| Hot               | White and non-faded cottons, linens with heavy or normal soil.<br>Permanent press & synthetics with heavy or oily soil. |
| Warm              | Dark or faded fabrics. White & colored synthetics.<br>Permanent press with normal or light soil.                        |
| Cold              | Normal or lightly soiled fabrics.   |

# CONTROL PANEL DESCRIPTION

## ■ Operation Panel of TWT-TLN10LWT & TWT-TLN10LSL , TWT-TLN12LWT & TWT-TLN12LDS

- Following is the operation panel of TWT-TLN12LWT & TWT-TLN12LDS
- Apart from the displaying values of [WATER LEVEL], other items are common to TWT-TLN10LWT & TWT-TLN10LSL , TWT-TLN12LWT & TWT-TLN12LDS

On explanation of [WATER LEVEL], the contents in ( ) also apply to TWT-TLN10LWT & TWT-TLN10LSL

### Water Level Indicator

- The set water level indicator is flashing when the water has been supplied and it will light up once the water is at the set level.

#### Automatic Mode

- The water level is set linearly by adjusting to the washing volume. If the water level is assigned at the point with no particular indication, then the nearest level will light up.
- If there is some water in the basket before the operation, the indicator at the highest level will light up.

#### Setting the button

- Press the  button to choose the water level. The indicator at the higher water level will light up.
- While the water is flowing into the basket, the indicator at "WATER LEVEL" will light off.

### Progress Indicator

- The current washing process blinks and the remaining process lights up.
- When power is turned on and a course is selected, the washing time, the number of rinsing cycles and the spinning time are displayed.

(Example) Washing Operation

 CYCLE 

12 MIN. OVERFLOW 9 MIN.

دقيقة ماء فاض دقيقة


8 MIN. 2 TIMES 5 MIN.

دقيقة ٢ مرحلة دقيقة

4 MIN. 1 TIME 1 MIN.

دقيقة ١ مرحلة دقيقة

#### Water Level Indicate

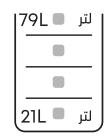

### Course Indicator

- The indicator of the selected washing course will light up.

### TORNADO



### "WASH" "RINSE" "SPIN" buttons

- These buttons allow you to set a washing time, the number of rinsing cycles to be repeated and a spinning time respectively.

### "START/HOLD" button

- Press this button to start the process.
- Press this button to hold the operation.

# CAUTION

**CAUTION:** This indicates an important item where incorrect operation may lead to injury or material damage.

**Do not pull the cord when unplug the appliance.**

Hold the plug body to unplug.

It can cause electrical shock or malfunctions that lead to injuries.

**Do not use water with temperatures over °65C.**

Water that is too hot can cause malfunctions and deformation of the machine, which may result in electrical shock.

**Do not attempt to wash or rinse waterproofed sheets, mats, or clothing.\***

Doing so may cause abnormal vibration or injury during the spin cycle.

\*: This includes raincoats, fishing gear (jackets and waders), ski wear, sleeping bags, etc.

**Do not climb or place heavy objects on the washing machine.**

Doing so may result in injury due to bending or breakage.

**Pull out the power plug if you do not plan to use the machine for a long time.**

Failure to do so may result in electrical shock or shorts due to deterioration of the insulation.

**Do not place the hands or other objects under the washing machine while in operation.**


Moving parts may cause injury.

**Before use, make sure the faucet is open, and the connection with water supply hose is not loose or leakage water.**

Looseness of screws, hose connections, or other areas may cause water leakage or other damage.


The opening must not be obstructed by carpeting when the washing machine is installed on a carpet floor.

## DESCRIPTION OF PARTS

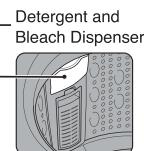


**Opening and closing of the detergent and bleach dispenser:**

- 1 Hold the groove of the entry gate with fingers, and pull the cover out while pressing the hook.
- 2 After putting in detergent, close the cover until click is heard.

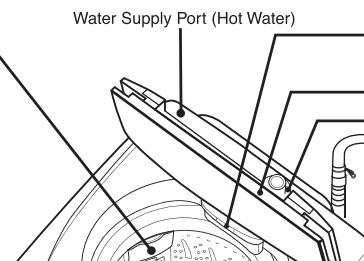

Powder Detergent (Present/Preset)/ Softener Case

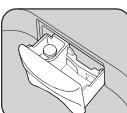

Water Supply Port (Hot Water)

Lid

Water Supply Port (Cold Water)

Pump Drain Hose

Hose Hanger

Power Cord

**Caution:**

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Pulsator (Hybrid Screw Type)

Horizontal level indicator Except

TWT-TLN10LWT

TWT-TLN10LSL

TWT-TLN12LWT


TWT-TLN12LDS

Cassette filter


Accessories For Model:

TWT-TLN10LWT&TWT-TLN10LSL

TWT-TLN12LWT&TWT-TLN12LDS

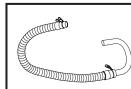

Pump drain hose

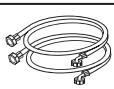

Water supply hose x 2  
(Orange nut for "Hot")  
(White nut for "Cold")

Control Panel

Adjustable Leg (Front: 1 piece)

# CONTENTS

|                                |       |
|--------------------------------|-------|
| WARNING .....                  | 2     |
| CAUTION .....                  | 3     |
| DESCRIPTION OF PARTS .....     | 3     |
| CONTROL PANEL                  |       |
| DESCRIPTION.....               | 5~4   |
| RECOMMENDED DETERGENT          |       |
| AMOUNT .....                   | 5     |
| HOW TO OPERATE.....            | 7~6   |
| SUPER SPIN DRY (TUB DRY) ..... | 8     |
| CUSTOM WASH CYCLES .....       | 9     |
| CHILD PROOF MODE .....         | 10    |
| OPTION MODE .....              | 11    |
| PRESET MODE .....              | 12    |
| RESUME FUNCTION .....          | 12    |
| LAUNDRY GUIDE .....            | 13    |
| MAINTENANCE .....              | 16~14 |
| INSTALLATION .....             | 18~16 |
| BEFORE CALLING                 |       |
| THE SERVICEMAN .....           | 20~19 |
| HANDLING METHOD FOR            |       |
| EMERGENCY .....                | 20    |
| SPECIFICATIONS .....           | 20    |

## WARNING

**WARNING:** This indicates an important item which incorrect operation may lead to injury.

**Never attempt to touch laundry in the spin basket until the motion of the basket stops completely.**

Laundry in the basket may become wrapped around the hand, even when the basket is only moving slowly. Use particular caution when children are present.



**Never allow children to look into the basket or play around the washing machine.**

**Do not place the stand or box near the washing machine.**

Children may fall into the tub and get injured or drowned.



**Never put your hands in the washer when hot water supply is used.**

**Never disassemble or modify the machine.**

It can cause fire or electrical shock or malfunctions that lead to injuries. Consult the store you bought the machine.

**Use proper power source indicated in the rating label of the machine.**

It can cause fire or electrical shock.

Failure to use a proper power source may result in the electrical outlet becoming excessively hot, leading to fire.

**Unplug the power cord from the electrical outlet before attempting to service the washing machine.**

Do not handle the power cord with wet hands. It can cause electrical shock or malfunctions that lead to injuries.

**Never use damaged power cord, plugs, or loose socket.**

It can cause electrical shock or malfunctions that lead to injuries or fire.

**Do not damage the power cord.**

Do not attempt to damage, cut, or modify the power cord, or subject it to excessive bending, pulling, twisting, or binding. Also, do not yank the metal portion, place heavy objects on the cord, or pinch the cord. Doing so may damage the cord, resulting in fire or electrical shock.

If the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

**Do not install in a bathroom or in area exposed to the strong sunshine.**

Doing so may result in electrical shock or rust.

**Do not allow water to come into direct contact with the various parts of the outer body.**

Doing so may result in electrical shock.

**Do not place flammable materials in the basket.**

Do not put any kerosene, gasoline, benzene, thinner, alcohol, other flammable materials, or the laundry soaked with such materials in the basket. It can cause explosion or fire.

**Wipe away any buildup of dust or grime on the prongs of the power plug.**

Buildup of dust or grime may cause fire.

**Do not close the fire on plastic parts.**

It can cause fire.

**Make sure that water drains properly.**

Using the washing machine with faulty drainage may cause water to back up within the machine, leading to electrical shock or fire.



## Model

**TWT-TLN10LWT**  
**TWT-TLN10LSL**  
**TWT-TLN12LWT**  
**TWT-TLN12LDS**

Thanks For Choosing Tornado FULLY AUTOMATIC WASHING MACHINE

# ELARABY