


دليل المستخدم

Model
TFP-1000CC

		Kg	
		500 g	4 - 6x pulse
		100 g	15x pulse
		150 g	50 sec
		300 g	10 sec
		250 g	40 sec
		250 g	45 sec
		100 g	40 sec
		500 g	30 sec
		400 g	4 min
		200 g	
		200 g	
		125 - 350 ml	15 - 20 sec
		500 ml	1 min
		750 ml	1 min
		500 ml	30 sec
		6	20x pulse
		* > 200 g	=

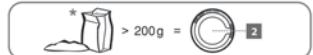



TORNADO

TORNADO

Owner's Manual

Model
TFP-1000CC



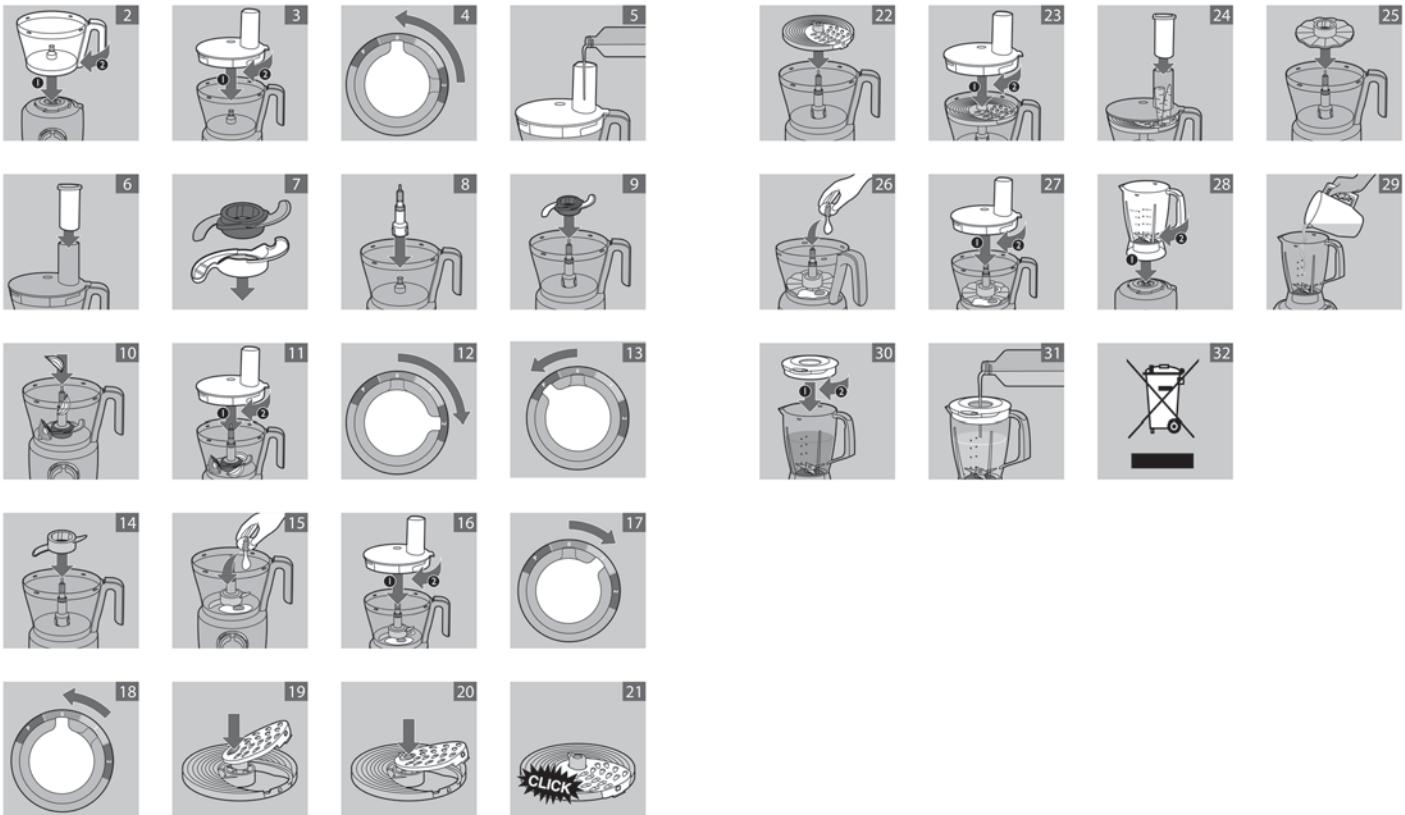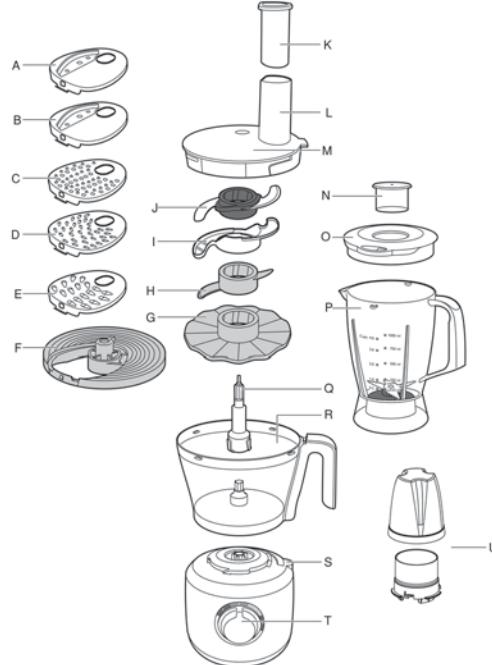

Information about the operating instructions	4
Liability.....	4
Notices in the operating instructions	4
CE Declaration of Conformity	5
Intended use.....	5
Unauthorized use	6
Important Safeguards	6
Built-in safety lock.....	7
Before first use	7
General description	9
Technical data	9
General.....	9
Robot	9
Blade unit.....	10
Tips.....	11
Kneading accessory	11
Slicing and shredding inserts.....	12
Tips.....	13
Emulsifying disc	13
Tips.....	13
Blender	13
Tips.....	14
Cleaning of the appliance	14
Quick-cleaning the food processor bowl and blender jar.....	15
Storage.....	15
If at once you don't succeed	16
Dispatch.....	17

Information about the operating instructions

These operating instructions are intended to enable the safe and proper handling and operation of the appliance.

Read these operating instructions carefully before using the appliance for the first time.

Keep the operating instructions in a safe place. Include these operating instructions when passing the appliance on to another user.

Notices in the operating instructions



WARNING!

Indicates notices which, if ignored, can result in risk of injury or death.



ATTENTION!

Indicates notices of risks that can result in damage to the appliance.



NOTICE!

Emphasizes tips and other useful information in the operating instructions.

CE Declaration of Conformity

This appliance fulfills the requirements of the Appliance and Product Safety Law (GPSG) and the EU Directives 2004/108/EC "Electromagnetic Compatibility" and 2006/95/EC "Low-Voltage Directive."

The appliance bears the CE mark on the rating plate.

Intended use

- The appliance is constructed to process normal household quantities.

**CAUTION!**

Never immerse the motor unit in water or any other liquid, nor rinse it under the tap. Use only a moist cloth to clean the motor unit.

- Never let the appliance run unattended.
- If food sticks to the wall of the blender jar or bowl, switch off the appliance and unplug it. Then use a spatula to remove the food from the wall.
- Never use your fingers or an object (e.g. a spatula) to push ingredients down the feeding tube while the appliance is running. Only use the pusher for this purpose.
- Be very careful when you handle or clean the inserts, the food processor blade unit and the blade unit of the blender jar. The cutting edges of the blade units and the inserts are very sharp. Be especially careful when you empty the bowl or blender jar.

**CAUTION!**

Never switch off the appliance by turning the blender jar, the bowl or the lid of the bowl. Always switch off the appliance by turning the speed selector to 0.

- Do not use any abrasive substance for cleaning the appliance.
- Do not abuse the electrical cord. Never disconnect from outlet by pulling the power cord. Always use the body of the plug for disconnecting the appliance.
- Do not bend the power cord. Do not keep the folded power cord.
- Always unplug the appliance after use.
- Switch off the appliance before you detach any accessory.
- Unplug the appliance immediately after use.

- Always unplug the appliance before you reach into the blender jar with your fingers or an object (e.g. a spatula).
- Wait until moving parts stop running before you remove the lid of the bowl or jar.
- Consult the table in this user manual for the correct quantities and processing times.
- Certain ingredients may cause discolourations on the surface of the parts. This does not have a negative effect on the parts. The discolourations usually disappear after some time.
- Never fill the blender jar or food processor bowl with ingredients hotter than 80°C.
- If you use the blender jar to process a hot liquid, always place the lid on the jar to avoid the risk of scalding due to hot liquid splashing out of the jar.

Unauthorized use

- The examples of unauthorized use listed here can result in malfunctions, damage to the appliance or personal injury:
- This appliance is not designed to be used by persons (including children) with limited physical, sensory or mental capacities or by persons lacking in experience and/or knowledge, unless they are supervised by someone who is responsible for their safety or have received instructions on how to use the appliance. Children should be supervised to ensure that they do not play with the appliance.
- Children should be supervised to ensure that they do not play with the appliance. Electric appliances are not toys for children! Therefore, use and store the appliance away from the reach of children. Children do not recognize the danger involved with handling an electric appliance. Do not let the power cord dangle from the appliance.
- Keep packaging films away from children - danger of suffocation!

Safety is important!!!

For yours and others safety please read the instructions before using the appliance.

Important Safeguards

- Always unplug the appliance before assembling, disassembling, cleaning.
- Before plugging into a socket, check whether your voltage corresponds to the rating label of the appliance.
- Don't plug the appliance into the power supply until it is fully assembled and always unplug before disassembling the appliance or handle the blade.
- Don't allow children to use the blender without supervision.
- Don't let the motor unit, cord, or plug get wet
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized Fakir Service facility for examination, repair or adjustment.
- Don't let excess cord hang over the edge of the table or worktop or touch hot surface.

**ATTENTION!**

- Incorrect voltage can destroy the appliance. Operate the appliance only if the voltage specified on the rating plate corresponds to the voltage in your household.
- The socket must be protected with a 16 A automatic circuit breaker.
- Use only extension cords designed for the power input of the appliance.

Built-in safety lock

This feature ensures that you can only switch on the appliance if you have assembled the blender jar or the bowl correctly on the motor unit and the lid correctly on the bowl. If the blender jar or bowl and its lid are assembled correctly (see chapter 'Using the appliance'), the built-in safety lock will be unlocked.

Before first use

Thoroughly clean the parts that come into contact with food before you use the appliance for the first time (see chapter 'Cleaning').

**WARNING! DANGER OF ELECTRIC SHOCK!**

- Never touch the plug with wet hands.
- When unplugging the appliance, always pull directly on the plug and never on the power cord.
- Do not kink, pinch or run over the power cord and do not expose it to heat sources.
- If the power cord of this appliance is damaged, it must be replaced by the manufacturer or the manufacturer's customer service department or a person with similar qualifications to prevent any hazards.
- Do not use any damaged extension cords.

**WARNING!**

In case of danger : In case of danger or accident, unplug the appliance immediately.

**WARNING!**

Never operate a defective appliance or an appliance with a defective power cord. There is a danger of electric shock.

Before contacting our service department, check to see if you can eliminate the problem yourself. Refer to the chapter " If at once you don't succeed ". If you were not able to eliminate the problem yourself, please contact our customer service. Before calling, have the article no. and appliance/model name at hand. This information can be found on the rating plate of the appliance.

**WARNING!**

Repairs and maintenance may by performed only by trained technicians (e.g. Fakir customer service). Only original Fakir replacement parts may be used. Improperly repaired or serviced appliances may pose a danger to the user.

General description (Fig. 1)

- A) Fine slicing insert
- B) Medium slicing insert
- C) Granulating insert
- D) Shredding insert fine
- E) Shredding insert coarse
- F) Insert holder
- G) Emulsifying disc
- H) Kneading accessory
- I) Protective cover for blade unit
- J) Blade unit
- K) Pusher
- L) Feeding tube
- M) Lid
- N) Stopper
- O) Lid of blender jar
- P) Blender jar
- Q) Tool holder
- R) Food processor bowl
- S) Safety lock
- T) Speed selector
- U) Grinder Attachment

Technical data

Power consumption : max. 1000 Watt
Voltage : 220-240V~50/60 Hz
Protection class : II

General

The appliance is equipped with a built-in safety lock that prevents it from functioning if the blender jar or food processor bowl and its lid are not assembled properly.

Robot

1. Put the bowl on the motor unit (1) and turn it clockwise to fix it (2) (Fig. 2).

**WARNING!**

The bowl is assembled correctly when the handle is directly above the closed lock symbol.

2. Put the tool holder with the desired accessory in the bowl (blade unit, kneading accessory, emulsifying disc or the insert holder with one of the inserts). See the appropriate section below.
3. When you use the blade unit or the kneading accessory, put the ingredients to be processed in the bowl.
4. Put the lid on the bowl (1). Turn the lid clockwise (2) to fix it ('click') (Fig. 3).



WARNING!

Make sure the projection on the lid locks into the slot of the bowl handle.

5. When you use the insert holder with one of the inserts, add the ingredients through the feeding tube and push them down with the pusher.
6. Select the speed setting that corresponds with the colour of the accessory you choose. See the appropriate section below.
7. When you have finished processing, turn the speed selector to 0 (Fig. 4).

Feeding tube and pusher

- Use the feeding tube to add liquid and/or solid ingredients. (Fig. 5)
- Use the pusher to push solid ingredients down the feeding tube. (Fig. 6)

Tip: You can also use the pusher to close the feeding tube. This prevents ingredients from escaping through the feeding tube.

Blade unit

You can use the blade unit to chop, mix, blend or puree ingredients.

1. Remove the protective cover from the blade (Fig. 7).
The cutting edges are very sharp. Do not touch them.
2. Put the tool holder in the bowl. (Fig. 8)
3. Put the blade unit on the tool holder in the bowl (Fig. 9).
4. Put the ingredients in the bowl. Pre-cut large pieces of food into pieces of approx. 3 x 3 x 3cm (Fig. 10).



WARNING!

Always put the tool holder with the blade unit in the bowl before you add the ingredients.

5. Put the lid on the bowl (1). Turn the lid clockwise (2) to fix it ('click') (Fig. 11).



WARNING!

Make sure the projection on the lid locks into the slot of the bowl handle.

6. Put the pusher in the feeding tube.
7. Select the speed that corresponds with the colour of the accessory (Fig. 12).
8. When you have finished processing, turn the speed selector to 0 and unplug the appliance (Fig. 4).

Tips

- When you chop onions, turn the speed selector to P (pulse position) a few times to prevent the onions from becoming too finely chopped (Fig. 13).
- Do not let the appliance run too long when you chop (hard) cheese or chocolate. Otherwise these ingredients become too hot, start to melt and turn lumpy.
- Do not use the blade unit to chop very hard ingredients like coffee beans, turmeric, nutmeg and ice cubes, as this may cause the blade to get blunt.
- If food sticks to the blade or to the wall of the bowl, switch off the appliance and unplug it. Then use a spatula to remove the food from the blade or from the wall of the bowl.

Kneading accessory

You can use the kneading accessory to knead yeast dough for bread and pizzas.

1. Put the tool holder in the bowl (Fig. 8).
2. Put the kneading accessory on the tool holder. (Fig. 14)



WARNING!

Always put the tool holder with the kneading accessory in the bowl before you add the ingredients.

3. Put the ingredients in the bowl (Fig. 15).
4. Put the lid on the bowl (1). Turn the lid clockwise (2) to fix it ('click') (Fig. 16).



WARNING!

Make sure the projection on the lid locks into the slot of the bowl handle.

5. Put the pusher in the feeding tube.
6. Select the speed that corresponds with the colour of the accessory (Fig. 17).
7. When you have finished processing, turn the speed selector to 0 and unplug the appliance (Fig. 18).

Slicing and shredding inserts

Never process hard ingredients like ice cubes with the inserts. The cutting edges of the inserts are very sharp. Do not touch them.

1. Put the tool holder in the bowl (Fig. 8).
2. Place the metal shredding or slicing insert in the insert holder.
 - Place the opening of the insert over the shaft of the insert holder (Fig. 19).
 - Push the opening of the insert over the projection on the shaft (Fig. 20).
 - Press the insert onto the insert holder until it locks in position with a click (Fig. 21).
3. Place the insert holder with insert on the tool holder (Fig. 22).
4. Put the lid on the bowl (1). Turn the lid clockwise (2) to fix it ('click') (Fig. 23).



WARNING!

Make sure the projection on the lid locks into the slot of the bowl handle.

5. Put the ingredients in the feeding tube. (Fig. 24)
- Pre-cut large ingredients into chunks that fit in the feeding tube.
- Fill the feeding tube evenly for the best results.
- When you have to process a large amount of ingredients, process small batches and empty the bowl between batches.
6. Select the speed that corresponds with the colour of the accessory (Fig. 17).
7. Press the pusher lightly onto the ingredients in the feeding tube.
8. When you have finished processing, turn the speed selector to 0 and unplug the appliance (Fig. 18).

Tips

- When you shred or slice soft ingredients, use a low speed to prevent the ingredients from turning into puree.
- Do not let the appliance run too long when you shred (hard) cheese.
- If you do, the cheese becomes too hot, starts to melt and turns lumpy.

Emulsifying disc

You can use the emulsifying disc to whip cream and to whisk eggs, egg whites, instant pudding, mayonnaise and sponge cake mixtures.

1. Put the tool holder in the bowl (Fig. 8).
2. Place the emulsifying disc on the tool holder (Fig. 25).
3. Put the ingredients in the bowl. (Fig. 26)
4. Put the lid on the bowl (1). Turn the lid clockwise (2) to fix it ('click') (Fig. 27).
5. Put the pusher in the feeding tube.
6. Select the speed that corresponds with the colour of the accessory (Fig. 17).
7. When you have finished processing, turn the speed selector to 0 and unplug the appliance (Fig. 18).

Tips

- Do not use the emulsifying disc to prepare cake mixtures with butter or margarine or to knead dough. Use the kneading accessory for these jobs.
- Make sure the bowl and the emulsifying disc are dry and free from grease when you whisk egg whites. Make sure the egg whites are at room temperature.

Blender

The blender is intended for:

- Blending fluids, e.g. dairy products, sauces, fruit juices, soups, mixed drinks, shakes.
 - Mixing soft ingredients, e.g. pancake batter or mayonnaise.
 - Pureeing cooked ingredients, e.g. for making baby food.
1. Place the blender jar on the motor unit (1) and turn it clockwise to fix it (2). There are four possible positions to fix the blender onto the motor unit (Fig. 28). Do not exert too much pressure on the handle of the blender jar.
 2. Put the ingredients in the blender jar (Fig. 29). Never fill the blender jar with ingredients hotter than 80°C. To avoid spillage, never fill the jar above the maximum level indication, particularly not when you blend hot liquids.
 3. Place the lid on the blender jar (1) and turn it clockwise to fix it (2) (Fig. 30).
 4. Select the speed that corresponds with the colour of the accessory (Fig. 12). Never open the lid to put your hand or any object in the jar while the blender is running. Always let the appliance cool down to room temperature after you have processed two batches.
 5. When you have finished processing, turn the speed selector to 0 and unplug the appliance (Fig. 4).

Tips

- While the appliance is running, you can put liquid or solid ingredients in the blender jar through the opening in the lid (Fig. 31).
- The longer you let the appliance run, the finer the blending result will be. Pre-cut solid ingredients into smaller pieces before you put them in the blender jar. If you want to prepare a large quantity, process small batches of ingredients instead of a large quantity at once.
- To crush ice cubes, put the cubes in the jar, close the lid and turn the speed selector to P (pulse position).
- Some ingredients, e.g. fruits, are easier to blend if you add some liquid e.g. lemon juice.
- When you blend soup, use cooked ingredients.
- If you are not satisfied with the results, let the appliance run briefly a number of times by turning the speed selector to P (pulse position). You can also try to get a better result by stirring the ingredients with a spatula (not while the blender is running), or by pouring out some of the contents in order to process a smaller amount.
- When you process a liquid that is hot or tends to foam (e.g. milk), do not put more than 500ml in the blender jar to avoid spillage.
- If food sticks to the wall of the blender jar, switch off the appliance and unplug it. Then use a spatula to remove the food from the wall.

Cleaning of the appliance

Do not immerse the motor unit in water!

All other parts can be cleaned in the dish washer. However, after processing very salty food, you should raise the blades under water.

Also, be careful not to use an overdose of cleaner or decalcify in your dishwasher.

When processing food with color, the plastic parts of the appliance may become discolored wipe these parts with vegetable oil before placing them in the dishwasher. The blades are very sharp, please attention. Unplug the appliance before cleaning.

**ATTENTION!**

All blades are very sharp. Pls carefull while cleaning.
Before you start cleaning the device, you must switch off
the appliance and remove the plug from socket

**ATTENTION!**

Make sure that the cutting edges of the blades and the
inserts do not come into contact with hard objects. This
could cause them to become blunt.

Quick-cleaning the food processor bowl and blender jar

1. Pour lukewarm water (not more than 0.5 litres) and some washingup liquid into the food processor bowl or blender jar.
2. Place the lid on the food processor bowl or blender jar and turn it clockwise to fix it.
3. Select the speed setting that corresponds with the colour of the accessory (Fig. 18).
4. Let the appliance run until the food processor bowl or blender jar is clean or for 30 seconds.
5. Detach the blender jar or food processor bowl and rinse it with clean water.

Storage

- 1 You can wind the cord around the bottom of the appliance.

Grinder Attachment

- 1- Put the ingredients into transparent lid.
- 2- Close the grinder body on the lid and make sure you locked it turning the right way.
- 3- Place the grinder attachment on the Proccessor body.
- 4- Lock it by turning the correct way up.
- 5- Switch on .

Herbs	
Nuts	
Coffee beans	Pulse 10 – 30 secs



**** Grinds dry ingredients such as nuts or peppercorns or Coffee beans 1 cup at a time without liquid.**

Cleaning and Maintenance

- Ensure that the appliance is unplugged before cleaning.
- Clean the main housing with a damp cloth and dry thoroughly. Never immerse it to water for cleaning.

If at once you don't succeed

Dear customer,

Our products are subject to strict quality control. If this device should not function trouble-free in spite of that, we regret this very much. Before you contact our Customer Service, check whether you can correct the fault yourself.

Malfunction	Solution
When I turn the speed selector to a speed or to P (pulse position) the appliance does not operate.	Make sure the food processor bowl and its lid or the blender jar are assembled correctly ('click'). Make sure that the tool holder has been inserted properly if you are using any accessory with the food processor bowl. If you use the blender jar, make sure it is locked in one of its four locking positions. Keep the lid fixed to avoid spillage. If you use the food processor, make sure that the bowl handle is directly above the closed lock symbol. The bowl lid is correctly assembled when the projection is locked into the slot of the bowl handle. If all parts are assembled correctly, the appliance starts to operate when you select a speed with the speed selector or press the pulse button.
I have selected the wrong speed for the accessory I am using.	Check the colour of the accessory and choose the corresponding speed with the speed selector.
The emulsifying disc or kneading accessory does not turn.	Make sure the emulsifying disc or kneading accessory is assembled properly onto the tool holder. Also make sure the food processor bowl and the lid are assembled properly ('click').



If the service life of the device has ended, in particular if functional disturbances occur, make the worn-out device unusable by cutting through the power cable.



Dispose of the device according to the environmental regulations applicable in your country.



Electrical waste must not be disposed of together with household waste. Bring the worn-out device to a collection center.

The packaging of the device consists of recycling-capable materials.

Place these, sorted out according to material, in the collectors provided, so that recycling can be carried out on them.

For advice on recycling, refer to your local authority or your dealer

Dispatch

Carry the appliance in the original package or a similar, well-padded package to prevent damage to the appliance.

في حال نهاية صلاحية استخدام الجهاز قوموا بقطع شريط توصيله الكهربائي واجعله في وضعيه لا يمكن تشغيله أبداً .

لا يجب رمي مخلفات الأجهزة الكهربائية في حاويات القمامة العاديه . قوموا بوضع مخلفات هذا الجهاز في الحاويات المخصصه لهذا النوع من الأجهزه حسب قوانين إعادة الانتاج الموجودة في بلدانكم .



لا يجب رمي مخلفات الأجهزة الكهربائية في حاويات القمامة العاديه .
تم انتاج عناصر تعليب الجهاز من المواد التي يمكن اعادة انتاجها لذلك قوموا برمي هذه المواد في حاويات إعادة الانتاج .



الشحن

يجب شحن الجهاز ضمن عليه تغليفه الأصليه او نقله في عليه ناعمه جدا لتلافي حصول اي كسور او اضرار في الجهاز عند الشحن.

نظافة الجهاز و العناية به :

يجب التأكيد من سحب فيش الجهاز من البريز قبل القيام بتنظيفه .

قموا بتنظيف جذع الجهاز الرئيسي بمنديل مرطب قليلا ثم قوموا بتجفيفه ولا تجعلو الجذع الرئيسي للجهاز يلامس الماء البارد لغاية تنظيفه بل استخدموه منديلا مرطبا نوعا ما لهذه الغاية .

احتمال اسباب المشكله و حلها

تم وضع الجهاز تحت فحص الجوده للحماية من اي عطب يمكن ان يتعرض له .

ومع ذلك لو تعرض بعض اسباب اخرى بالوقوف عن العمل فقبل القيام بمراجعة مركز خدمات منتجات فاقير نتصحكم بالاضطلاع على الجدول الموجود في الاسفل ومحاولة تطبيق طرق الحل المتبع فيها .

خطا	الحل
في حال وضع زر تحديد السرعة في وضعية سرعة ما او (الضربي) فالجهاز لا يعمل	<p>يجب عليكم التأكيد من تركيب خزنة روبيوت المطبع او غطائه او خزنة الخلاط بشكل صحيح . اذا كنتم تستخدموه احدى المعدات مع خزنة روبيوت المطبع يجب عليكم التأكيد من انه تم تركيب فتحة الجهاز بشكل صحيح . اذا كنتم تستخدموه خزنة الخلاط فيجب عليكم التأكيد من وضعه في احد وضعيات الأقفال الأربعه . لمنع حصول اي تسريب يجب التأكيد من اقفال الغطاء . اذا كنتم تستخدموه روبيوت المطبع يجب التأكيد من ان مقبض الخزنة تحت رمز قفل الاغلاق . وفي حال تركيب التنوء على مقبض فتحة الخزنة يكون بذلك قد تم تركيب غطاء الخزنة بشكل صحيح .</p> <p>وفي حال تم تركيب كل القطع بالشكل الصحيح سيتم تشغيل الجهاز اذا قمتم باختيار احد السرعات بواسطه زر تحديد السرعة او جعلتم الزر في وضعية الضربه فسيتم تشغيل الجهاز .</p>
استخدام ضبط السرعة الخاطئ للمعدات التي استخدمتها	<p>القيام بفحص لون المعدات وفيما اذا كان مناسبا للسرعة التي عليها زر تحديد السرعة ام لا .</p>
قرص الاستحلاب او معدات الاستحلاب لا تدور .	<p>يجب عليكم التأكيد فيما اذا تم تركيب قرص الاستحلاب او معدات الاستحلاب بشكل صحيح على فتحة الجهاز .</p>



انتباه !
ان سكاكين الجهاز حادة جدا . الرجاء الانتباه لدى تنظيفها . قوموا بسحب الفيش من البريز مطلقا قبل القيام بتنظيف الجهاز .



انتباه !
تأكدوا من عدم ملامسة السكين و حوافه الحادة مع الأجسام الصلبة . فهذا قد يؤدي الى اضعاف حدة السكاكين هذه .

تنظيف خزنة ربوت المطبخ و الخلط بشكل سريع جدا .

- 1- قوموا بتنعية خزنة ربوت المطبخ او الخلط بما ، فاتر (على ان لا يكون اكثر من 0.5 لتر) ثم قوموا باضافة كمية من مسحوق غسيل الاواني .
- 2- قوموا بتركيب الغطاء على خزنة ربوت المطبخ او خزنة الخلط وثبتتة قوموا بتدويره بنفس جهة عقارب الساعة .
- 3- اختاروا السرعه التي تتناسب مع لون المعدات (الشكل 18)
- 4- قوموا بتشغيل الجهاز حتى يتم تنظيف خزنة ربوت المطبخ او الخلط او قوموا بتشغيله لمدة 30 ثانية .
- 5- قوموا باستخراج خزنة ربوت المطبخ او الخلط واعسلوه بمالء التنظيف .

الأحتفاظ
تستطعونون لف شريط الجهاز حول قاع الجهاز .



تركيب المطحنة

- 1- ضع المكونات في الغطاء الشفاف .
- 2- أغلق هيكل المطحنة على الغطاء وتأكد أنك أغلقته بإدارته إلى اليمين .
- 3- ضع ملحق المطحنة على هيكل الجهاز .
- 4- أغلقه بإدارته بالاتجاه الصحيح .
- 5- شغل الجهاز .

الخفق 10 ثانية	الاعشاب المكسرات حبوب البن
----------------	----------------------------------

** اطحن المكونات الجافة مثل البندق او حبوب الفلفل او البن بمعدل 1 كوب كل مرة دون سائل .

نقاط مهمة

- اثناء تشغيل الجهاز تستطعون اضافة بعض المواد الصلبة او السائلة من خزنة الخلط اذا كان ما زال هناك مجال (الشكل 31) .
- كلما قمت بتشغيل الجهاز اكثر كلما كانت الخلطة افضل .
- قبل ان تقوموا بوضع المواد الصلبة في خزنة الخلط يجب تقطيعها الى احجام صغيرة وفي حال اذا كان لديك الحاجة الى استخدام كميات كبيرة من الماء فيبدل ان تقوموا باستخدامها على دفعه واحدة قوموا بتقسيمه الى مجموعات واستخدامها لعدة مرات .
- ولأجل كسر قطع الجليد قوموا بوضع قطع الجليد في الخزنة ثم (الضربي) ثم اغلقوا الغطاء واجعلوا زر السرعه في وضعية بال بالنسبة للقوافل وغيرها من المواد الاخرى يسهل خلطه باضافة مثل عصير الليمون .
- لخلط الشوربات استخدمو المواد المطبخه .
- اذا لم تحصلوا على النتائج المطلوبه فقوموا بجعل الجهاز في وضعية (الضربي) يتم تشغيل الجهاز لعدة فترات قصيرة لتنقية الماء P بالملعقة (ليس اثناء تشغيل الخلط) او بتشغيله مع كمية اقل من الماء وتغيير القسم الفائق للحصول على نتائج افضل .
- ولأجل القيام بخض الحليب وغيره من المواد التي تتعرض للغلطان من المواد السائلة لتلافي تسربه لا يجب عليكم ان تضعوا كمية اكبر من 500 ملي لتر في خزنة الخلط .
- في حال اذا التصقت الاغذية بالجدار الداخلي للخزنة قوموا باطفاء الجهاز وسحب فيشه من البريز ثم قوموا بذلك بتقطيفه من هذه الغذيء بواسطة ملعقة .

تنظيمه والعنایہ به

لا تتعطلا قسم المحرك يلاسن الماء ابدا
اما القسم المتقى من الجهاز تستطعون غسله في الجلاية في حال استخدام الاغذية والأطعمة المالحة جدا
في الخلط قد تطرون الى غسل السكاكين بابلكم في هذه الحاله .
انتبهوا جيدا في عدم استخدام المواد المانعة للتتكلذ ذي الدرجة العالية جدا او المنظفات ذي الدرجة العالية جدا
في الجلاية لدى قيامك بتنظيف قطع الخلط في الجلاية بعض المأكولات التي تحمل الالوان قد تسبب في
تلوين الغطاء ففي هذه الحالة وقبل وضع الغطاء في الجلاية قوموا بغسل ومسح الغطاء بزيت الزيتون ثم ينصح
بوضعها في الجلاية .

نقاط مهمة

- بالقيام بقطيع المواد الناعمة او تقطيعها على شكل رقائق وسحقها لتصبح على شكل سحق يجب اختيار سرعة منخفضة في ذلك .
- في حال استخدمنا الجهاز لقطيع الجن القاسي لا تشغلا الجهاز لفترة طويلة ، لأنه في هذه الحالة سيعرض الجن الى درجة سخونه عالية مما يؤدي الى ذوبانه وبالتالي يؤدي الى التاريض .

قرص او سكين الاستخلاف

- ان قرص الاستخلاف يستخدم من اجل خلط كل من الكريم البيض و صفار البيض والبودينغ الجاهز وتحضير خلطة الكيك الناعم .

1-قوموا بتركيب فتحة الجهاز على جذع المحرك (الشكل 8)

2-قوموا بتركيب قرص الاستخلاف على فتحة الجهاز (الشكل 25)

3-قوموا بوضع المواد في الخزنة (الشكل 26)

4-قوموا بتركيب الغطاء على الخزنة (1) ولتنبيه قوموا بتدوير الغطاء بنفس جهة عقارب الساعة (2) (الشكل 27)

5-قوموا بتركيب الدافع على خرطوم التغذية .

6-قوموا باختيار السرعة المناسبة للون المعدات (الشكل 17)

7-في حال الانتهاء من تشغيل الجهاز قوموا بوضع زر تحديد السرعة في وضعية الصفر وبعد ذلك قوموا بسحب الفيش من البريز (الشكل 18)

نقاط مهمة

- لاستخداموا قرص الاستخلاف في تحضير الزبدة او غيرها من الدهون والسمنة الصلبة القاسيه كما لا تستخدموها من اجل تحضير العجين ايضاً بل قوموا باستخدام معدات العجن للقيام بهذه الاعمال .
- ل القيام بخض صفار البيض يجب التأكد من جفاف كل من الخزنة وقرص الاستخلاف وعلى انه خالي من الدهون يجب خض صفار البيض في درجة حرارة الغرفة .

الخلاط

الفايي من استخدام الخلاط :

- لأجل القيام بخلط منتجات الحليب والقيام بتحضير الصوص المطلوب وعصير الفواكه وتحضير الحساء وغيره من المشروبات .

• لتحضيره كل من فطيرة العجين والمایونيز وغيره من الخلطة الناعمه .

• من اجل تحضير اطعمه الاطفال المصغار الرضيع وجعل الااغذية المطبخه على شكل مزيزاً و سحيقاً .

1-قوموا بتركيب خزنة الخلط على جذع المحرك (1) ولأجل تنبيه قوموا بتركيبه بنفس جهة عقارب الساعة (2) هناك اربع تركيبات مختلفة من اجل تنبيه الخلط على جذع المحرك (الشكل 28) لا تستخدموا قوة زائدة على مقاييس خزنة الخلط .

2-قوموا بوضع المواد داخل خزنة الخلط (الشكل 29) لاتقوموا بوضع المواد التي تبلغ درجة حرارتها فوق 80 درجه مئويه في خزنة الخلط . وبشكل خاص من اجل خط السوائل الساخنه لا يجب وضعها في الخزنة فوق المستوى المحدد لها والمشار اليها لتجنب تسريبيها للخارج .

3-قوموا بتركيب الغطاء فوق خزنة الخلط (1) ولتنبيه قوموا بتدويره بنفس جهة عقارب الساعة (2) (الشكل 30)

4-قوموا باختيار السرعة المناسبة للون المعدات (الشكل 17)

5-في حال الانتهاء من تشغيل الجهاز قوموا بوضع زر تحديد السرعة في وضعية الصفر وبعد ذلك قوموا بسحب الفيش من البريز (الشكل 18)

- 3- قوموا بوضع المواد في الخزنة (الشكل 15)
4- قوموا بتركيب الغطاء عليه (1)



قبل وضع المواد يجب القيام بتركيب معدات العجن على فتحة الجهاز
دائماً .

- سكاكين التshireي و التقطيع على شكل رفائق صغيره
لا تقوموا ابداً بقطع الأجسام الصلبه مثل الجليد بالسكاكين .
ان حواف السكاكين حادة جداً لذا لا تحاولوا ان تمسوها .
- 1- قوموا بتركيب الخزنة على فتحة الجهاز (الشكل 8)
 - 2- قوموا بتركيب سكينة التshireي والترقيق على مقبض السكاكين الاضافيه .
 - * قوموا بتركيب فتحة السكاكين على رمح مقبض السكاكين(الشكل 19)
 - * قوموا بالضغط على فتحة السكاكين نحو رمح رمح مقبض السكاكين (الشكل 20)
 - 3- قوموا بتركيب مقبض السكاكين حتى تستمعوا صوت تركيب السكين عليه تماماً (21)
 - 4- قوموا بتركيب الغطاء على الخزنة (1) ولأجل ثبيتها قوموا بتدوير الغطاء بنفس جهة عقارب الساعة (الشكل 22)



تأكدوا جيداً من تركيب النتوء الموجوده فوق الغطاء على الفتحة الموجودة
على مقبض الخزنة .

- 5- قوموا بوضع المواد في خرطوم التغذية (الشكل 24)
- * ولجعل هذه المواد كلها تدخل ويتسق لها خرطوم التغذية يجب القيام مسبقاً بقطع هذه المواد الى قطع صغيره .
- * للحصول على نتيجة جيداً جداً قوموا بتعبيئة قنوات التغذية بكميات متساوية .
- * في حال اذا كنتم تحتاجون الى استخدام كميات كبيرة من المواد ،ابداوا العمل بكميات صغيرة وبين كل مجموعه واخري قوموا بتقريب الخزنة .
- 6- قوموا باختيار السرعه المناسبه للون المعدات (الشكل 17)
- 7- قوموا بالضغط على المواد الموجودة في خرطوم التغذية يرفق باستخدام الدافع .
- 8- في حال الانتهاء من تشغيل الجهاز قوموا بوضع زر تحديد السرعه في وضعية الصفر وبعد ذلك قوموا بسحب الفيش من البرير (الشكل 18)


انتبه !

تأكدوا جيداً من تركيب التثوّه الموجوده فوق الغطاء على الفتحه الموجوده على مقضى الخزنه .

- 6- قوموا بتركيب الدافع على خرطوم التغذية .
- 7- قوموا باختيار السرعه المناسبه للون المعدات . (الشكل 12)
- 8- بعد انتهاء العمل قوموا بوضع مفتاح ضبط السرعه على وضعية الصفر (الشكل 4)

نقاط مهمه

لدى تقطيع البصل قوموا بوضع زر ضبط السرعه في وضعية (وضعية الضربات) المنع من تقطيع البصل بشكل رقيق جدا . (الشكل 13)
 - لدى قيامكم بتقطيع الجين القاسي او الشكولا لا تقوموا بتقطيع الجهاز طويلاً ففي هذه الحاله سيؤدي الى تسخين المواد بشكل كبير وذوانيها مما يؤدي الى تعرض الجهاز الى التارض ، ان الامر الذي قد يؤدي الى التقليل من حدة السكاكين هو استخدام كل من بنور القهوة والكركم ، وجوزة الطيب والجليد وغيرها من المواد الصلبه فالقيام بتقطيع هذه المواد باستخدام وحدة السكاكين او السكاكين في تقطيعها يؤدي الى النقص في حدة السكاكين .

- في حال اذا تم التصاق اي من الأطعمه بالسكاكين او الجدار الداخلي للخزنه قوموا باطفاء الجهاز وسحب فيشه من البريز ثم قوموا بتنظيف السكاكين او جدار الخزنه من هذه الأطعمة باستخدام الملعقة في ذلك .

معدات العجن

ان معدات العجن يستخدم في عجن كل من منتجات الدقيق مثل الخبز والبيتزه وغيرها .

- 1- قوموا بتركيب بتركيب فتحة الجهاز فوق الخزنه (الشكل 8)
- 2- قوموا بتركيب معدات العجن على فتحة الجهاز (الشكل 14)


انتبه !

قبل وضع المواد يجب القيام بتركيب معدات العجن على فتحة الجهاز
 دانما .

- 2- تستطعون تركيب اي من المعدات في فتحة الجهاز الموجوده داخل الخزنه من (وحدة السكاكين / معدات العجن / مفرش الاستحلاب او احد من السكاكين ومقبض السكاكين)
- 3- اذا قمتم باستخدام وحدة السكاكين او معدات العجن فقوموا بوضع المعدات التي سستخدمنها داخل الخزنه .
- 4- قوموا بتركيب الغطاء فوق الخزنه (1) ولتنبيه قوموا بتدوير الغطاء بنفس اتجاه عقارب الساعة (2)




تأكدوا جيدا من تركيب التنوء الموجوده فوق الغطاء على الفتحه الموجوده على مقبض الخزنه .

- 5- في حال استخدام مقبض اضافي لأحد السكاكين قوموا بوضع المسليتمات في خرطوم التغذيه وقوموا بدفعه نحو الأسفل عن طريق الدافع
- 6- قوموا بضبط السرعه المناسبه للون المعدات التي اختربتها .
- 7- في حال اذا انتبهتم من العمل قوموا بوضع زر اختيار وضبط السرعه في وضعيه الصفر (4)

خرطوم التغذيه و الدافع
 تملأ المواد الصلبة تنزل نحو الأسفل قوموا بالضغط عليها ودفعها عن طريق الدافع (6)
 نقطه مهمه : كما انكم تستطعون استخدام الدافع لانقل وسد خرطوم التغذيه ايضا . فهذا يمنع من خروج المواد من خرطوم التغذيه .

وحدة السكاكين

- 1- تستطعون استخدام وحدة السكاكين من اجل قطع المواد وخلطها وسحقها .
- 2- قوموا بتنبيه الغطاء الواقي للسكاكين (7). ان حواف السكاكين حادة جدا لا تحاولوا لمس حوافها .
- 3- قوموا بتركيب وحدة السكاكين الموجودة في الخزنه على فتحة الجهاز (8)
- 4- قوموا بوضع المواد داخل الخزنه . قوموا بقطع القلع الكبيرة للأطعمه قبل وضعها بحجم يكون تقريبا 3.3.3 سم (10)

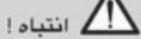

قبل ان تقوموا بوضع المواد يجب عليكم دائمآ ان تقوموا بتركيب وحدة السكاكين على فتحة الجهاز .

- 5- قوموا بتركيب الغطاء على الخزنه . (1) ولأجل تنبيه قوموا بتدوير الغطاء بنفس اتجاه عقارب الساعة (2) (الشكل 11)

التعريف بالجهاز

- ا) سكين التقاطع بشكل رقيق .
- ب) سكين التقاطع بشكل متوسط
- ج) سكين المطرن
- ح) سكين المشره الرقيق
- خ) سكين المشره الخليط
- ت) قصبة السكين
- ث) سكين الاستحلاب
- ع) معدات العجن
- غ) الغطاء الواقي لوحدة السكاكيين
- ف) وحدة السكاكيين
- ق) الدافع
- ص) خرطوم التغذية
- ض) الغطاء
- س) السداده
- ش) غطاء خزنة الخلط
- ط) خزنة الخلط
- ظ) فتحة الجهاز
- ك) خزنة روبيوت المطبخ
- ل) قفل الأمان
- م) زر ضبط السرعة
- ال) تركيب المطحنة

المواصفات الفنية

الطاقة: اقصى حد: 1000 واط
الفولاذ: 220 فول特 240 فول特 50-60 هورزانتيل
فتحة الصمايه: 2:

عام

ان الجهاز محاط بقفل الأمان يمنع تشغيل الجهاز في حال اذا لم يتم تركيب خزنة اخلاط او خزنة روبيوت المطبخ .
وغضاته بشكل صحيح .

الروبيوت

1- قوموا بتركيب الخزنة فوق وحدة المحرك (1) ولتنبيه قوموا بتدويره بجهة عقارب الساعة (2)


انتباه !

دائما اذا اتي مقيس الخزنه فوق رمز غطاء القفل فهذا يعني انه قد تم تركيبه بشكل صحيح .



تحذير افي حال حصول اي ضرر او عطب !

في حال اذا تعرض شريط الطاقة لاي ضرر او عطب لا تحاولوا ابدا تشغيل الجهاز ففي هذه الحالة قد يسبب الاصابه بالصعقه الكهربائيه .

قبل الاتصال بمركز الخدمات قوموا بالبحث عن حل لمشكلة الجهاز بأنفسكم .لذا قوموا بالأضطلاع على قسم "حل مشاكل الجهاز".

في حال اذا لم تستطعوا حل المشكلة التي حصلت للجهاز فالرجاء الاتصال بمركز خدمات العملاء :ب قبل الاتصال بمركز الخدمات الرجاء اخذ رمز المنتج ونمونجه .وستستطيعون الحصول على هذه المعلومات على لوحة اتيكيت الجهاز .



تحذير !

يجب صيانة الجهاز فقط من قبل الوكالء المعتمدين لشركة فاقير .(انظروا الى لائحة وكلائها المعتمدين)فالقيام باعمال الصيانه الخاطئه قد يؤدي الى الحاق الضرار بالمستخدم .



انتباه!

- قبل استخدام الجهاز يجب التأكد من أن طاقة الفولط الموجوده في شبكتكم المنزليه مطابقة لطاقة الفولط التي تعمل بها الجهاز.
- ان البريز الذي يعمل بطاقة 16 امبير يدخل في نطاق الضمان المنزلي .
- فقط استخدمو شريط التوطيل المناسب للجهاز

قفل الأمان

هذه الخاصيه تعمل فقط اذا جعلتم الجهاز بخزنة الخلط او خزنة ربوت المطبخ تم تركيبها على جذع المحرك بالشكل الذي يكون غطائه نحو الخزنة .
اذا قمت بتركيب خزنة الخلط او خزنة ربوت المطبخ و غطاء الخزنة بشكل صحيح فأن قفل الأمان سبیداً بالعمل .

قبل الاستخدام الأولي للجهاز

قبل استخدام الجهاز لأول مره يجب عليكم تنظيف القطع التي ستلامس الأطعمه .



تحذير اخطر الاصابه بصعقه كهربائيه !

- لا تلمسو الجهاز ابدا بأيدي مبلله .
- عندما تقومون بسحب الفيش من البريز لا تقوموا بجر الشريط بل اسحبوه من الفيش .
- ابعدوا شريط الطاقة للجهاز عن الموات الحاده او ربته بها كما لا تجعلوه يلامس الاوجه الساخنه ولا تدعوه يلامس الاماكن الساخنه.
- في اول استخدام للجهاز قوموا بفحصه فيما اذا تعرض لاي اضرار او عطب ام لا ففي حال اذا كان هناك اي ضرر او عطب حصل للجهاز فراجعوا مراكز خدمات فاقير .
- لا تقوموا باستخدام الشريط المطول الذي تعرض لاي اضرار .



انتباه!

في حال حصول اي خطأ لا بد من سحب الفيش من البريز .

- لدى سحب فيش الجهاز من البريز لاتقوموا ابدا بسحبه من شريطيه بل قوموا بسحبه بالأمساك بفيشه .
- لا تقوموا بالف شريط الطاقة على بعضه البعض ولا تقوموا بالاحتفاظ به بهذا الشكل .
- قبل استخراج معدات الجهاز يجب اولا اطفاء الجهاز .
- بعد الانتهاء من استخدام الجهاز قوموا دائمًا بسحب فيش الجهاز من البريز .
- قبل ان تقوموا بوضع ايديكم داخل خزنة البندر او اي جسم اخر (المعلقة مثلا) يجب عليكم ان تسحبوا فيش الجهاز من البريز مطلقا .
- قبل استخراج غطاء الخزنة او الطاس الموجود فيها يجب انتظار توقف القطع المتحرك .

الاستخدام الغير مصرح به
ان المعلومات التالية الغير مصرح بها في الاستخدام قد تؤدي الى الحاق ضرر بالجهاز او قد يؤدي الى كدمات وجرح:

- هذا الجهاز غير صالح للأستخدام من قبل الأشخاص الذين يعانون من الضعف العقلي والذهني كما لا يجب استخدامه من قبل اشخاص لا يملكون اي معلومات بخصوص استخدام الجهاز. فلا تسمحوا لهؤلاء الأشخاص من استخدام الجهاز بأي حال من الأحوال.
- الجهاز ليس عبارة عن لعبة. لدى يرجى ابعاد الجهاز عن متناول الأطفال وانتبهوا جيدا لدى استخدام الجهاز بجوار الأطفال .
- ابعدوا كل من الأكياس والكتون الموجود داخل علبة الجهاز عن متناول الأطفال ففي حال وصول هذه المواد في متناول الأطفال قد يؤدي الى اضرار لهؤلاء الأطفال وخصوصا اكياس التغليف قد يحاول الأطفال ابتلاعها فيؤدي ذلك الى خطورة الاختناق لدى الأطفال.

السلامة مهمة !
قبل استخدام الجهاز اقرأوا دليل الاستخدام

تحذيرات السلامة!

- لدى عدم استخدام الجهاز ولدى نزع قطعه وفككه يجب التأكد من سحب فيشه من البريز .
- قبل استخدام الجهاز يجب التأكيد من أن طاقة الفولط الموجوده في شبكتكم المنزليه مطابقة لطاقة الفولط التي تعمل بها الجهاز والكتوبه على الرمز الموجود على الجهاز .
- لاتقوموا بوضع فيش الجهاز في البريزوتشيليه الا بعد التأكيد من تركيب كافة قطع الجهاز في مكانه بشكل صحيح. وانتبهوا جيدا من سحب فيش الجهاز من البريز او فيشه او شريطيه او سكاكينه .
- لاتسمحوا للأطفال باستخدام الجهاز دون ان يكون تحت مراقبته من قبلكم و لا تسمحوا لهم باللعب بالجهاز .
- لا تستخدموا ان يتعرض قسم محرك الجهاز او فيشه او شريطيه للتبلي .
- لا تستخدمو الجهاز في حال تعرض شريطيه او فيشه قد تعرض لأي عطب في هذه الحاله يجب مراجعة مراكز خدمات منتجات فاقير للصياغه لاستبدال الشريط بشريط اخر جديد
- ابعدوا شريط الطاقة للجهاز عن حواف الطاولات او حجر المطبخ او الأوجه الساخنه ولا تدعوه يلامس الأماكن الساخنه او الأماكن التي يمكن الاستخدام بها ولا تدعوا الشريط ان يلتقي على نفسه على شكل عقد

المواصفات المطابقة للشهادة الأوروبية :


ذا الجهاز حاصل على الشهادة الأوروبية 108/2004 المطابقة لمواصفات الأجهزة الكهرومغناطيسية وفق المواصفات الأوروبية كما انه حاصل على شهادة المطابقة لمواصفات توجيهات الجهد الأوروبي 95/2006 . كما انه يوجد على الرمز الموجود على الجهاز على انه مطابق للمواصفات الأوروبية .

تعليمات الاستخدام
هذا الجهاز مناسب فقط للاستخدام المنزلي .



لا تقوموا بغمس وغسل جذع المحرك في الماء او اي من السوائل الأخرى بل قوموا بتنظيفه بمسحه بمنديل مبلل .

- لا تتركوا الجهاز في حال التشغيل وتذهبوا بعيدا عنه .
- في حال اذا التصقت الاطعمه بالجدار الداخلي لخزنه قوموا باطفاء الجهاز وقوموا باستخراج فيش الجهاز من البرين .لتقوموا باستخدام اصابعكم او اي جسم غريب اخر(على سبيل المثال المعلق) من اجل الضغط على خرطوم التغذية لدخول المستلزمات والجهاز في حالة تشغيل .بل قوموا باستخدام الاله الدافع الخصصي للجهاز في هذا .
- انتبهوا جيدا وانتم تمسكن بوجه سكاكين خزنة البلندر او وحدة سكاكين ربوت المطبخ .لان حواف هذه السكاكين حادة جدا .فانتبهوا جيدا بالتحديد عندما تقومون بتقريغ الخزنة وخزنة البلندر .

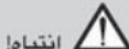

لا تقوموا باغلاق الجهاز وانتم تقومون بلف وتدوير غطاء الخزنة او خزنة ربوت المطبخ و خزنة البلندر .بل ابد ان تطفوا الجهاز يجعل مفتاح ضبط السرعه في وضعية الصفر

- لأجل الاستخدام المناسب واستخدام المقادير المناسبه وفتره التشغيل قوموا بمراجعة جدول دليل الاستخدام .
- قد يؤدي بعض المواد الى تغير لون اوجه بعض القطع .فهذا لا يؤدي الى تأثير سلبي على هذه القطع .فتغير اللون سيختفي بعد مده معينة .
- لا تقوموا بتنعيم خزنة البلندر او ربوت المطبخ بلوازام يبلغ درجة حرارتها اكثر من 80 درجه مئويه .
- اذا كنتم تستخدمون خزنة البلندر من اجل تحضير سائل ساخن يجب عليكم اغفال غطاء الخزنة دائما لتلافي خطر الحرائق نتيجة تطاير هذه السوائل الساخنه من الخزنة .
- لا تقوموا باستخدام المواد الخشنه والتي قد تؤدي الى تخريشات في تنظيف الجهاز .

نشكركم جدا على اختياركم لروبوت المطبخ ميكس سلف من منتجات فاقير . تم تصميم وانتاج منتجنا هذا يعمل في خدمتكم لفترة طويلة من الزمن ودون اي قصور .

معلومات بخصوص تعليمات الاستخدام

تم تحضير تعليمات استخدام الجهاز هذا للقيام باستخدام الجهاز بشكل صحيح وسلام . لأجل سلامتكم وسلامة الآخرين اقرأوا دليل الاستخدام قبل استخدام الجهاز . قوموا بالاحتفاظ بدليل الاستخدام في مكان آمن للأستفادة منه لدى الحاجة .

المسؤولية

لا تتحمل شركة فاقير للأجهزة الكهربائية المترتبة اي مسؤولية في حال الاستخدام الخاطئ من قبل المستخدم دون تقييد بدليل الاستخدام وادى الى تعطيب الجهاز نتيجة ذلك . حيث ان شركة فاقير للأجهزة الكهربائية المترتبة تتحمل مسؤوليتها في صيانة الأجهزة من قبل وكيل خدمات فاقير في حال عدم استخدام الجهاز في مجالات اخرى خارج نطاق مجال عمله او عدم اخذ الجهاز بقصد الصيانة الى مكان اخر غير وكيل خدمات فاقير للصيانة .


تحذيرات بحق تعليمات الاستخدام



هذه الاشارة تدل على الخطورة التي قد تؤدي الى كدمات او الى خطورة الموت



هذه الاشارة تدل على انه يمكن ان يحصل هناك اي اخطار على الجهاز وينادي الى تعطيبه وتخريبات فيه

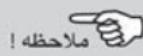

دليل الاستخدام يحتوى على معلومات مهمة ومفيدة لاستخدام الجهاز .

4.....	معلومات بخصوص تعليمات الاستخدام
4.....	المسؤولية
4.....	تحذيرات بحق تعليمات الاستخدام
5.....	المواصفات المطابقة للشهادة الأوروبية
5.....	تعليمات الاستخدام
6.....	الاستخدام الغير مصرح به
6.....	تحذيرات السلامة
7.....	قفل الأمان
7.....	قبل الاستخدام الأولى للجهاز
9.....	التعريف بالجهاز
9.....	المواصفات الفنية
9.....	عام
10.....	الروبوت
10.....	خرطوم التغذية و الدافع
11.....	وحدة السكاكين
11.....	نقاط مهمه
12.....	معدات العجن
12.....	سكاكن التسريح والتقطيع على شكل رقائق صغيره
13.....	نقاط مهمه
13.....	قرص او سكين الاستحلاب
13.....	نقاط مهمه
13.....	الخلاط
14.....	نقاط مهمه
14.....	تنظيفه والعناية به
15.....	تنظيف خزنة ربوت المطبخ و الخلط بشكل سريع جدا
15.....	الاحتفاظ
16.....	احتمال اسباب المشكلة وحلها
17.....	الشحن