

TORNADO

OWNER MANUAL

دليل المالك

Refrigerator

ثلاجة

RH-H18T
RH-H22T
RH-H18TV
RH-H22TV

PN:PKRFTOMPR0130



Content

• Installation	2	• How to loosen the internal parts and Drain evaporator pan of Freezer	4
• Identification of Freezer parts and their use	2	• Safety Precautions for Freezer Operation	5
• Safety	2	• Cautions when operating	5
• Warning	3	• Movement of Freezer	5
• How to use your Freezer correctly and efficiently	3	• Store the Home Freezer for a period time after usage	5
• Storing food	3	• Before calling a service center	5
• Load of shelf and drawers	3	• General Freezer specifications	6
• Periodic Maintenance	4		

Life Time



ELARABY is committed to provide maintenance and spare parts after the warranty period by a cost and this for 2 year.

Installation

On opening the new Freezer for the first time, there may be plastic smell which will disappear through every day use.

Please follow the following instructions for installation:

- 1- Place Freezer in dry place away from wet and humid places.
- 2- Install the Freezer on a solid, flat flooring, using the balancing legs to Adjust Freezer horizontally.
- 3- Leave proper spaces not less than 20 cm around the Freezer for Suitable ventilation of Freezer body.
- 4- Place the Freezer away from direct sun light and from any heat Source such as "stove, heaters".
- 5- Connect a wire using the earth screw fixed in the Freezer base, and Connect the other end to the house earth terminal.

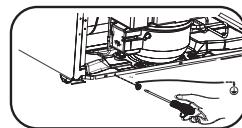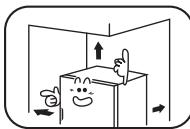

Identification of Freezer parts and their use

1	Flipper door
2	Upper Drawer
3	Drawer
4	Small drawer
5	freezer door bottom decoration

- Models RH-H18T & RH-H18TV contain Five drawers
- Models RH-H22T & RH-H22TV contain Six drawers
- Freezer door bottom Decoration is attached on the back of the freezer, it should be fixed under Freezer door as in the picture by the two screws under the door.



Safety

Important Warning

Read carefully the manual and follow instructions and signs such as, "warning – caution".

Warning	Refers to risks which may lead to dangerous injury if not follow instructions .
Caution	Refers to situations if not avoided may lead to slight injury or damage of the refrigerator.

Warning

- For your safety and avoiding any fire dangers, you must not connect the device by an extension plug to electricity source and connect the device directly to electricity source.
- This device for home use only.



- Don't store inflammable materials inside Freezer.

Foods should be put inside containers or plastic bags when placed in the freezer to avoid the blockage of the drain hose because the leftovers.

Don't put vessels full of water unclosed inside Freezer.

- This will lead to reduce electric insulation and may cause electric shock for user of Freezer

Don't spill water directly on Freezer when cleaning it.

- If water reaches electric parts of Freezer this will lead to damage it, deficiency or lead to defect in electric circuit.

Don't hang onto the door of Freezer.

- This may cause the Freezer to fall or cause injury.

Make sure not to put any heavy objects over the cord connecting the Freezer to the mains socket.

If the cord connecting the Freezer to the socket is damaged, it should be repaired by calling ELARABY Service center 19319 .



Caution

- Wait at least two hours (2 hrs) before operating home freezer after putting in its place.
- Do not touch the compressor unit or its peripheral parts, as they become extremely hot during operation and the metal edges may cause injury.
- Do not touch foods or metal containers in the freezer compartment with your wet hands. This may cause frostbite.
- Do not place bottled and canned drinks in the freezer as they may crack when frozen.
- Make sure that the supply cord has not been damaged during installation or moving. If the supply plug or cord is loose, do not insert the power plug. There is a risk of electric shock or fire.
- Disconnect from the mains electricity supply by removing the mains plug from the electricity supply socket. Do not remove by pulling the mains lead. This may cause electric shock or fire.
- Be sure not to place heavy objects on the supply cord that connects the freezer and the socket.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- In case of gas leak, ventilate the area by opening a window and avoid opening flames and sources of ignition. Because Gas is Flammable.
- Do not place objects containing liquid or unsteady objects on top of home freezer.

This home freezer is intended to be used on house hold and similar application such as:

- Staff kitchen areas in shops, offices and other working.
- Farm houses and by clients in hotels, motels and other.
- Bed and breakfast type environment
- Catering and similar non-retail applications.


How to use your Freezer correctly and efficiently

The best way to use Freezer

For normal use, set Freezer control knob on (3). If you want to increase or decrease temperature of Freezer, set as follows:-

Temperature control of Freezer

Control knob setting	Home Freezer Condition
fast freeze	fast freeze
4	High Freezing
1	Low Freezing



Freezer temp control

Use fast freeze condition for approximately 8 hours in case of:

- 1- Operating the freezer for the first time.
- 2- Adding large quantity of foods and edibles.

In case you wish to increase the degree of freezing, turn the control knob to a higher number.

The freezer is designed to operate in ambient temperature specified by its class in the shown table.

Description	Climate class	Ambient temperature range c°
Tropical	T	+16 to +43

Storing food

- Use the freezer to store frozen foods for long periods of time and to make ice cubes.
- To freeze fresh food - ensure that as much of the surface of food to be frozen is in contact with the cooling surface.
- Do not put fresh food on either side of frozen food as it can thaw it.
- While freezing fresh foods (i.e. meat, fish and mincemeat), divide them into portion sizes.
- Never place warm food in the freezer compartment.
- The instructions shown on frozen food packages should always be followed carefully and if no information is provided food should not be stored for more than 3 months from the purchased date.

Storing food

- When buying frozen foods ensure that these have been frozen at suitable temperatures and that the packing is intact.
- If a package of frozen food shows signs of humidity and abnormal swelling it has been previously stored at an unsuitable temperature and that the contents have deteriorated.
- The storage life of frozen foods depends on the room temperature, thermostat setting, how often the door is opened, the type of food and the length of time required to transport the product from the shop to your home. Always follow the instructions printed on the package and never exceed the maximum storage life indicated.
- Be sure to follow the printed instructions on the label and do not exceed the maximum recommended storage period
- The liquid form should be frozen in plastic cups and the solid food should be frozen in plastic folios or bags.
- If you decide to open the freezer door again immediately after closing, it may be difficult to re-open. This is normal and after the freezer has reached an equilibrium condition the door will open easily. (At least 1 Minute)

IMPORTANT NOTE:

Do not freeze the food after it has been thawed

Load of shelf and drawers

Load (kg)

1	Upper Shelf	8 Kg	2	large drawer	15 Kg	3	Small drawer	12 Kg
---	-------------	------	---	--------------	-------	---	--------------	-------

Periodic Maintenance

Or ensuring a long life for your Tornado Freezer, clean its parts carefully at regular intervals according to the following instructions :

- Disconnect the Freezer by taking the power plug out of the mains socket.
- Be careful not to let the cord slip under the Freezer while taking the plug off.
- Do not use water directly to wash the Freezer, but you may use a wet piece of cloth for this purpose.



The door rubber frame

The life of the rubber frame of the door will be shorter if not cleaned of stains from time to time.
Therefore, it should be checked from time to time for stains and cleaned using a suitable detergent and hot water.



The internal plastic parts

If the internal plastic parts are stained or have suitable smell, they should be cleaned at once using a suitable detergent.
When these parts are stained with salad dressing or any other kind of edible oils, they become more susceptible to cracking.
Therefore, any oils should be removed using a suitable liquid detergent.

External surfaces

- Use a soft piece of cloth for cleaning the Home Freezer surface.
- Removal of stains is done by a piece of cloth and a suitable detergent.
- Use a dry piece of cloth for cleaning the Home Freezer handle.
- warning Do not use any chemical detergents which will cause rust or corrosion.

How to loosen the internal parts and Drain evaporator pan of Freezer

Loosen the internal parts to make their cleaning much easier:

- The following are the loosening steps.
The part are to be recollected afterwards the other way round.



The Freezer shelf



Loosen the shelf by pulling it

Drawers



Pull the drawer until reach to the stopper, then raise it as shown arrow.

Drain evaporator pan



Pull out during lowing and push during reinstall

Safety Precautions for Freezer Operation

- Don't put closed water bottles inside freezer as they may explode and cause damages.
- Don't put inflammable substances like (Gasoline- alcohol-drugs-soda water) inside as they may Explode and cause damages and injuries.
- Don't hang or rest on the door of freezer as it may dismount and fall down causing injuries.
- Don't make repairs or additions to the freezer; this can cause electrical shock and injuries
- Don't bend or scratch the power cord or put heavy weights on it, it can cause fire or electrical shock.
- In case of plug damage; don't use the freezer, as that may cause fire or electrical shock.
- Take off the power plug before maintenance or cleaning, it may cause electrical shock.
- Take off the power plug with dry hands
- Don't pull the cord when taking off the power plug; can damage the cord and cause fire.
- Clean the cord and plug from the dust continuously.
- Don't spill water on the inner or outer freezer body, that can reduce the electrical insulation and cause Electrical shock or fire.
- Don't use any inflammable spray near the freezer, it can cause fire.
- Don't put the freezer in wet place or water spray, it may cause electrical shock.


Cautions when operating

- When un plugging the power of Home Freezer, plug it again only after seven minutes.
- In case of plugging Home Freezer directly after unplugging the power, this may cause the reduction of compressor performance, or it may cause voice when repeating.



Movement of Freezer

- Empty Home Freezer from food.
- Lift it as shown in the illustration by two persons, the first lifts it form the lower front side by using balance legs and the second carries it from rear high side.



Store the Home Freezer for a period time after usage

- Follow the next:
- 1- Disconnect the power cord.
- 2- Remove all the food materials & let the Home Freezer free from any food.
- 3- clean the Home Freezer.
- 4- Open the door (about 5cm) & let it open during the storage period.

Before calling a service center

Before calling a service center to repair any failure, please check the following sequence:

Failure	Procedures
Home Freezer does not cool.	<p>Does it connect to the power cord ?</p> <ul style="list-style-type: none">- Check safety and connection of cord.Does power cord connect to the cord ?- Check fuse or reasons of power failure of house.- Check power failure of house.
The Freezer coldness degree is not sufficient.	<ul style="list-style-type: none">- Do you set Freezer at the minimum degree of cooling?- Is Freezer subject to direct sun shines or beside stove or heater?- Do you close Freezer door perfectly?- Check rubber seat of door.- Do you open and close door repeatedly?- Do you put hot food in Freezer?- Is Freezer full of huge amounts of food more than is necessary?- Are you put Freezer in a place of good ventilation or not ?
Freezer makes noise.	<ul style="list-style-type: none">- Is floor stable and flat?- Do you set the level of Freezer?- Do you put vessels up or in touch with the external body of Freezer?- Is Freezer placed on an unstable ground or touching the wall?

Before calling a service center


There is dampness in Freezer. <ul style="list-style-type: none"> - Do you open and close door repeatedly? - Do you leave door open for a long time? - Do you keep high-damp food without cover in Freezer? - Is the gasket good? - In case of high dampness, remove it by a piece of cloth.
It smells in the compartment. <p>Is there any spoiled food inside of the freezer?</p> <ul style="list-style-type: none"> - Make sure that strong smelling food (for example, fish) is wrapped so that it is airtight. - Clean out your freezer periodically and throw away any spoiled or suspect food.

- In the event of a problem with the lamp, please call our Customer service number 19319.

- If you still need Maintenance, please call our customer service number 19319.

General Freezer specifications

Specifications	Model					
	RH-H22T	RH-H22TV	RH-H18T	RH-H18TV		
Total Volume (L)	223		185			
Rated Voltage (V)	220 - 240					
Rated Frequency (Hz)	50	50/60	50	50/60		
Refrigerant Gas	R-600a					
Running Ratio (%)	67	Inverter Compressor	53	Inverter Compressor		
Temperature Rise (Hour)	12					
Storage Shelf Area (Cm ²)	7048		5730			
Outer Dim.(cm)	Height (H)	136.7	117.5			
	Depth (D)	65				
	Width (W)	60.4				
Overall Space Required in Use (cm)	e	95				
	d	161				

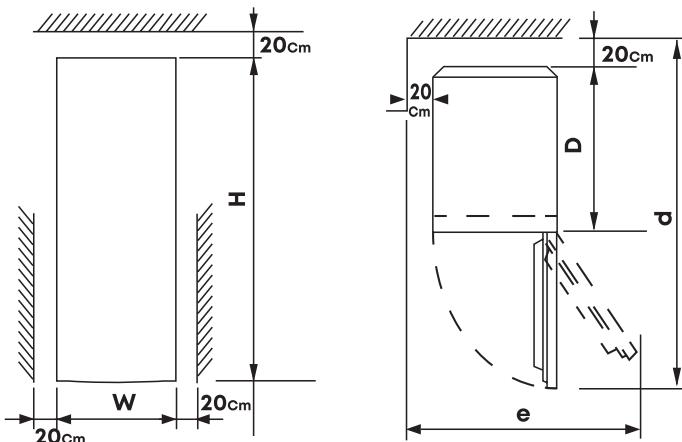

قبل طلب الاصلاح



<ul style="list-style-type: none"> - هل الأرضية ثابتة ومستوية؟ - هل تم ضبط اتسوء الفريزر عن طريق أرجل الفريزر؟ - هل تم وضع أوعية أعلى أو ملائمة للجسم الخارجي للفريزر؟ - هل الفريزر غير ثابت أو ملائم للخطاء؟ 	الفريزر يصدر عنه ضوضاء
<ul style="list-style-type: none"> - هل يتم فتح وغلق الباب على نحو متكرر؟ - هل يترك الباب مفتوح لمدة طويلة؟ - هل حفظ أغصمة ذات رطوبة عالية بدون خطاء بالفريزر؟ - هل الجوان سليم؟ - في حالة تكونها يكتفي باليتها بقطعة قماش جافة. 	تكون رطوبة داخل الفريزر
<ul style="list-style-type: none"> - هل هناك طعام مسكون داخل الفريزر؟ - تأكيد من أن الطعام ذو الرانحة القوية (مثل: السمك) مغلف بإحكام - قم بتنظيف الفريزر بشكل دوري 	ظهور رانحة في الفريزر

- في حالة حدوث مشكلة باللمسة يرجى الاتصال برقم خدمة العملاء . ١٩٣١٩

- إذا استمرت حاجتك للصيانة يرجى الاتصال برقم خدمة العملاء . ١٩٣١٩

المواصفات العامة للفريزر

Model				المواصفات
RH-H18TV	RH-H18T	RH-H22TV	RH-H22T	
١٨٥		٢٢٣		(الحجم الكلي) (لتر)
		٢٤٠ - ٢٢٠		(الجهد الكهربائي) (فولت)
٦٠/٥٠	٥٠	٦٠/٥٠	٥٠	(التردد) (هرتز)
R-600a				غاز التبريد
كياس انفرتر	٥٣	كياس انفرتر	٦٧	(نسبة زمن التشغيل) (%)
	١٢			(زمن ارتفاع درجة الحرارة) (ساعة)
٥٧٣٠		٧٠٤٨		(مساحة تخزين الأرفف) (سم)
١١٧,٥		١٣٦,٧	(H)	الارتفاع (سم)
٦٥			(D)	العمق (سم)
٦٠,٤			(W)	العرض (سم)
٩٥			e	(الفراغ الكلي المطلوب للاستخدام) (سم)
١٦١			d	

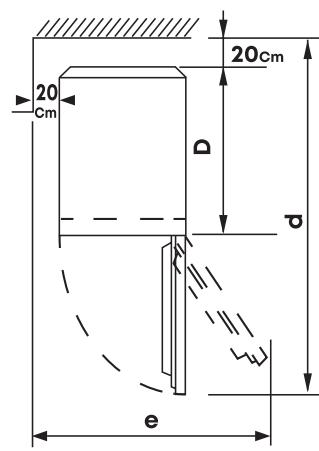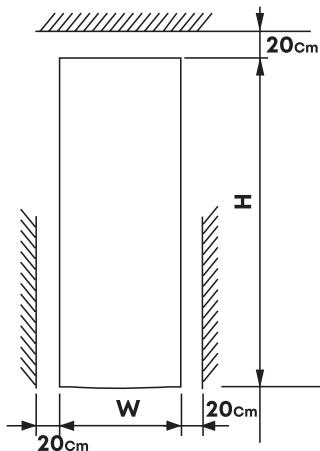

احتياطات أمان خاصة بتشغيل الفريزر

- لا تضع رجاجات المياه المغلقة داخل الفريزر قد تنفجر وتسبب أضرار.
- لا تضع مواد سريعة الاشتعال مثل (البزنين - الكحول - الادوية - العوتوت الغازية) قد تنفجر وتسبب حوادث.
- لا تتعلق بباب أو ترتكز عليه حتى لا يتسبب هذا في خلع الباب وسقوطه مما يؤدي إلى إصابات.
- لا تجعل إصلاحات أو إضافات للفريزر قد تتسبب بذلك في صدمة كهربائية وإصابات.
- لا تقم بتنبيبي أو خدش السلك الكهربائي أو وضع أي جزء ثقيل عليه قد يتسبب حريق أو صدمة كهربائية.
- يجب نزع الفيشة عند القيام بأعمال صيانة أو تنظيف حتى لا يتسبب في صدمة كهربائية.
- يجب نزع الفيشة بأيدي غير مبللة حتى لا يتسبب في صدمة كهربائية.
- لا تقم بشد السلك عند نزع الفيشة سيتسبب ذلك في تلف الفيشة وحدوث حرائق.
- يجب تنظيف الأذرعة الموجودة على السلك والفيشة بشكل منظم.
- يجب عدم رش الماء على جسم الفريزر من الخارج أو الداخل حتى لا يؤثر على العزل الكهربائي وينتج عنه حريق أو صدمة كهربائية.
- لا تستعمل أي سبراي قابل للاشتعال بالقرب من الفريزر قد يتسبب حريق.
- يجب عدم وضع الفريزر في مكان به بخار ماء أو طابير للماء قد يتسبب صدمة كهربائية.

احتياطات عند التشغيل



- يجب عند فصل التيار عن الفريزر، أن لا يتم إعادة مرة أخرى إلا بعد سبع دقائق على الأقل.
- في حالة توصيل الفريزر مباشرةً بعد فصل التيار عنها فإن ذلك قد يتسبب في خفض أداء الكياس أو قد يحدث صوت عند إعادة تشغيله.

نقل الفريزر



- يجب تفريغ الفريزر من الأطعمة.
- يجب رفع الفريزر من المواضع الموضحة بالرسم بواسطة فردین الأول يرفع من الجانب السفلي الأمامي باستخدام أرجل الإتزان والثاني يقوم بحمل الفريزر من الجانب الأعلى الخلفي.

تخزين الفريزر بعد استعماله

- عند الرغبة في تخزين الفريزر لفترة بعد استخدامه يراعى الآتي :
- ١- فصل التيار عن الفريزر.
- ٢- إخلاء الفريزر من المواد الغذائية.
- ٣- تنظيفه جيداً حسب ما ورد في دليل المستخدم.
- ٤- فتح باب الفريزر فجأة جزئياً (حوالي ٥ سم) وتركه مفتوح طوال مدة التخزين.

قبل طلب الاصلاح

قبل الاتصال بمركز الخدمة لإصلاح أي عطل اتبع التسلسل الآتي :

قم بمراجعة الفريزر طبقاً للخطوات التالية :

الخطوات	الخطوات
هل الفريزر موصل بالتيار الكهربائي؟ - يتم مراجعة توصيل الفيشة. - سلامنة سلك الفيشة. هل التيار الكهربائي وصل للفيشة؟ - مراجعة الفيوز أو قاطع التيار عن المنزل. - مراجعة إنقطاع التيار عن المنزل.	الفريزر لا يقوم بالتبديد
هل تم ضبطه عند درجة تبريد (1)؟ هل الفريzer معرض للأشعة المباشرة للشمس أو بجوار موقد أو جهاز تدفئة؟ هل باب الفريزر محكم الغلق؟ - براجع جوان الباب. هل يتم فتح الباب وغلاقه على نحو متكرر؟ هل تم وضع أطعمة ساخنة داخل الفريزر؟ هل الفريزر مملوء بكيميات كبيرة من الأطعمة أكثر من اللازم؟ هل الفريزر موضوع في مكان جيد التهوية ليسمح بتجديد الهواء حوله أم لا؟	الفريزر ليس بارد بالقدر الكافي

تخزين الأطعمة

- عند شراء الطعام المجمد، برجاء التأكيد من أن التخزين تم في درجة حرارة مناسبة وأن التغليف مناسب.
- إذا ظهرت علامات رطوبة أو إنتفاخ غير طبيعي على الطعام المجمد، فقد تكون قد تم تخزينها بدرجة حرارة غير مناسبة وقد تكون فاسدة.
- زمن تخزين الطعام المجمد يعتمد على درجة حرارة الغرفة، ضبط درجة الحرارة، عدد مرات فتح باب الفريزر، نوعية الطعام، والمدة الزمنية المطلوبة لنقل الطعام من المفترض إلى البيئة.
- تأكد من اتباع التعليمات المطبوعة على الغلاف ولا تتجاوز الحد الأقصى لمدة التخزين الموصى بها.
- يجب تجديد المسوائل في أوعية بلاستيكية فقط، والأطعمة الصلبة يجب تجديدها في أوعية بلاستيكية أو ورقية.
- قد تجد صعوبة في فتح الباب مرة أخرى على الفور بعد الإغلاق، هذا أمر طبيعي، وبعد وصول الفريزر إلى حالة التوازن سوف يفتح الباب بكل سهولة. (على الأقل بعد مرور 1 دقيقة)

حملة الرف والأدراج

الحمولة (كيلوجرام)

١	رف علوى	٨ كيلوجرام	٢ درج فريزر كبير	١٥ كيلوجرام	٢ درج فريزر صغير	١٢ كيلوجرام
---	---------	------------	------------------	-------------	------------------	-------------

الصيانة الدورية

لضمان حياة أطول للفريزر تونيدو قم بتنظيف أجزاءه دورياً واتبع التعليمات الآتية بعناية:

- أفصل التيار الكهربائي عن الفريزر بنزع الفيشة من التيار.
- كن حريصاً عند نزع الفيشة بالتأكد من أن سلك الفيشة لا يكون تحت الفريزر.
- لا تستخدم الماء مباشرةً لغسل الفريزر وإنما بقطعة قماش مبللة.



جون الباب

عدم العناية بالجون وذلك بترك بقع ظهور عليه سوف يؤدي إلى تلفه في فترة قصيرة لذا عند ظهور أي بقع يجب إزالتها فوراً باستخدام سائل تنظيف مناسب.

وحدات البلاستيك الداخلية

عند ظهور بقع أو رائحة للأجزاء البلاستيك الداخلية فجرب أن تظفف فوراً باستخدام سائل تنظيف مناسب. عند تعرض الأجزاء البلاستيك الداخلية لزيت السلطة أو أي زيت طعام فإنها سوف تكون قابلة للشقق قم بإزالة هذه الزبالت مستخدماً سائل تنظيف مناسب.

الأسطح الخارجية

- قم بتنطحيف سطح الفريزر بقطعة قماش ناعمة.
- في حالة وجود بقع يتم إزالتها بقطعة قماش مبللة بسائل منظف.
- يتم مسح مقبض الفريزر بقطعة قماش جافة.
- تحذير: لا تستخدم أي منظفات كيميائية لأنها قد تسبب الصدأ أو التآكل.

كيفية فك الأجزاء الداخلية وحوض الصرف للفريزر

يتم فك الأجزاء الداخلية للفريزر لتنظيفه بسهولة.

- وفيما يلي خطوات الفك على أن يتم إعادة تركيبها بعكس خطوات الفك :



رف الفريزر

يتم فك الرف عن طريق سحبه

الأدراج

يتم سحبها حتى الوصول للنهاية أي إلى مكان stopper ثم يتم رفعها وآخر اجها كالسهم الموضح

حوض الصرف

يتم سحبه للخلف أثناء الفك وأثناء التركيب يتم دفعه للأمام.

تحذير



- من أجل سلامتكم وتجنبنا مخاطر الحرق يجب عدم توصيل المنتج بواسطة مشترك والتوصيل مباشرة على بريزه الكهرباء.
- هذا المنتج لاستخدام المنزلي فقط.



- المواد سريعة التطاير والقابلة للاشتعال، مثل الإيشن والنفط وغاز البروبين والعناصر اللاصقة والكمول التقى الج، معرضة للانفجار.
- لاتحفظ مثل تلك المواد في الفريزر.
- قد يؤدي الفيبرز في المطبخ إلى وقوع حريق، برجاء سمحوا بحظر.
- تأكد من ان الفريزر لا يشكل خطرًا على الأطفال أثناء حفظه للأشخاص منه (فتح الباب لتجنب إنجهاض الأطفال داخلها).
- هذا الفريزر غير مصمم لاستعماله من قبل الأشخاص دون قيدهم للأطفال، ومن يعانون في نفس القدرة الجسمانية والنفسية أو القدرة العقلية والمعروفة إذا كان هناك رغبة عليهم أو يتم إرداهم حول استعمال الفريزر من قبل شخص مسؤول وذلك حرصا على سلامتهم.
- يجب مرافق الأطفال الصغار لضمان عدم الذهاب بالفيبرز.
- ينبغي للأطفال شكل صحيح، خذ الفريزر إلى مصنع إعادة التصنيع الخاص بالغازات القابلة للاشتعال.
- يحتوي نظام التبريد في خلية وداخل الفريزر على سائل ثقيل المجردة قد يؤدي ذلك لا سماح بملامسة أي من المكونات الحادة لظام التبريد.
- لا تستخدم الأجهزة الزلجاجية والمعلبة في الفريزر مما يؤدي إلى حرث ثشقق أو كسر عدما تتمدد.
- لا تستخدم الأجهزة كهربائية داخل حجرات تخزين الأغذية بالجهاز، إلا إذا كانت من النوع الموصى بها من قبل الشركة المصنعة.
- لا يستخدم هذا الجهاز إلا في حالة وجود توصية رسمية بالمنفي (RCD) أو إضافة بطيئة تيار متنفس مع فيشة ثنائية.
- تأكد من أن المقين المستخدم متصل بالتيار الكهربائي بطريقة سليمة.

تبيهات

يجب الانتظار لمدة ساعتين على الأقل قبل تشغيل الفريزر بعد وضع الفريزر في مكانه.


- لا تمس الكياس أو الأجزاء المحيطة به، حيث قد تبلغ درجة حرارة بالغة السخونة أثناء التشغيل وقد يتسبب الحراف المعدنية في حدوث إصابة.
- لا تقم بلمس الطعام أو المأكولات المعدنية في الفريزر بالآيدي المجردة قد يؤدي ذلك إلى الإصابة بفترات.
- لا تضع المشروبات الزلجاجية والمعلبة في الفريزر مما يؤدي إلى حرث ثشقق أو كسر عدما تتمدد.
- تأكد من أن سلك الفيشة ما تلت آن التركيب أو القلق، إذا كانت الفيشة أو السلك متخلخل ، لا تقم بدخول الفيشة، هناك خطورة التعرض لصدمه كهربائية أو وقوع حريق.
- عند نزع الفيشة لا تغض على السلك فقط بل على الفيشة، قد يؤدي جذب السلك إلى حدوث صدمه كهربائية أو اشتغال.
- التأكد من عدم وضع أشياء قابلة للذلة على السلك الوالصل بين الفريزر والفيشة.
- إذا أصاب التفت سلك الفيشة، يجب استبداله من قبل وكيل صيانة معتمد من قبل العربي حيث أن السلك المطلوب هو من نوع خاص وذلك لتجنب أي مخاطر.
- في حالة حدوث تسرب للغاز، قم بتهوية المنطقة بفتح النافذة، وتتجنب تقوير مصدر لهب أو إشعال لأن الغاز قابل للاشتعال.
- لا تضع أحجاماً تحتوي على مواد أو أحجام غير منتهية في قفص الفريزر.
- هذا الفريزر مصمم للاستخدام المنزلي والتطبيقات المشابهة مثل:
- الأماكن المخصصة للطعام في الملاجئ التجارية والمأكولات وبيوت العمل الأخرى.
- المنازل الريفية والعلاء في الفنادق والموريالات و العقارات السكنية الأخرى.
- البيئات المخصصة للإنقطاع والتوم والمطعم.

كيف تستخدم الفريزر على نحو صحيح وفعال

كيفية استخدام الفريزر بالطريقة السليمة

في حالة الاستخدام العادي يتم ضبط وحدة التحكم للفريزر على الرقم (3) وفي حالة الرغبة في زيادة أو نقص درجة الحرارة للفريزر يتم الضبط طبقاً للاتي :

ضبط درجة حرارة الفريزر



التحكم في درجة حرارة الفريزر

حاله الفريزر	وضع مفتاح التحكم
تجميد سريع	fast freeze
تجميد عالي	4
تجميد منخفض	1

ast fast freeze

شنغيل الفريزر لأول مرة.

- إضافة كمية كبيرة من الأطعمة والمأكولات دفعة واحدة.
- في حالة الرغبة في زيادة درجة التجميد أدر مفتاح التحكم في إتجاه الرقم الأكبر.
- تم تصميم الفريزر للعمل في درجة الحرارة المحيطة المحددة حسب فتحته في الجدول التالي:

تخزين الأطعمة

- استخدم الفريزر لتخزين الطعام المجمد لمدة طويلة، وصنع مكعبات الثلج.
- لتجميد الطعام الطازج، تأكد من الملمسة أكبر قدر ممكن من سطح الطعام المراد تجميده مع السطح البارد للدرج / الرف.
- لا تضع الطعام الطازج بجوار الطعام المجمد حتى لا يتسبب في إذابته.
- يفضل تقسيم الطعام الطازج مثل: (اللحم، السمك، اللحم المفروم)، قبل وضعها.
- لا تضع الطعام الدافئ في الفريزر.
- برجاء قراءة واتباع التعليمات الموجودة على عبوات الطعام المجمد بعناية، وفي حالة عدم وجودها يفضل عدم تخزين الطعام لأكثر من 3 شهور من تاريخ الشراء.

المحتويات

- ٤ كيفية فك الأجزاء الداخلية وحوض المصرف للفريزر
- ٥ احتياطات أمان خاصة بتشغيل الفريزر
- ٥ احتياطات عند التشغيل
- ٥ تحذير
- ٥ تفريح الفريزر
- ٥ تخزين الأطعمة
- ٥ حمولة الرف والدراج
- ٦ الصيانة الدورية

العمر الإفتراضي

يلزم العربي بتوفير الصيانة وقطع الغيار بعد فترة الضمان بمقدار مادي لمدة ٢ سنة.

التركيب

عند فتح الفريزر الجديد لأول مرة قد تكون هناك رائحة للبلاستيك سوف تزول مع الاستعمال العادي.

انبع التعليمات الآتية عند تركيب الفريزر :




١- يجب وضع الفريزر في مكان يافٍ بعيداً عن الأماكن المبللة والرطبة.

٢- يجب تركيب الفريزر على أرضية قوية ومستوية مع استخدام أرجل التوازن لضبط أنفية الفريزر.

٣- يجب ترك مسافة مناسبة لا تقل عن 20 سم حول الفريزر تسمح بتهوية جيدة لجسم الفريزر.

٤- يجب اختيار مكان لا يتعرض الفريزر فيه إلى الأشعة المشيرة للشمس أو أي مصدر للحرارة مثل : (موقد - أجهزة تدفئة).

٥- يجب توصيل سلك أرضي في قاعدة الفريزر باستخدام المسamar المثبت في المقاعدة وتوصيل الطرف الآخر في أرضي المنزل.

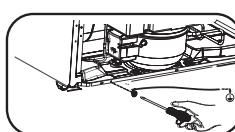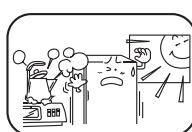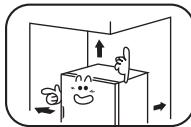

التعریف بأجزاء الفريزر واستخدامها

غطاء الدرج العلوي	١
الدرج علوي	٢
درج الفريزر الكبير	٣
درج الفريزر الصغير	٤
حلية أسفل باب الفريزر	٥




الأمان

تحذير هام

اقرأ هذا الكتيب واتبع تعليمات وكلمات الإشارة (مثل تحذير، احترس) فسوف يعقبها معلومات أمان هامة يجب مراجعتها بعناية.

تحذير	تشير إلى مخاطر محتملة أن ينجم عنها إصابة غالباً إذا لم تلتزم التعليمات.
احترس	تشير إلى موقف إذا لم يتم تلافيه، يمكن أن ينجم عنه إصابة خطيرة أو أضرار بالثلاجة.

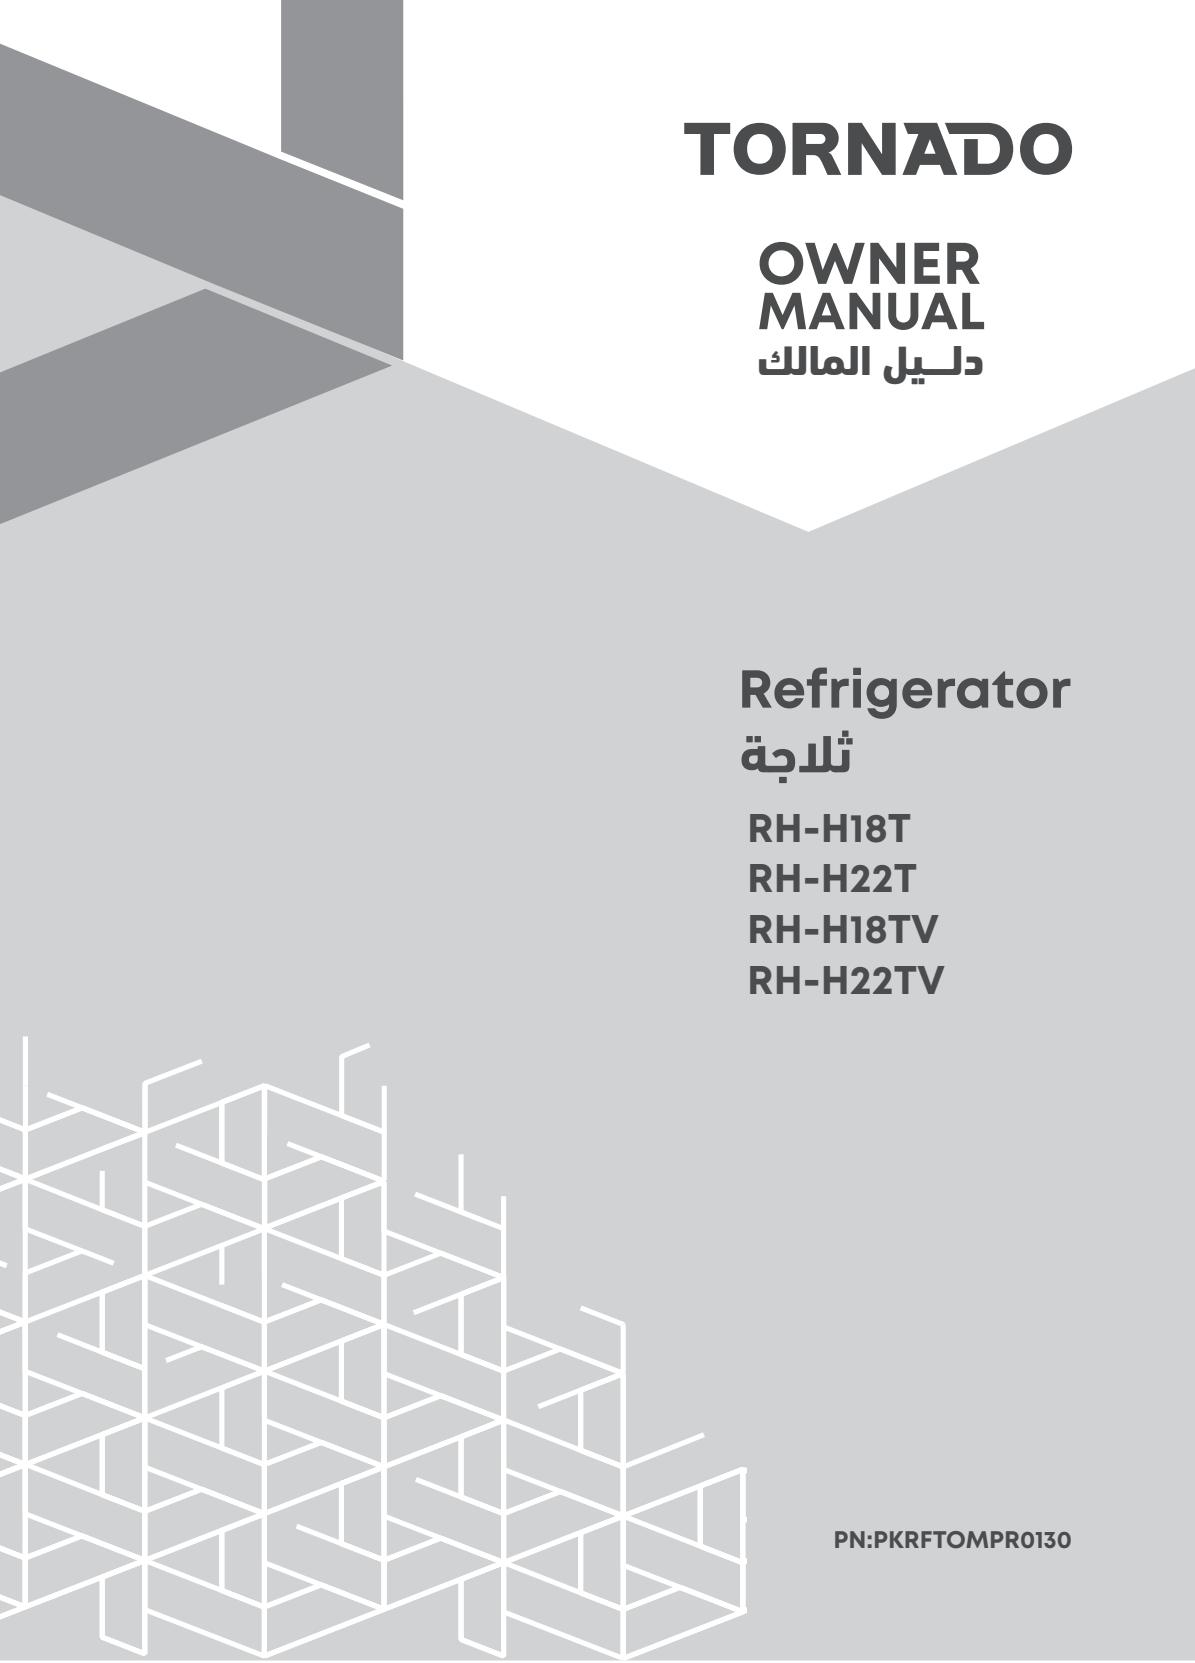

TORNADO

OWNER MANUAL

دليل المالك

Refrigerator **ثلاجة**

RH-H18T

RH-H22T

RH-H18TV

RH-H22TV

PN:PKRFTOMPR0130