REMOTE CONTROL

Before making any connections observe the following:

- Ensure the main voltage supply matches the label on the supplied plug-pack (+/-10%).
- Ensure that the power switch is OFF.
- Ensure that all system grounds (earth) are connected to a common point.
- Avoid powering equipment within a system from multiple power sources that may be separated by large distances.
- Connect all audio video sources and destination equipment.
- Power up all source and destination audio-visual sources.
- For each destination output select the appropriate input source by using the front panel input select buttons. The supplied IR remote control. Or through the RS-232 serial communications port.
- Upon powering up the switcher, it will return to its last used setting before being powered down.

REMOTE CONTROL

1. & 2. SWITCH POWER ON or OFF: Controller with a power ON and OFF

3. 1080P-24 FPS


4. 4K2K-24 FPS

5. 1080P-2CH

6. 1080P-BITSTREAM

7. 4K2K-BITSTREAM

8. ENTER

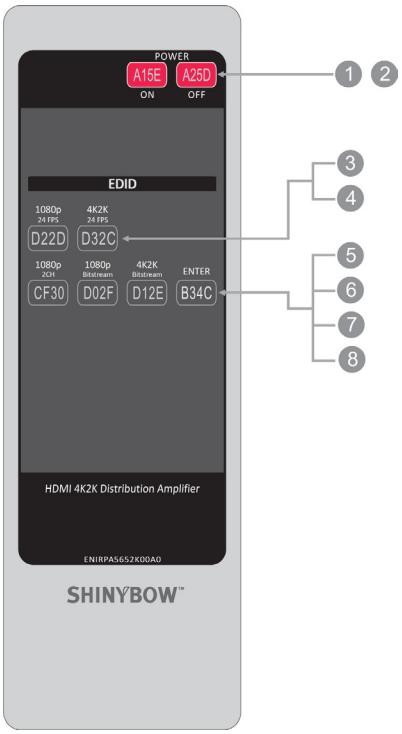

IR REMOTE CUSTOM AND DATA CODES (NEC Standard)

HOW TO SETUP IR CODES : CUSTOM CODE : 59A6

POWER ON	: 59A6 A15E
POWER OFF	: 59A6 A25D
1080p-24 fps	: 59A6 D22D
4K2K-24 fps	: 59A6 D32C
1080p-2CH	: 59A6 CF30
1080p-BitStream	: 59A6 D02F
4K2K-BitStream	: 59A6 D12E
ENTER	: 59A6 B34C