Usage Guide

FSP Example Project Usage Guide

User's Manual

Renesas RZ Family

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (http://www.renesas.com).

Renesas Electronics
www.renesas.com

Rev.1.00 Feb 2026

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
5. Renesas Electronics products are classified according to the following two quality grades: “Standard” and “High Quality”. The intended applications for each Renesas Electronics product depends on the product’s quality grade, as indicated below.
   "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.
   "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.
   Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user’s manual or other Renesas Electronics document.
6. When using Renesas Electronics products, refer to the latest product information (data sheets, user’s manuals, application notes, “General Notes for Handling and Using Semiconductor Devices” in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) “Renesas Electronics” as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.
(Note2) “Renesas Electronics product(s)” means any product developed or manufactured by or for Renesas Electronics.

(Rev.4.0-1 November 2017)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan
www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit: www.renesas.com/contact/.

© 2026 Renesas Electronics Corporation. All rights reserved.

Renesas RZ Family

FSP Example Project Usage Guide

Contents

1. Introduction 2
1.1 Prerequisites 2
2. Hardware and Software Requirements 3
3. Tool Installation 4
3.1 FSP and tools installation 4
3.2 J-Link RTT Viewer Installation 4
3.3 Tera Term Installation 4
4. Importing and Running the Project 5
4.1 Downloading the Project 5
4.1.1 Downloading the Project from GitHub 5
4.1.2 Downloading the Project from Renesas.com. 5
4.2 Running the Project 5
4.2.1 Importing the project into e2studio 5
4.2.2 Running the Project 5
5. References 12
6. Appendix 13
6.1 Limitations in connecting with J-Link RTT Viewer v8.60 or later 13
6.2 Change RZ/A3UL Board Edition Settings on the Project 15
6.2.1 Change to RZ/A3UL Evaluation Board Kit QSPI Edition (eXecute-In-Place) 15
6.2.2 Change to RZ/A3UL Evaluation Board Kit OCTAL Edition (eXecute-In-Place) 17
Revision History 21

1. Introduction

This Example Project Usage Guide provides steps and guidelines for operating projects which use API and source generated by Renesas Flexible Software Package **(FSP)**.

1.1 Prerequisites

1. Tool experience: It is assumed that the user has prior experience working with integrated development environments, such as e^2 studio, SEGGER J-Link RTT Viewer, and terminal emulation programs such as Tera Term.
2. Subject knowledge: It is assumed that the user has basic knowledge about microprocessors, embedded systems, and FSP to modify the example projects. First time users are recommended to refer to FSP User Manual for Tutorial on **Getting Started with Flexible Software Package**, paying special attention to sections as follows.
    - Set up Evaluation Board
    - Tutorial: Your First RZ MPU Project – Blinky
    - Importing an Existing Project into e2 studio

   Prior to running the example projects or programming the kits, all jumper settings must be set to the default settings. Refer to each kits' user's manual for the default jumper settings. After default jumper settings have been restored, refer to the readme.txt for each example project to modify the values from the default.

3. The screen shots provided throughout this document are for reference. The actual screen content may differ depending on the version of software and development tools used.

2. Hardware and Software Requirements

RZ FSP Example projects are designed to operate using RZ MPU kits officially supported by Renesas. Supported kits are identified for each group of microprocessors on the Renesas website.
Refer to the readme.txt file in the specific module folder of */example_projects* folder for additional hardware and software requirements for running the projects.

Note:

1. Some projects may require external hardware as mentioned in the respective readme.txt files
2. Some pin numbers may be printed on the back of the Evaluation Kit board.

Software Requirements

- Windows® 11 operating system

Below software requirements are provided as reference. Please refer to the Release Notes & Tools requirement for the FSP version of your choice to identify exact versions of software required.

- e² studio v2025-12 or later
- RZ FSP v4.0.0 or later
- Arm GNU Toolchain for Cortex-M and Cortex-R: 13.3.Rel1
- Arm GNU Toolchain for Cortex-A: 13.2.Rel1
- SEGGER J-Link RTT Viewer v8.60 or later
- SEGGER J-Link Software for CM33 cold boot on RZ/V2H: 7.96e

3. Tool Installation

3.1 FSP and tools installation

Download and install the latest version of FSP and tools from FSP GitHub repository.

1. Open FSP GitHub repository: https://github.com/renesas/rz-fsp
2. Go to the ***Releases*** section of Git and navigate to the desired FSP version.
3. Follow the instructions on installing and using FSP and e^2 studio.

3.2 J-Link RTT Viewer Installation

This section is designated for example projects of RZ/G, RZ/V, RZ/T (CR52), RZ/N (CR52) series as they support J-Link RTT Viewer as terminal console application.

Download and install SEGGER J-Link Software for Windows from https://www.segger.com/downloads/jlink#J-LinkSoftwareAndDocumentationPack.

Default download path is `C:\Program Files\SEGGER\JLink`.

Note: Select version 8.60 or later from the drop-down menu in Version tab.

3.3 Tera Term Installation

This section is designated for example projects of RZ/A, RZ/T (CA55), RZ/N (CA55) series as they support Tera Term as terminal console application.

Go to the Tera Term GitHub Releases page for the latest version. scroll to the Assets section of the latest release. Then download teraterm-<version>-installer.exe

Default installation path is `C:\Program Files (x86)\teraterm`.

4. Importing and Running the Project

4.1 Downloading the Project

4.1.1 Downloading the Project from GitHub

1. Open RZ FSP Examples Repository: https://github.com/renesas/rz-fsp-examples/releases.
2. Navigate to **Assets** section.
3. Download the project bundle for specific kit.

4.1.2 Downloading the Project from Renesas.com.

1. Download the example project bundle for the specific kit from https://www.renesas.com/en/software-tool/rz-flexible-software-package-fsp#downloads

Note: Some example projects for a kit bundle may require an older version of FSP to be installed due to identified problems found in operating with latest version of FSP.

4.2 Running the Project

4.2.1 Importing the project into e2studio

Refer to FSP User Manual for steps on importing a project:

- Importing an existing project
- Generating Project content[1]
- Building the project
- Downloading the project image to the board

Then apply your learnings to the module/project of interest.

Note: In the case of RZ/V2H, it is required to build “preceding_rzv2h_evk_cm33_ep” before building a CR8 project. Hence, please import and build the “..\rzv2h_evk\preceding\preceding_rzv2h_evk_cm33_ep” when trying out the example for CR8.

4.2.2 Running the Project

4.2.2.1 Connecting with J-Link RTT Viewer

This section is designated for example projects of RZ/G, RZ/V, RZ/T (CR52), RZ/N (CR52) series as they support J-Link RTT Viewer as terminal console application.

[1] Some example projects distributed through https://github.com/renesas/rz-fsp-examples may not be upgraded to the most release of FSP due to technical issues found during regression testing. Refer to the version information table to identify the older version of FSP to use with the non-upgraded example project. When the required FSP version of an example project is not found in the user’s installation of tools, the Generate Project Content step will prompt changing the FSP version of the project to the latest version of FSP available locally on the user’s PC. It is recommended that the user avoids this and instead opts to download and install the required (and missing) version of FSP and tools. Refer section 0 and 3.1.

1. Open RTT Viewer by double clicking `JLinkRTTViewer.exe` in the downloaded `/Segger/JLink` folder.

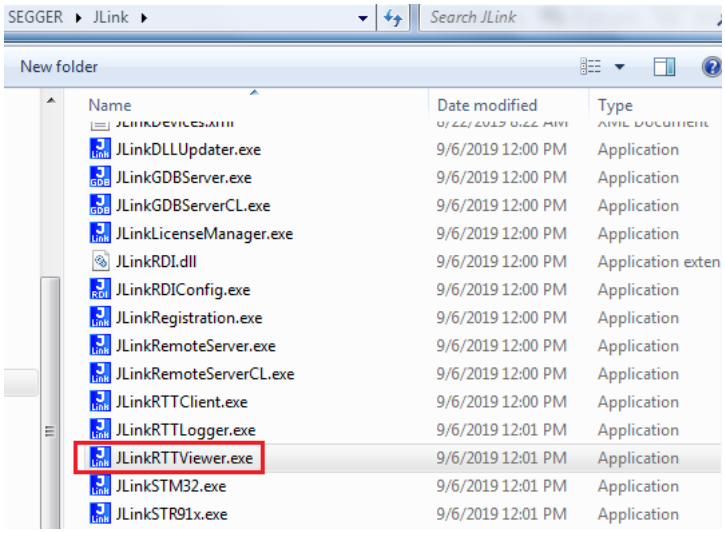

2. On opening, the field **Specify Target Device** shows up as **unspecified**. With USB selected, click on the ... tab and select the desired Renesas RZ device. Keep a note of the Core type.

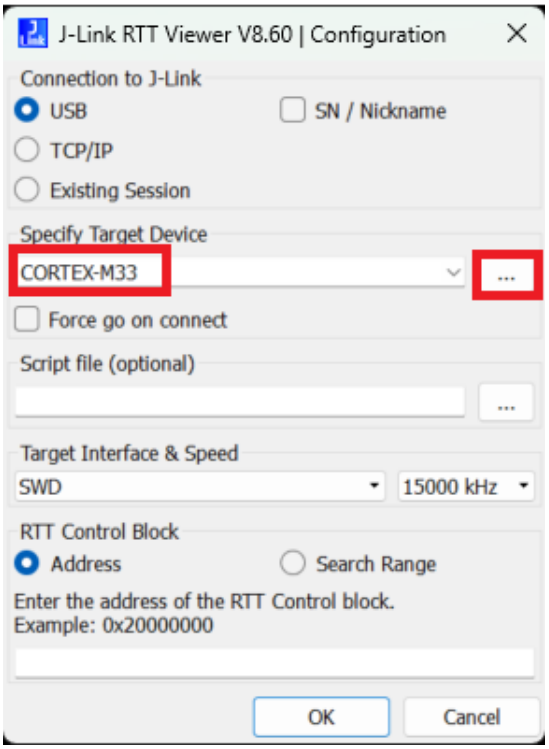

3. If multiple kits are connected to the PC, make sure to choose the corresponding serial number (SN/ Nickname).
   Note: For MPUs, the exact address of the RTT Control Block must be specified. When Auto Detection is used, RTT Viewer parses all RAM memory to find the RTT Block. As TrustZone boundaries are configured for all projects for these MPUs, RTT Viewer will encounter access failures, and you will not see the output logs in RTT viewer. The exact address for the SEGGER_RTT data structure in RAM is

found in the readme.txt file associated with the module under evaluation or in the map file when a binary is built. (Refer Appendix for an example).

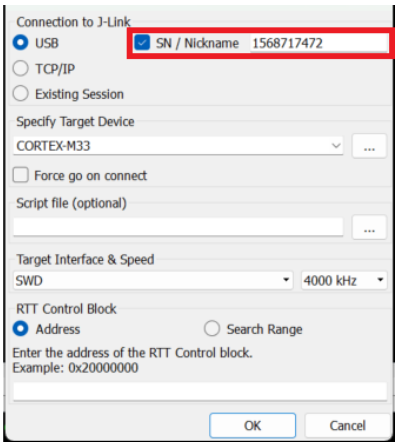

4. Select Target Interface & Speed.
   With respect to the RZ/G2LC, RZ/G2LC, RZ/G2UL examples, please configure them as below.

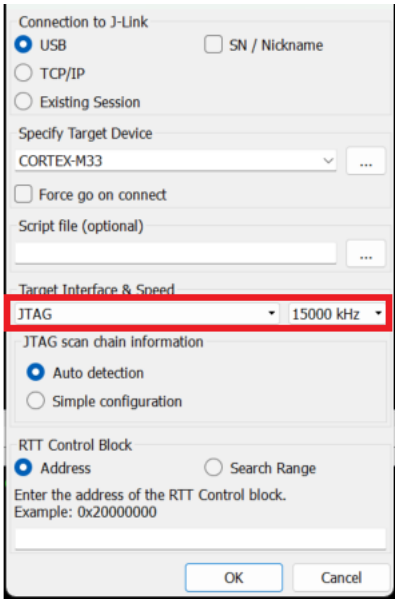

With respect to the RZ/G3S and RZ/G3E examples, please configure them as below.

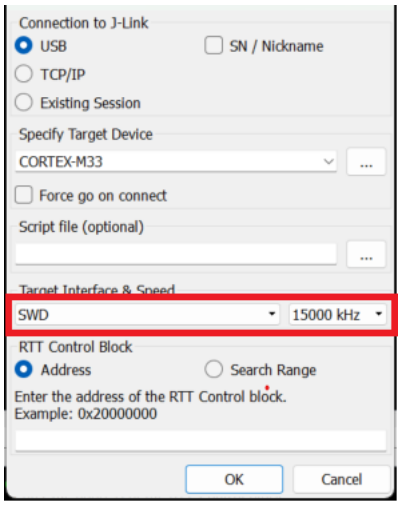

With respect to the RZ/V2L examples, please configure them as below.

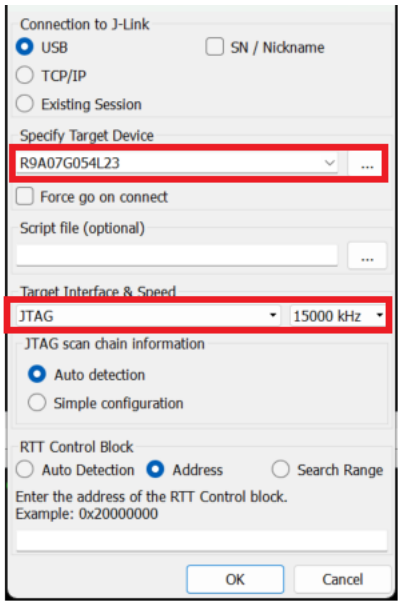

With respect to the other RZ/V2H examples, please configure them as below.

For CM33:

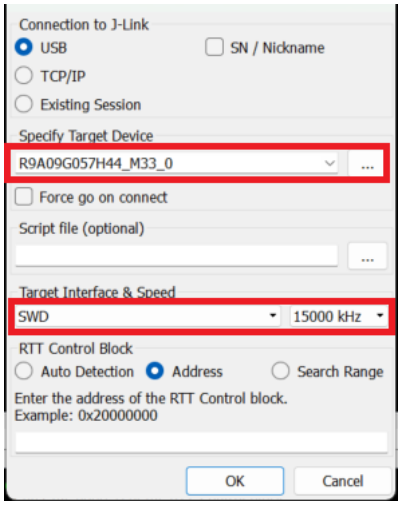

For CR8_0:

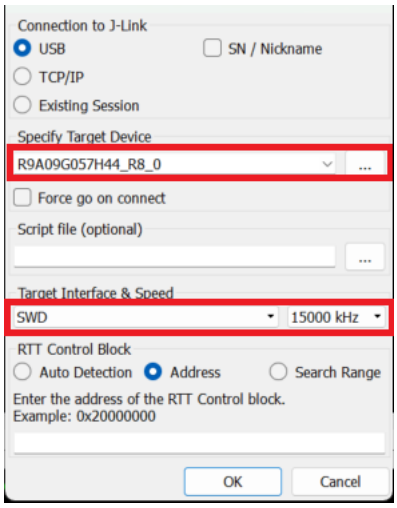

For CR8_1:

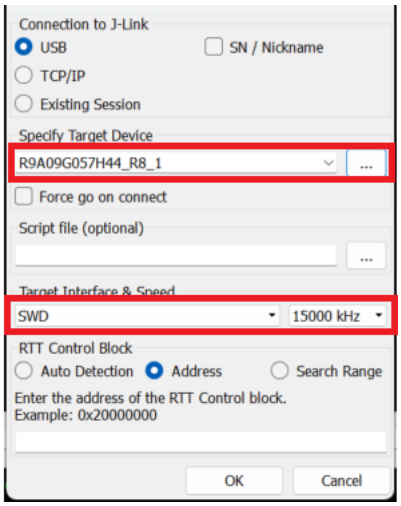

With respect to the RZ/T2H (CR52), RZ/T2L, RZ/T2M, RZ/T2ME, RZ/N2H (CR52), RZ/N2L examples, please configure them as below.

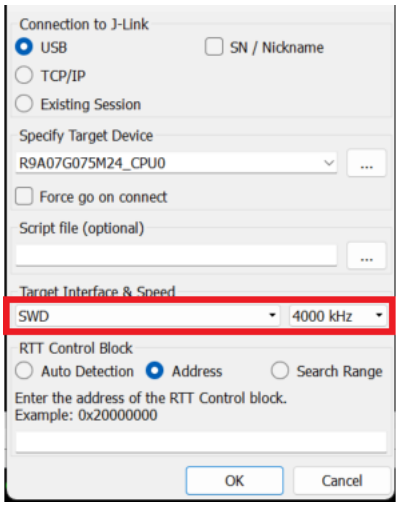

5. Click on the **Input** tab and change **Sending** option to **Send on Enter**. Every time input in entered, you must either press the **Enter** or **Enter** tab on the RTT viewer.

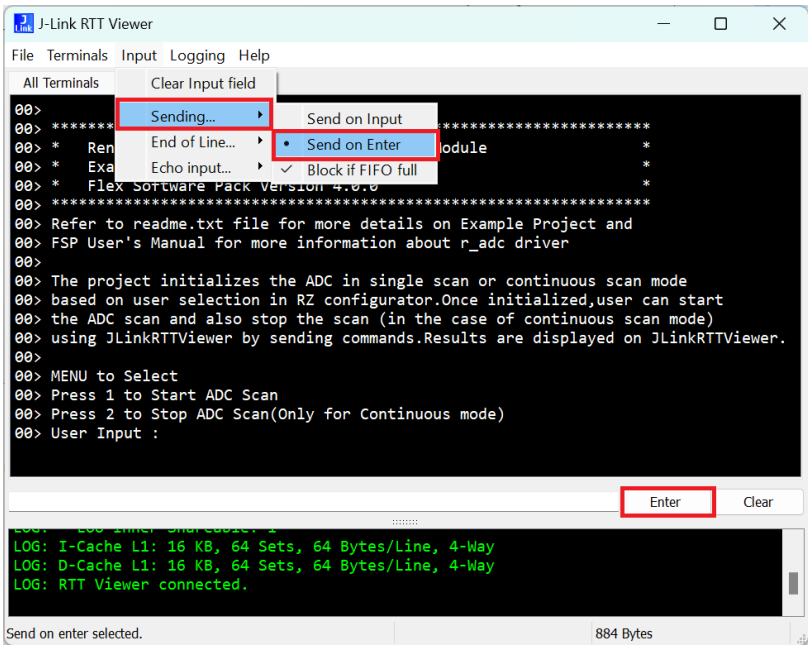

6. Follow the instructions displayed on the RTT Viewer as shown above. Also refer to `readme.txt` file in the project folder (downloaded.zip file or in https://github.com/renesas/rz-fsp-examples) to run the project.

Note:

1. Example Projects do not support floating point or special characters or any non-numeric characters.
2. Example projects do not handle cases where the user input is greater than the expected input array size.

4.2.2.2 Connecting with Tera Term

This section is designated for example projects of RZ/A, RZ/T (CA55), RZ/N (CA55) series as they support Tera Term as terminal console application.

1. Open **Tera Term** by double clicking **ttermpro.exe** in the downloaded folder.
2. Select **Serial port**.

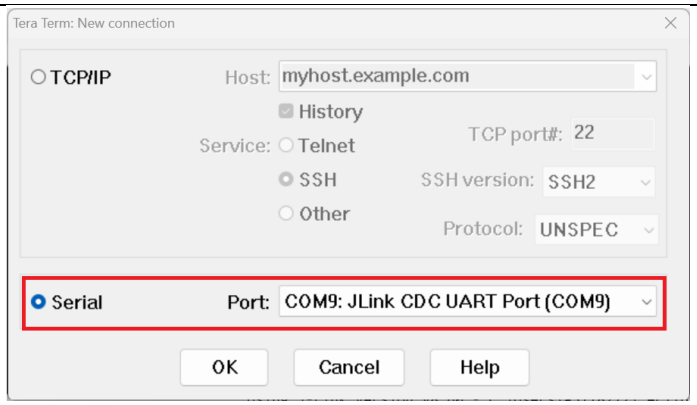

3. Set up **Serial port**.
   With respect to the RZ/A3M, RZ/A3UL, RZ/T2H (CA55), RZ/N2H (CA55) examples, please configure Serial Port as below.

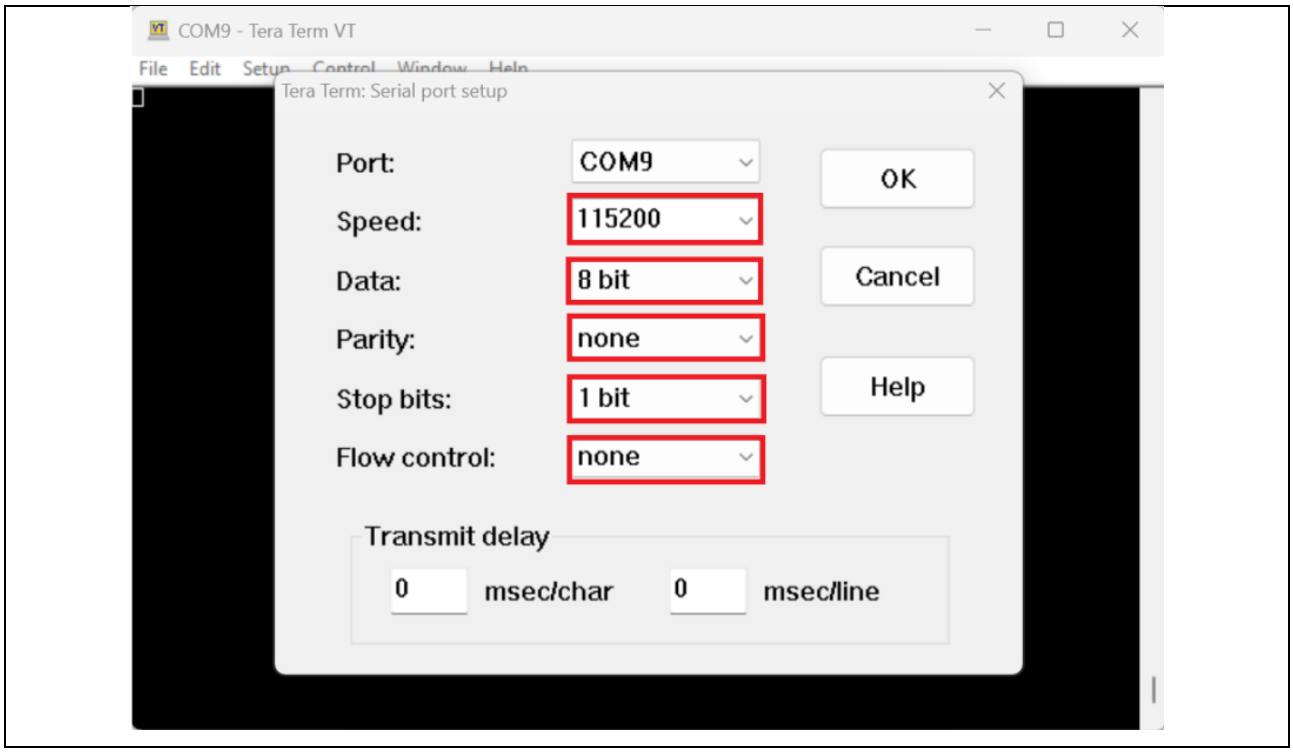

4. Check log in Tera Term.

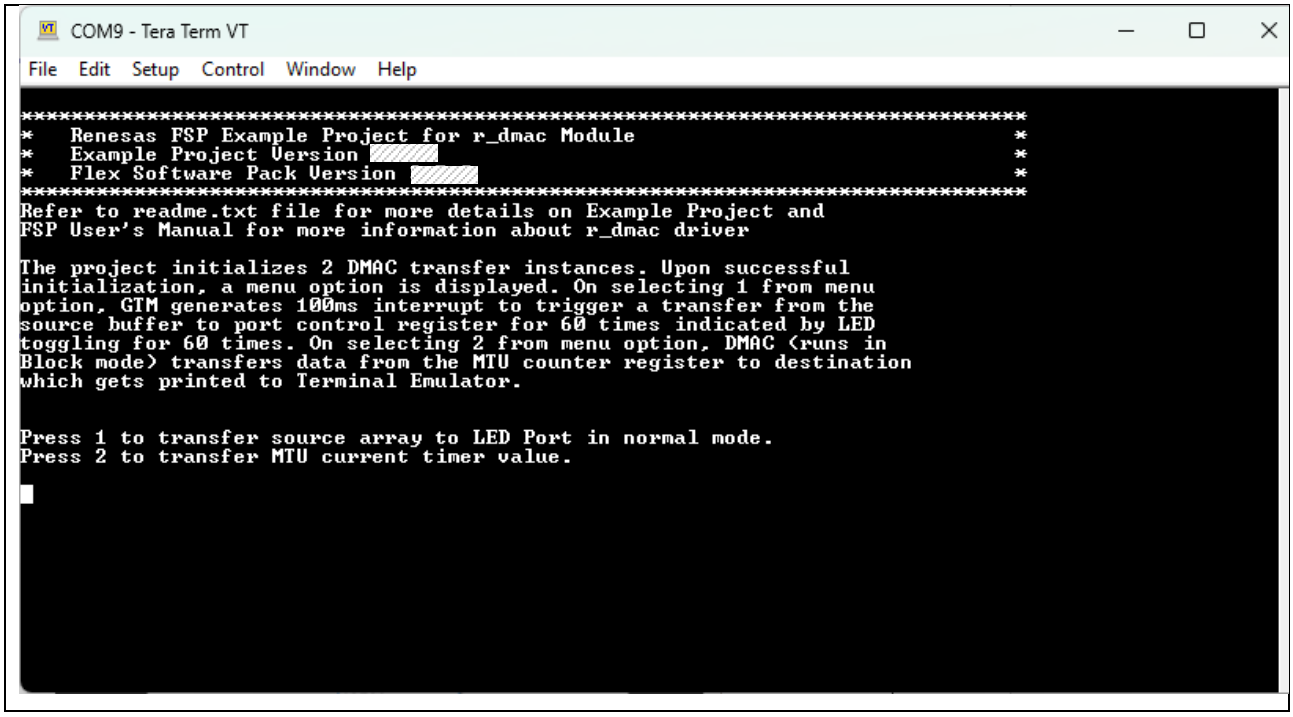

5. References

FSP GitHub:	https://github.com/renesas/rz-fsp
FSP User Manual:	
	www.renesas.com/rza-getting-started-flexible-software-package
	www.renesas.com/rzg-getting-started-flexible-software-package
	www.renesas.com/rzt2-rzn2-getting-started-flexible-software-package
	www.renesas.com/rzv-getting-started-flexible-software-package
	https://renesas.github.io/rz-fsp
FSP Example Projects:	https://github.com/renesas/rz-fsp-examples
Evaluation Kit Manuals:	
	www.renesas.com/rz/ek-rza3m
	www.renesas.com/rz/rza3ul_evk
	www.renesas.com/rz/rzg2l_evk
	www.renesas.com/rz/rzg2lc_evk
	www.renesas.com/rz/rzg2ul_evk
	www.renesas.com/rz/rzg3e_evk
	www.renesas.com/rz/rzg3s_evk
	www.renesas.com/rz/rzn2h_evk
	www.renesas.com/rz/rzn2l_rsk
	www.renesas.com/rz/rzt2h_evk
	www.renesas.com/rz/rzt2l_rsk
	www.renesas.com/rz/rzt2m_rsk
	www.renesas.com/rz/rzt2me_rsk
	www.renesas.com/rz/rzv2h_evk
	www.renesas.com/rz/rzv2l_evk
	www.renesas.com/rz/rzv2n_evk
Knowledge Base:	Knowledge Base | Renesas Customer Hub
Support:	Renesas Engineering Community

6. Appendix

6.1 Limitations in connecting with J-Link RTT Viewer v8.60 or later

When using Auto Detection option for the RTT Control Block, J-Link RTT Viewer may not be able to find the `SEGGER_RTT` variable in RAM memory due to restrictions on memory access imposed by TrustZone settings made by the Renesas Device Partition Manager. Restrictions are typically applied for TrustZone Example Projects. If the RTT Control Block cannot be found by RTT Viewer, output from an Example Project may not be visible in the RTT Viewer Console with Auto Detection.

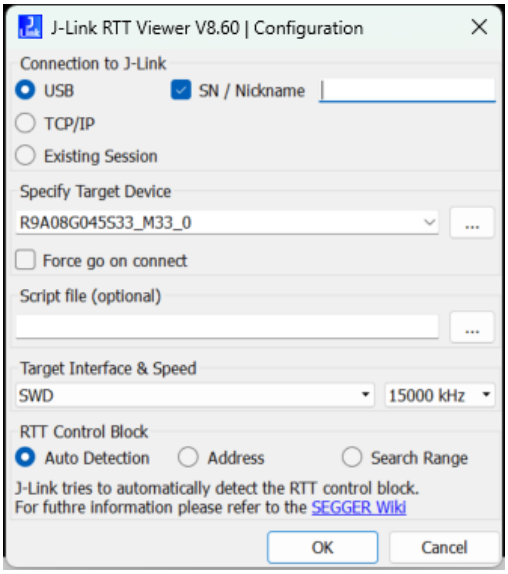

To mitigate this situation, you may use any one of the following approaches:

1. **Method 1:** The recommended approach is to search for _SEGGER_RTT variable in the map file, generated upon successfully building a configuration of an Example Project, which is by default located in the address space for On-chip SRAM.

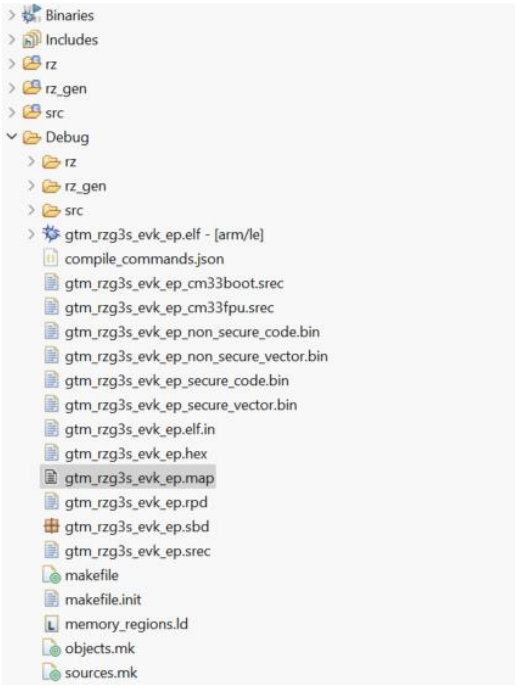


```
*(.bss*)
.bss._acDownBuffer
                0x00026ca0       0x10 ./src/SEGGER_RTT/SEGGER_RTT.o
.bss._acUpBuffer
                0x00026cb0      0x400 ./src/SEGGER_RTT/SEGGER_RTT.o
.bss._SEGGER_RTT
                0x000270b0       0xa8 ./src/SEGGER_RTT/SEGGER_RTT.o
                0x000270b0                _SEGGER_RTT
```

And input the exact address of the variable into the Address Input.

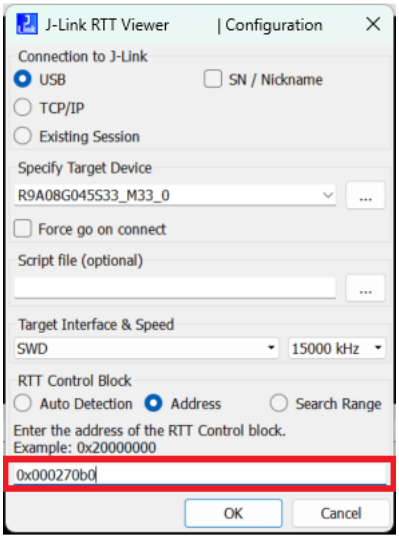

2. **Method 2:** Apply a search range within the first 32kB of SRAM Memory. This approach works when the compiler places _SEGGER_RTT variable in the first 32kB of SRAM memory.

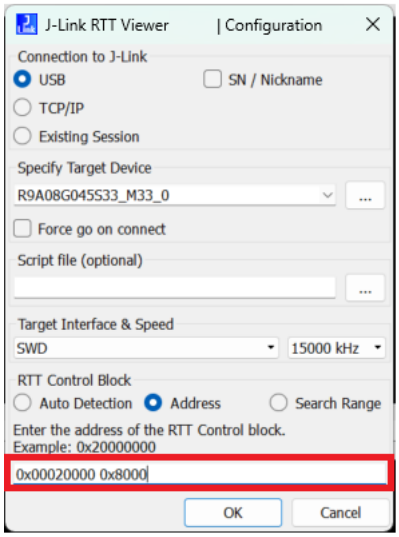

6.2 Change RZ/A3UL Board Edition Settings on the Project

The example projects for RZ/A3UL set RZ/A3UL Evaluation Board Kit QSPI Edition (Exec with DDR-SDRAM) as default. If you can use the project for other board edition of RZ/A3UL, follow the procedure below.

6.2.1 Change to RZ/A3UL Evaluation Board Kit QSPI Edition (eXecute-In-Place)

1. Change **Device Selection** to **RZ/A3UL Evaluation Board Kit QSPI Edition (eXecute-In-Place)** in FSP Configuration > BSP tab.

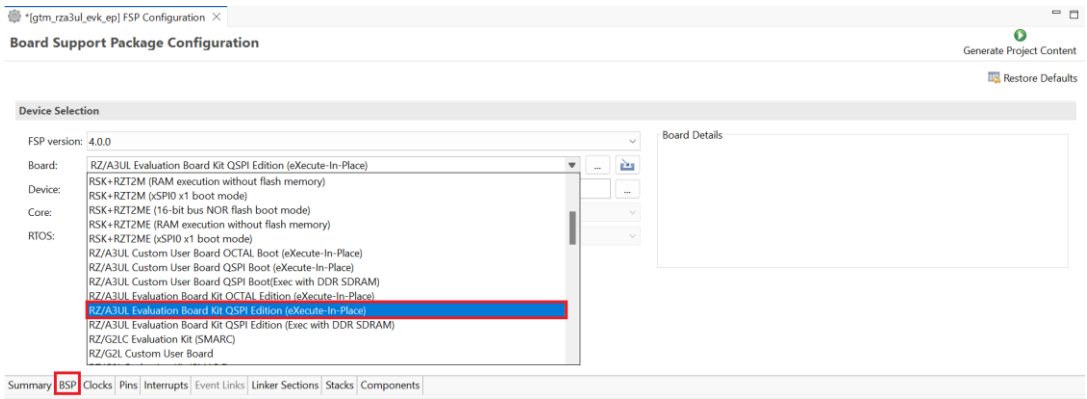

2. Uncheck the box in **Generate data** of FSP Configuration > Pins tab.

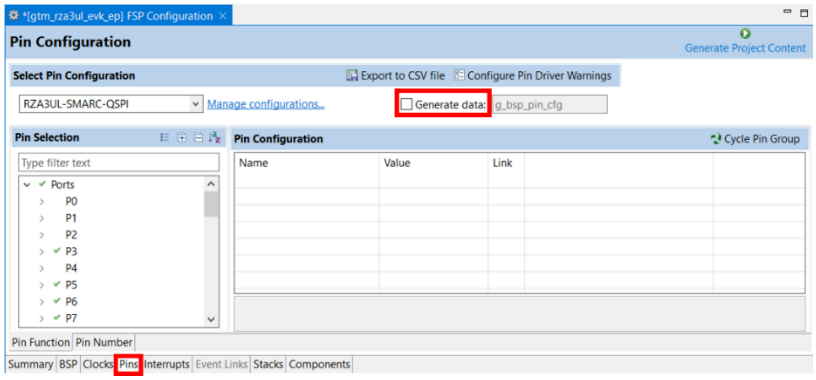

3. Change **Select Pin Configuration** to **RZA3UL-SMARC-QSPI-XIP.Pincfg** in FSP Configuration > Pins tab.

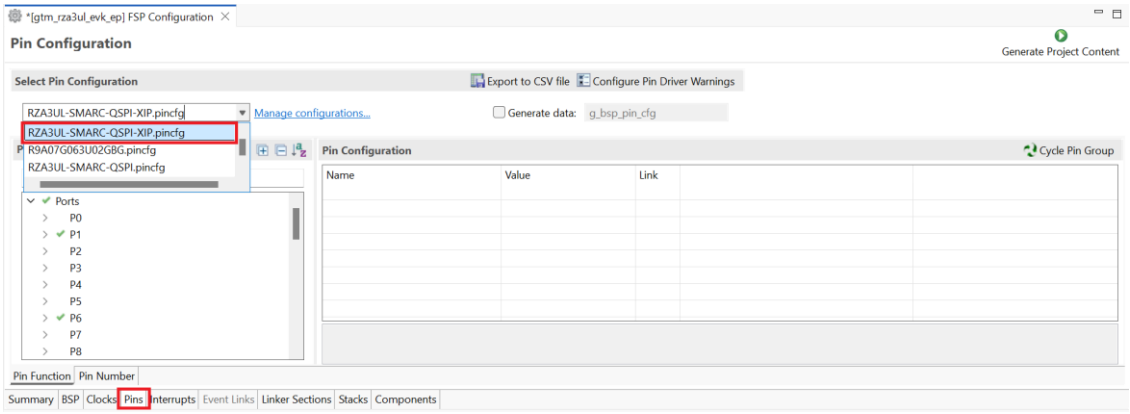

4. Check the box and enter **g_bsp_pin_cfg** in **Generate data** of FSP Configuration > Pins tab.

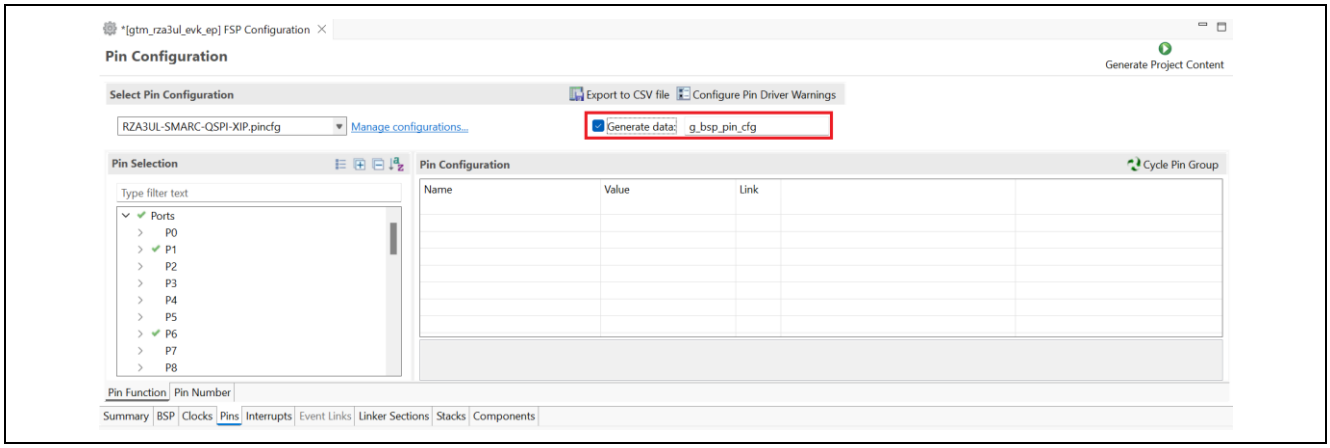

5. Click **Generate Project Content**.

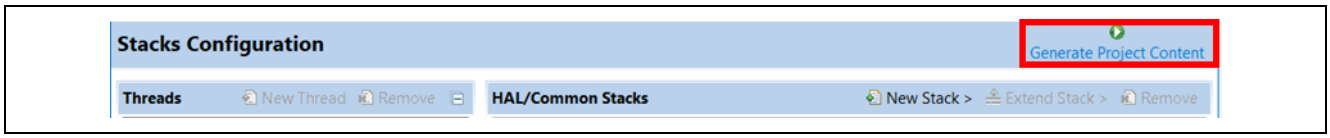

6. Build the project.

6.2.2 Change to RZ/A3UL Evaluation Board Kit OCTAL Edition (eXecute-In-Place)

1. Change **Device Selection** to **RZ/A3UL Evaluation Board Kit OCTAL Edition (eXecute-In-Place)** in FSP Configuration > BSP tab.

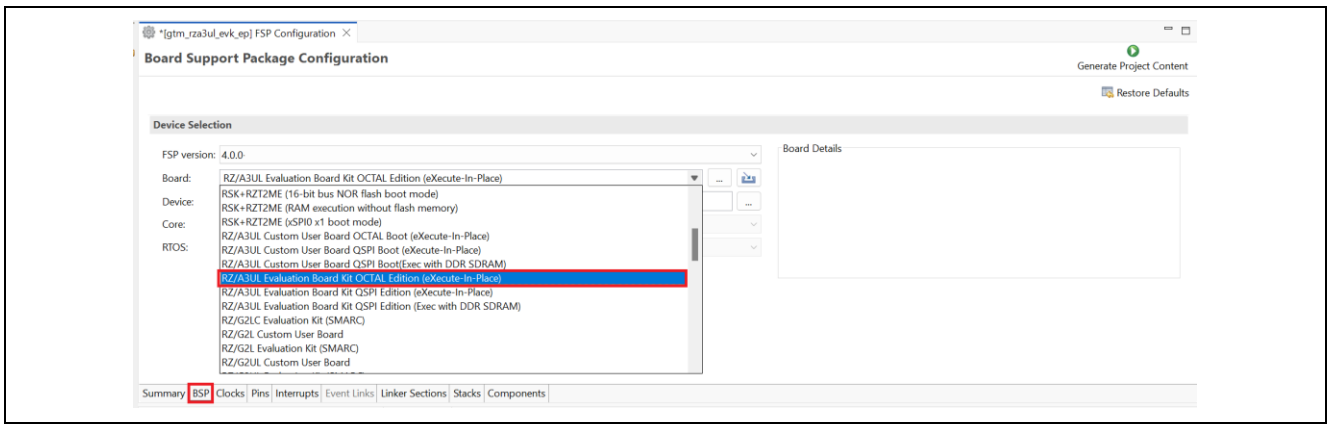

2. Uncheck the box in **Generate data** of FSP Configuration > Pins tab.

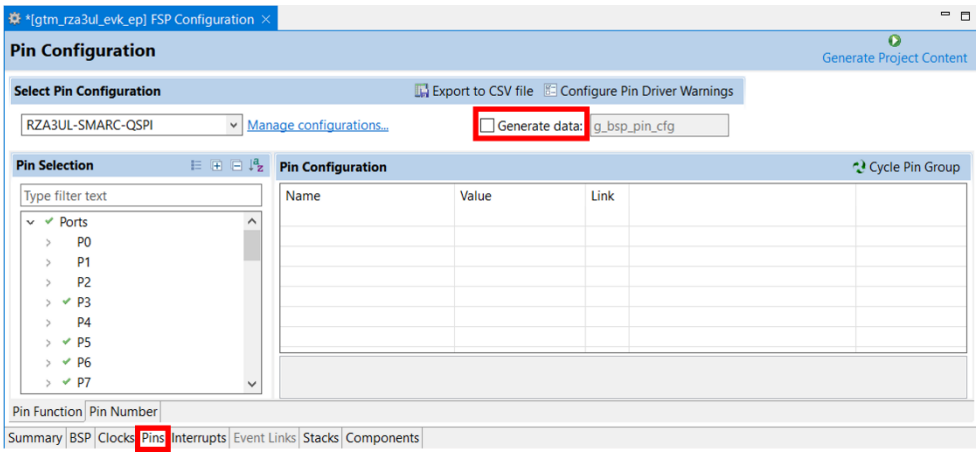

3. Change **Select Pin Configuration** to **RZA3UL-SMARC-OCTAL-XIP.pincfg** in FSP Configuration > Pins tab.

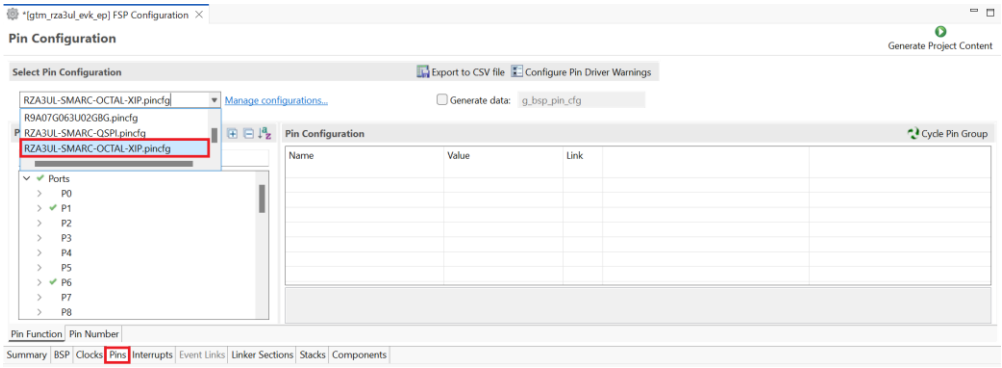

Check the box and enter **g_bsp_pin_cfg** in **Generate data** of FSP Configuration > Pins tab.

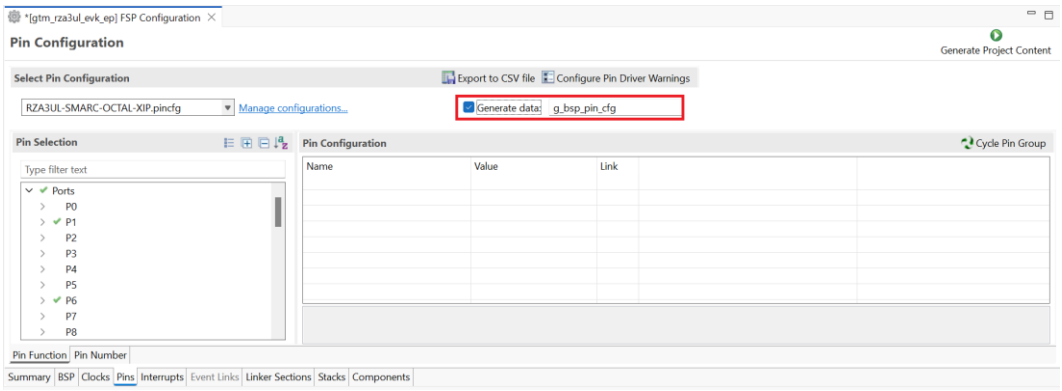

4. Click **Generate Project Content**.

5. Build the project.
6. Change Loaded file of IPL for OCTAL edition.
   1. Open **Debug Configurations** and move to **Startup** tab.

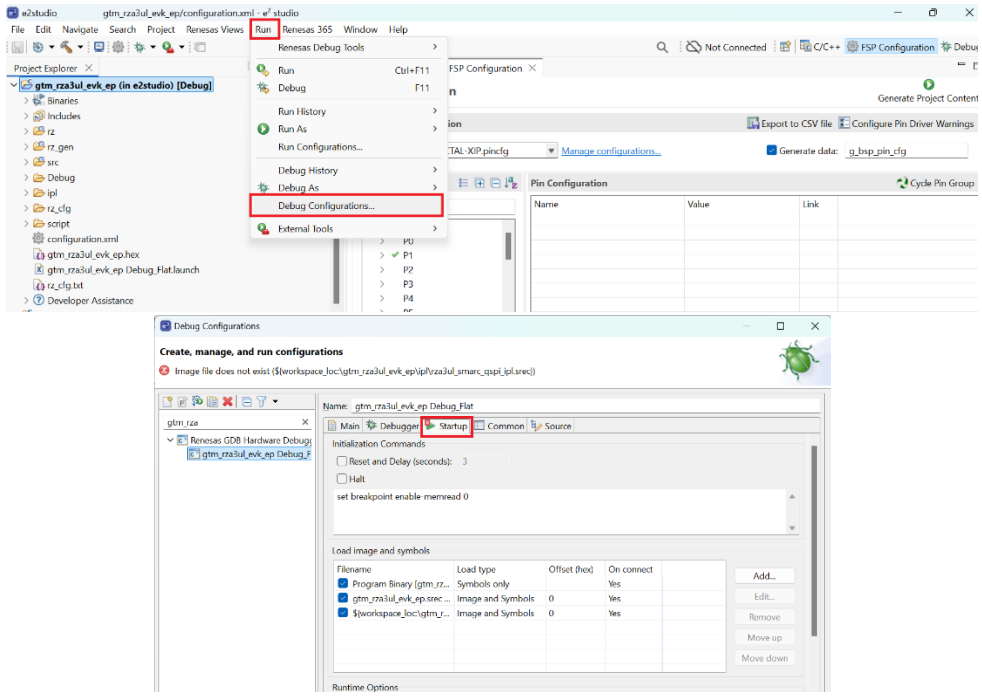

2. Click rza3ul_smarc_qspi_ipl.srec in **Load Image and Symbols** and click **Edit…**.

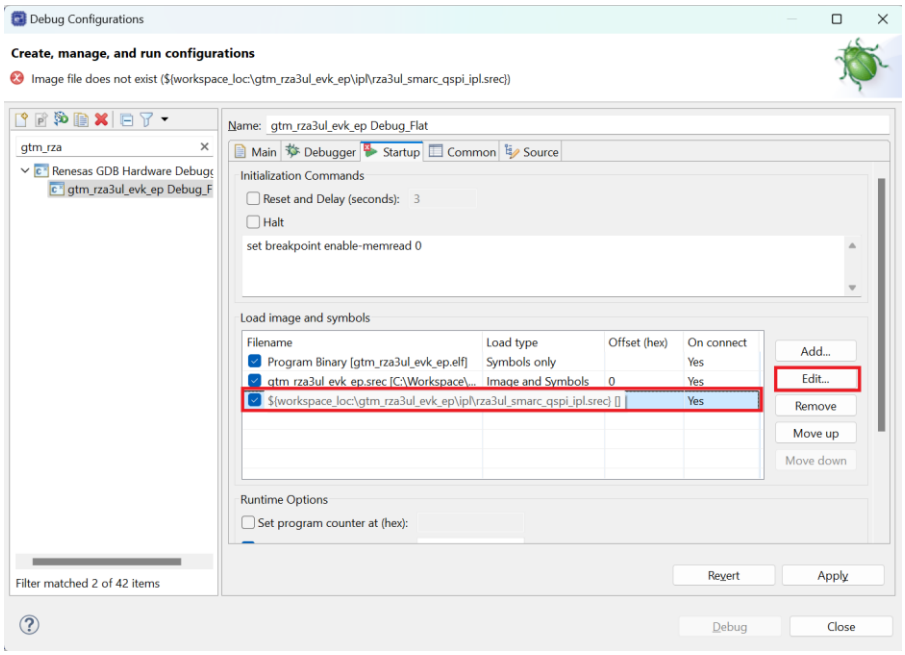

3. Click **Workspace…** and select project/ipl/rza3ul_smarc_octal_ipl.srec.

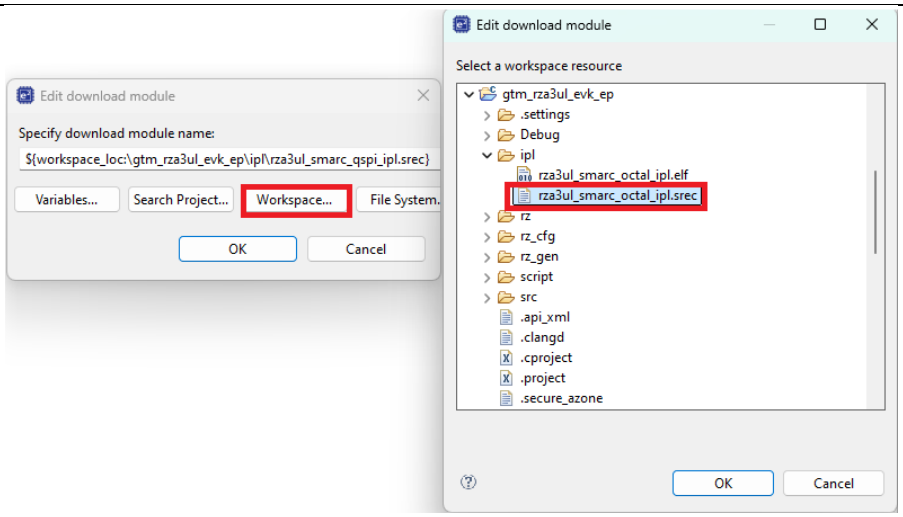

7. Click OK and apply the Debug Configuration.

Revision History

Rev.	Date	Description	
		Page	Summary
1.00	Feb.24.26	—	Initial release

FSP Example Project Usage Guide – User's Manual

Publication Date: Feb.24.26

Published by: Renesas Electronics Corporation

FSP Example Project Usage Guide

Renesas Electronics Corporation