

DUAL HINGE REFRIGERATORS

SERVICE TRAINING

Jarod Blackbourn
26/08/2026



COMPRESSOR REFRIGERATORS

Topics

1. Technical data
2. Error and warning codes
3. AC-DC adaptor
4. Cycle Temperatures
5. RUC Diagnostic Mode
6. Error 33
7. Wiring diagrams

ALL DUAL HINGE REFRIGERATORS

Topics

1. Décor Panel changeover
2. Door Removal
3. Display PCB Changeover
4. Door Installation

ABSORPTION REFRIGERATORS

Topics

1. Technical data
2. Error and warning codes
3. Current Consumption
4. Cycle Temperatures
5. RUA Diagnostic Mode
6. Understanding Defrost
7. Error 50 - Gas lockout
8. Error 6 - Element DC Error
9. No power – Clixon
10. Failed Cooling Unit
11. Fuse Recall
12. Wiring diagrams

COMPRESSOR REFRIGERATORS

Dual Hinge



RUC5308x
9620017231



RUC6508x
9620017232



RUC8508x
9620017230



RCD10.5XES DH
9630000157


Technical Data

	RUC 5308X	RUC6508X	RUC 8508X
Capacity			
• Refrigerator compartment	133 l	134 l	170 l
• Frozen compartment	13 l	46 l	46 l
• Total capacity	145 l	180 l	216 l
Connection voltage	100 – 240 V~, 50 / 60 Hz 12 V= / 24 V=		
Supply battery protection (12 V)			
• Cut-off voltage	10.4 V		
• Cut-in voltage	11.7 V		
Supply battery protection (24 V)			
• Cut-off voltage	22.8 V		
• Cut-in voltage	24.2 V		
Power consumption	88 W		
Rated current			
• 100 V~	0.95 A		
• 240 V~	0.4 A		
• 12 V=	7.3 A		
• 24 V=	3.65 A		
Refrigerant	R600a		
Refrigerant quantity	19 g	30 g	31 g
Cooling temperature range			
• Refrigerator compartment	0 °C to +8 °C	0 °C to +8 °C	0 °C to +8 °C
• Frozen compartment	-20 °C to -10 °C	-20 °C to -10 °C	-17 °C to -10 °C
Climate class	T		
Intended ambient temperature for use	+16 °C to +43 °C		
Noise emission	≤45 dB		

	RCD10.5XES,
Total volume	200 L
Refrigerator compartment volume	159 L
Freezer compartment volume	40.6 L
Connection voltage	100 V ~ ... 240 V ~, 50 Hz ... 60 Hz 12 V = or 24 V =
Power rating (AC)	85 W
Rated current	9.5 A at 12 V = 4.6 A at 24 V = 0.5 A at 240 V ~
Cooling temperature range:	
• Refrigerator compartment	0 °C ... 8 °C
• Freezer compartment	-20 °C ... -10 °C
Noise emission	39 dB(A)
Climatic class	N or T (16 °C ... 43 °C)
Short-term inclination	30 °
Refrigerant	R600a
Refrigerant quantity	34 g
Defrost:	
• Refrigerator compartment	Cyclic
• Freezer compartment	Manual
Dimensions (in mm) W*H:	
• Without flange	526 mm × 1246 mm
• With flange	523 mm × 1260 mm
Depth (in mm):	
• Overall	615 mm
• From flange rear face	561 mm
Weight	49.5 kg

RUC - DIAGNOSTIC – ERRORS AND WARNINGS

ERROR TYPE	ERROR CODE	AUDIO ALARM AT UNMUTE	IMPACT ON COOLING PERFORMANCE	REMARK
Defrost NTC error	W01	NO	NO	NTC positioned correctly? Replace NTC?
Fridge air NTC error	W02	NO	NO	NTC positioned correctly? Replace NTC?
Communication error	E03	YES	NO	Wiring loom connection/fuse?
CI BUS error	W04	NO	NO	Not currently in use – shouldn't see this one
Door open >2 minutes	W10	YES	YES	Check door magnet in place properly
Battery voltage extra low/high	W11	YES	YES	Less than 7.5 volts or greater than 31.5 volts
Inner fan fault	W14	NO	YES – Inefficient performance	Check plug connector/replace fan
Defrost heater fault	W17	NO	NO – cuts power to heater	Low current – less than 1 amp
Defrost heater fault	E18	NO	NO – cuts power to heater	High current – greater than 3 amp
DC input voltage low	W19	YES	YES – Compressor shuts down	Battery protection activated
Ambient NTC fault	W26	NO	NO	Mounted on rear (Main) PCB (soldered in)
Outer fan overcurrent	E32	YES	YES – Compressor shuts down	Extra fan fitted? Not needed
Compressor no start	E33	YES	YES – Compressor shuts down	Module? System pressure?
Compressor overload	E34	YES	YES – Compressor shuts down	Large start up heat load?
Thermal cut out of module	E35	YES	YES – Compressor shuts down	Ventilation? Blocked condenser?

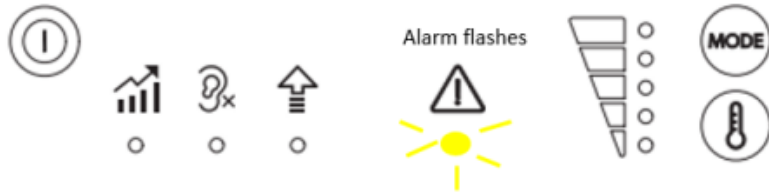

RCD10.5XES WARNING AND ERROR ALARMS

Flashes	Audio?	Type	Fault	Solution/to check
Solid - on	No	Warning	Defective sensor indication	Replace sensor in PC – requires cut and join as incoming wiring is fixed in vacuum panel. Situated right side of interior of PC behind plastic grill. (Future plug and play solution)
1	Yes	Warning	DC Voltage below 10 or above 31.5	Resets automatically once voltage is restored to normal range. Things to Check: • Wiring & connections • Battery charge and efficiency • Connected equipment such as solar/invertors/adaptors etc • Do they have what they need?
2	Yes	Error	External fan overcurrent	• Reset by pushing on/off button for 2 seconds until a beep is heard • If error appears again replace the fan
3	Yes	Error	Compressor won't start	• Reset by pushing on/off button for 2 seconds until a beep is heard • If error continually appears check: • Power interruptions such as on off with ignition of vehicle causing lockout • Compressor control module • Refrigerant overcharge in a new unit • Locked rotor compressor
4	Yes	Error	Compressor overload	• Reset by pushing on/off button for 2 seconds until a beep is heard • Shut power off for 30 minutes then restart • If large headload recently introduced, reduce the load by half and add later
5	Yes	Error	Compressor overheated	• Reset by pushing on/off button for 2 seconds until a beep is heard • If error remains/returns check; • Ventilation is adequate • External fan is running
6	No	Warning	CI Bus fault	Resets automatically
7	Yes	Warning	Door open too long	After door is open 2 minutes the warning will show and alarm sound – closing the door will reset the alarm. (Does not apply to freezer door)


AC-DC ADAPTOR

The newest range of Dometic Refrigerators have an AC-DC adaptor installed opposed to the previous models such as the RUC5208x, 6408x and 8408x which had AC input on the compressor control unit.

New




Previous

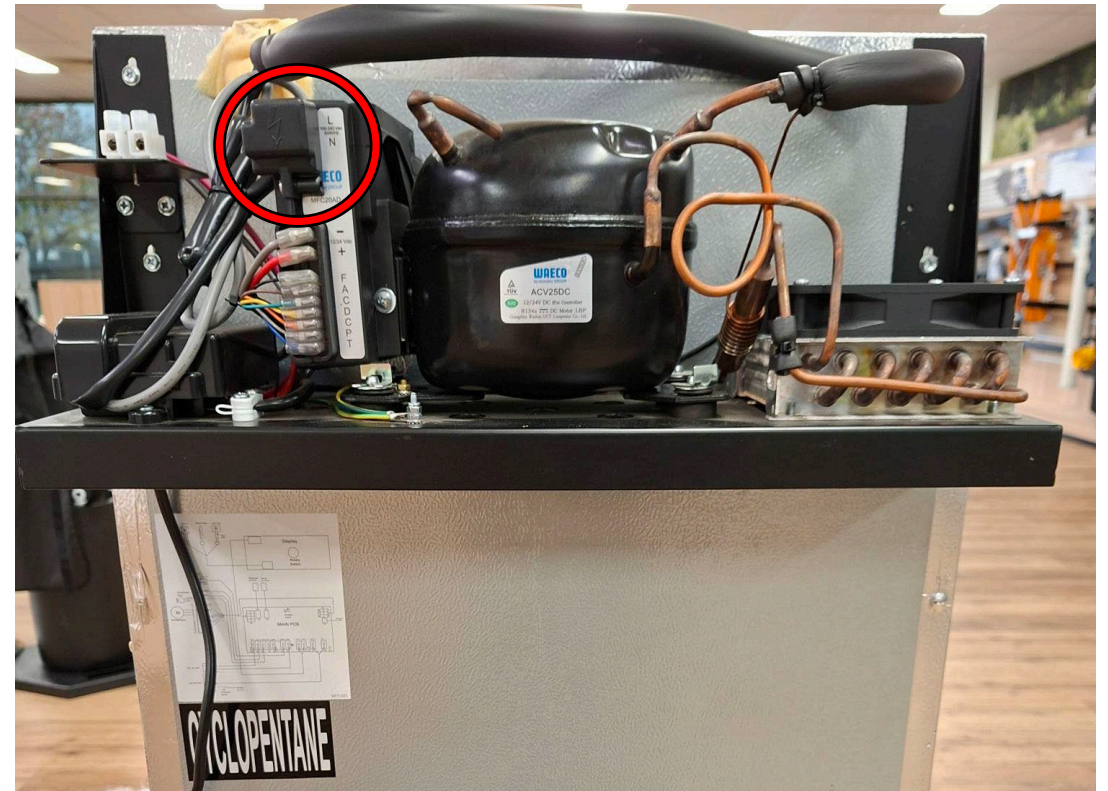

AC-DC ADAPTOR

4450036677


- **240v AC and 12v DC input**
- **Converts 240v AC into 24v DC**
- **Rated at 135 watts**
- **AC circuit takes priority**

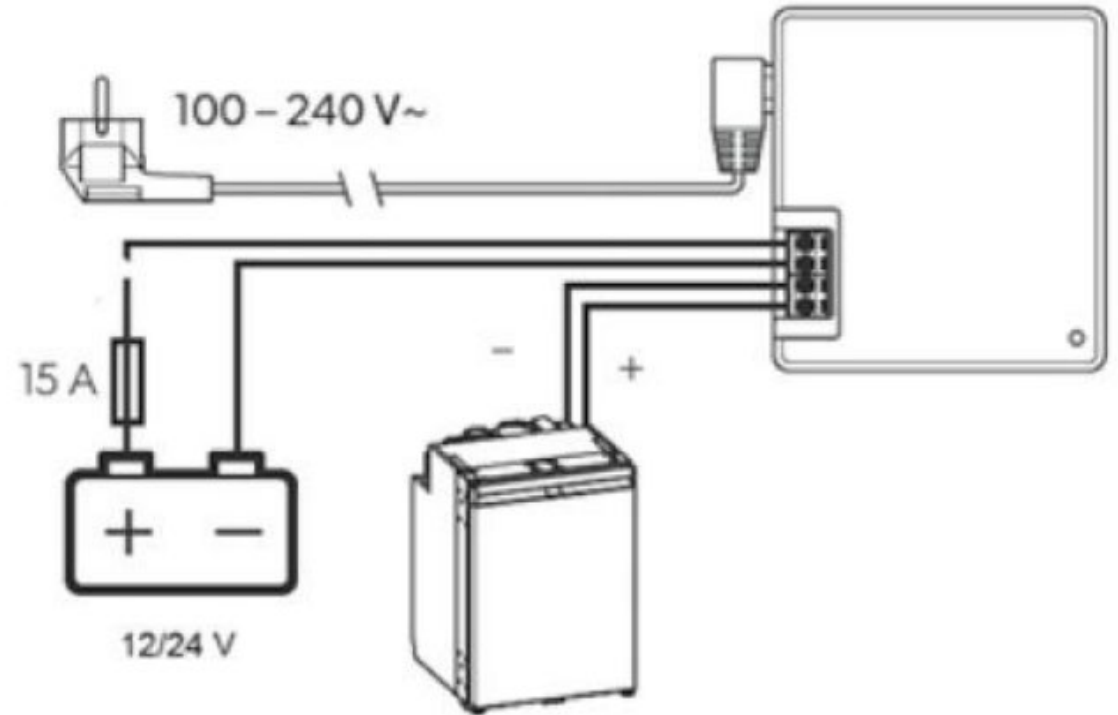

CYCLE TEMPERATURES

Temperatures Measured At Fridge NTC

Setting	Cut in temperature	Cut out temperature
1	7°C	6°C
2	5°C	4°C
3	3°C	2°C
4	1°C	0°C
5	0°C	-1°C

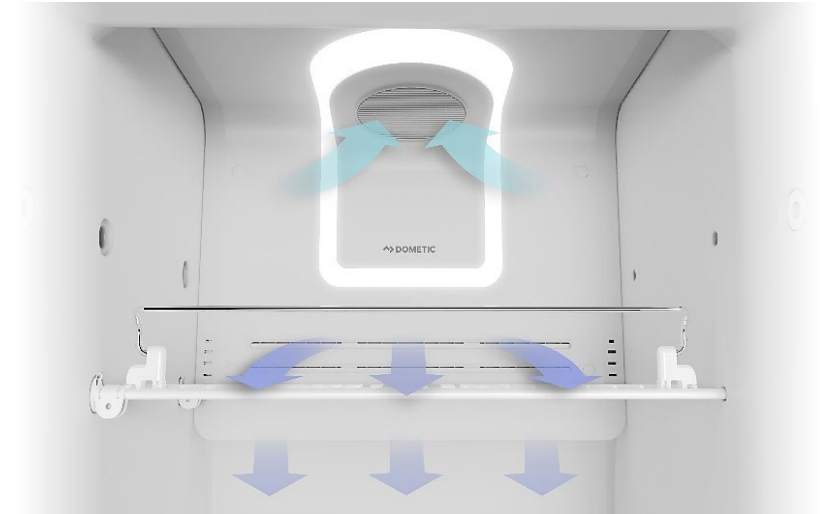

Auto/variable Temperature Control

Cut-in & cut-out values are adjusted by input from Ambient NTC to match conditions, particularly to maintain freezer temps as primary control sensing is at fridge.

If fridge NTC is faulty, Warning/error will show however the defrost NTC will take control.

RUC DIAGNOSTIC MODE

What Is Diagnostic Mode?

Diagnostic Mode is a valuable troubleshooting feature that assists with fault diagnosis. It will switch on all refrigerator components making it easier to test component operation and identify potential issues.

How To Access Diagnostic Mode

Ensure the refrigerator is switched off. Press and hold the control knob for at least 10 seconds and continue holding it until "Diagnostic Mode" appears on the display.



Test Number	Test Function/action	Displayed messages
0	Door open (manual operation)	Open/Closed
1	Door close (manual operation)	Open/Closed
2	Communication Test (Loom)	OK/NG
3	Defrost NTC temperature sensor	Temperature value – on evaporator
4	Refrigerator NTC temperature sensor	Temperature value – air temperature in PC
5	Ambient NTC temperature sensor	Temperature value – measured at Main (Rear) PCB
6	VCC Voltage 2 compressor control module out	Voltage value - Typically 27 volts if on AC power – or available voltage dc. i.e. Battery voltage with no load.
7	VCC Voltage type	AC/DC
8	N/A	N/A
9	Defrost Heater ON/OFF	OK/NG
10	Interior fan ON/OFF	OK/NG
11	Main PCB	Displays which version PCB. (Helpful with upgrades)
12	Display PCB	Displays which version PCB. (Helpful with upgrades)

COMPRESSOR START FAILURE

Possible causes of Compressor start failure.

1. Poor DC supply voltage
2. Faulty control unit or AC-DC adaptor
3. Faulty compressor (Very unlikely)
4. High system pressure (Very unlikely)

RUC - ERROR 33



ERROR TYPE	ERROR CODE	AUDIO ALARM AT UNMUTE	IMPACT ON COOLING PERFORMANCE
Compressor no start	E33	YES	YES – Compressor shuts down

RCD – 3 FLASHES



Flashes	Audio?	Type	Fault
3	Yes	Error	Compressor won't start

COMPRESSOR START FAILURE

Poor DC supply voltage

Poor supply voltage could be caused by:

- Undersized cabling
- Poor connections within the circuit eg battery terminal, fuse block, terminal block


You may read a suitable voltage at the fridge however once the compressor attempts to start (then creating a load) the voltage can drop significantly then causing the compressor to stall and display error 33.




COMPRESSOR START FAILURE

Faulty AC-DC adaptor

1. Once an adequate 12v supply is discovered, check the output voltage on the AC-DC adaptor underload.

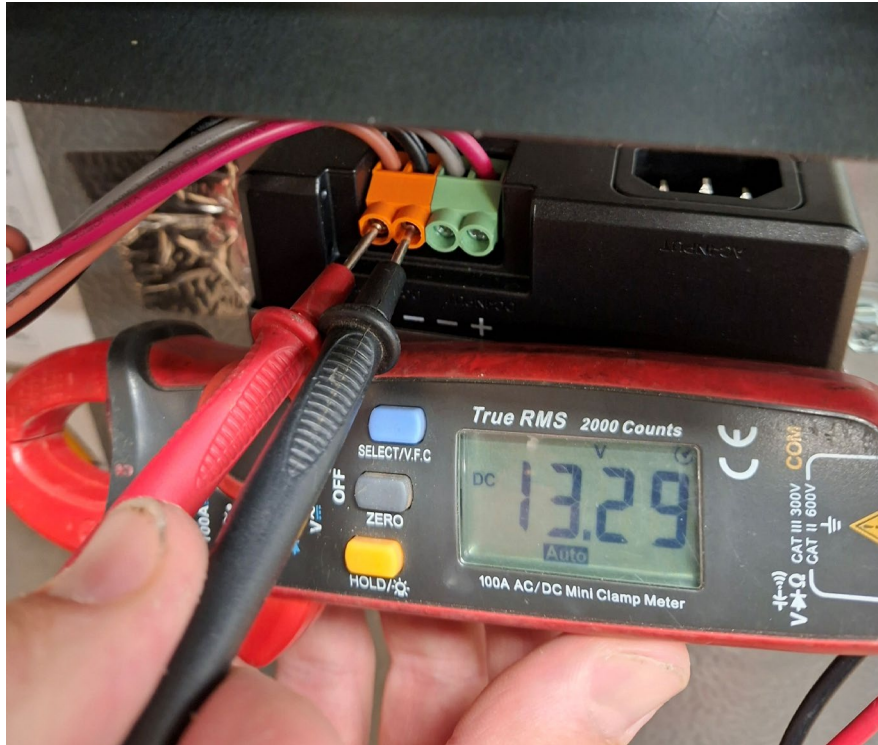


2. If AC-DC adaptor output voltage is acceptable check input voltage at the compressor control module underload.

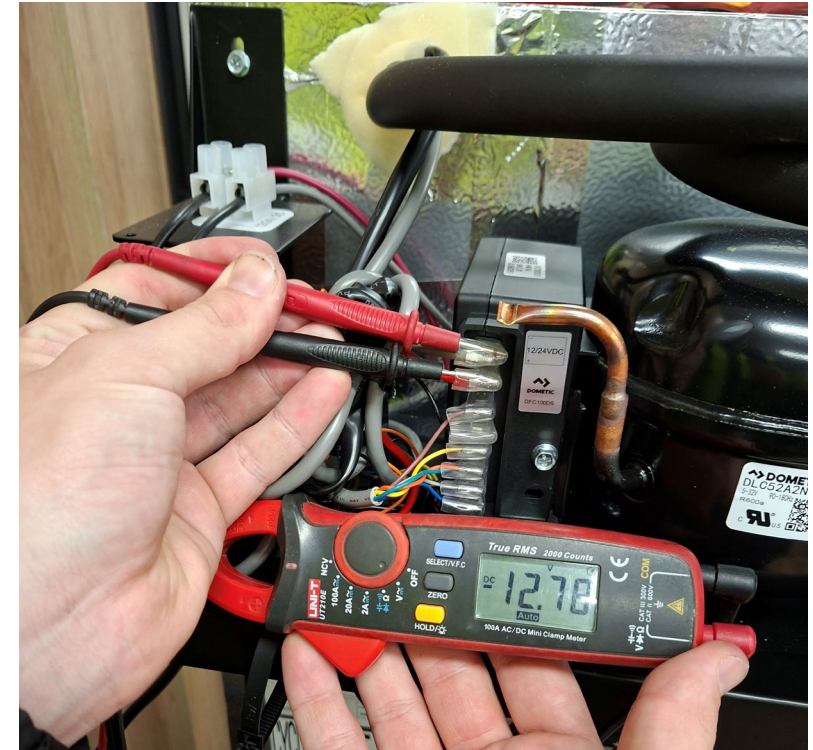


COMPRESSOR START FAILURE

Faulty Compressor or Faulty Module

1. Remove the module and check if the plug is connected correctly.

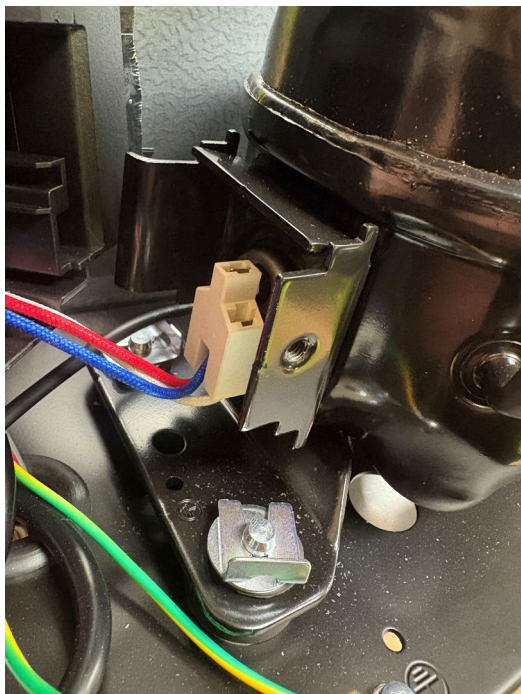

2. If the plug is connected correctly, remove the plug and check resistance of compressor windings, all windings should read .3 ohms, if a winding is open circuit the compressor will need to be replaced,

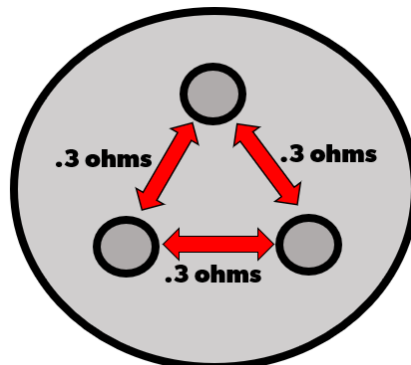


3. If the windings are ok, replace the control module.




WIRING DIAGRAM

RUC

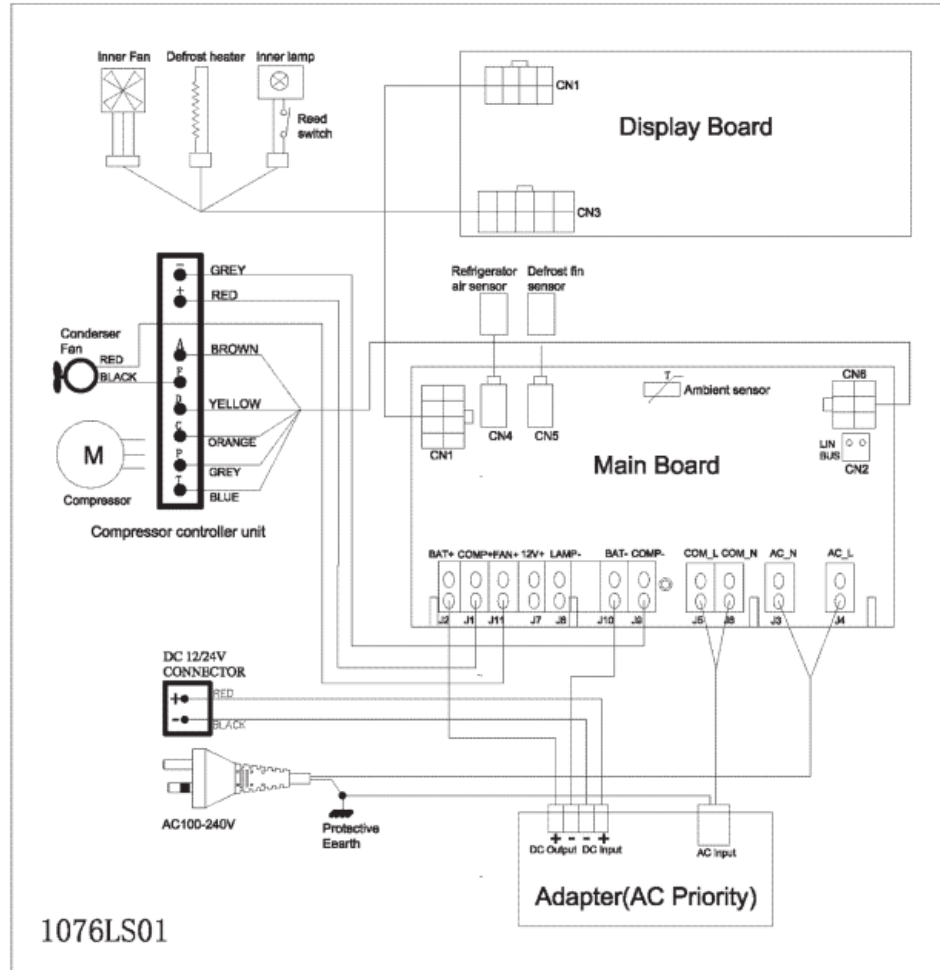

RCD

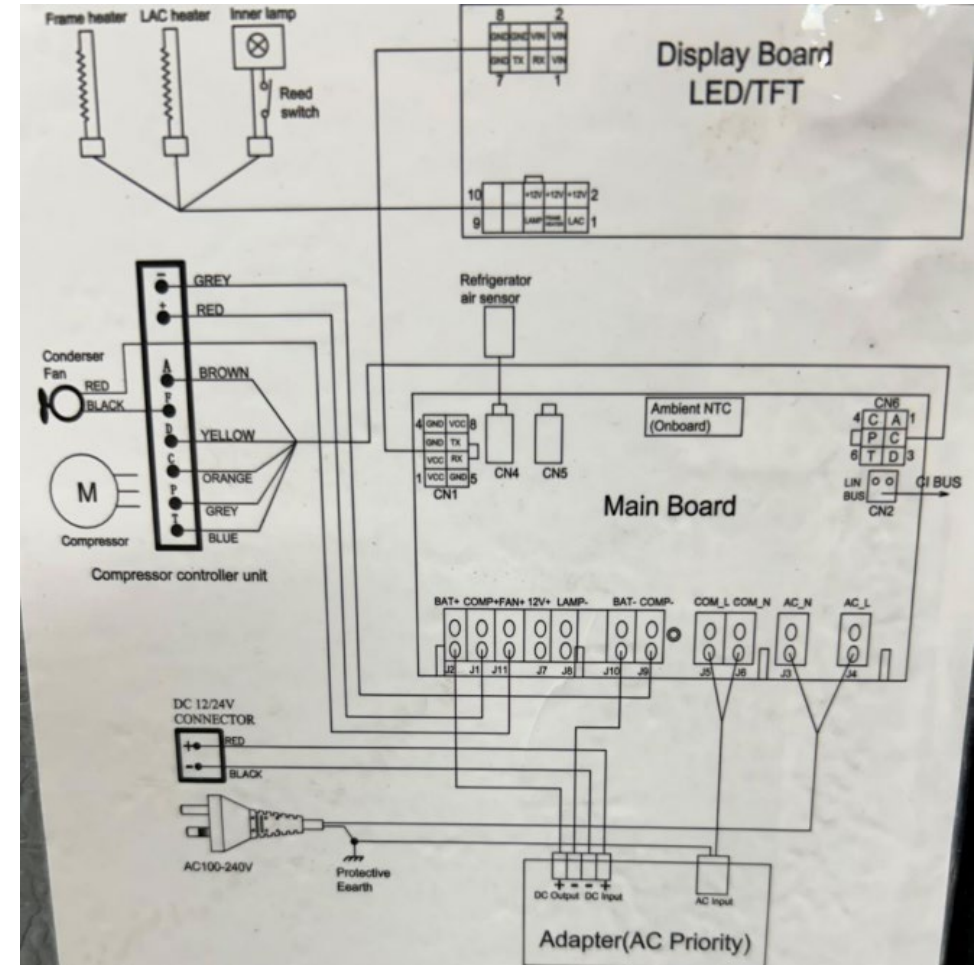

ABSORPTION REFRIGERATORS

Dual Hinge



RUA5308x
9620017228



RUA6508x
9620017229



RUA8508x
9620017227



RMD10.5XES DH
9630000150

TECHNICAL DATA

	RUA5308X	RUA6508X	RUA8508X
Capacity			
• Refrigerator compartment	133 l	134 l	170 l
• Frozen compartment	13 l	46 l	46 l
• Total capacity	146 l	180 l	216 l
Connection voltage	230 to 240 V~, 50 / 60 Hz 12 V=		
Power consumption*			
• 240 V~	195 W	325 W	
• 12 V=	175 W	275 W	
Energy consumption			
• 240 V~	3.6 kWh/24 h	6.6 kWh/24 h	6.7 kWh/24 h
• 12 V=	285 Ah/24 h	539 Ah/24 h	516 Ah/24 h
Gas consumption*	380 g/24 h	500 g/24 h	500 g/24 h
Refrigerant	R717		
Refrigerant quantity	230 g	328 g	384 g
Climate class	T		
Dimensions H x W x D (in mm)			
• With flange	1195 x 550 x 667	1451 x 550 x 667	1661 x 550 x 667
• Without flange	1182 x 525 x 667	1438 x 525 x 667	1648 x 525 x 667
• Depth from flange rear face	611	611	611
Weight	53 kg	66 kg	73 kg
Maximum load			
• Per upper door rack	3 kg		
• Per bottom door rack	4.5 kg		
• Per door	10.5 kg		
Inspection/certification	 		

	RMD10.5XS
Total gross volume:	173 l
Fridge storage volume:	136 l
Freezer storage volume:	33 l
AS/NZS 4474.1:2007	
Connection voltage:	230 – 240 V~ / 50 – 60 Hz 12 V=
Power input:	250 W (240 V~) 170 W (12 V=)
Power consumption:	5.0 kWh/24 h (240 V~)
Gas consumption:	586 g/24 h
Climate class:	T
Dimensions in mm	
Width x Height	
– without flange:	526 x 1246
– with flange:	550 x 1260
Depth	
– overall (Door slider excluded)	615
– from flange rear face:	561
Weight:	52.5 kg
Inspection/certification:	 

ERROR/FAULT CODES - RUA

FAULT	CODE	TYPE	ICON	AUDIO ALARM	MEASURE CONDITIONS
NTC1 Error	01	Warning	Not Flashing	NO	Code is displayed – cooling continues 45 minutes on and 15 minutes off
Communication failure between power module and display	03	Error	Not Flashing	NO	Cooling continues at latest stored settings
CI-BUS error	04	Warning	NA	NA	Not in use in first models
Low AC input voltage (Example: Running on Generator or poorly regulated in camp Site)	05	Warning	Flashing	NO	Display code at <190 volts AC; in manual mode cooling operation continues; in Auto mode the system will change to DC or Gas operation
12 volt heating element supply unavailable or low (Example: next slide)	06	Warning	Flashing	NO	Displays code at 9-10 volts; in manual mode cooling is terminated. In auto mode cooling switches to AC if available
Poor performance in Gas mode	07	Error	Not Flashing	YES	Displays code and terminates cooling

ERROR/FAULT CODES - RUA

FAULT	CODE	TYPE	ICON	AUDIO ALARM	MEASURE CONDITIONS
Poor performance AC mode	08	Error	Not Flashing	YES	Display code and terminate cooling operation
Poor performance DC Mode	09	Error	Not Flashing	YES	Display code and terminate cooling operation
Fridge door open > 2 minutes (Example: next slide)	10	Warning	Flashing	YES	Terminates audio alarm when door is closed
HI DC voltage to the electronics	11	Warning	Not Flashing	NO	Display code at 16 volts Turns off interior light; continues operation up to 17 volts
Gas valve test	12	Warning	Not Flashing	NO	Display code and lock gas operation
Faulty dynamic valve signal	13	Error	Not Flashing	NO	Display code and lock gas operation
Inner fan fault <400 tacho signals each 10s	14	Warning	Not Flashing	NO	Display code and continues cooling operation with fixed thermostat setting
Frame heater low current	15	Warning	Not Flashing	NO	Display code at <100mA

2022-06-06

ERROR/FAULT CODES - RUA

FAULT	COD E	TYPE	ICON	AUDIO ALARM	MEASURE CONDITIONS
Frame Heater high current	16	Error	Not Flashing	NO	Display code at >700mA and turns off frame heater
LAC/Defrost heater low current	17	Warning	Not Flashing	NO	Display code at <500mA
LAC/Defrost heater high current	18	Error	Flashing	NO	Display code at >2.5A and turns off heater
Low dc voltage to electronics (Example: next slide)	22	Warning	Not Flashing	NO	Display code at 10V
Gas lockout after 3 X 30s attempts (Example: next slides)	50	Error	Flashing	NO	Display code and lock gas operation
Gas lockout	51	Error	Flashing	NO	Display code and lock gas operation
Gas valve short circuit	52	Error	Flashing	NO	Display code and lock gas operation
Ignition electrode short	53	Error	Flashing	NO	Display code and lock gas operation

2022-06-06

RMD10.5XES

Errors

Code	Fault	Solution
	No connection between power module and display	Contact customer service for assistance.
	No cooling in gas mode	Check if the device is tilted and level it if necessary. Reset the error. Contact customer service if this error occurs again.
	No cooling in AC mode	Check if the device is tilted and level it if necessary. Reset the error. Contact customer service if this error occurs again.
	No cooling in DC mode	Check if the device is tilted and level it if necessary. Reset the error. Contact customer service if this error occurs again.
	Gas valve check error	Gas operation is not possible. Reset the error. Contact customer service if this error occurs again.
	Internal communication error	Gas operation not possible. Reset the error. Contact customer service if this error occurs again.
	In stand-alone gas mode: The battery charge of the battery packs is too low	Insert new batteries. Reset the error.
	Gas lock after 3 ignition attempts	Ignition not possible. The gas cylinder is empty. Replace the gas cylinder. Reset the error.
	Gas lock, internal error in the power module	Reset the error. Contact customer service if this error occurs again.
	Ground contact, gas valve	Reset the error. Contact customer service if this error occurs again.
	Ground contact, ignition electrode	Reset the error. Contact customer service if this error occurs again.

Warnings

Code	Fault	Solution
	Defective temperature sensor in the refrigerator compartment	Contact customer service for assistance.
	AC power not connected or AC voltage < 190 V	Connect the refrigerator to AC or select a different energy type, e.g. gas or DC.
	DC power not connected	Connect the refrigerator to DC or select a different energy type, e.g. gas or AC.
	DC overvoltage (> 16 V)	Reduce the DC supply voltage.
		
	Tank stop mode: Gas operation is blocked for 15 minutes.	Wait 15 minutes or switch to another operating mode.
Beep	The door is opened for more than 2 minutes.	Close the door.

CURRENT CONSUMPTION TABLE

Device/component	Nominal voltage	Nominal current	Characteristics
Interior fan	12V-DC	200 Milliamps	2000RPM
External fan 1	12V-DC	300 Milliamps	3600RPM
External fan 2	12V-DC	300 Milliamps	3600RPM
Cabinet frame heater	12V-DC	500 Milliamps	Resistive load heater cable
Defrost Heater	12V-DC	1.7 Amps	Two-piece heating elements, 10W each parallel connected, resistive load.
LAC Heater (Low Ambient Condition)	12V-DC	1.7 Amps	Two-piece heating elements, 10W each parallel connected. Duty cycled 50%, (5s on & 5s off) Resistive load.
DC Heating element (cooling unit heater)	12V-DC	23.5 Amps (@12.6 volts)	Resistive load element mounted to cooling unit
AC Heating element (cooling unit heater)	240V - AC	1.35 Amps	Resistive load element mounted to cooling unit

UNDERSTANDING DEFROST

Combined Defrost And Low Ambient Control Heaters.

The display PCB operates the defrost and low ambient heaters.

Two 10-watt heaters connected in parallel are used to heat the cooling plate and surrounding air in the fresh food compartment.

Normal Defrost – Heater Does Not Come On At All

System cycles while fan maintains air circulation around the cooling plate.

Forced Defrost

the forced defrost function is activated if the system has been running for **30 hours** without cycling, this defrost is terminated when NTC1 sense the plate temperature at **3 degrees** above normal cut in temperature for the setting being used. Heaters operate at full power.


UNDERSTANDING LAC (LOW AMBIENT CONDITION)

The LAC function is switched on when the NTC in the fresh food compartment has been off for more than **35 minutes**. The LAC heater remains operational in 5 second on and 5 second off cycles and the cooling unit switches on to maintain freezer temperature. When the temperature in the fresh food compartment reaches the cut in level, the heater is switched off, and the cooling unit continues to run.

* The reason for LAC is so that the freezer remains cold enough in cold climates when the fresh food compartment is not working hard. The freezer is a “slave” to the refrigerator in effect.

CYCLE TEMPERATURES

Setting	Cut in temperature	Cut out temperature
1	+5°C	-1°C
2	+3°C	-3°C
3	+2°C	-5°C
4	+1°C	-7°C
5	+1°C	-9°C

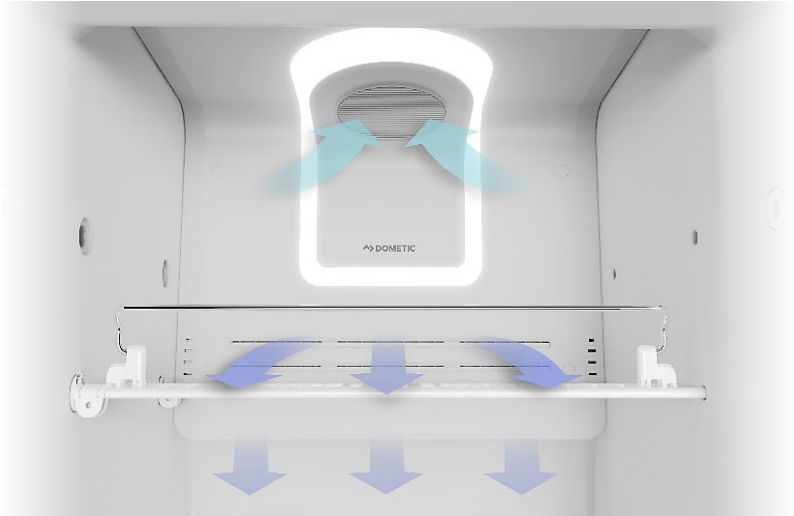

These temperatures are measured at the cooling plate; they are not the Provisional Cabinet (PC) temperature. This system works by forcing air over the cooling fins and recirculating it via ducting throughout the PC.

Example: if setting 1 is selected and NTC is between +5 and -1 then there is nothing wrong with the fridge/cooling unit.
(System must have been on 8 – 12 hours)

RUA DIAGNOSTIC MODE

What Is Diagnostic Mode?

Diagnostic Mode is a valuable troubleshooting feature that assists with fault diagnosis. It allows individual refrigerator components to be manually switched on and off, making it easier to test component operation and identify potential issues.

How To Access Diagnostic Mode

Ensure the refrigerator is switched off. Press and hold the control knob for at least 10 seconds and continue holding it until "Diagnostic Mode" appears on the display.



Functions

Number	Listing	Function
1	TFT	Screen test/clean
2	LAC	Low ambient/Defrost heater
3	NTC	NTC1 temperature (Fresh food compartment plate temperature)
4	FRAME	Frame heater
5	FANIN	Internal fan
6	AC	240 volt AC Heater – Cooling unit
7	FAN01	Rear fan – Top. (Temperature Sensor may need to be bridged to run)
8	FAN02	Rear fan - bottom
9	DC	12 volt dc Heater – Cooling unit
10	GAS	Gas valve and ignition (Make sure both gas valves are open)
11	LIGHT	Internal light
12	BACK	Back to main menu – Exit diagnostic mode

RUA5308X NO FRAME HEATER

The RUA5208x and RUA5308x do not have a frame heater installed despite having the option to enable the heater in settings.

To avoid warning 17 please disable the frame heater setting via the display.

FAULT	COD E	TYPE	ICON	AUDIO ALARM	MEASURE CONDITIONS
LAC/Defrost heater low current	17	Warning	Not Flashing	NO	Display code at <500mA

GAS LOCKOUT – THREE ATTEMPTS

Error 50 is Gas lock out; it can be cleared, but if the error keeps reappearing, assessment by a qualified technician will be necessary.

Things to check first:

- **Gas supply:**
 - Gas cylinder (Full/Empty)
 - How many gas appliances are connected at the time of fault, stove, heater, fridge etc (Gas supply pressure 2.75 KPa)
- **Gas valve:** (solenoid). When testing in diagnostic mode you can hear just single tick for valve followed by tick, tick of igniter.
- **Igniter electrode:** (See slide 29)

RUA





RMD



GAS LOCKOUT – THREE ATTEMPTS

Gas Valve (Solenoid)

- Check the resistance of the solenoid. If failed it might be open circuit, otherwise it should read around 53 Ohms
- Check if the wires are connected properly and tight enough to the solenoid.

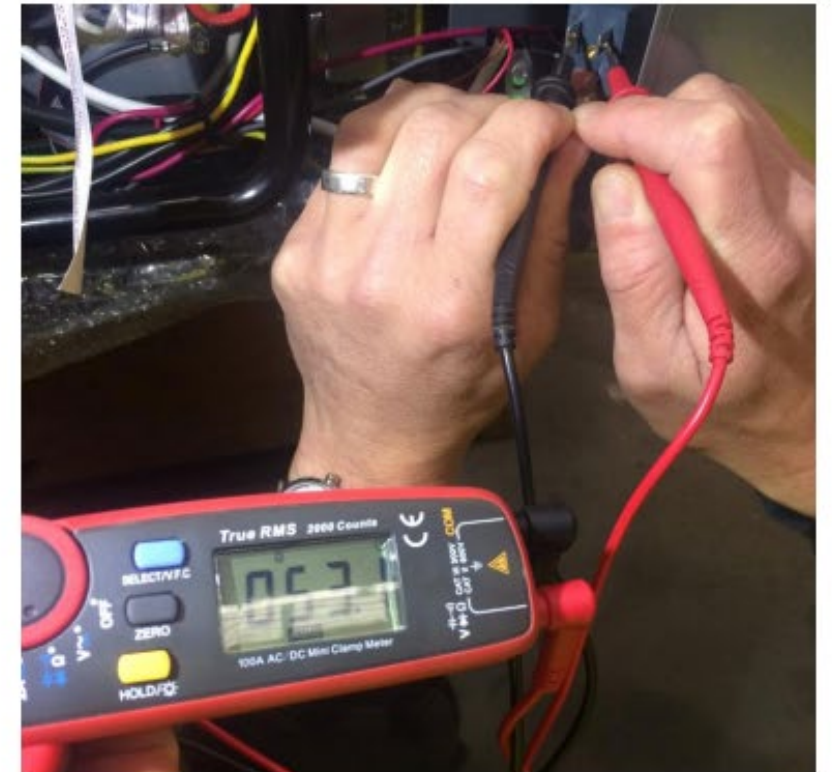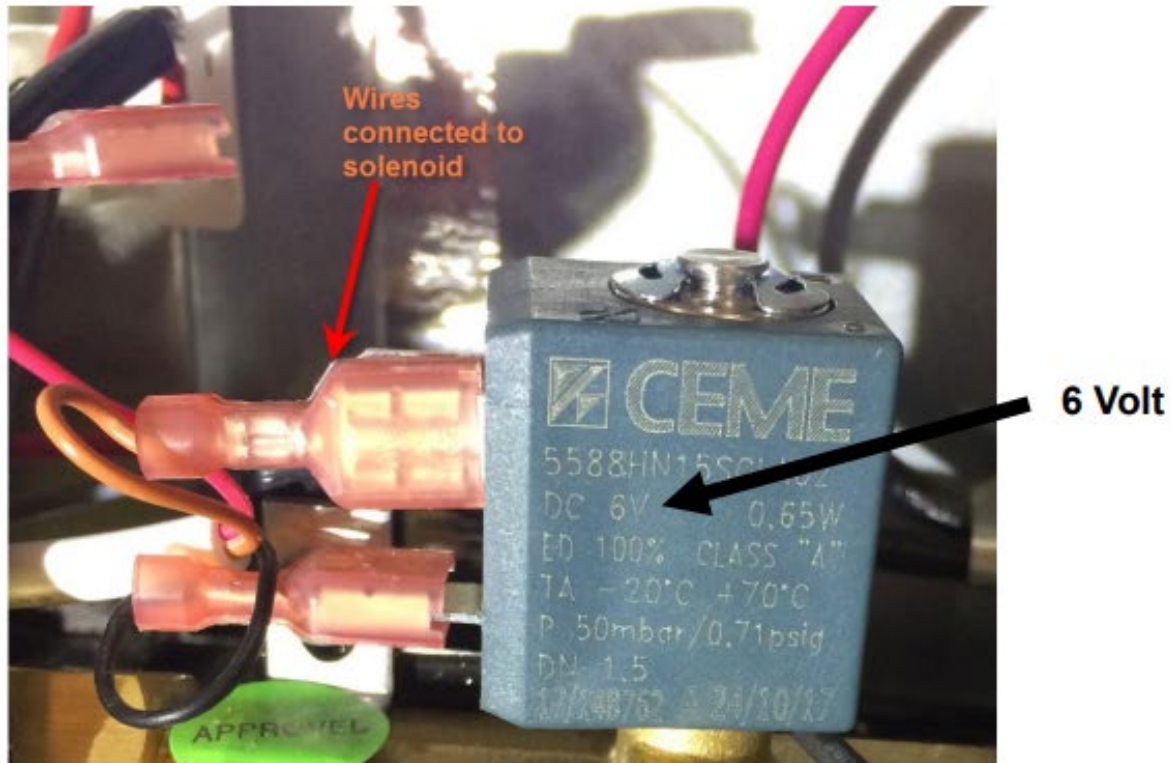


- *This solenoid valve is different from all the others we used on Dometic products. It is a Pulse Width Modulation (PWM) valve, and black wire is connected to the ground (Battery minus) and the other 2 are used to power the coil (average voltage is about 6V and Not 12 V).*


GAS LOCKOUT – THREE ATTEMPTS

Ignitor electrode

- Check the igniter electrode is ticking or not you can see or hear the spark. If not, check if the igniter is touching burner.
- Sometimes the igniter electrode is assembled too far or touches the burner and as a result, the spark won't be strong enough to ignite flame.

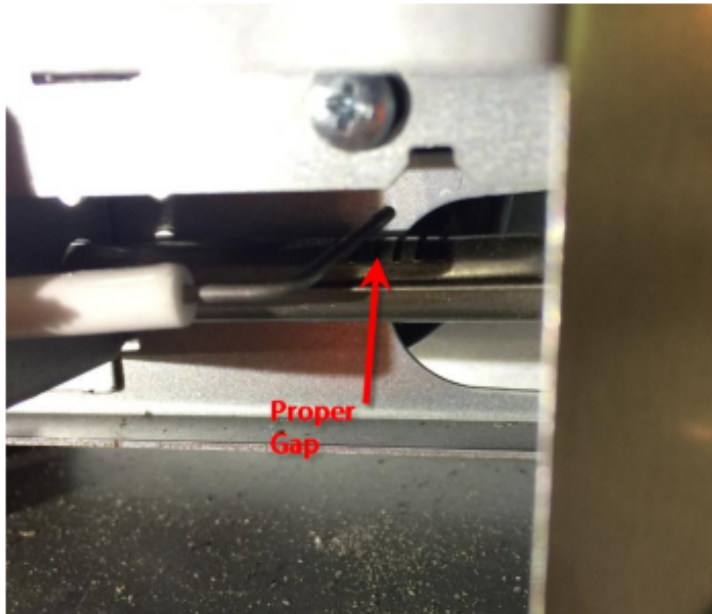

14. Be sure to reconnect the wire to high voltage electrode. Check the electrode for proper location and gap.

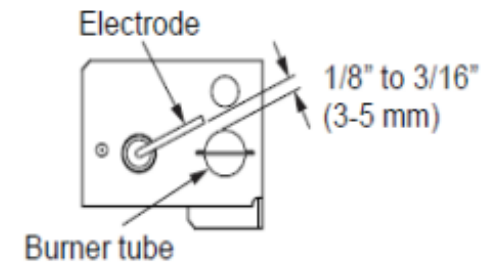


- *For RUA product, we have the ignition/flame detection circuit integrated into the power module, so we don't need a thermocouple*

DC SUPPLY ERROR

ERROR 06

- DC Error
 - The fridge does not run off the van battery only uses DC when connected to the car

Dometic preferred wiring set up for AES fridges

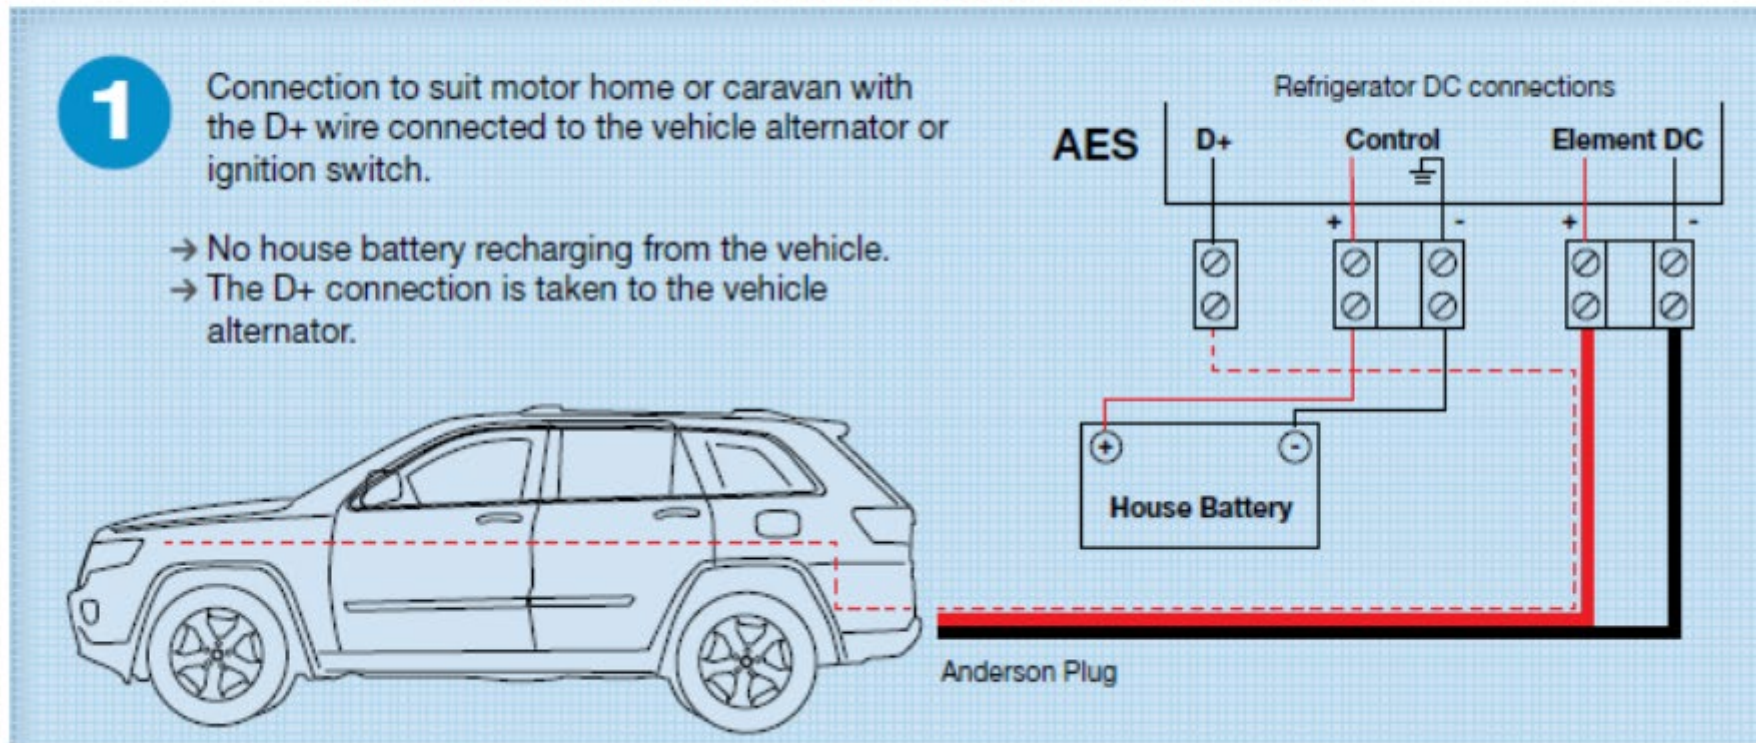

12 V element power must be connected to the vehicle battery via Anderson plug

NO POWER - CLIXON

What is a Clixon?

A Clixon is a thermal safety switch designed to protect an appliance from overheating or excessive electrical current. The Clixon fitted to RUA refrigerator flue is equipped with a manual reset button, allowing the switch to be reset once the cause of the over-temperature condition has been identified and corrected.


If the refrigerator has an adequate DC supply at the house battery input on the terminal block, but there is no power reaching the Display PCB or Main PCB, the fault is likely related to the Clixon thermal switch. In rare cases, the issue may be caused by a failed thermal fuse.

Check For Lose Connections On Clixon



Firstly, check for lose connections on the Clixon

Reset the Clixon

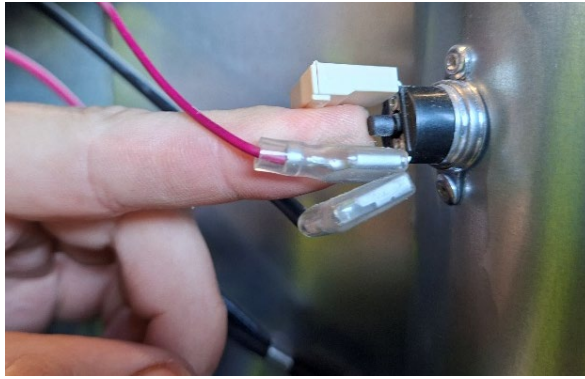

Secondly press the rest button on the Clixon

Replace The Clixon



Replace the Clixon if adequate DC supply voltage is present at the Clixon input terminal, but no voltage is present at the output terminal.

Replace The Thermal Fuse



Replace the thermal fuse if adequate DC supply voltage is present at the house input terminal but no voltage is present at the Clixon input terminal

FAILED COOLING UNIT

When a cooling unit has leaked ammonia or has become crystallised, the refrigerator will require the cooling unit to be replaced.


Leaking Ammonia

Signs of a leaking cooling unit include yellow residue or liquid around the rear of the refrigerator and a strong chemical (ammonia) smell coming from the rear of the unit or from inside the refrigerator compartment.




Crystallised Cooling Unit

Crystallised cooling units can take a little longer to diagnose than leaking cooling units. If a 3-way refrigerator is not cooling on any energy source (Gas, 240V AC, or 12V DC), and all other refrigerator components have been tested and confirmed to be operating correctly, the most likely cause is a faulty cooling unit.

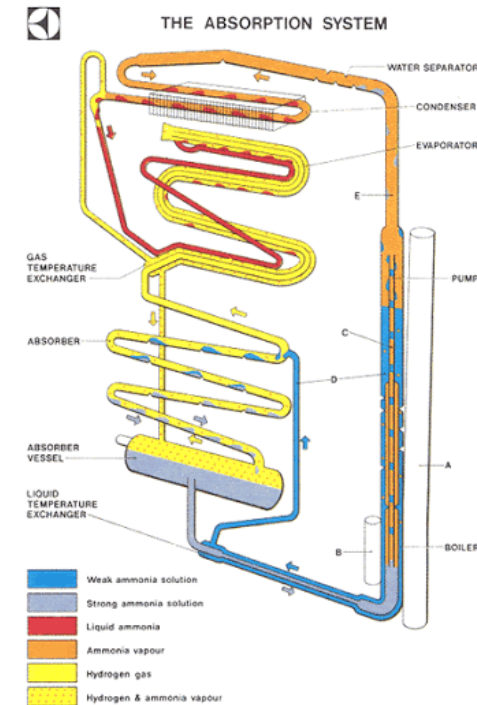


WIRING DIAGRAM

RUA

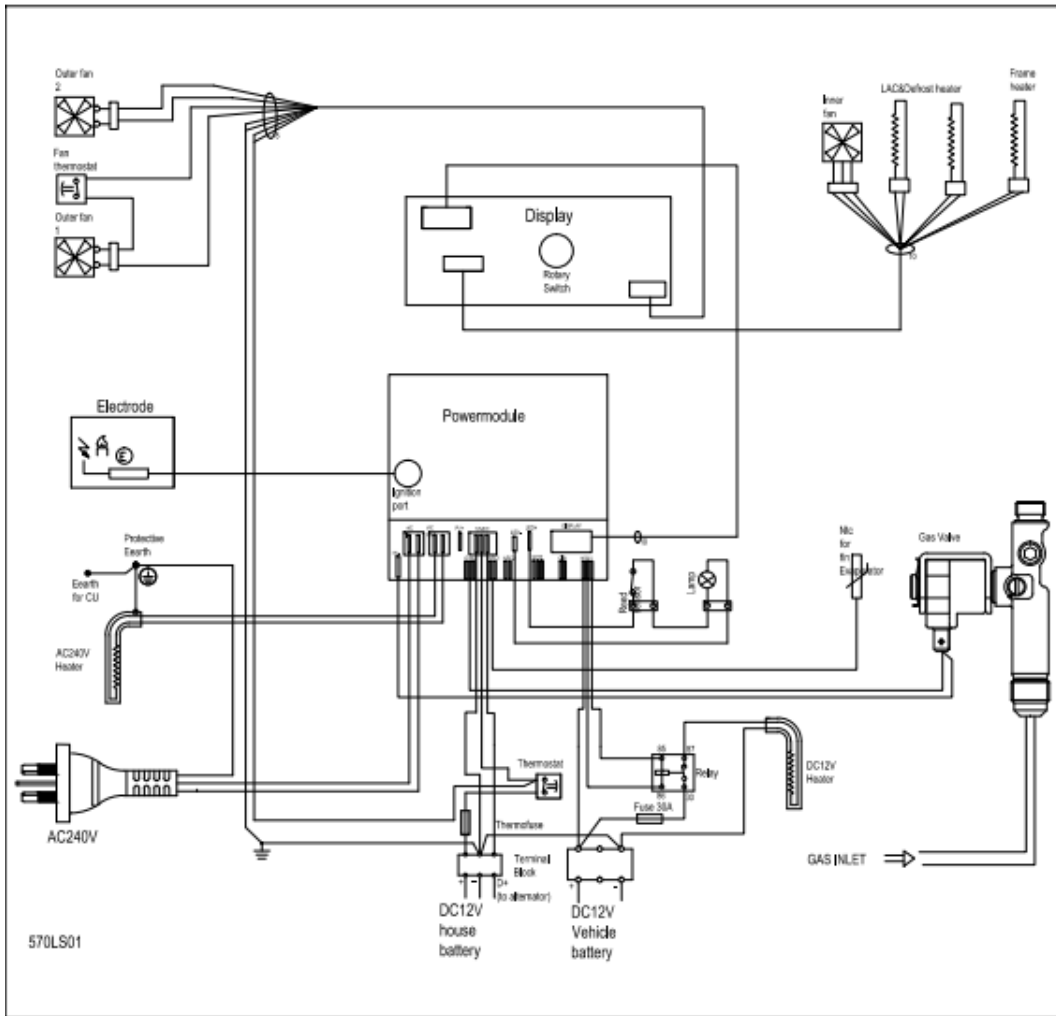

RMD

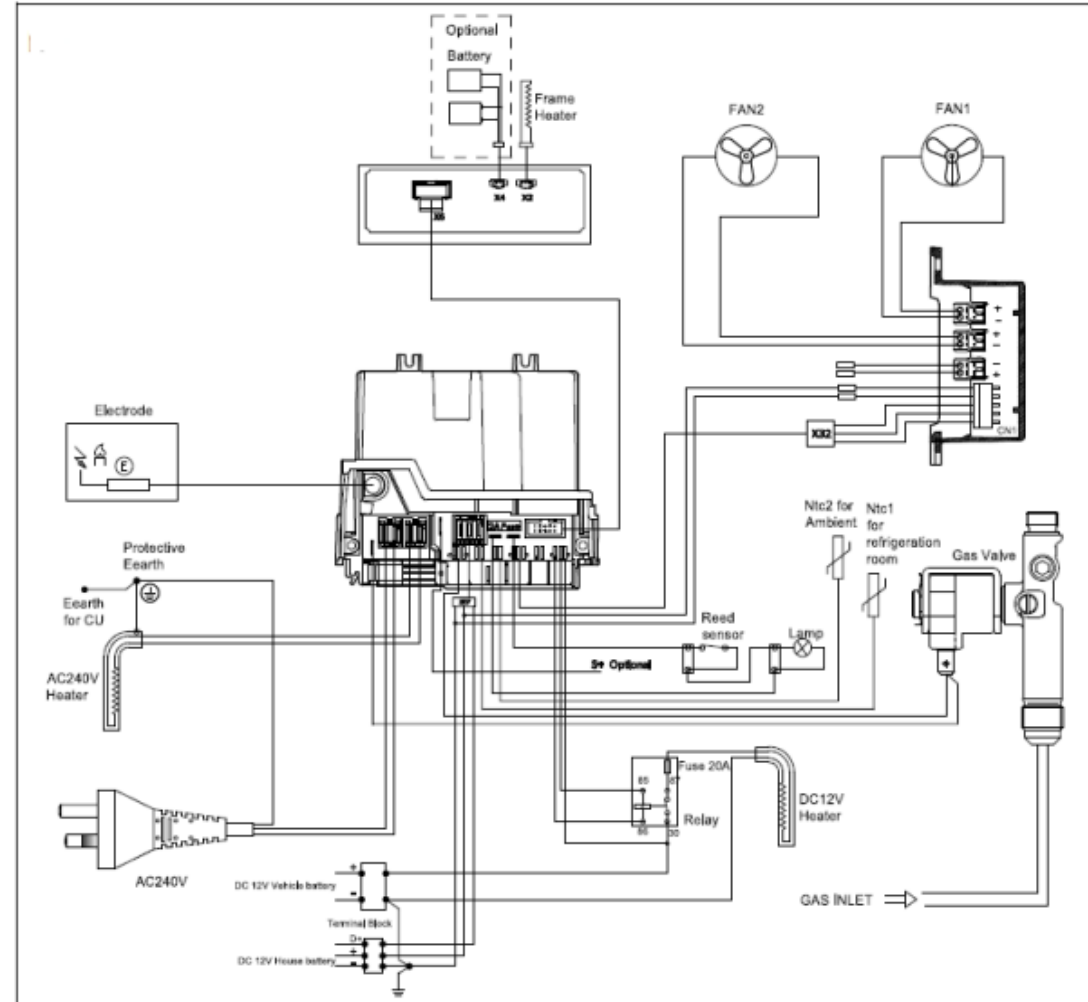

DÉCOR PANEL CHANGEOVER

Removal

5308x Fridge Door Panel - 4450035720

6508x Fridge Door Panel - 4450035721

8508x Fridge Door Panel - 4450035720

6508x & **8508x** Freezer Door Panel - 4450035719

10.5XS DH Fridge Door Panel - 4472003670

10.5XS DH Freezer Door Panel - 4472003671



Install



DÉCOR PANEL CHANGEOVER


1. Using a small plastic trim remover, lever the top of the décor panel side trim.



2. Remove the side trim from the fridge door.




3. Replace the décor panel with a new panel.

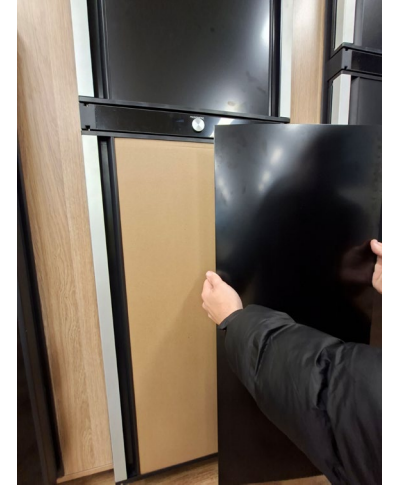

4. Re-install the side trim by pressing it into place at a 45-degree angle.



DOOR REMOVAL



DOOR REMOVAL

- 1.** Open the fridge door.
(Either side is fine.)



- 2.** Hold tension on the hinge sided handle.



- 3.** Whilst holding tension on the handle press the 4 locking pins on each corner of the inside of the door.
(They should all click in.)



- 4.** The door latch should now be released, and the door is ready to be removed.



- 5.** Repeat the same process to remove the freezer door.



DISPLAY PCB CHANGEOVER

RUC Display PCB - 4450033356

RUA Display PCB - 4450033885

RMD Display PCB – 4450031446

RCD Complete control panel – 4450031602



DISPLAY PCB CHANGEOVER

1. Once both doors are removed, remove both hinge pins by gently knocking both hinge pins out with a mallet.



2. Remove the PCB cover and unplug the circled connections.



3. Remove the Display PCB from the housing by pushing in the 2 locking clips.



4. Fit the new display PCB to the housing and plug the circled connections in.



5. Ensure that the door sensor clip is in the correct position and has not come loose.




6. Re attached the display PCB housing to the fridge.



7. Lightly tap both hinge pins in with a mallet. (Ensure the ribbed part of the hinge pin is towards the top.)



8. Ensure the hinge pins have been knocked down all the way. (until the ribbed part of the pin is not visible.)

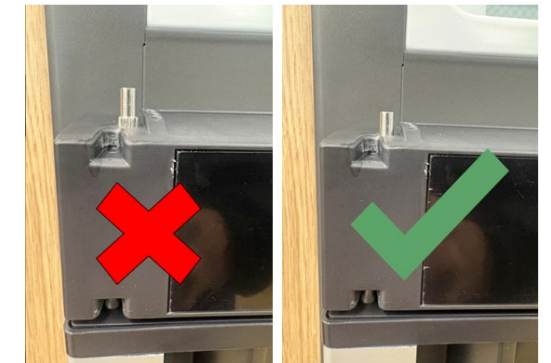

DOOR INSTALLATION



DOOR INSTALLATION


1. Install one side of the door on the hinge.
(Must be the same side as it was removed.)



2. Ensure that the door is positioned correctly on the hinges.



3. Whilst holding tension on the opened side handle press the 4 pins in on each corner of the inside of the door.
(They should all click in.)

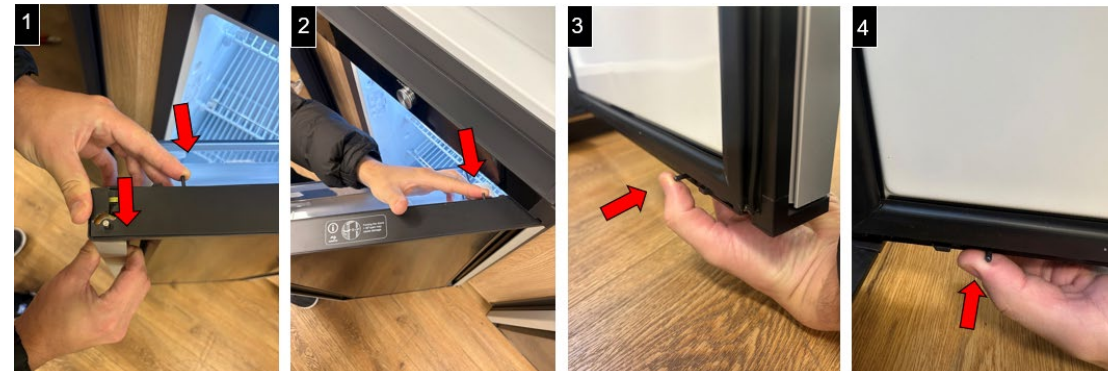

4. Close the door and check both sides are secure and function correctly.



5. Repeat the same process with the freezer door.



A white motorhome is driving away from the viewer on a winding dirt road that cuts through a vast, mountainous landscape. The terrain is covered in dry, yellowish-brown grass and low-lying shrubs. In the background, rugged mountains rise under a clear sky. The motorhome has a yellow license plate that reads 'W588 NES' and is carrying a large orange kayak on its rear rack. The Dometic logo is superimposed over the center of the image.

 **DOMETIC**