



FRESHJET FJZ SERIES

Jarod Blackburn
Matthew Perkins
Lucas Cicer

4/9/2026
September 2026
13/09/2026

 **DOMETIC**

TOPICS

- FJX v FJZ Comparison
- Component Resistances
- Invertor Technology
- Air Purification/Ioniser
- ID Location
- Drain Pan Kit
- Issues You May See
- Symbol explanation
- Fault Codes
- Temperature Sensor Check
- Expected Running Temperatures
- Maintenance Tasks
- Parts Breakdown





FRESHJET ESSENTIAL

	FJX (Old)	FJZ (New)
SKU		9630000090
Invertor	No	
Cooling Capacity	2200 W (same capacity)	
Max current cooling	6.0 A	4.62 A (-23 % Input)
Heating Capacity	1000 W (Element)	
Max Current Heating	4.8 A	4.7 A (-2% Input)
Weight	34 kg	
Dimensions L x W x H	752mm x 702mm x 225mm	
Colours	White	White Black (Special Order)
Caravan/RV sizing (Recommendation for optimal performance)	13 - 15ft	13 - 15ft

Recommended Caravan sizing subject to RV/Caravan build quality, insulation properties, furnishings and design.



(BLACK Special Order MOQ 130pcs)

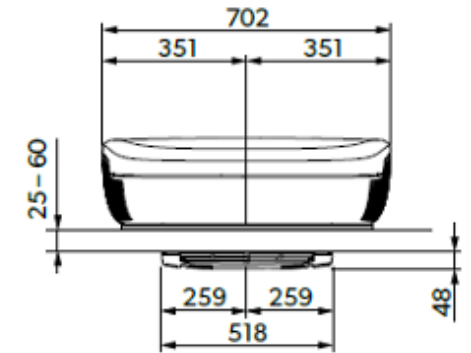
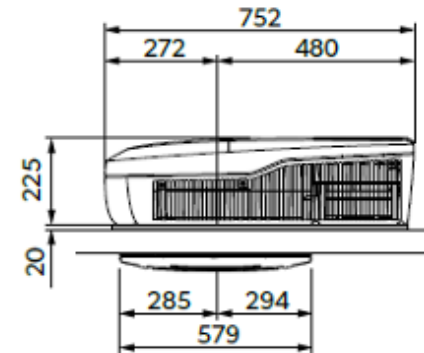


FRESHJET LITE

	FJX (Old)	FJZ (New)
SKU		9630000089
Invertor	Yes	
Cooling Capacity	2537 W	3000 W (+18% Output)
Max current cooling	6.9 A	5.8 A (-16 % Input)
Heating Capacity	2285 W	2300 W (+ <1% Output)
Max Current Heating	4.7 A	4.2 A (-11% Input)
Weight	34 kg	
Dimensions L x W x H	752mm x 702mm x 225mm	
Colours	White	White Black (Special Order)
Caravan/RV sizing (Recommendation for optimal performance)	13ft – 15ft	13ft - 19ft



(BLACK Special Order MOQ 130pcs)

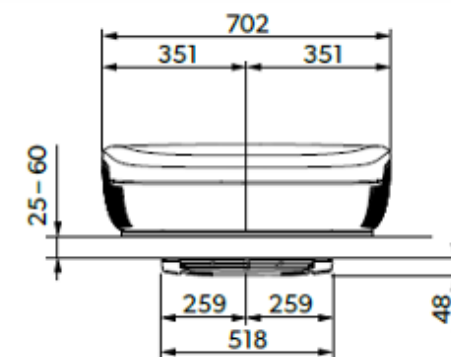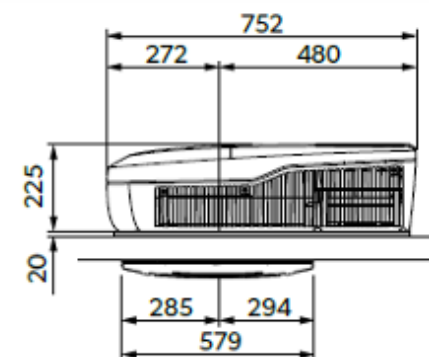

Recommended Caravan sizing subject to RV/Caravan build quality, insulation properties, furnishings and design.


FRESHJET PRO

	FJX (Old)	FJZ (New)
SKU		9630000083
Invertor	Yes	
Cooling Capacity	2910 W	3400 W (+17% Output)
Max current cooling	7.3 A	6.2 A (-15% Input)
Heating Capacity	2692 W	3000 W (+11% Output)
Max Current Heating	5.9 A	5.8 A (- 2% Input)
Weight	41 kg	
Dimensions L x W x H	1090 mm x 700 mm x 242 mm	
Colours	White	White Black (Special Order)
Caravan/RV sizing (Recommendation for optimal performance)	17ft – 19ft	17ft - 22ft

Recommended Caravan sizing subject to RV/Caravan build quality, insulation properties, furnishings and design.



(BLACK Special Order MOQ 130pcs)

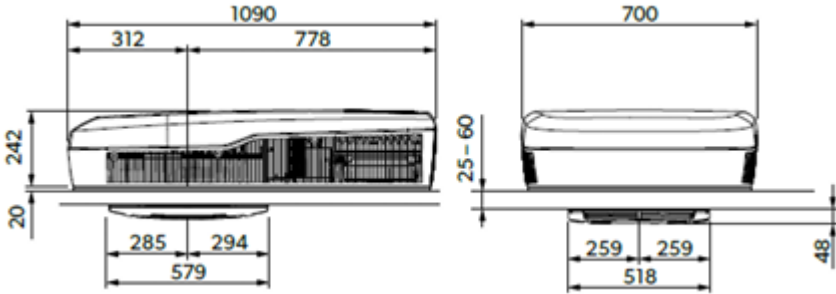


FRESHJET PLUS

First 4KW Air-conditioner on the market!

	FJX (Old)	FJZ (New)
SKU		9630000082
Invertor	Yes	
Cooling Capacity	3400 W	4000 W (+19% Output) <i>First 4KW Air-conditioner on the market</i>
Max current cooling	7.8 A	6.89 A (-13% Input)
Heating Capacity	2903 W	3411 W (+ 17% Output)
Max Current Heating	6.44 A	6.43 A (slightly less Input)
Weight	43 kg	
Dimensions (L x W x H)	1090mm x 700mm x 283mm	
Colours	White	White Black (Special Order)
Caravan/RV sizing (Recommendation for optimal performance)	21ft – 22ft	21ft 22ft+



(BLACK Special Order MOQ 130pcs)

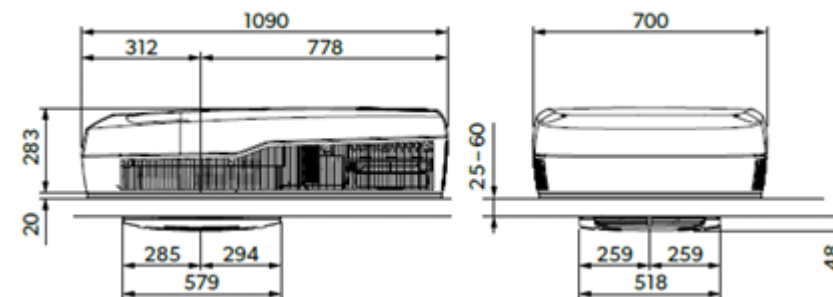

(41mm Taller Than FJ Pro)



Recommended Caravan sizing subject to RV/Caravan build quality, insulation properties, furnishings and design.



FRESHJET FJZ SERIES CHANGES

HIGHER DENSITY CONDENSER AND EVAPORATOR COILS

The FJZ has higher density evaporator and condenser coils for better heat exchange and improved adaptability to harsh environment. These design improvements in the FJZ models achieve a 17% to 19% increase in cooling output without increasing the unit's footprint.


E-COATING

Evaporators are now E-Coated for improved lifespan and reduced leak potential. Along with FJZ models this change has been implemented on IBIS 4 and FJX evaporator stock.

Evaporator



Condenser

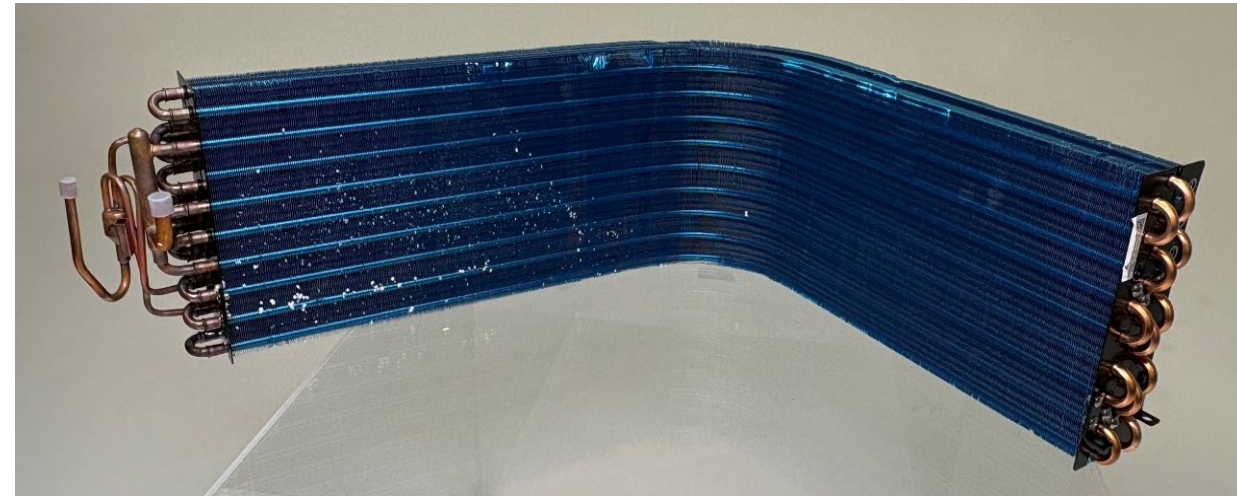



4 INPUT EVAPORATOR MANIFOLD

By evenly distributing refrigerant across multiple channels, the manifold enables the refrigerant to expand consistently throughout the entire evaporator coil.

This even distribution improves heat transfer efficiency, resulting in more effective cooling of the conditioned space while reducing unnecessary compressor workload.

GENERATIONAL NOISE REDUCTION

- **Dual-axis Compressor Mount**
30% less vibration transference. The FJZ Pro and Plus models utilize an innovative dual axis compressor mount to reduce the transfer of vibrations from the compressor to the RV roof structure, significantly reducing noise.
- **Brushless DC Fans**
FJZ Lite, Pro, and Plus have upgraded brushless DC fans. Replacing AC powered fans to reduce fan motor noise.

FJZ Lite



	FJX Lite	FJZ Lite	Difference
Sleep Mode	45.9 dB	38.0 dB	-17%
Low Fan	47.0 dB	38.4 dB	-18%
Medium	47.3 dB	39.3 dB	-17%
High	56.4 dB	46.2 dB	-18%
Turbo	58.2 dB	50.6 dB	-13%

FJZ Pro



	FJX Pro	FJZ Pro	Difference
Sleep Mode	47.2 dB	40.9 dB	-13%
Low Fan	47.4 dB	41.0 dB	-14%
Medium	48.2 dB	41.5 dB	-14%
High	49.3 dB	47.2 dB	-4%
Turbo	58.4 dB	51.4 dB	-12%


FJZ Plus



	FJX Plus	FJZ Plus	Difference
Sleep Mode	46.4 dB	40.9 dB	-12%
Low Fan	46.2 dB	41.0 dB	-11%
Medium	47.97 dB	41.2 dB	-14%
High	50.4 dB	47.5 dB	-6%
Turbo	59.13 dB	51.1 dB	-14%

DUAL-AXIS COMPRESSOR MOUNT

30% less vibration transference. The FJZ Pro and Plus models utilize an innovative dual axis compressor mount to reduce the transfer of vibrations from the compressor to the RV roof structure, significantly reducing noise.

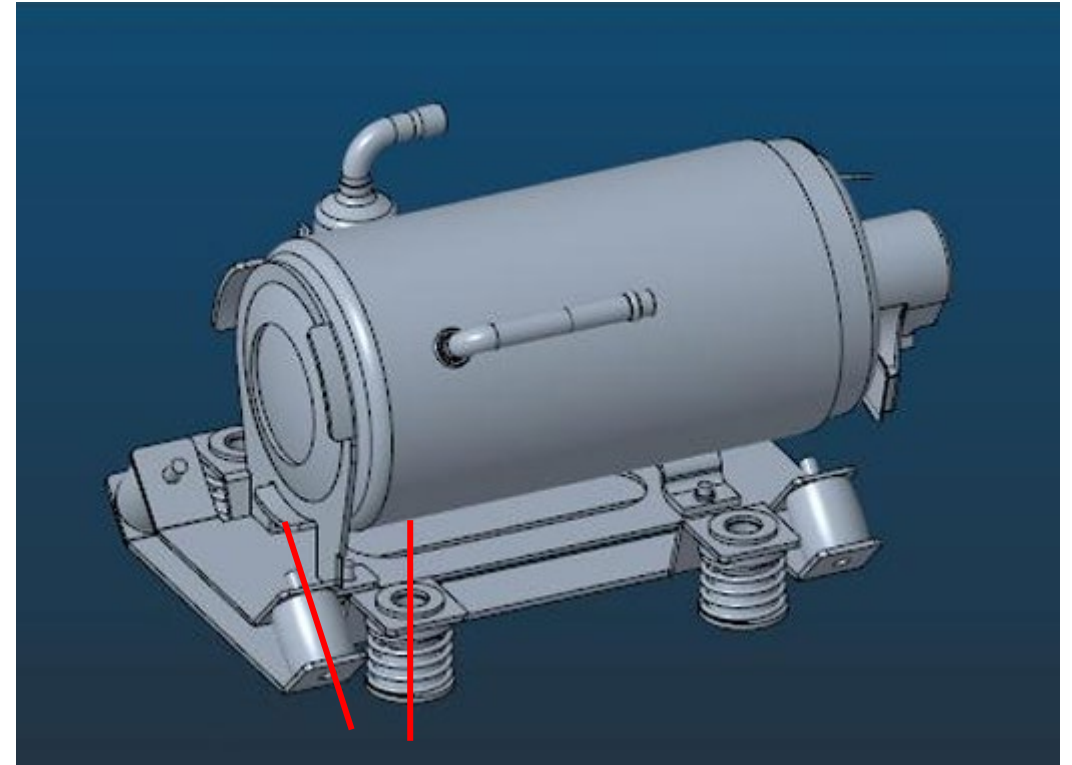


BRUSHLESS DC FANS

FJZ Lite, Pro, and Plus models have upgraded brushless DC fans. Replacing AC powered fans to reduce fan motor noise.

Fan Specifications

	Evaporator Fan FJZ Lite	Condenser Fan FJZ Lite	Evaporator Fan FJZ Pro & Plus	Condenser Fan FJ Pro & Plus
SKU	4450033585	4450033583	4472005357	4472005901
Voltage DC	310 V	310 V	310 V	310 V
Power	60 W	33 W	60 W	180 W
RPM	1710	3000	1710	1660

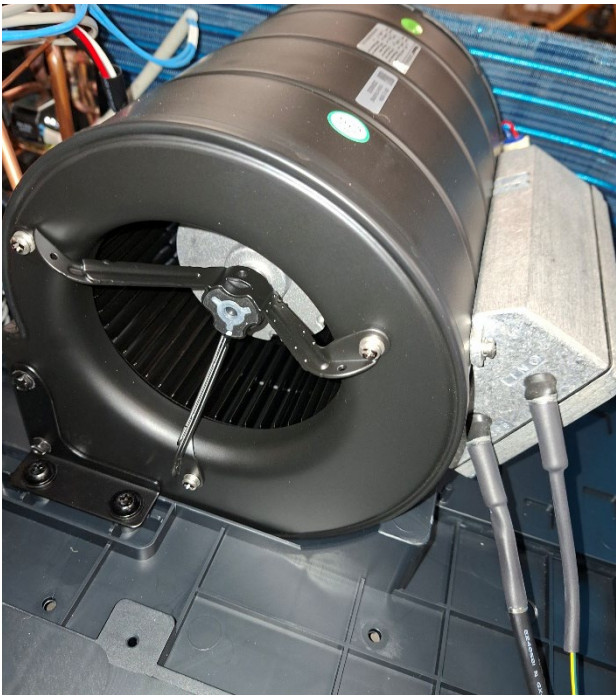


PWM VALVE

PULSE WIDTH MODULATION


FJX and FJZ series Lite has an electronic refrigerant expansion/metering device rather than a traditional capillary or TX valve system.

A PWM valve has been fitted in place of the capillary tube to provide a more space-efficient solution.

A PWM valve controls refrigerant flow by rapidly opening and closing a digital solenoid valve at a fixed frequency. The ratio of on-time to off-time (duty cycle) determines the average flow rate and system pressure.

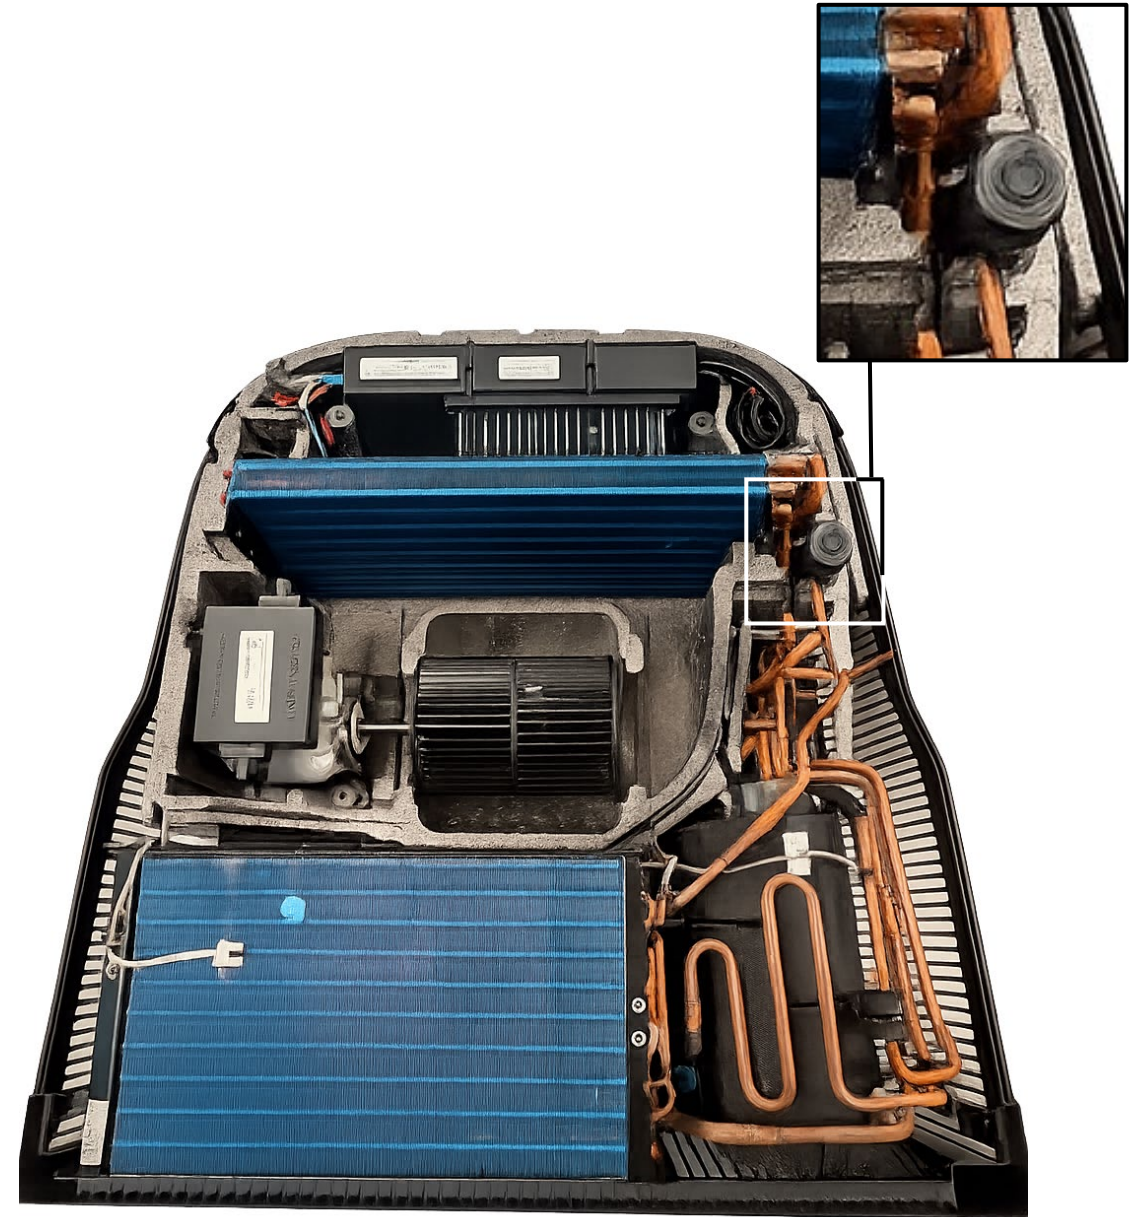

ADB OPTIONS

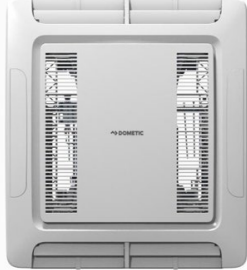Generation	FreshJet FJX (Old)	FreshJet FJZ (Current)	
			
Model	FJX ADB	Core ADB	FJZ Standard ADB
SKU	9620001693	9630000078	9630000073
LED	Y	N	Y
Ioniser	Y	N	Y
Integrated Display	Y	N	Y
App Integration	Y	Y	Y
Power Failure Memory	N	Y	Y
Adaptive Power	N	Y	Y

Notes:

- Features are outlined when paired with a matching generation rooftop aircon unit.
- When an FJX ADB is paired with an FJZ rooftop unit, They have limitations such as no power failure memory and no adaptive power function.
- The Core ADB removes some of the “nice-to-haves” such as, display, LED lights and ionizer. But retains the core functionality and integration.
- The FJZ ADB is backwards compatible with the FJX range of Aircon units, but without the FJZ specific features of Adaptive Power or Power Failure Memory.

ENVIRONMENTAL IMPROVEMENTS

POST-CONSUMER RECYCLED MATERIALS


Dometic is committed to shaping a more sustainable future by enabling people to reconnect with nature and enjoy the outdoors through smart, durable, and responsibly designed products.

Within the FJZ range we've changed the shroud assembly and base pan to PCR (Post-consumer recycled) material.

ECO FRIENDLY REFRIGERANT

R32 refrigerant widely used in modern residential and commercial air conditioning systems as a more energy-efficient and lower-global-warming alternative to previously used gases like R410A.

	R410a	R32
GWP (Global Warming Potential)	2088	675
ODP (Ozone Depletion Potential)	0	0

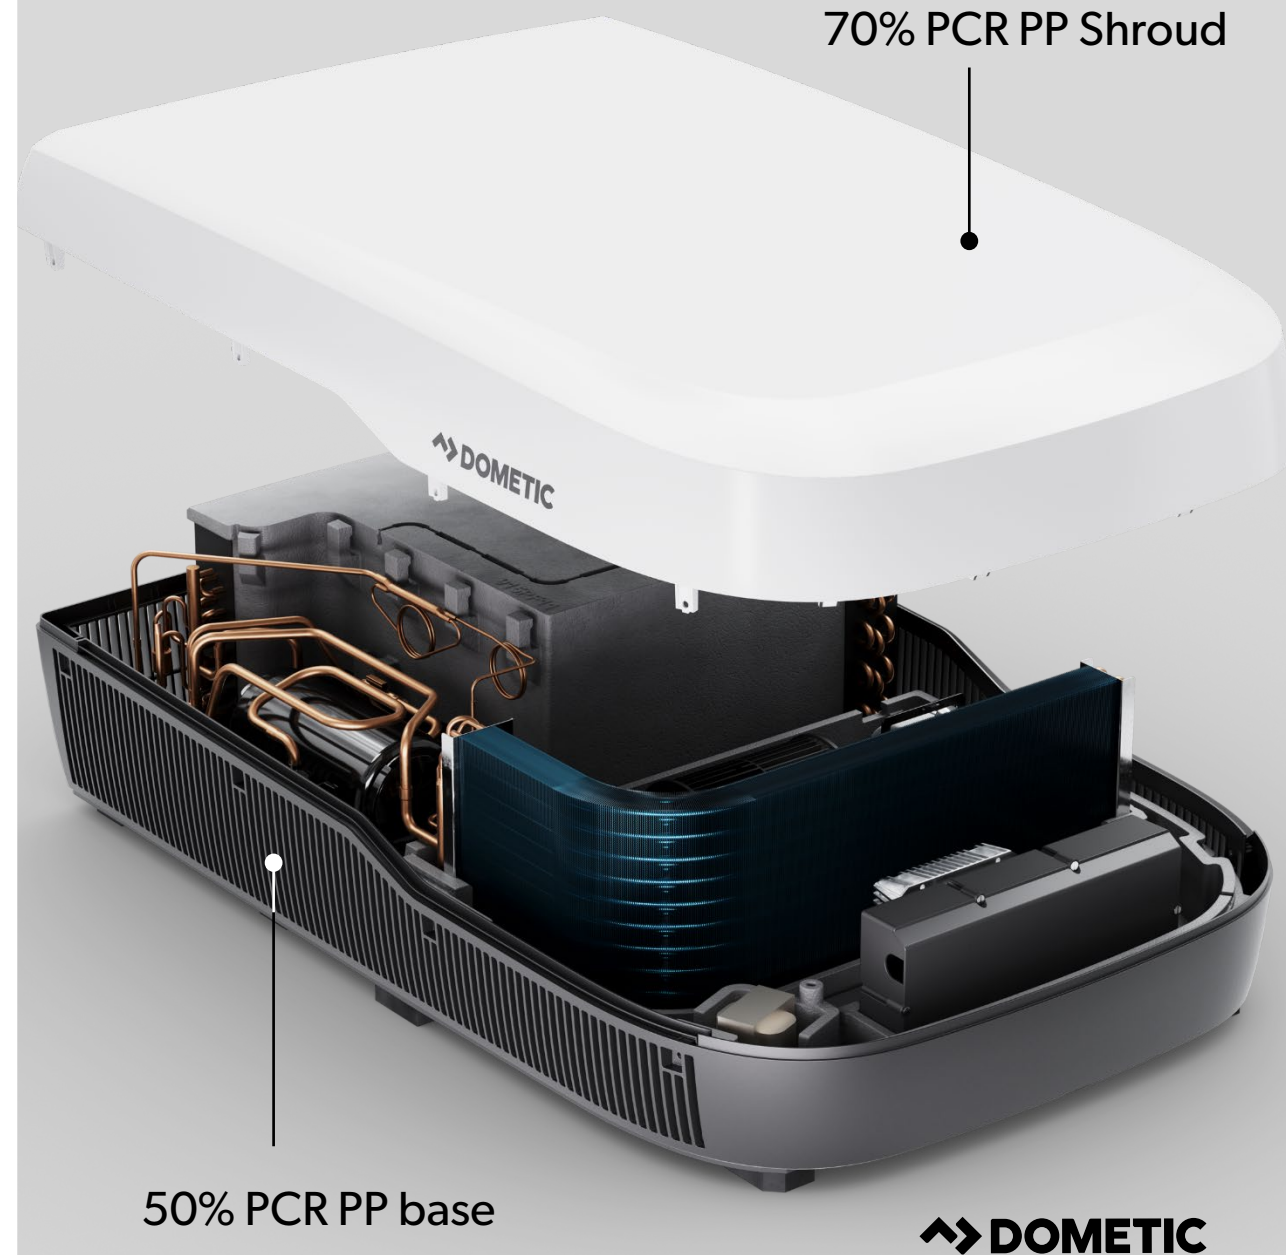

ADAPTIVE POWER MODE


In adaptive power mode you can manage the current draw of the air conditioner.

This helps limit inverted battery power consumption and prevent overloading power sources such as invertors and generator.


How To Access

1. Download the **Dometic Power** app from the Apple app store or Google play store and pair to FJZ air conditioner.
2. Turn the unit on and select your desired setting, temperature and fan speed.
3. Select a current limit of: **4A, 5A, 6A, 7A or Unlimited** via the **Adaptive Power Mode** setting, maximum current limit will operate slightly below the selected limit.

DOMETIC POWER APP

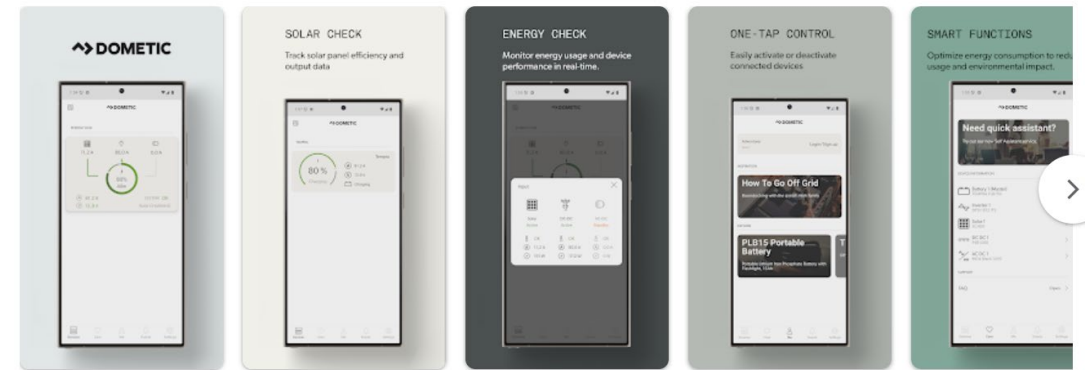

Adaptive power mode is **not a function on Dometic Climate app.*

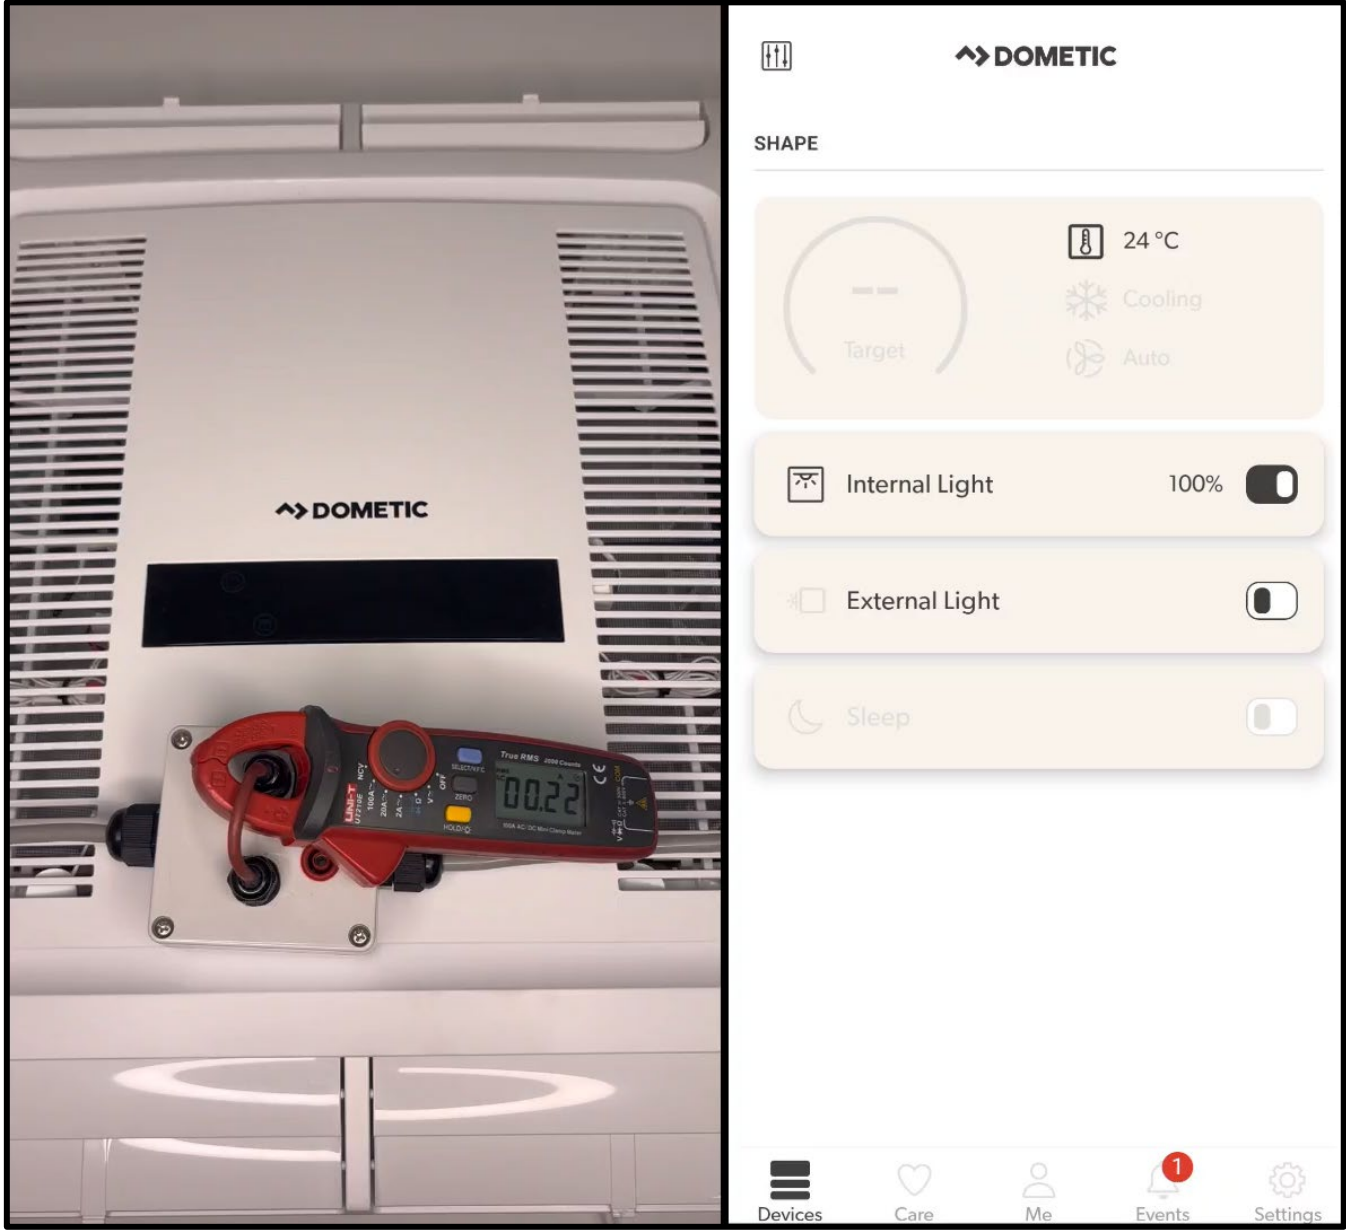

ADAPTIVE CAPACITY LIMITATION

Model	Current limit [A]	% of Rated Cooling Capacity
FJZ7 Essential	4A	69%
	5A	85%
	6A	94%
	7A	
FJZ Lite	4A	66%
	5A	77%
	6A	93%
	7A	
FJZ7 Pro	4A	67%
	5A	77%
	6A	89%
	7A	~100%
FJZ7 Plus	4A	65%
	5A	81%
	6A	87%
	7A	~100%

COMPONENT RESISTANCES

Compressor – 1.5 - 1.7 Ω Between windings

Evaporator fan - 114 Ω ($\pm 5\%$)

Condenser fan - 46 Ω ($\pm 5\%$)

Note: As these fan motors are **brushless DC (BLDC) motors with integrated electronic driver circuits**, the measured resistance value can vary depending on the measurement points and the internal electronics. Therefore, the absolute resistance reading is generally less important than consistency between motor windings, the absence of open or short circuits, and satisfactory insulation resistance to earth. As a rule of thumb, phase-to-phase readings should generally be within about 5-10% of each other.

Reversing valve - 1.92 K Ω ($\pm 5\%$)

Sensor	15°C	25°C	35°C	50°C
Outdoor ambient	7.9k Ω ($\pm 2\%$)	5 k Ω ($\pm 2\%$)	3.2k Ω ($\pm 2\%$)	1.8k Ω ($\pm 2\%$)
Condenser coil	7.9k Ω ($\pm 2\%$)	5 k Ω ($\pm 2\%$)	3.2k Ω ($\pm 2\%$)	1.8k Ω ($\pm 2\%$)
Evaporator coil	7.9k Ω ($\pm 2\%$)	5 k Ω ($\pm 2\%$)	3.2k Ω ($\pm 2\%$)	1.8k Ω ($\pm 2\%$)
Compressor Discharge	75k Ω ($\pm 2.5\%$)	50k Ω ($\pm 2.5\%$)	32k Ω ($\pm 2.5\%$)	18k Ω ($\pm 2.5\%$)

INVERTOR TECHNOLOGY

An inverter compressor uses variable speed technology to continuously adjust cooling or heating output, rather than repeatedly switching completely on and off like older fixed-speed units.

Benefits include:



- More efficient performance across a wide temperature range.
- Quieter operation with no “on and off” clunks caused by “torque bite”.
- An optimal speed is automatically selected; the compressor adjusts running speed as required.

It is possible for non-inverter models to be too big for an installation, which can lead to short cycling and associated problems, with these, even though the capacity may be bigger than needed for some RV, only the capacity that the vehicle requires is used.

Did you know:

The Dometic Harrier Inverter was introduced in late 2016 and is widely recognized as the first rooftop reverse-cycle air conditioner to use an inverter compressor in an RV

LEGEND: ■ OUTPUT POWER ■ TEMPERATURE

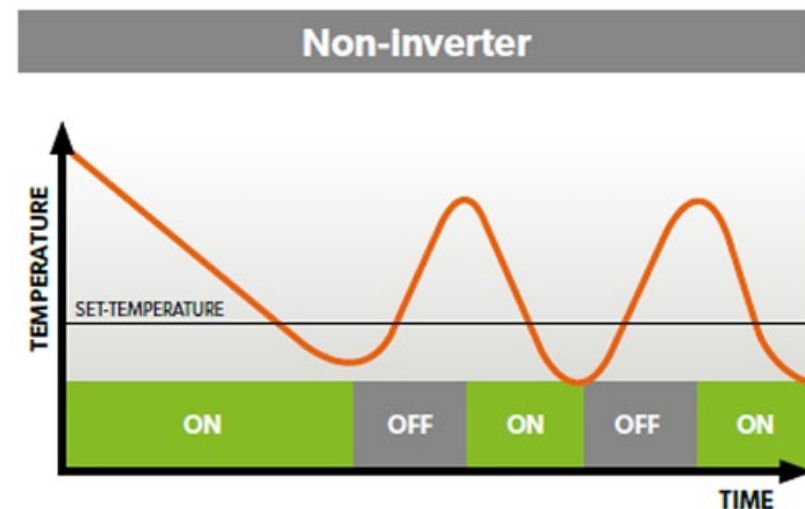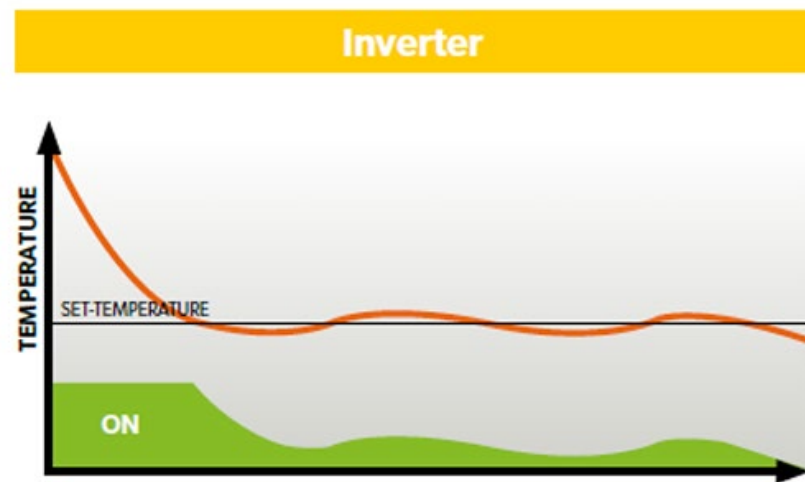

OVERSIZING NON-INVERTER AIRCON ISSUES


Non-inverter (fixed speed) air conditioner units can be oversized for an installation. This leads to short cycling and resulting problems.

Issues with short cycling

- Harder workload on the compressor
- Significantly higher power consumption
- More frequent compressor start noise

Note:

When comparing air conditioning units (particularly amongst a range of brands), ensure that you note if they're fixed or inverter, and highlight the risks of over-sizing a fixed speed unit. Inverter models don't suffer the same downsides.

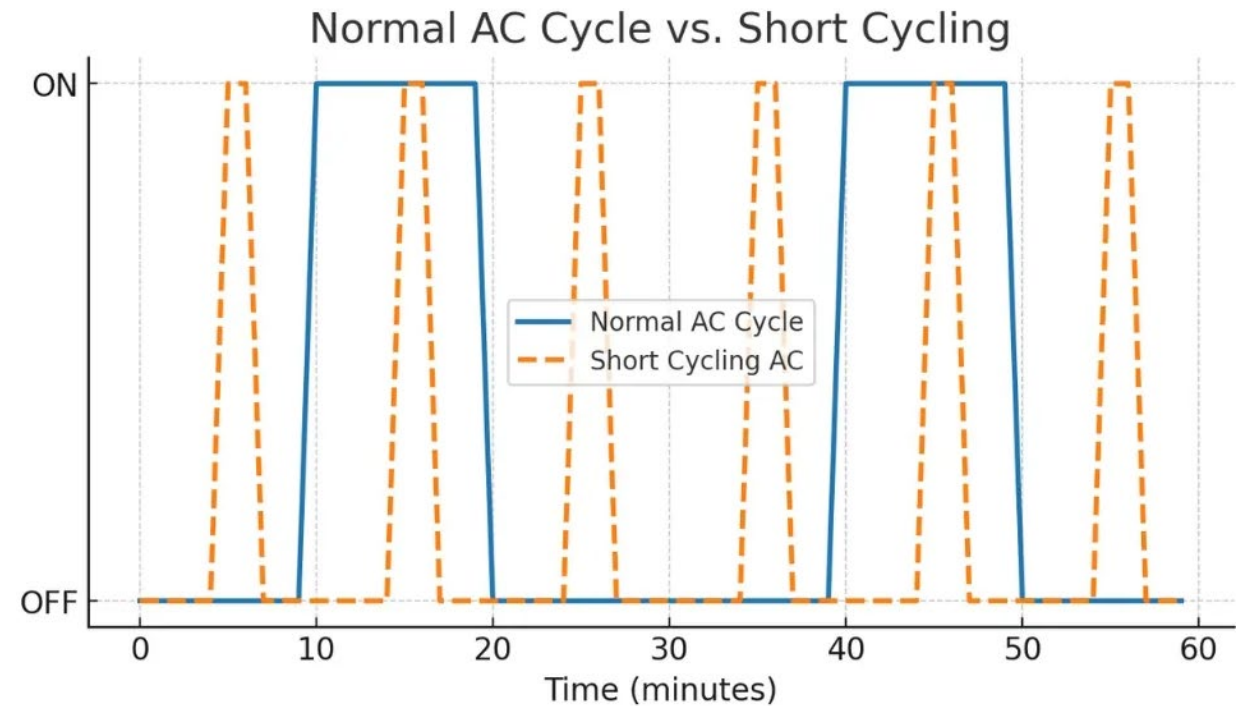

DOMETIC CLEAN AIR PURIFIER



The air purification system uses advanced bipolar ionizer technology to keep your RV smelling fresh and clean.

Odour

Ionizers create positive and negative ions to help reduce odours. Odours are reduced when they oxidize on contact with the charged ions.

Dust

The positive and negative ions attach to the particles in the air. Their attractive forces make the particles bigger, allowing the dust filter of your air conditioning system to remove more particles from the air.

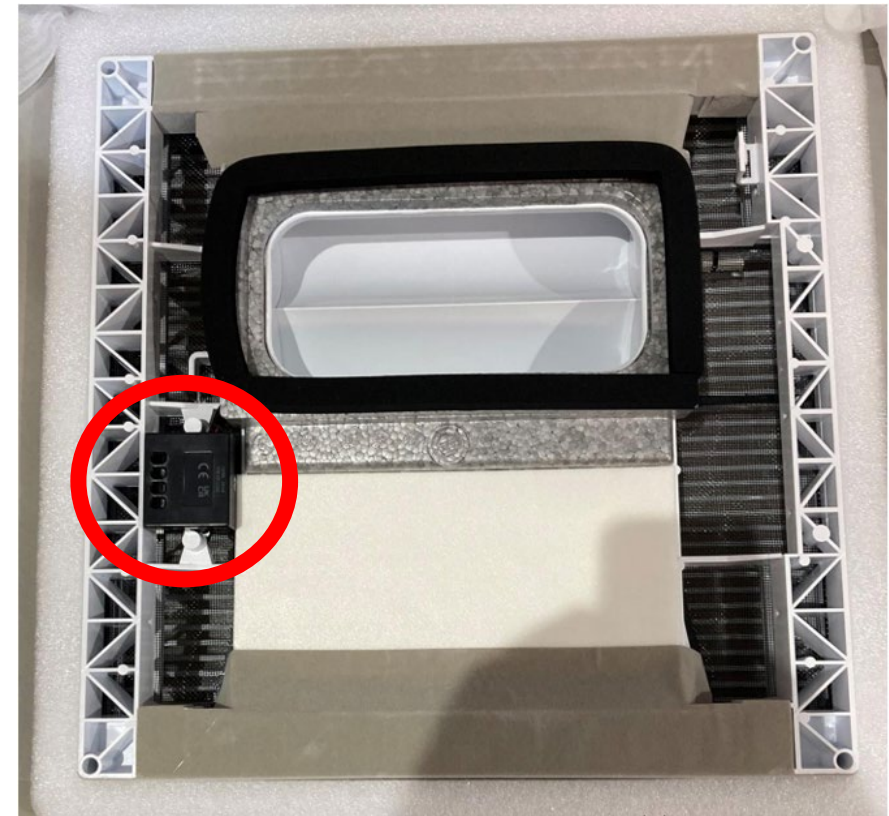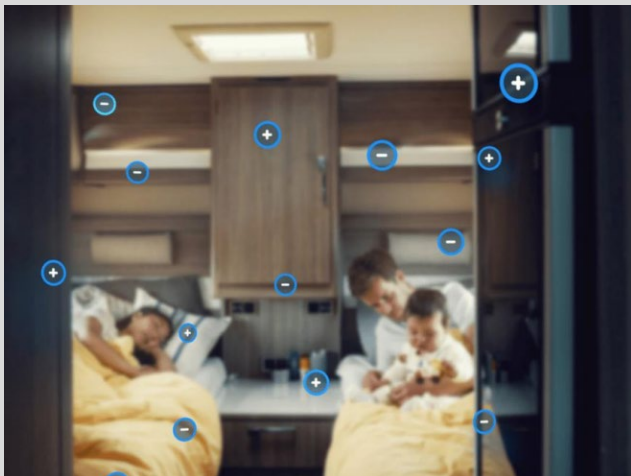

The ioniser is not yet available as a spare part as it is a long-life item. To identify when it is working there is an LED on the ADB. If the LED fails to illuminate – the ionizer should be replaced


ID LOCATION

It is good practice to attach the silver rooftop unit identification plate to the rear of the ADB fascia cover for easy future reference.

If the installer has not attached the identification plate to the rear of the ADB fascia cover, there is no need to access the roof or remove the rooftop unit shroud to obtain the model and serial number. These details can be viewed on the underside of the rooftop unit through the return air cavity.

White Sticker = ADB ID

Silver Sticker = RTU ID

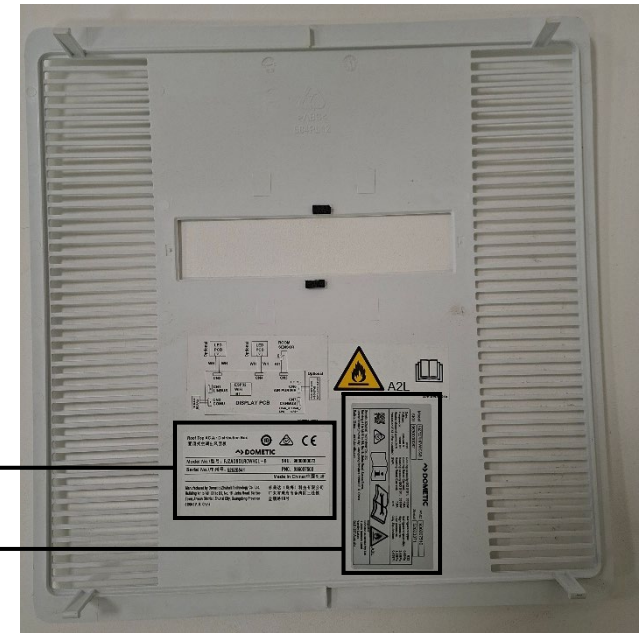

RTU SKU & Serial






DRAIN PAN KIT

9630002437

An optional drain pan kit is available for FJX Pro, FJX Plus, FJZ Pro and FJZ Plus.

Using drain pans and hoses this kit collects and drains condensation from the air conditioner to a designated discharge point. This helps prevent condensation water streaks from forming on the RV or caravan roof.

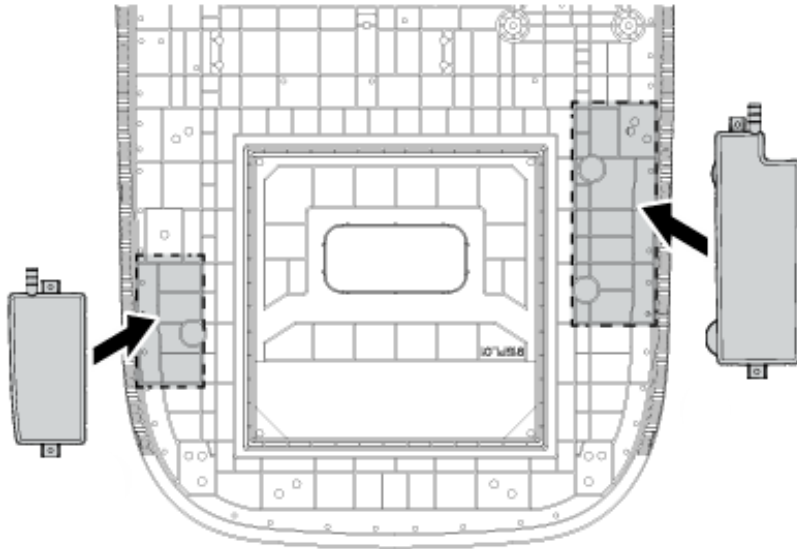



ISSUES YOU MAY SEE

DISPLAY SETTINGS CHANGING AUTOMATICALLY

A small number of the original display PCBs may turn on/off, change modes and change temperature without anyone operating the air conditioner.

Although this issue has been identified on both FJX and FJZ ADBs, it was significantly more prevalent on FJX units.

Only some units from the original part numbers are affected so only change display PCB if it showing symptoms of this issue

Original Part Numbers – 4472004021 (PCB DISPLAY ADB FJX/FJZ)
4450031469 (PCB DISPLAY ADB FJ4/7)

Replacement Part Number – 4472009339 (PCB DISPLAY ADB FJX/FJZ)

ISSUES YOU MAY SEE

INCORRECT DUCTWORK

Incorrect Ductwork ❌




An air gap between duct sections allows the supply air to mix with the return air which will cause performance issues.

Correct Ductwork ✅



Correct ductwork creates an airtight seal between supply air and return air.

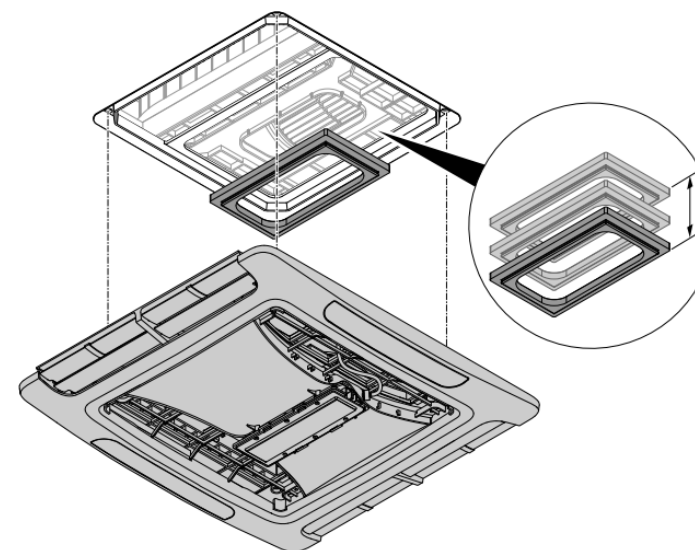

Roof Thickness	Number Of Duct Sections
25 - 35 mm	1
35 - 45 mm	2
45 - 55 mm	3
55 - 60 mm	4


Extra duct sections and longer bolts can be purchased for thicker roofs.

4472003937 - BOLT 160MM IBIS4/HARRIER/FJ
4450017931 - EXTENSION DUCT IBIS4/FJX/FJZ

Symbol	Description
	Switches the roof air conditioner on or to standby mode.
	Increases the currently displayed value.
	Reduces the currently displayed value.
	Pairs with bluetooth/WLAN when both buttons are pressed simultaneously.
	Switches the ambient lights in the rooftop unit on or off.
	Switches the ambient lights in the air distribution box on or off.
	Short press: Activates the sleep function (only for models with sleep function). Long press: Press and hold the button for 5 s to enable or disable the beeping sound (only for models with sleep function).
	Displays the set temperature and indicates fan level when fan is adjusted.
	Indicates the Air Purifier mode is active.
	Indicates the temperature is displayed in degrees Celsius.
	Indicates the timer is set.
	Enables/disables the automatic mode (only for models with automatic mode).
	Enables/disables the cooling mode (only for models with cooling mode).
	Enables/disables the heating mode (only for models with heating mode).
	Adjusts the fan speed between Low, Med, High, Turbo or Auto (shown as 1, 2, 3, 4 or AA on the air distribution box display for a short time when changed).
	Enables/disables ventilation mode (only for models with ventilation mode). Circulates air without heating or cooling.
	Enables/disables dehumidification mode (only for models with dehumidification mode).

SYMBOL EXPLANATION

Display

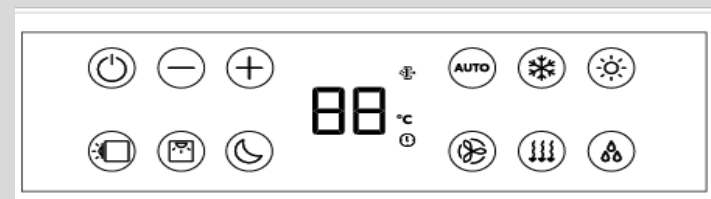

SYMBOL EXPLANATION

Remote Control



Button	Description
—	Display Displays the following: • Time • Selected room temperature (target value) in °C • Actual room temperature • Air conditioning mode • Fan speed • Symbols for active additional functions • Battery status
	Switches the roof air conditioner on or to stand-by mode.
	Increases the currently displayed value.
	Reduces the currently displayed value.
	Selects the fan speed (Selecting the fan speed manually on page 11).
	Selects the air conditioning mode (only for models with automatic mode). The corresponding symbol is displayed.
	Activates the sleep function (only for models with sleep mode). The symbol is displayed.
	Confirms and saves settings.
	Sets the timer and the clock.
	Switches the ambient lights in the air distribution box on or off.
	Press once to display the current interior temperature. The symbol is displayed. Press twice to display the set temperature.
	Activates the I feel function. The symbol is displayed. Every 10 min the I feel function adjusts the target temperature to the actual temperature measured by the remote control.
	Switches the ambient lights in the roof top unit on or off.
	Displays that the remote control's batteries are empty. Replace the batteries (Replacing the remote control batteries on page 14).
	Displays that the remote control is transmitting values to the roof air conditioner.

FAULT FINDING P- ERROR CODES

Protection or Fault Type	Display Code	Cause of Failure	Recommended Actions
Under voltage protection	P1	Input voltage is below 130V ±5V	Check the voltage supply to the unit.
Unit AC over-current protection	P2	Operating AC current exceeds the limit value	1. Check the voltage supply to the unit. 2. Check the condenser and/or evaporator fan motors work. 3. Check the current draw of the compressor when in operation. 4. If it is abnormal, replace the compressor. 5. If OK, replace Main-PCBA.
Discharge tube overheat protection	P4	The temperature of the compressor discharge tube exceeds the protection value.	1. Check the temperature of the discharge tube via the ADB. 2. If it is abnormal, replace the sensor. 3. If it is normal, check the running temperatures for coils. 4. If they are abnormal, check the refrigerant level in the system. 5. If level is abnormal, check for leaks and repair and recharge to correct level.
Evaporator Coil Protection (cooling mode)	P5	Evaporator coil temperature is too low in cooling mode.	1. Check the evaporator fan motor works. 2. Check the temperature of the evaporator coil via the ADB. 3. If it is abnormal, replace the sensor. 4. If it is normal, check the running temperatures for coils. 5. If they are abnormal, check the refrigerant level in the system. 6. If level is abnormal, check for leaks and repair and recharge to correct level.
Condenser Coil Protection (cooling mode)	P6	Condenser coil temperature is too high in cooling mode.	1. Check for any blockages or restrictions of air inlet or outlets to condenser. 2. Check the condenser fan motor works. 3. Check the temperature of the condenser coil via the ADB. 4. If it is abnormal, replace the sensor. 5. If it is normal, check the running temperatures for coils. 6. If they are abnormal, check the refrigerant level in the system. 7. If level is abnormal, check for leaks and repair and recharge to correct level.
Evaporator Coil Protection (heating mode)	P7	Evaporator coil temperature is too high in heating mode.	1. Check the evaporator fan motor works. 2. Check the temperature of the evaporator coil via the ADB. 3. If it is abnormal, replace the sensor. 4. If it is normal, check the running temperatures for coils. 5. If they are abnormal, check the refrigerant level in the system. 6. If level is abnormal, check for leaks and repair and recharge to correct level.
Outdoor Temperature Protection	P8	Outdoor environment temperature under 0°C in Cooling mode or over 32°C in Heating mode.	1. Check if the unit was accidentally switched into Heating Mode in hot ambient or Cooling in cold ambient. 2. If it was definitely in Cooling Mode, check the location of the external sensor is correct. 3. If it has been mis-placed, re-fix it (it could come in contact with something hot like the compressor body or pipework and cause the error). 4. If it is located correctly, then check the temperature of the Outdoor Sensor via the ADB. 5. If all OK, then replace the Main-PCB.
Compressor drive abnormal or compressor doesn't start	P9	Compressor or Main-PCB faulty	If this error occurs, contact Dometic. Replace Main-PCBA or compressor.
IPM module self over temperature or over current	P0	IPM itself faulty or bad soldering	If this error occurs, contact Dometic. Replace Main-PCBA.

FAULT FINDING E- ERROR CODES

Protection or Fault Type	Display Code	Cause of Failure	Recommended Actions
Communication failure	E0	Abnormal communication or outdoor power supply issue inside or outside	1. Check the connection of the communication cable at the Display-PCBA and Main-PCBA. 2. If loose or damaged, repair or replace. 3. If OK, connect a spare Display-PCBA and test. 4. If still abnormal, replace Main-PCBA.
Room temperature sensor fault	E1	Short circuit or open circuit of indoor ambient temperature sensor	1. Check the temperature of the Room Sensor via the ADB. 2. If abnormal, replace the sensor.
Evaporator coil temperature sensor fault	E2	Short circuit or open circuit of evaporator coil temperature sensor	1. Check the temperature of the Evaporator Coil via the ADB. 2. If abnormal, replace the sensor.
Condenser coil temperature sensor fault	E3	Short circuit or open circuit of condenser coil temperature sensor	1. Check the temperature of the Condenser Coil via the ADB. 2. If abnormal, replace the sensor.
LIN-BUS/CI-BUS communication failure	EL	LIN-BUS/CI-BUS communication failure during self-check	1. Check LIN-BUS/CI-BUS connection cable for poor connection or damage. 2. If loose or damaged, repair or replace. 3. Check master control panel working and connection is good. 4. If error still present, replace Display-PCBA.
Indoor Fan Failure	E6	Indoor fan does not rotate or abnormal rotation speed	1. Check if there are any foreign objects stuck and remove them. 2. Check if the connection terminals are loose. If so, re-fix the connection terminals. 3. If no issues are found above, contact Dometic.
Outdoor temperature sensor failure	E7	Outdoor ambient temperature sensor short circuit or open circuit	1. Check the temperature of the Outdoor Ambient Sensor via the ADB. 2. If abnormal, replace the sensor.
Discharge tube temperature sensor failure	E8	Compressor discharge tube temperature sensor short circuit or open circuit	1. Check the temperature of the Compressor Discharge Tube Sensor via the ADB. 2. If abnormal, replace the sensor.
Compressor drive or IPM module fault	E9	Driver or module protection appears 6 times within 30 minutes	1. Check the voltage supply to the unit. 2. Check the condenser and/or evaporator fan motors work. 3. Replace Main-PCBA.
Fault of current sensor	EA	No current was sampled by the system	1. When the code displays immediately after turning the system on (hardware fault), replace the Main-PCBA. 2. If code displays after the compressor starts (compressor current draw is lower than 1A and detection time is more than 30s when compressor works at equal or greater than 35Hz), check refrigerant level in the system. 3. If level is abnormal, check for leaks, repair, and recharge to correct level.
Outdoor EEPROM fault	EE	Unable to read EEPROM data	Replace Main-PCBA.
Outdoor Fan Failure	EF	Outdoor DC fan motor does not rotate or rotates at an abnormal speed	1. Check if there are any foreign objects stuck and remove them. 2. Check if the connection terminals are loose. If so, re-fix the connection terminals. 3. If no issues are found above, contact Dometic.
N/A	EU	Voltage detection error	If this error occurs, contact Dometic.

In previous error code lists, you’ll notice that the instruction “If this error occurs, contact Dometic” appears across multiple error entries.

N/A	EF	If this error occurs, contact Dometic.
-----	----	--



Temperature Sensor Check

Freshjet 4 & 7 Series:

Item	Sensor	Button Press & Hold Combination	Displayed Indicator
1	Indoor Room Air Temperature	 AND 	
2	Evaporator Coil Temperature	 AND 	
3	Condenser Coil Temperature	 AND 	
4	Compressor Discharge Tube Temperature	 AND 	
5	Outdoor Ambient Temperature	 AND 	

Press and HOLD the button combinations as shown to have the sensor temperature read out on the ADB display.
Once released, the display will return to show the set temperature.

Temperature Sensor Check



2	Evaporator Coil Temperature	 AND 	
---	-----------------------------	---	---

EXPECTED RUNNING TEMPERATURES

RESULTS MAY VARY DEPENDING ON COMPRESSOR SPEED AND HUMIDITY AT THE TIME OF TESTING

Outdoor Ambient Temperature	Indoor Room Temperature (Return Air On)	Evaporator Coil Temp	Condenser Coil Temp	Supply Temp (Air Off)	Compressor Discharge Temp	Expected Behavior / Status
23.9°C	22.2°C	1.7°C - 3.3°C	29.4°C - 32.2°C	11.1°C - 12.8°C	60.0°C - 68.3°C	Light load. Lower pressures keep discharge line mild.
29.4°C	24.4°C	3.3°C - 5.0°C	37.8°C - 40.6°C	13.3°C - 15.0°C	71.1°C - 79.4°C	Normal load. Optimal refrigerant compression range.
35.0°C	26.7°C	5.6°C - 7.2°C	46.1°C - 48.9°C	15.6°C - 17.2°C	82.2°C - 90.6°C	High load. Increased compression generates more heat.
40.6°C	29.4°C	7.8°C - 9.4°C	51.7°C - 54.4°C	18.3°C - 20.0°C	93.3°C - 101.7°C	Extreme load. Approaching upper limits of safe operation.

MAINTENANCE TASKS


Poor upkeep of an air-conditioning unit will increase power usage, reduce performance and increase likelihood of future repairs. Maintenance becomes even more important if the RV has been used in dirty and dusty locations for extended periods.

Maintenance Checklist

1. Clean Filters regularly.
2. Clear rooftop grill/fans of any debris or obstructions such as sticks, leaves and nests.
3. Clear condensate drain holes of any debris or obstructions, If a drain pan kit is fitted, verify that condensation water flows freely through the drain system.
4. Clean evaporator and condenser coil with a brush, low pressure compressed air and non-corrosive enzyme type coil cleaner.
5. Straighten any bent fins on evaporator and condenser coils with fin comb.
6. Ensure all components are operating correctly. An air ON/OFF performance test is recommended. The expected temperature differential (split) is 12°C to 16°C, although this may vary depending on ambient temperature and compressor speed at the time of testing.
7. Ensure all four securing bolts are correctly tensioned to 2.5 – 4 Nm of torque.

FJZ ESSENTIAL – PARTS BREAKDOWN


9630000090 / 9630000092 / 9630000084

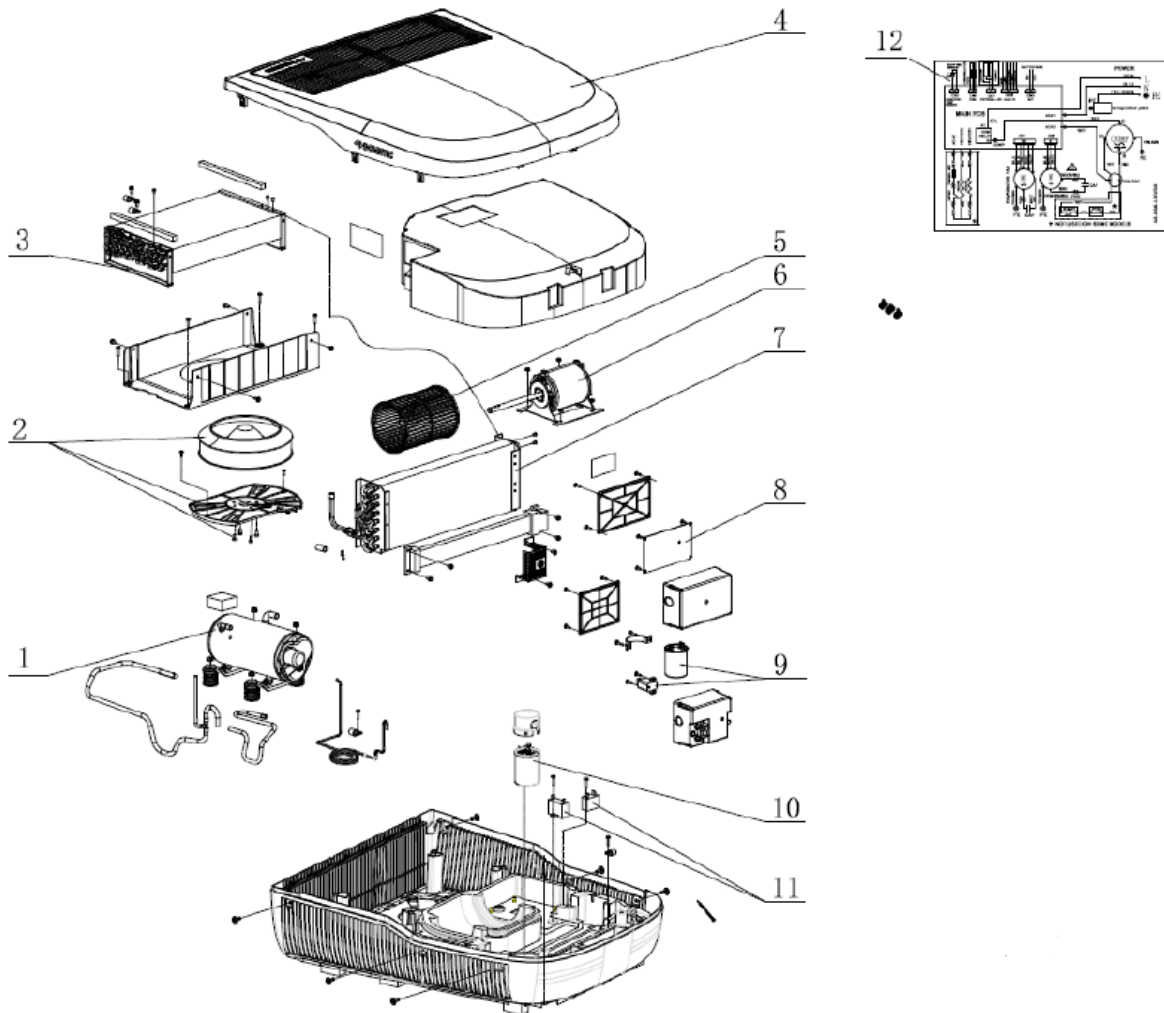

Position	No.	Description
1	4450031828	COMPRESSOR FJX/FJZ4
2	4450030739	FAN CONDENSER FJ4 ESSENTIAL
3	4450032807	CONDENSER FJ4 ESSENTIAL
4	4450030742	SHROUD FJ4 ESSENTIAL
5	4472002258	BLADE FAN EVAP FJ4 SELECT
6	4450031831	MOTOR FAN EVAP FJX/FJZ4
7	4450031832	EVAPORATOR FJX/FJZ4
8	4472003757	PCB MAIN FJZ4 LITE
9	4450032809	CAPACITOR SET START FJ4 ESSENT
10	4450032808	CAPACITOR SET FAN FJ4 ESSEN
11	4450027656	CAPACITOR 20UF FJX/FJZ4
12	4450027373	SENSORS FJX/FJZ4

FJZ LITE – PARTS BREAKDOWN


9630000091 / 9630000079 / 9630000087 / 9630000089 / 9630000093

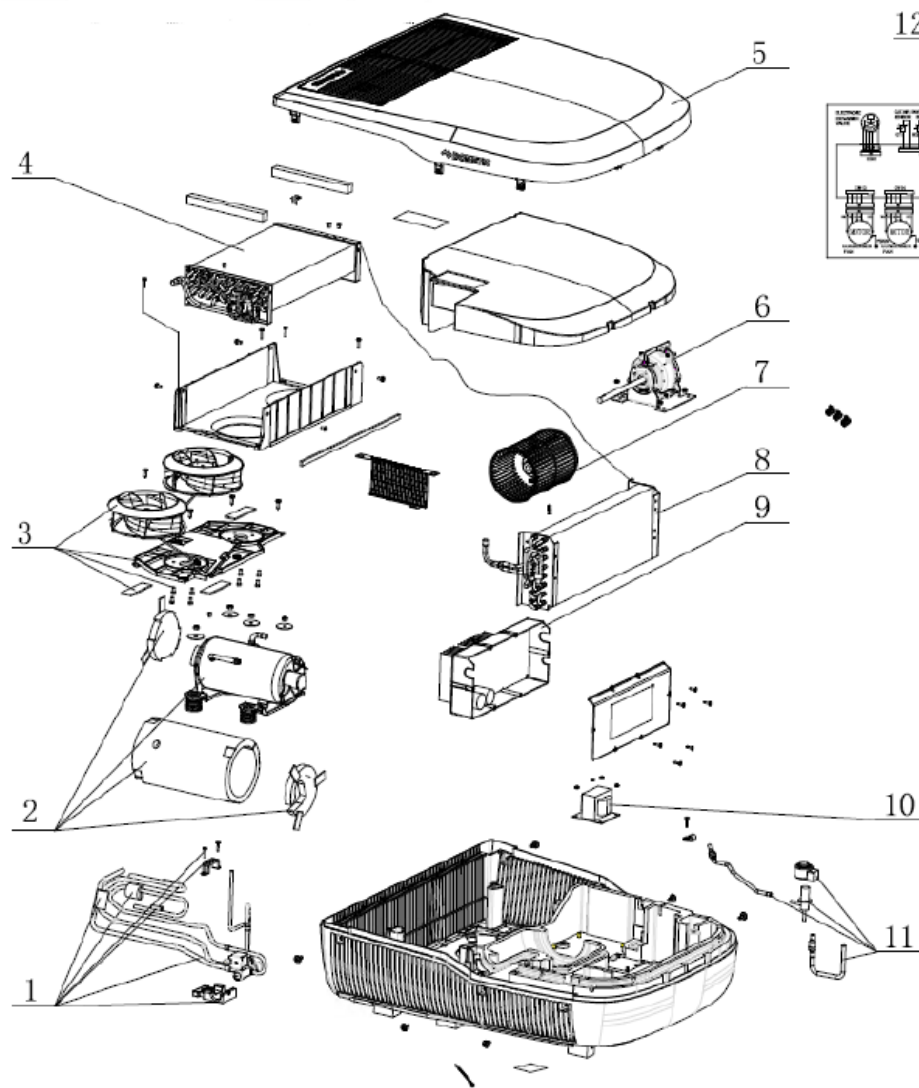

Position	No.	Description
1	4450033587	VALVE REVERS & PIPES FJX7 LITE
2	4450033589	COMPRESSOR FJ7 LITE
3	4450033583	MOTOR FAN CONDENSER FJ7 LITE
4	4450033584	CONDENSER FJX7 LITE
5	4450030742	SHROUD FJ4/7 ESSENTIAL/LITE
5	4450030743	SHROUD FJ7 LITE BLACK
6	4450033585	MOTOR FAN EVAPORATOR FJX7 LITE
7	4472002258	BLADE FAN EVAP FJ4 SELECT
8	4472007612	EVAPORATOR FJZ7 LITE
9	4472003391	PCB MAIN FJZ7 LITE
10	82-EC-R1250HS	TRANSFORMER HARRIER
11	4472003967	VALVE & SOLENOID EXPAN FJ7 LITE
12	4450033586	SENSORS SET FJ7 LITE

FJZ PRO – PARTS BREAKDOWN


9630000083 / 9630000088 / 9630000075 / 9630000085 / 9630000076

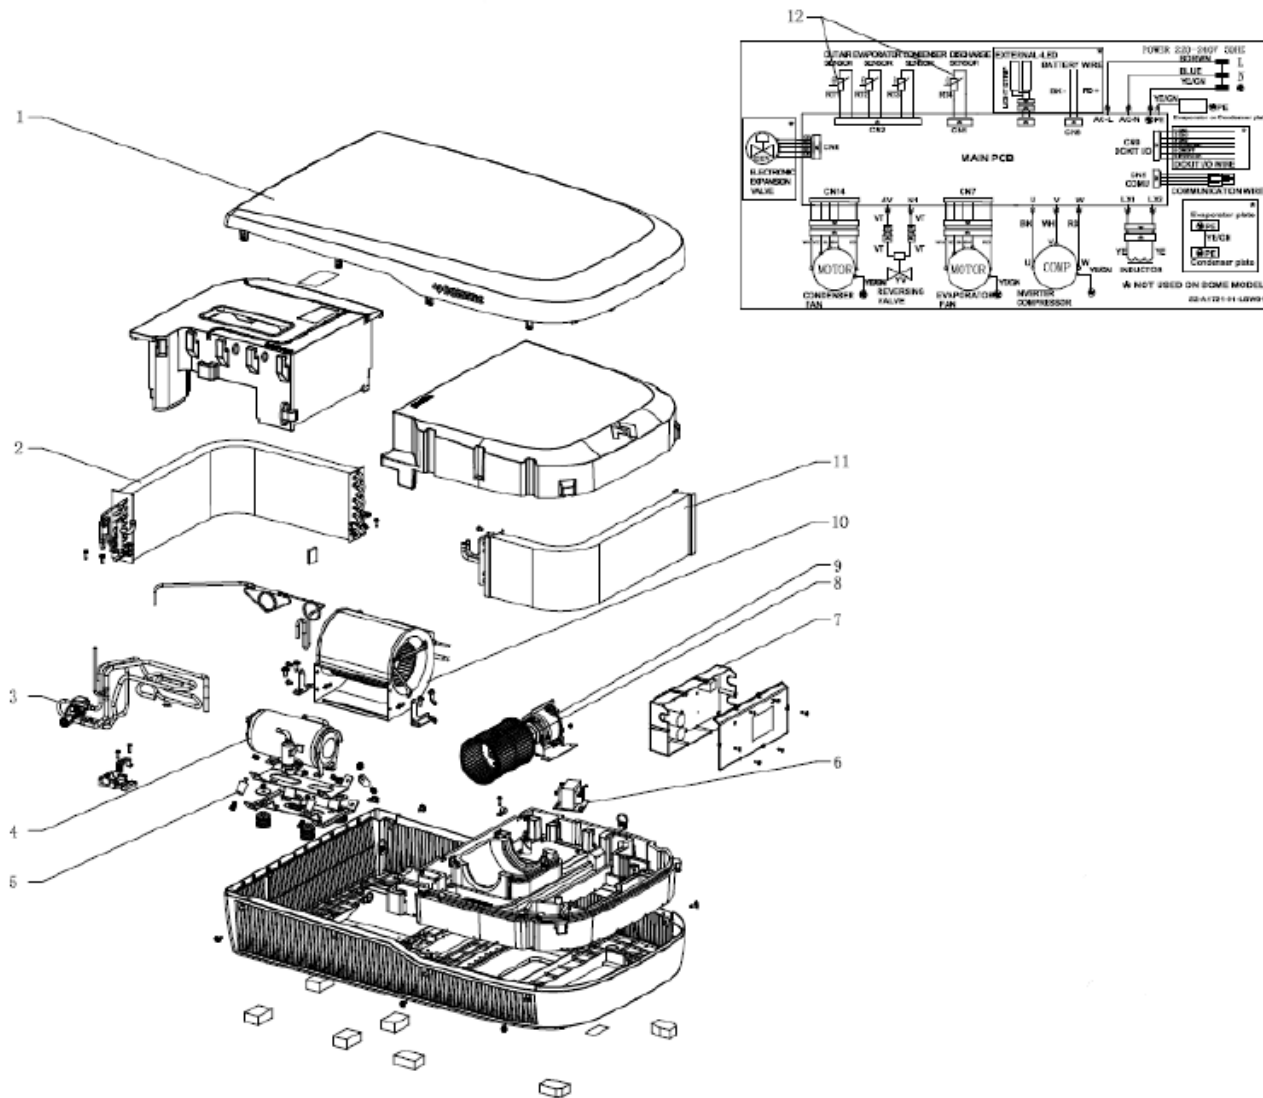

Position	No.	Description
1	4472005894	SHROUD FJX/FJZ 7 PRO WHT
1	4472005895	SHROUD FJX/FJZ 7 PRO BLK
2	4450032945	CONDENSER FJ7 PRO
3	4472005896	VALVE REV & PIPE FJZ7 PRO/PL
4	4472005897	COMPRESSOR FJZ7
5		
6	82-EC-R1250HS	TRANSFORMER HARRIER
7	4472005899	PCB MAIN FJZ7 PRO
8	4472002258	BLADE FAN EVAP FJ4 SELECT
9	4472005900	MOTOR FAN EVAPORATOR DC FJZ7
10	4472005901	FAN CONDENSER DC FJZ7
11	4472005357	EVAPORATOR FJZ7 PRO
12	4472005902	SENSOR SET FJX/FJZ7

FJZ PLUS – PARTS BREAKDOWN


9630000082 / 9630000081 / 9630000077 / 9630000074 / 9630000080

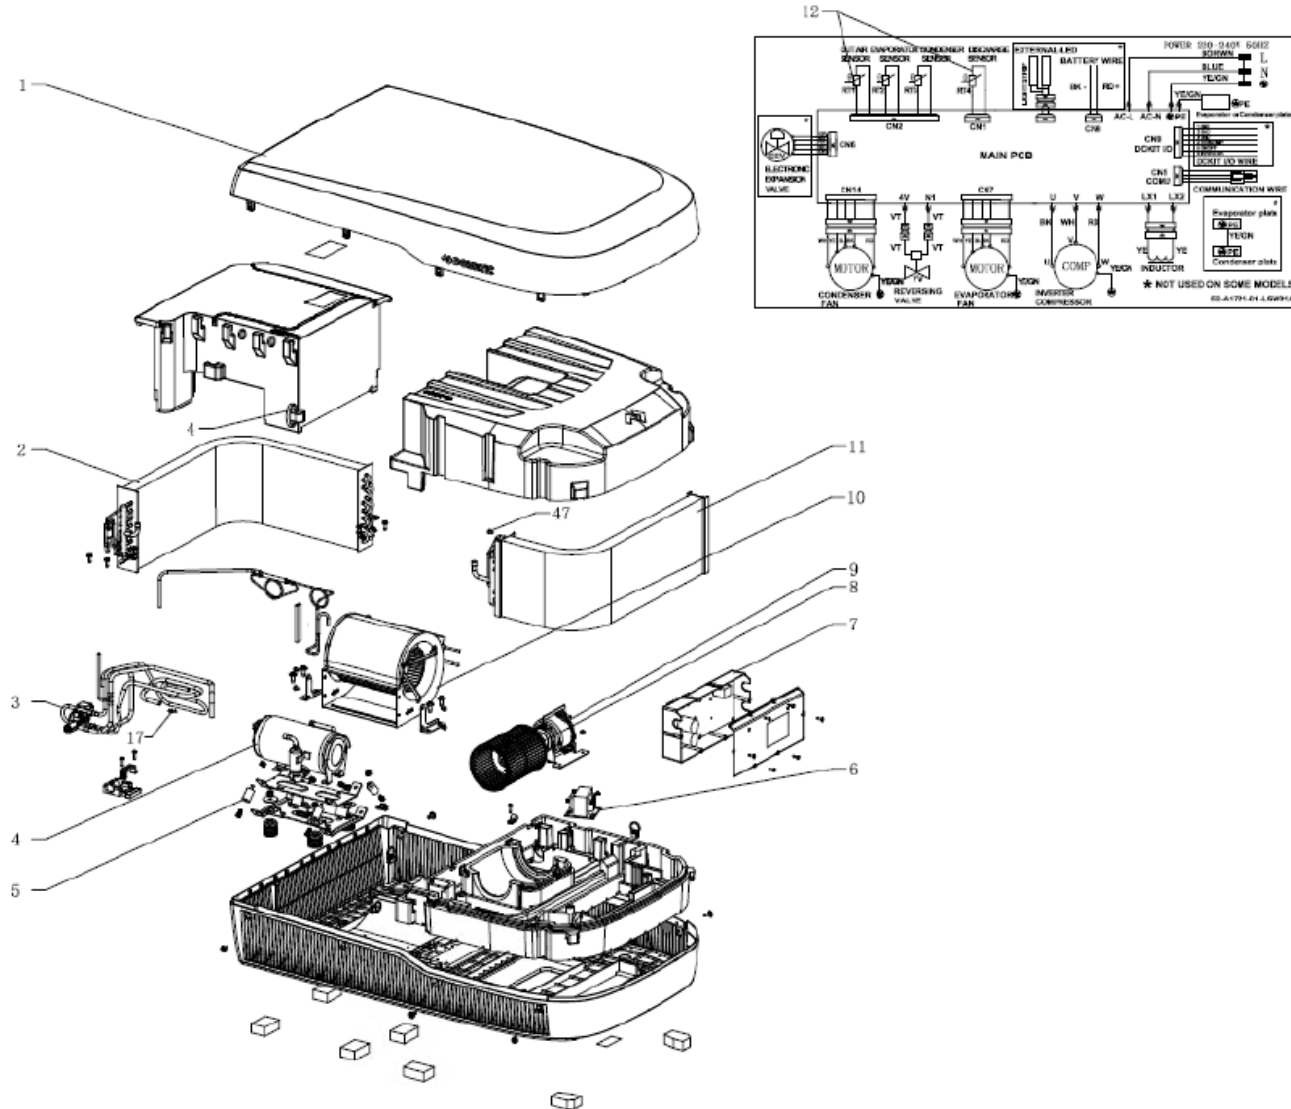

Position	No.	Description
1	4472005903	SHROUD FJX/FJZ 7 PLUS WHT
1	4472005904	SHROUD FJX/FJZ 7 PLUS BLK
2	4450032984	CONDENSER FJ7 PLUS
3	4472005896	VALVE REV & PIPE FJZ7 PRO/PL
4	4472005897	COMPRESSOR FJZ7
5		
6	82-EC-R1250HS	TRANSFORMER HARRIER
7	4472005905	PCB MAIN FJZ7 PLUS
8	4472002258	BLADE FAN EVAP FJ4 SELECT
9	4472005900	MOTOR FAN EVAPORATOR DC FJZ7
10	4472005901	FAN CONDENSER DC FJZ7
11	4472005358	EVAPORATOR FJZ7 PLUS
12	4472005902	SENSOR SET FJX/FJZ7

FJZ ADB – PARTS BREAKDOWN

9630000073

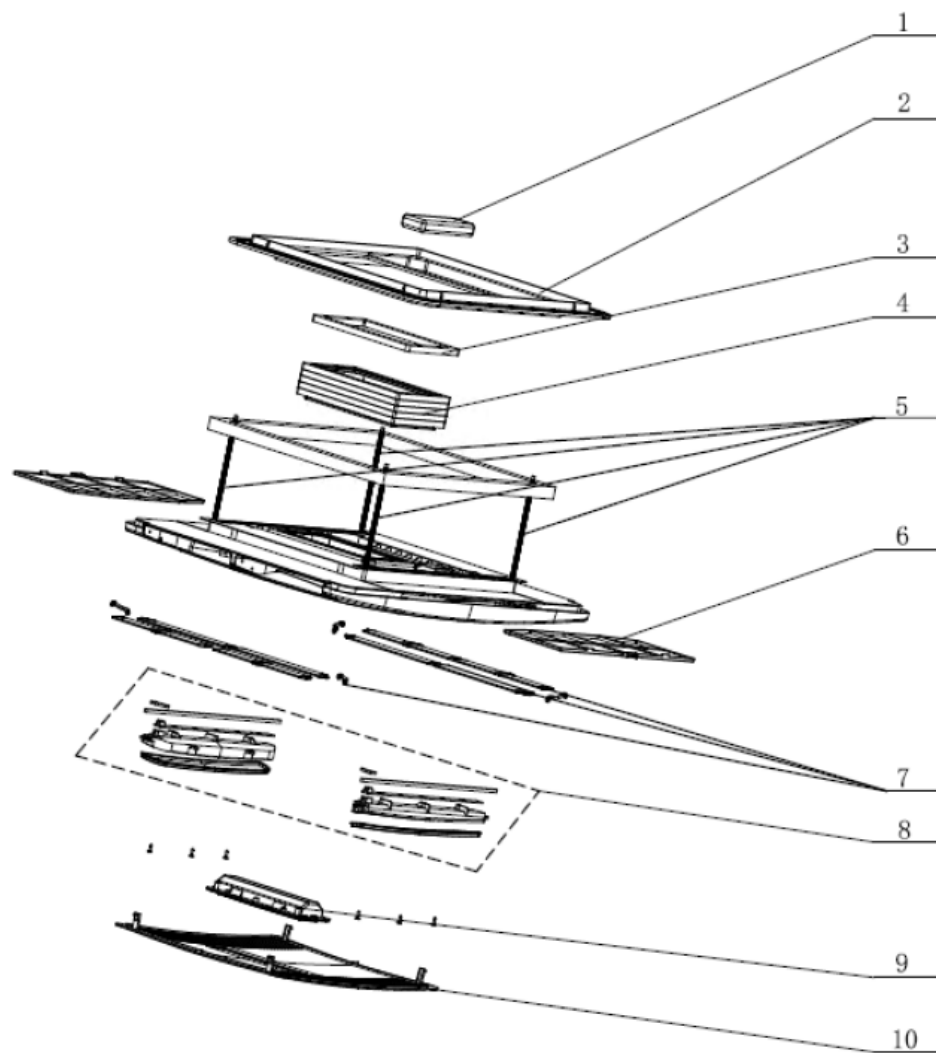

Position	No.	Description
1	4450027567	CONTROL REMOTE FJX/FJZ4/7
2	4450020818	FRAME MOUNTING FJ4/7
3	4450024602	DUCT UPPER FJX/FJZ7
4	41-03-606PF06	EXTENSION DUCT IBIS4/FJX/FJZ
5	4472003937	BOLT 160MM IBIS4/HARRIER/FJ
6	4450036682	FILTER FJX/FJZ/IBIS4/PLUS/LITE
7	4450032894	LOUVRE SET ADB FJ4/7 (4)
8	4450029488	LIGHT ASSEMBLY ADB FJ4/7 (2)
9	4472009339	PCB DISPLAY ADB FJX/FJZ
10	4450034325	GRILL RETURN ADB FJX/FJZ

↗ DOMETIC

