


Lab 2 Blank configuration Pada Mikrotik

Berikut adalah penjelasan saya tentang blank config pada mikrotik

Topologi:

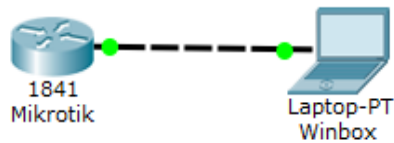


Mikrotik dengan konfigurasi default tidak akan bisa diakses via ether1, karena pada Firewall > Filter Rules > Drop semua chain input ke ether1, sehingga tidak terdeteksi MAC Address pada winbox

Firewall											
Filter Rules											
New Enable Disable Remove Comment											
#	^	P	Action	Chain	Src. Address	Dst. Address	Src. Ad...	Dst. Ad...	Protocol	Src. Port	Dst....
special dummy rule to show fasttrack counters											
0			passthrough	forward							
defconf: accept established,related,untracked											
1			accept	input							
defconf: drop all from WAN											
2			drop	input							ether1
defconf: accept ICMP											
3			accept	input					1 (icmp)		
defconf: accept to local loopback (for CAPsMAN)											
4			accept	input	127.0.0.1	127.0.0.1					lo
defconf: drop all not coming from LAN											
5			drop	input							
defconf: accept in ipsec policy											
6			accept	forward							
defconf: accept out ipsec policy											
7			accept	forward							
defconf: fasttrack											
8			fasttrack connec...	forward							
defconf: accept established,related,untracked											
9			accept	forward							
defconf: drop invalid											
10			drop	forward							
defconf: drop all from WAN not DSTNATed											
11			drop	forward							

Sehingga pada saat ingin masuk ke mikrotik nya kalian harus menggunakan ether 2/3/4/5


Saat tampilan login juga, mikrotik sudah di tampilkan memiliki ip **192.168.88.1**

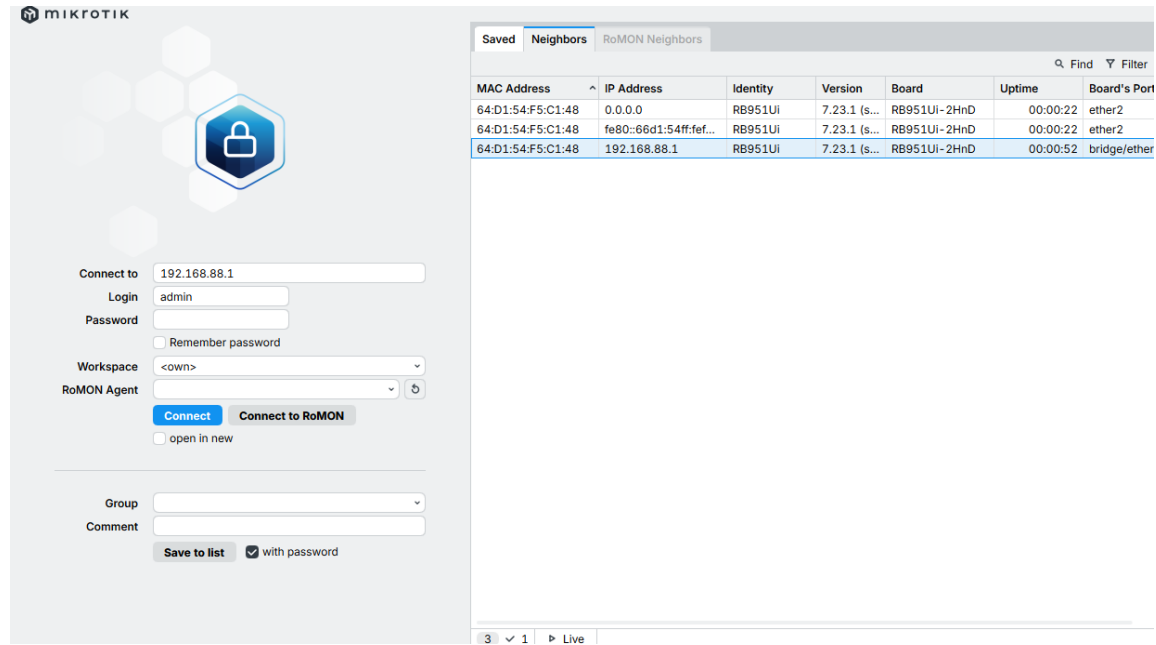

The screenshot shows the Mikrotik WinBox interface. On the left is the login panel with fields for 'Connect to' (192.168.88.1), 'Login' (admin), and 'Password'. Below these are options for 'Remember password', 'Workspace' (set to <own>), and 'RoMON Agent'. At the bottom of the login panel are fields for 'Group' and 'Comment', and a 'Save to list' button with a checked 'with password' checkbox. On the right is the 'Neighbors' tab, which displays a table of network neighbors. The table has columns for MAC Address, IP Address, Identity, Version, Board, Uptime, and Board's Port. Three neighbors are listed, all with MAC address 64:D1:54:F5:C1:48. The third neighbor has IP 192.168.88.1 and is identified as RB951Ui.

MAC Address	IP Address	Identity	Version	Board	Uptime	Board's Port
64:D1:54:F5:C1:48	0.0.0.0	RB951Ui	7.23.1 (s...	RB951Ui-2HnD	00:00:22	ether2
64:D1:54:F5:C1:48	fe80::66d1:54ff:fef...	RB951Ui	7.23.1 (s...	RB951Ui-2HnD	00:00:22	ether2
64:D1:54:F5:C1:48	192.168.88.1	RB951Ui	7.23.1 (s...	RB951Ui-2HnD	00:00:52	bridge/ether

Saat masuk kedalam mikrotik via winbox kalian disugahi keterangan default configuration mikrotik seperti pada gambar berikut

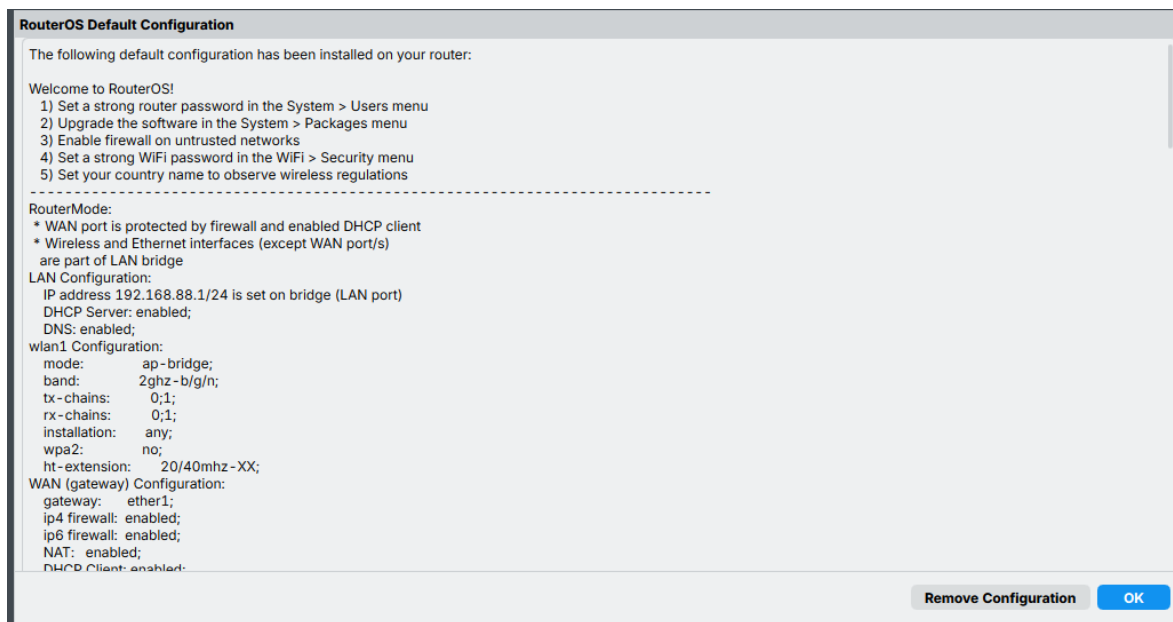

Kalau kalian baru beli mikrotik dan mencoba untuk meng config nya, kalian akan melihat ini, jika kalian ingin melakukan konfigurasi lain bisa di remove configuration, tapi karena materi kita kali ini adalah default configuration jadi kita klik **OK** saja

Berikut ini konfigurasi default mikrotik diantaranya:

Router Mode:

1. DHCP Client =enabled

DHCP Client							
DHCP Client Options							
New	Enable	Disable	Remove	Comment	Find	Filter	
	Name	Interface	Use Pe...	Add D...	IP Address	Expires After	Status
defconf	client1	ether1	yes	yes	192.168.70....	00:59:58	bound

Wireless menjadi bagian dari LAN bridge

Bridge													
Bridge Ports													
New	Enable	Disable	Remove	Comment	Find	Filter							
#		Interface	Bridge	Horizon	Trusted	Trusted...	Trusted...	Fast Leave	BPDU Guard	PVID	Frame Types	Forwarding	Role
defconf	0	ether2	bridge		no	no	no	no	no	1	admit all	yes	designated port
defconf	1	ether3	bridge		no	no	no	no	no	1	admit all		
defconf	2	ether4	bridge		no	no	no	no	no	1	admit all		
defconf	3	ether5	bridge		no	no	no	no	no	1	admit all		
defconf	4	wlan1	bridge		no	no	no	no	no	1	admit all		

IP Address LAN = 192.168.88.1/24 itu adalah ip default mikrotik

Addresses				
New Enable Disable Remove Comment Find Filter				
	Address	Network	Interface	VRF
D	192.168.70....	192.168.70.0	ether1	main
defconf	192.168.88....	192.168.88.0	bridge	main

2 ✓ 1 ▶ Live

2. Konfigurasi WLAN 1:

Mode ap-bridge

Band 2ghz-b/g/n

Ht-chains 0,1

Ht extension 20/40mhz-Ce

Interface > wlan1

General

Wireless

HT

HT MCS

WDS

Nstreme

Status

Traffic

Mode

ap bridge

Band

2GHz - B/G/N

Channel Width

20/40MHz XX

Frequency

auto

SSID

MikroTik - F5C14C

-

Security Profile

default

:

▼

WPS Mode

push button

▼

Frequency Mode

regulatory - domain

▼

Country

etsi

▼

Installation

any

▼

Default AP Tx Limit

+

Default Client Tx Limit

+

Default Authenticate

✓

Default Forward

✓

Hide SSID

☐

Advanced Mode

☐

⚡ Actions

Torch

Reset Traffic Counters

WPS Accept

WPS Client

Setup Repeater

Scan...

Freq. Usage...

Align...

Sniff...

Snooper...

Reset Configuration

Reset MAC Address

running ap

SLAVE

Cancel

Apply

OK

3. Konfigurasi LAN:

Group switch: ether2(master), ether3, ether4

Kesimpulan:

Kesimpulannya, konfigurasi bawaan MikroTik memberikan solusi praktis, cepat, dan aman bagi pengguna karena perangkat langsung siap pakai dengan fitur dasar seperti pembagian IP, koneksi internet, dan proteksi *firewall* yang sudah aktif otomatis.