ALLEGION

SCHLAGE

XE360™ Series

User guide



Contents

iii Customer service

iii Warnings and cautions

iv Compliance and certifications
iv FCC Statements
vi IC Statements
vii RF Radiation Exposure Statement
vii NFC
vii Credentials
viii Certifications

9 Introduction
9 Lock models

12 Operation
12 Credentials
13 Functionality
14 Power
16 Key override
17 Commissioning
17 General maintenance and security
18 Lock modes
19 Firmware update

20 FleX Module™ replacement
20 Interactive instructions
21 Tubular and Mortise models
22 Exit Models

23 Rekeying
23 Tubular and mortise
24 Exits

25 Diagnostics
25 Indicators
26 Factory default reset (FDR)
26 Door position switch (DPS)
27 Request for exit (REX)
27 Glossary

28 Lock properties

31 Troubleshooting

Customer service

Phone: 1-877-671-7011
www.allegion.com/us

Warnings and cautions

WARNING

Warnings indicate potentially hazardous conditions, which if not avoided or corrected, may cause death or serious injury.

CAUTION

Cautions indicate potentially hazardous conditions, which if not avoided or corrected, may cause minor or moderate injury. Cautions may also warn against unsafe practices.

NOTICE

Notices indicate a condition that may cause equipment or property damage only.

Allegion, the Allegion logo, Schlage and the Schlage logo are trademarks of Allegion plc, its subsidiaries and/or affiliates in the United States and other countries. MIFARE and DESFire are registered trademarks of NXP B.V. All other trademarks are the property of their respective owners.

Compliance and certifications

FCC Statements

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures.:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

➔ **Note:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Access Core Module Listings

Module Description	Hardware Part Number	Model	FCC ID	IC
SMART DRIVE	47446668	47446668	XPB-47446668	8053B-47446668

FleX Module™ Listings

➔ **Note:** See **FleX Module™ replacement** for more information.

Module Description	Hardware Part Number	Model	FCC ID	IC
BLE	47334317	47334317	XPB-47334317	8053B-47334317
BLE & Wi-Fi	47334321	47334321	XPB-47334321	8053B-47334321

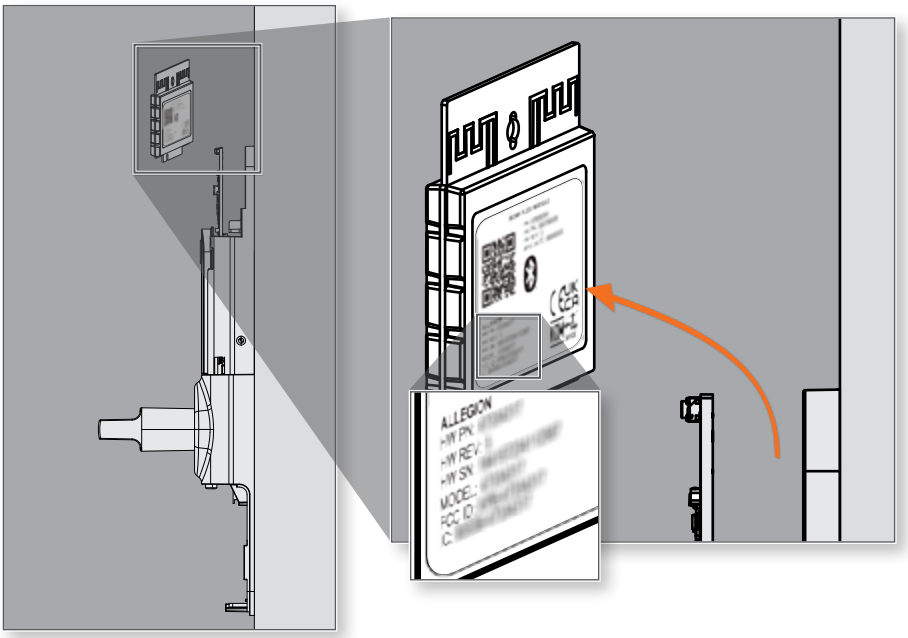


Figure 3.1: FleX Module label location, tubular and mortise models

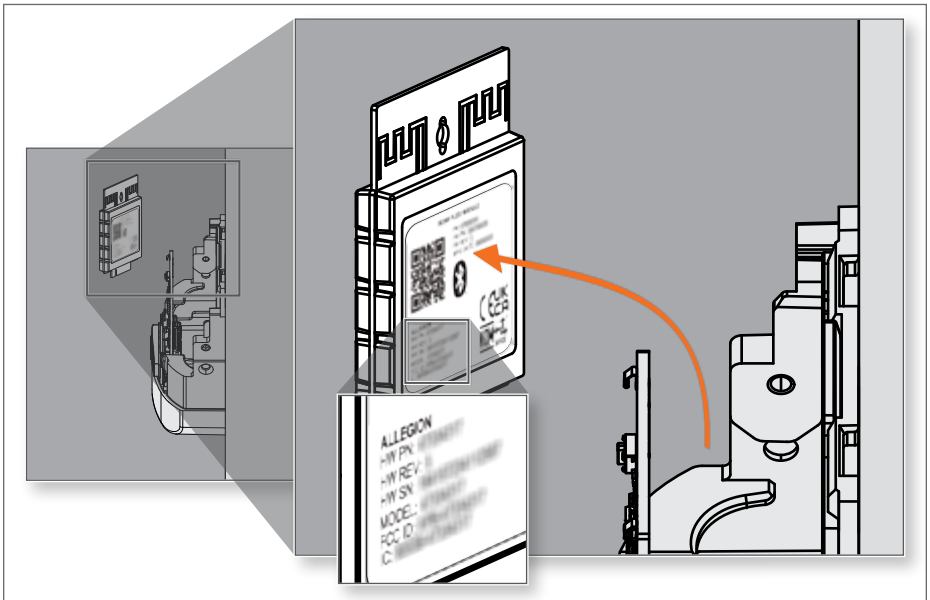


Figure 3.2: FleX Module label location, exit trim models

XE360™ Models Utilizing Devices With Modular Listings

➔ **Note:** XX represents the Exit Device Configuration

Product Model Description	Product Model
Mortise Dead Latch Lock With Integrated Button, BLE, Smart Reader	XE360 M.OF.B.SM
Mortise Dead Latch Lock With Integrated Button, BLE & Wi-Fi, Smart Reader	XE360 M.WF.B.SM
Mortise Dead Latch Lock With Indicator, BLE, Smart Reader	XE360 M.OF.I.SM
Mortise Dead Latch Lock With Indicator, BLE & Wi-Fi, Smart Reader	XE360 M.WF.I.SM
Mortise Dead Bolt Lock With Thumbturn, BLE, Smart Reader	XE360 M.OF.D.SM
Mortise Dead Bolt Lock With Thumbturn, BLE & Wi-Fi, Smart Reader	XE360 M.WF.D.SM
Tubular Lock With Integrated Button, BLE, Smart Reader	XE360 T.OF.B.SM
Tubular Lock With Integrated Button, BLE & Wi-Fi, Smart Reader	XE360 T.WF.B.SM
Tubular Lock With Indicator, BLE, Smart Reader	XE360 T.OF.I.SM
Tubular Lock With Indicator, BLE & Wi-Fi, Smart Reader	XE360 T.WF.I.SM
Exit Trim With Integrated Button, BLE, Smart Reader	XE360 EW.XX.OF.B.SM
Exit Trim With Integrated Button, BLE & Wi-Fi, Smart Reader	XE360 EW.XX.WF.B.SM
Exit Trim With Indicator, BLE, Smart Reader	XE360 EW.XX.OF.I.SM
Exit Trim With Indicator, BLE & Wi-Fi, Smart Reader	XE360 EW.XX.WF.I.SM

IC Statements

Industry Canada Statement

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotopically radiated power (E.I.R.P.) is not more than that necessary for successful communication.

Industry Canada Radiation Exposure Statement

This Device complies with Industry Canada License-exempt RSS standard(s). Operation is subject to the following two conditions: 1) this device may not cause interference, and 2) this device must accept any interference, including interference that may cause undesired operation of the device.

RSS-GEN

This Device complies with Industry Canada License-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference; and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

RF Radiation Exposure Statement

This equipment complies with FCC RF Radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter, other than those approved for colocated use by Allegion. This equipment should be installed and operated with a normally maintained separation distance of at least 20 cm between the radiator and your body.

NFC

The following are supported by XE360:

- Mobile credentials in Apple Wallet® on supported iPhone® and Apple Watch® models
- Mobile credentials in Google Wallet™ on supported Android™ phones and Wear OS smartwatches
- MIFARE® 2GO digital credentials[1]

1 MIFARE® and DESFire™ are registered trademarks of NXP B.V.

Credentials

Supported credential types

- MIFARE Classic® (where enabled)
- MIFARE® DESFire EV1
- MIFARE DESFire EV2[2]
- MIFARE DESFire EV3
- Apple StudentID NFC
- Android MIFARE 2Go

2 Available only on XE360-T, XE360-M, and XE360-EW

Supported credential formats

- ISO Card
- Clamshell
- Fob
- Thin Fob
- Wristband
- PVC Disk

Certifications

Tubular

Outside lever is normally locked.

Inside lever always allows egress.

UL	ULC	ANSI/BHMA	Additional certifications
UL10-C 3-hour standard UL294 7th Edition performance levels: Destructive Attack- Level I; Line Security- Level I; Endurance- Level IV; Standby Power- Level I. Door Position Sensing and Request to Exit (REX) have not been evaluated by UL and are considered supplemental. Bluetooth-based programming, remote control, or monitoring have not been evaluated by UL. Special environmental components are considered supplemental.	ULC S104 3-hour standard ULC-60839 standard	A156.2-2022 Grade 2 A156.25-2023 Locked Outdoor Type A156.5-2020	PROP 65 REACH RoHS 3 TAA CSA-C22.2-M1983 standard ADA door opening compliancy BLE SIG QDID number : 200503

Mortise

Outside lever is normally locked.

Inside lever always allows egress.

UL	ULC	ANSI/BHMA	Additional certifications
UL10-C 3-hour standard UL294 7th Edition performance levels: Destructive Attack- Level I; Line Security- Level I; Endurance- Level IV; Standby Power- Level I. Door Position Sensing and Request to Exit (REX) have not been evaluated by UL and are considered supplemental. Bluetooth-based programming, remote control, or monitoring have not been evaluated by UL. Special environmental components are considered supplemental.	ULC S104 3-hour standard ULC-60839 standard	A156.13-2022 Grade 2 A156.25-2023 Locked Outdoor Type A156.5-2020	PROP 65 REACH RoHS 3 TAA CSA-C22.2-M1983 standard ADA door opening compliancy BLE SIG QDID number : 200503

Exit Trim

Outside lever is normally locked.

Exit Trim will not interfere with the operation of Panic Hardware.

UL	ULC	ANSI/BHMA	Additional certifications
UL10-C 3-hour standard UL294 7th Edition performance levels: Destructive Attack- Level I; Line Security- Level I; Endurance- Level IV; Standby Power- Level I. Door Position Sensing and Request to Exit (REX) have not been evaluated by UL and are considered supplemental. Bluetooth-based programming, remote control, or monitoring have not been evaluated by UL. Special environmental components are considered supplemental.	ULC S104 3-hour standard ULC-60839 standard	A156.3-2020 Grade 1 A156.25-2023 Locked Outdoor Type A156.5-2020	PROP 65 REACH RoHS 3 TAA CSA-C22.2-M1983 ADA door opening compliancy BLE SIG QDID number : 200503


Introduction

The open architecture design of the XE360 allows it to be managed by an access control system, or be integrated into popular physical access control and Proptech systems through our PACS Alliance program. This enables customers to choose what best fits their requirements now and transition to another solution at any time.

Lock models


XE360-EW

Exit Device Trim

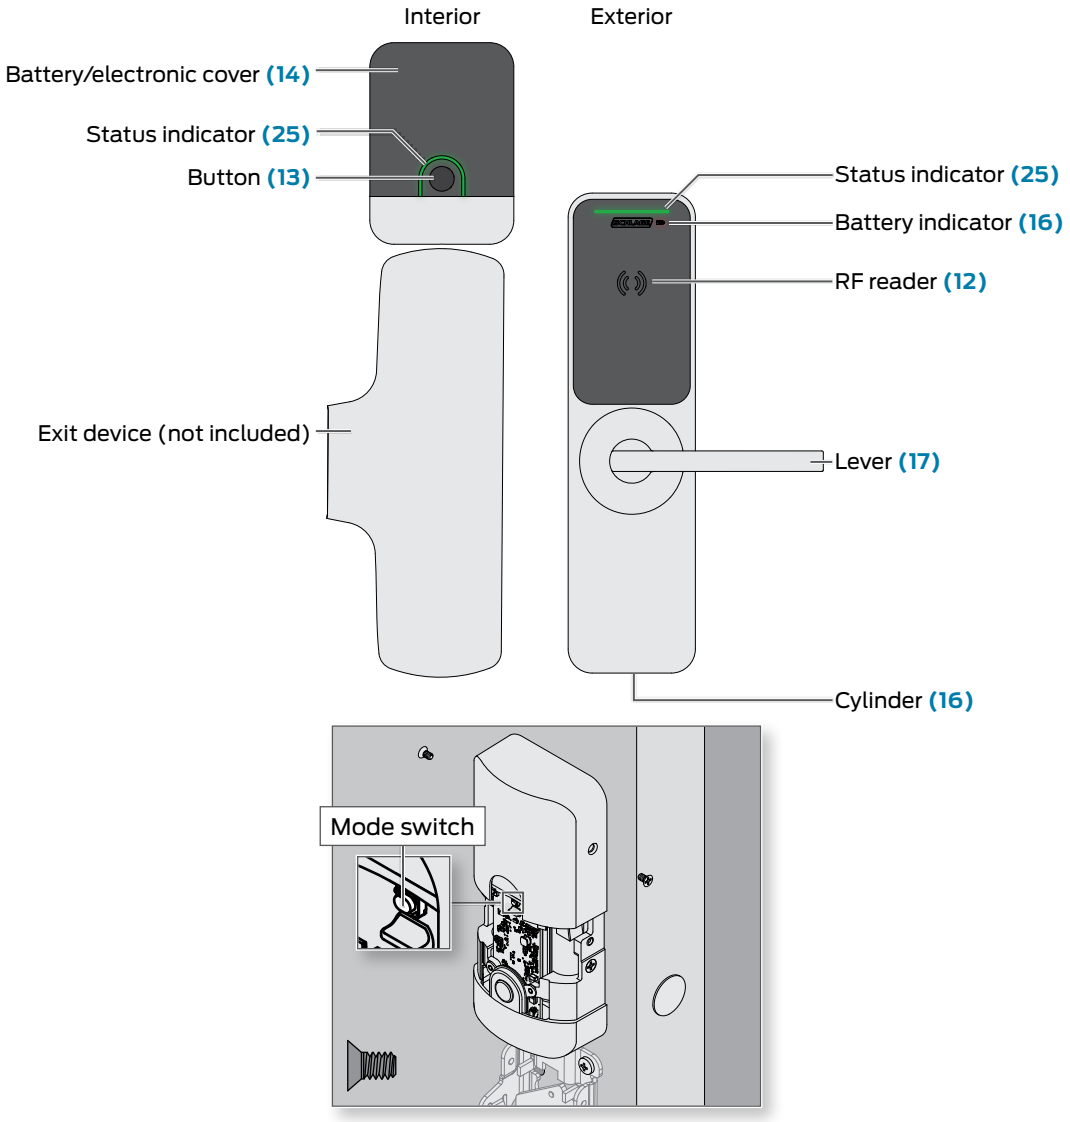


XE360-M (button or deadbolt)

Mortise and Mortise Deadbolt

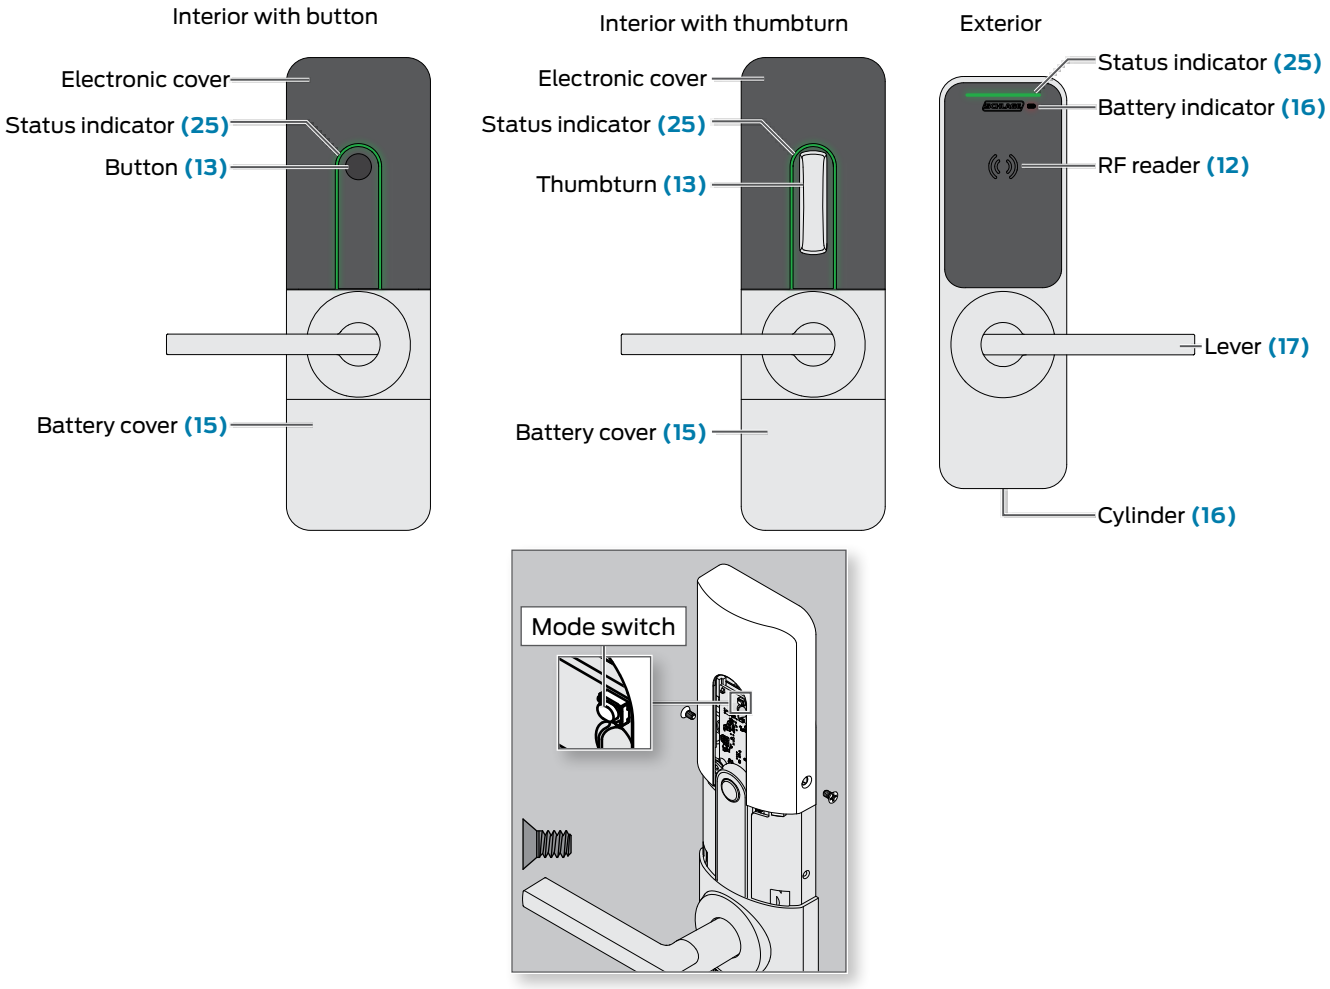

XE360-T

Tubular

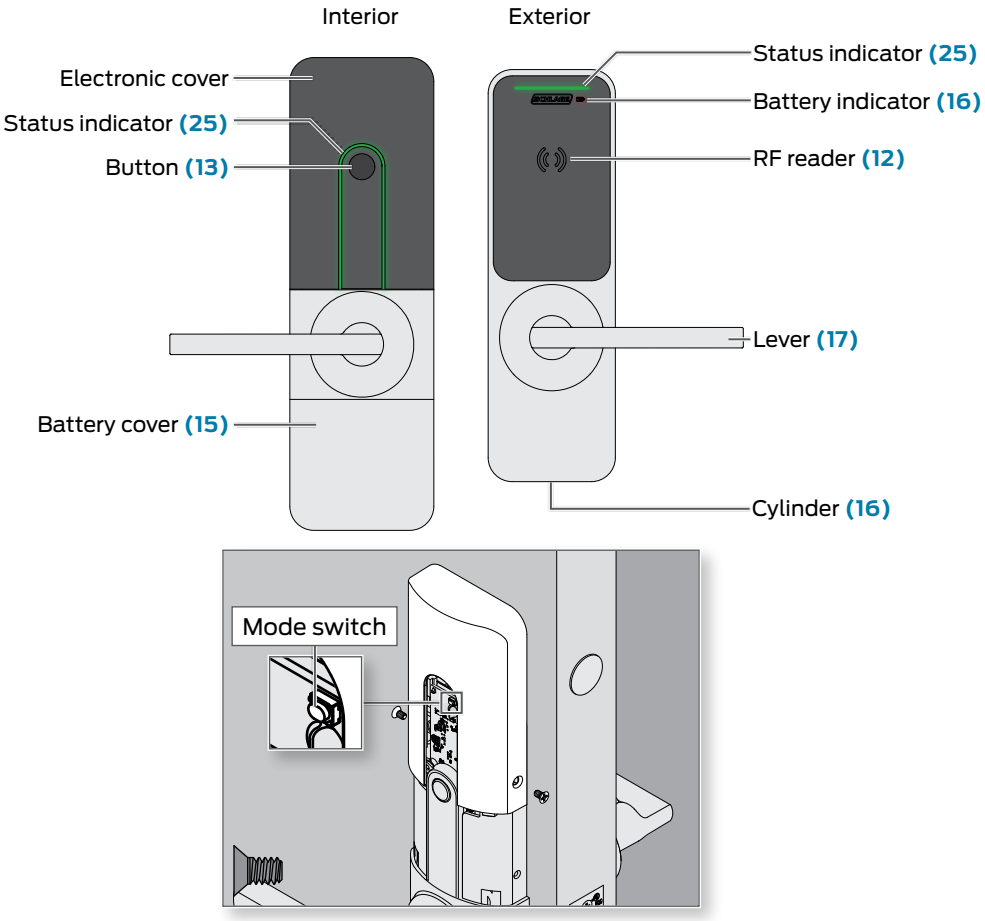


Operation

Credentials


Placement

Credentials should be placed as shown. For best results, touch the credential to the icon.

Horizontal placement

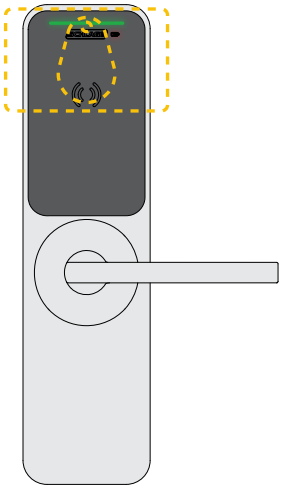


XE360-EW, XE360-T, XE360-M

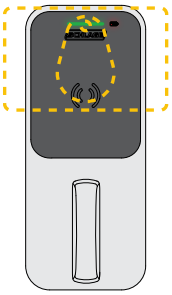

XE360-DB-MT

Vertical placement

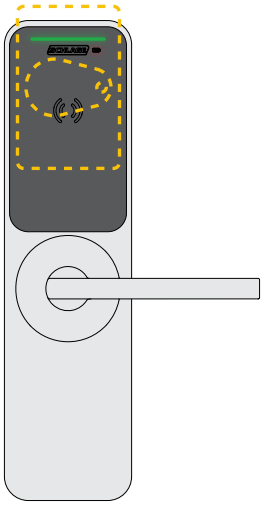

XE360-EW, XE360-T, XE360-M



XE360-DB-MT

Security

Review the Allegion Credential Security Guide.

Disabling credential technology

Credential technology that is not in use may be disabled to improve security and conserve battery life. See the **MAPP**'s documentation for more information.

⚠ CAUTION

Credentials must be controlled. Report lost or stolen credentials to the site administrator immediately.

Functionality

The XE360 Series is available with four locking functions which are adaptable in the field.

B: button, I: indicator, D: deadbolt

Function	T		M			EW		Description
	B	I	B	I	D	B	I	
Storeroom	•		•			•		Lockset is normally secure. Inside lever always allows free egress. Valid toggle credentials on the exterior may be used to change to a passage or secured status.
Office	•		•		•	•		Lockset is normally secure. Inside lever always allows free egress. Interior push button may be used to select a passage or secured status. Meets need for lockdown function for safety and security. NOTE: Valid toggle credentials on the exterior may also be used to change status.
Privacy	•		•		•	•		Lockset is normally secure. Inside lever always allows free egress. Interior push button or thumbturn may be used to select a privacy status. The interior push button will disable normal electronic access from the exterior. Opening the door, pressing the interior push button a second time, or turning the thumbturn deactivates the privacy status. Door Position Sensor (DPS) must be installed for proper functionality.
Apartment	•		•		•	•		Lockset is normally secure. Inside lever/turn always allows free egress. Inside push button or thumbturn may be used to select a passage or secured status. Opening the door, pressing the inside push button, or turning the thumbturn causes the lockset to toggle unsecured. While toggled unsecured, the lockset can only be secured while the door is closed by pressing the interior push button, turning the thumbturn, or using a normal credential on the exterior. Normal electronic access from the exterior is always allowed. Door Position Sensor (DPS) must be installed for proper functionality.

Power

Failure modes

Power failure modes are determined by the setting in the MAPP.

Failure mode	Description	Lock model			
		T	M	MD	EW
FAILSECURE (default)	**Device will always revert to secured state on loss of power.**	•	•	•	•
AS_IS	Device will remain in whichever state it was in when power was lost.	•	•	Supported except when deadbolt is manually thrown.	•
FAILPASSAGE	Device will always revert to passage state on loss of power.	•	•		•

Battery Replacement

Insert batteries as shown. Replace batteries yearly to ensure continuous operation, or as necessary after the low battery warning.


➔ **Note:** Use high quality alkaline batteries. Lithium batteries are not recommended as there is little warning before the battery voltage is too low for continued operation.

NOTICE

Power must be removed prior to FleX Module replacement or anytime the interior and exterior assemblies are disconnected from each other to avoid electrical transients and power-based faults.

XE360-EW


1. Remove the screws from the battery cover.
2. Slide the battery cover up and off.

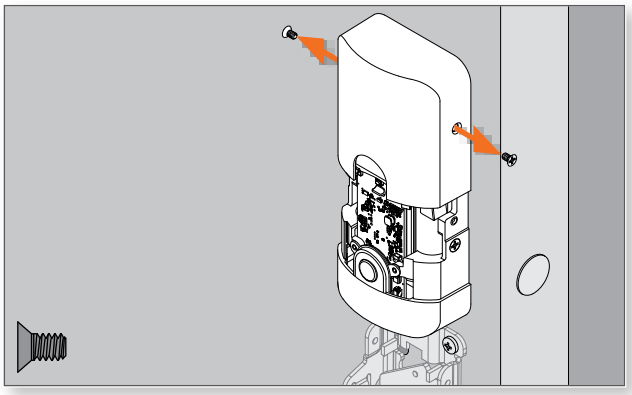

3. Slide the battery holder up and out of the lock.
4. Remove and replace the batteries.
5. Slide the battery holder back into the lock.
6. Replace the cover and screws.


   ➔ **Note:** Make sure no wires are keeping the battery holder from being fully installed into the lock.

7. After the batteries are replaced, the **initialization** status will be displayed. Best practice is to synchronize the device's internal clock with the **MAPP** by linking to the commissioned device. Audits can be obtained during the synchronization step.

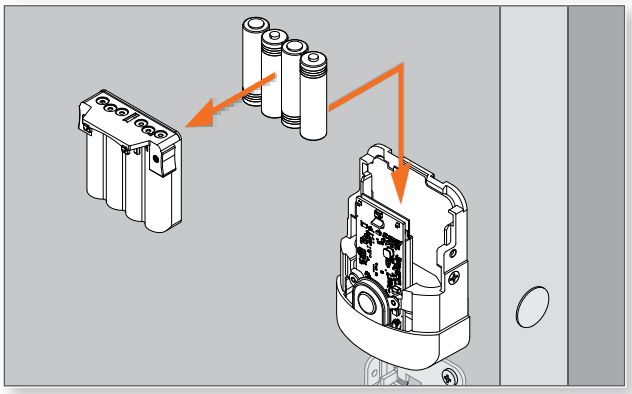


XE360-M/XE360-T

1. Loosen the screw in the bottom of the battery cover.
2. Slide the battery cover down and off. The screw will remain retained in the cover.

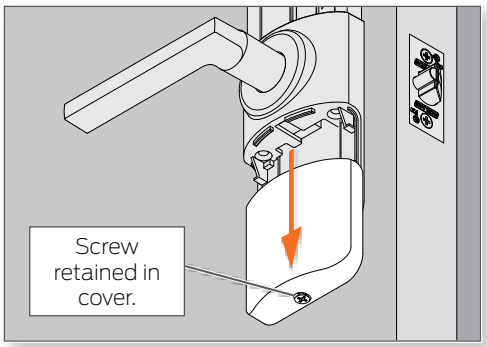

3. Remove the battery holder retainer.

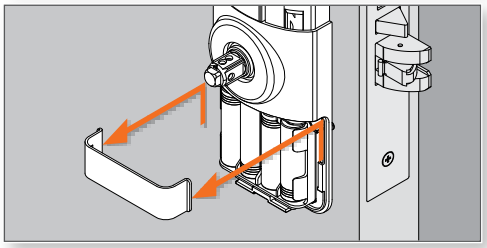


4. Remove the battery holder and disconnect the cable connector.


NOTICE

Do not pull on the lock cable. It can become disconnected from the lock body.

5. Remove and replace the batteries.
6. Reconnect the cable connector.

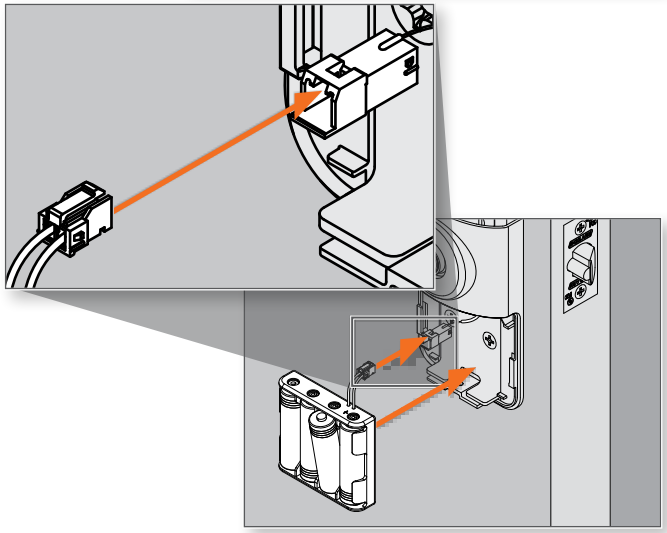

7. Tuck the cable up into the lock body so it is not crimped and the battery holder can be completely installed into the lock.
8. Replace the retainer.
9. Replace the battery cover.
10. Tighten the screw in the bottom of the battery cover.
11. After the batteries are replaced, the **initialization** status will be displayed. Best practice is to synchronize the device's internal clock with the **MAPP** by linking to the commissioned device. Audits can be obtained during the synchronization step.

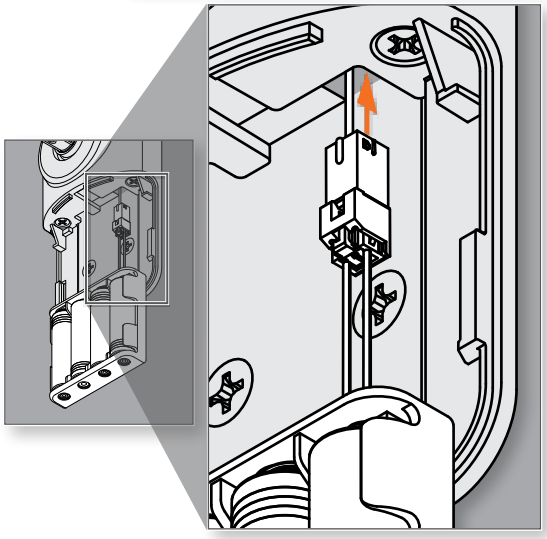

Battery failure

When the battery power becomes low, the **battery indicator** will flash amber. Replace the batteries immediately. When the battery indicator becomes red, the power is critically low and will fail. Lock power failure mode is determined by the setting in the MAPP. See **Failure modes** for more information.

Key override

➔ **Note:** Available on XE360-EW, XE360-M, XE360-T only.

When the battery completely fails, or during any emergency, the lock can be unlocked manually using the key.


1. Insert key into cylinder.
2. Rotate key to unlock.
3. Rotate the lever to retract the latch.

   ➔ **Note:** The key cannot be removed while the lock is unlocked.

4. Rotate the key back to the locked position.
5. Remove the key from the cylinder.

⚠ CAUTION

DO NOT leave the key in the cylinder.

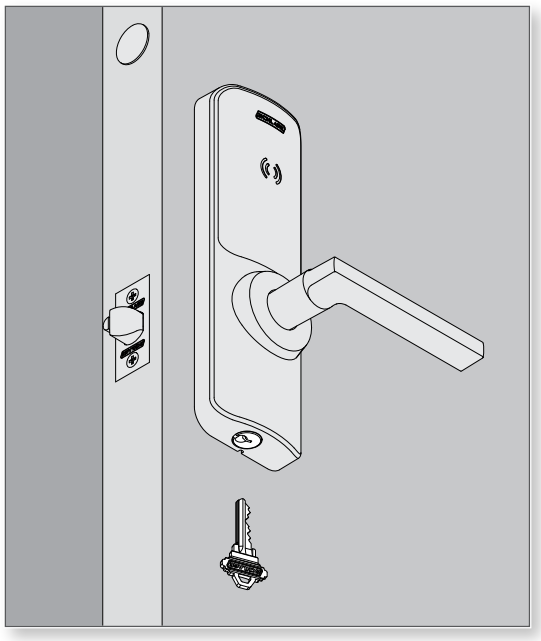

Commissioning

Commissioning is the process of adding the lock into the access control system. Once commissioned, the lock(s) can be controlled using the access control system.

Steps	Wait for indicators	
	Lights	Beeps
1. Power the lock. The **intialization sequence** will begin.	blue	1
2. The lock will advertise for 120 seconds. If the lock times out before commissioning is started: • XE360-M/T: turn and release the interior lever one time. • XE360-EW: press and release the device bar one time.	—	—
3. Open the **MAPP** and follow the steps to connect the lock.	blinking blue	—
4. Commission completes. The lock will be displayed in the **MAPP**.	—	—
5. Once the sequence is complete, the lock will disconnect. The lock will now operate in normal mode.	—	—

General maintenance and security

Yearly maintenance should be performed to keep the lock in optimal condition. Follow these guidelines to optimize security.


1. Replace batteries.

   ➔ **Note:** See **Power**.

   a. Check for battery leakage.

   ➔ **Note:** Contact **Customer service** for guidance if battery leakage is observed.

2. Tighten the lever set screws (~15 in-lb/2 Nm) on the levers until they are recessed.

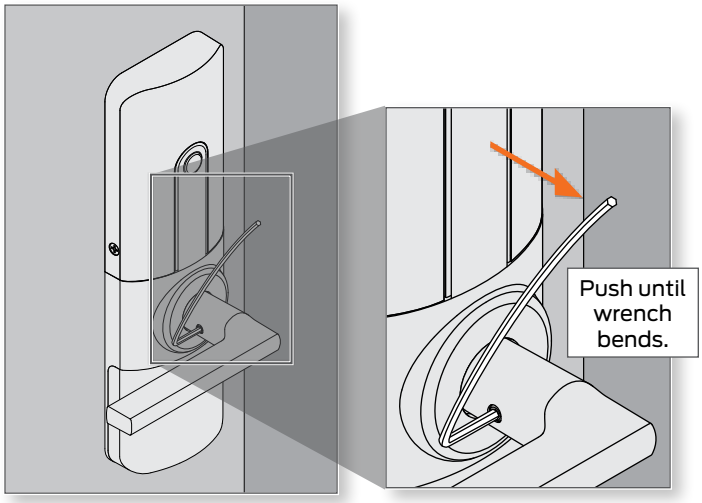

NOTICE

Hand tighten only. Do not overtighten lever set screws. This will cause permanent damage and prevent tightening.

Repeated lever removal may lead to failure of set screws.

⚠ CAUTION

Tighten lever set screws until they are recessed to prevent levers from being pulled off during operation.

3. Inspect the lock for damage or evidence of tampering.
4. Ensure the latest **Firmware update** has been applied.
5. Never leave a key in the **Key override**.
6. Always replace covers after maintenance. See **Lock models** for more information.
7. Use security fasteners to install locks where necessary.
8. When moving the lock to a new door, perform **Factory default reset (FDR)**.
9. Review audits and use alerts from the **MAPP** to protect against tampering.

Lock modes

Normal mode

The lock will operate normally, as prescribed via the **MAPP** and the access control system. See **Normal operation** for more.

Multifamily construction mode

When in multi-family construction mode, the lock may be unlocked by presenting any credential with the same 48X-type and facility code.

Steps	Wait for indicators		Action
	Lights	Beeps	
1. While the lock is in **Factory default reset (FDR)**, present a 48X-type credential with a valid facility code, to the lock.	5 green	1	Lock unlocked.
2. The lock will now operate in multi-family construction mode. Present any 48X-type credential with the same facility code as above to operate the lock.	—	—	—

Commercial construction mode

When in commercial construction mode, the lock may be unlocked by presenting a registered credential.

Steps	Wait for indicators		Action
	Lights	Beeps	
1. Register a master credential. ➔ **Note:** While the lock is in **Factory default reset mode (FDR)**, press and hold the mode/REX switch and present a card within five (5) seconds.	5 green	1	Master credential registration successful.
2. Present the master credential.	solid green	1	
3. Within 20 seconds, present another credential to add as a user credential.	5 green	1	User credential registration successful.
4. Present user credential to operate the lock.	—	—	—

Factory default reset mode (FDR)

See **Factory default reset (FDR)** for more information.

Firmware update

Firmware updates are completed using the mobile application (**MAPP**). For online locks, firmware updates may occur over-the-air, which is managed by the specific MAPP and access control system.

➔ **Note:** Device must first be powered on and in commissioned state.

Steps	Wait for indicators	
	Lights	**Beeps**
1. Sign into the MAPP.	—	—
2. Using the MAPP, select and connect to the device from the list of locks.	blinking blue	—
3. Select the device from the list of locks		—
4. Choose the firmware update option. Follow the prompts in the MAPP to complete the update process. ➔ **Note:** If no update is needed, it will be unavailable.		—
5. After the download completes, the firmware update will begin.	alternating red/green	—
6. Wait for the update to complete.	3 green	3
7. Once the update is complete, verify the firmware version in the MAPP. Retrieve audits to verify that all modules were updated successfully.	blinking blue	—

FleX Module™ replacement

IMPORTANT NOTES

Prior to replacing the FleX Module:

1. Verify the lock model.
   - See **Lock models** and **Product Model Description**. The lock model may also be identified in the **MAPP**.
2. Note the current serial number.
   - The serial number can be found in the MAPP. Before replacement, the mechanical serial number and the FleX Module serial number will match, but they will be different after replacement. After replacement, the MAPP will show the serial number for the new FleX Module only.
   - The mechanical serial number can be found on the inside of the interior lock assembly. Retain this serial number for mechanical warranty purposes.

Replacement troubleshooting:

If **Initialization success** (three (3) green lights) is not obsevered when power is re-applied, remove power, check to make sure the FleX Module is fully seated in the slot, and try again.

Interactive instructions

View interactive instructions in our **online portal**.

Tubular and Mortise models

1. Delete the lock from the access control system.


   ➔ **Note:** See the access control system documentation for more information.

2. Remove the **electronic cover**.
3. Perform **Factory default reset (FDR)** on the lock. Then, within 10 seconds, perform another FDR.
4. Remove **power** from the lock.

NOTICE

Power must be removed prior to FleX Module replacement to avoid electrical transients and power-based faults.

5. Release the retention key by turning to the vertical position.
6. Remove the retention key and the top bracket.
7. Pull the FleX Module up to remove.

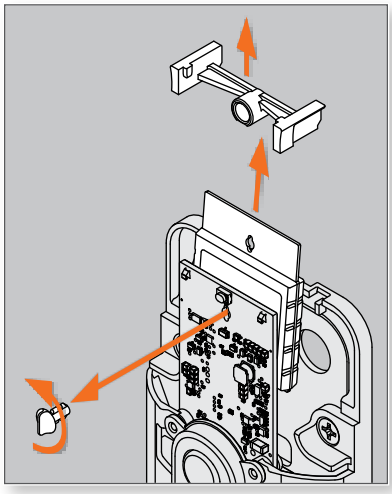


8. Install the new FleX Module. The module will fit only one way, with the label facing the door.

NOTICE



HANDLE BY SIDES ONLY. DO NOT TOUCH THE CONTACTS.

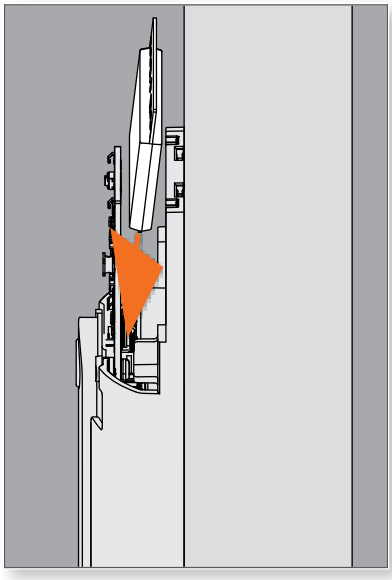

9. Install the **new** retention key vertically, then rotate to horizontal to lock into place. Install the **new** bracket.
10. Replace **power**.
11. **Commission** the lock.
12. Set up the Wi-Fi connection via the MAPP.
13. Update the **firmware**.
14. Replace all covers.
15. Reassign users to the lock.

    ➔ **Note:** See the access control system documentation for more information.

Exit Models

1. Delete the lock from the access control system.


   ➔ **Note:** See the access control system documentation for more information.

2. Remove the **electronic cover**.
3. Perform **Factory default reset (FDR)** on the lock. Then, within 10 seconds, perform another FDR.
4. Remove **power** from the lock.

NOTICE

Power must be removed prior to FleX Module replacement to avoid electrical transients and power-based faults.

5. Release the retention key by turning to the vertical position.
6. Remove the retention key.
7. Pull the FleX Module up to remove.

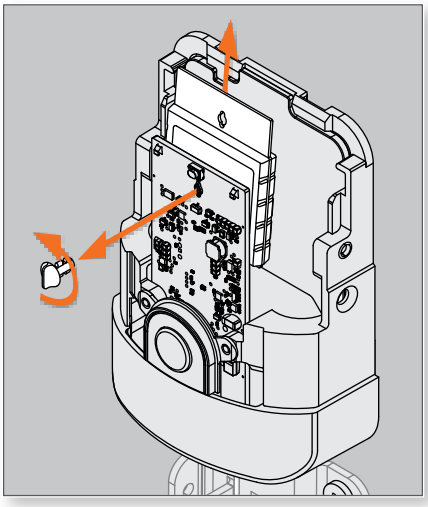


8. Install the new FleX Module. The module will fit only one way, with the label facing the door.

NOTICE



HANDLE BY SIDES ONLY. DO NOT TOUCH THE CONTACTS.

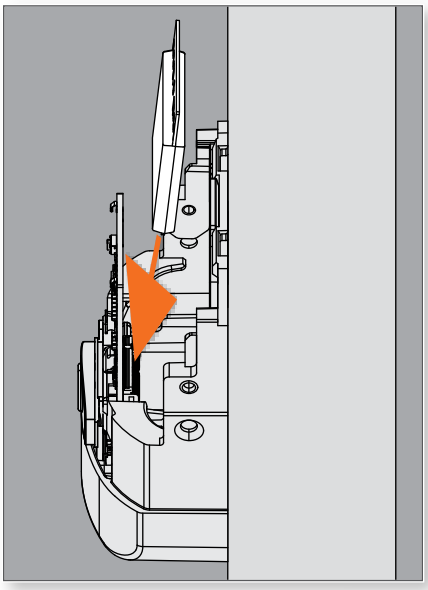

9. Install the **new** retention key vertically, then rotate to horizontal to lock into place.
10. Replace power.
11. **Commission** the lock.
12. Set up the Wi-Fi connection via the **MAPP**.
13. Update the **firmware**.
14. Replace all covers.
15. Reassign users to the lock.

    ➔ **Note:** See the access control system documentation for more information.


Rekeying

Tubular and mortise


1. Remove exterior assembly from door.

   ➔ **Note:** See alle.co/XE360 for installation instructions.


2. Remove three (3) screws from the bottom plate.
3. Tip the bottom plate out and down to remove.

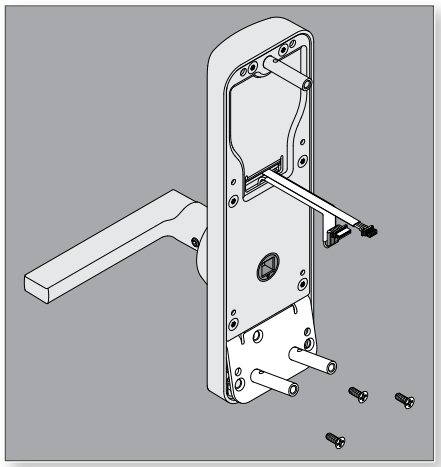

4. Remove the cylinder retainer.

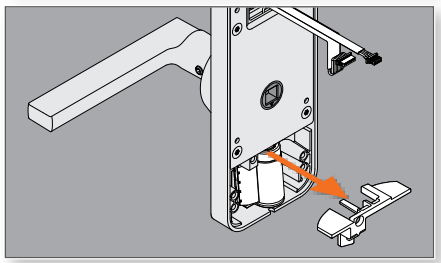


5. Push up on the cylinder through the cylinder hole and then tip the cylinder out to remove.
6. Rekey or replace the cylinder as usual.
7. Reinstall the cylinder retainer.
8. Reinstall the bottom plate.

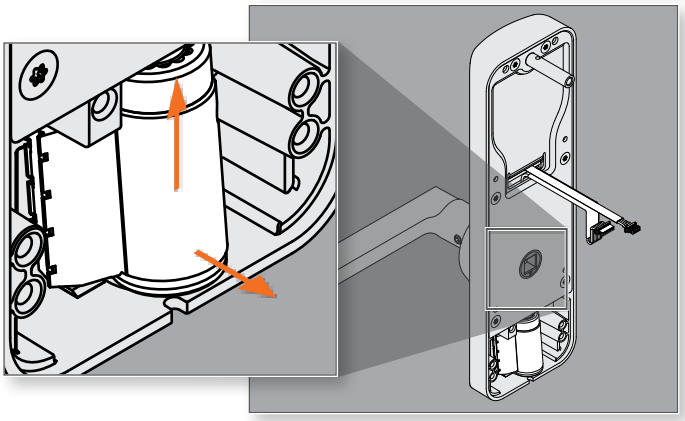

9. Test the new cylinder and key to ensure new cylinder was installed properly.

   ➔ **Note:** Hub should not rotate until cylinder is rotated to unlocked position. Once unlocked, hub should rotate with lever turn. Key cannot be removed while in unlocked position.

10. Reverse the steps to reinstall the assembly.

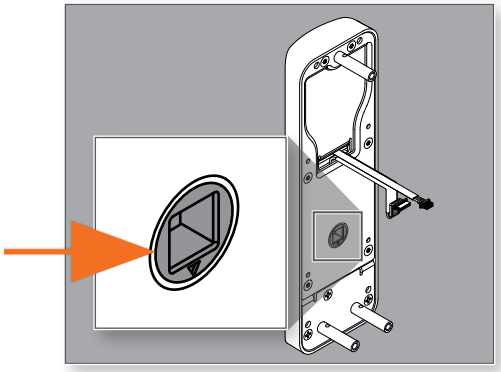


Exits


1. Remove exterior assembly from door.

   ➔ **Note:** See alle.co/XE360 for installation instructions.

2. Remove eight (8) screws.
3. Remove the backplate and spindle.
4. Remove three (3) screws from the bottom plate.
5. Tip the bottom plate out and down to remove.

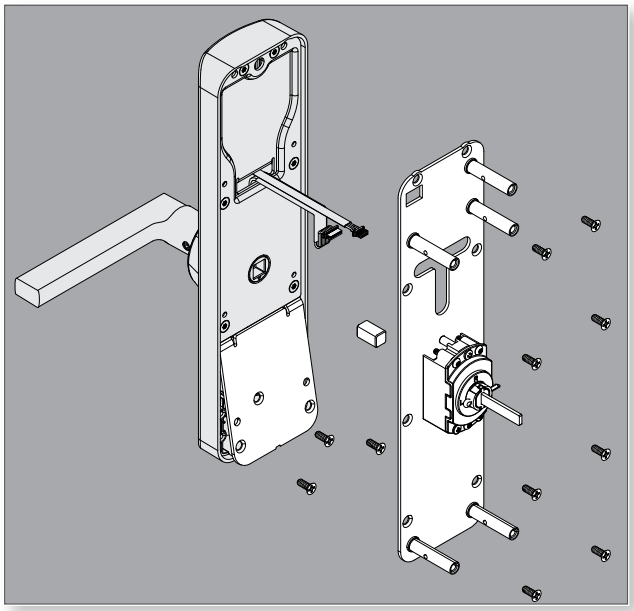

6. Remove the cylinder retainer.
7. Push up on the cylinder through the cylinder hole and then tip the cylinder out to remove.
8. Rekey or replace the cylinder as usual.
9. Reinstall the cylinder retainer.
10. Reinstall the bottom plate.

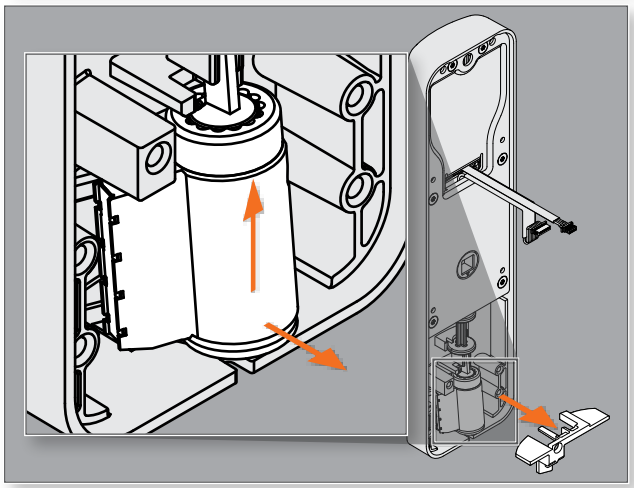


11. Test the new cylinder and key to ensure new cylinder was installed properly.

    ➔ **Note:** Hub should not rotate until cylinder is rotated to unlocked position. Once unlocked, hub should rotate with lever turn. Key cannot be removed while in unlocked position.

12. Reverse the steps to reinstall the assembly.

    ➔ **Note:** Ensure wiring is routed correctly for your installation. See alle.co/XE360 for installation instructions.

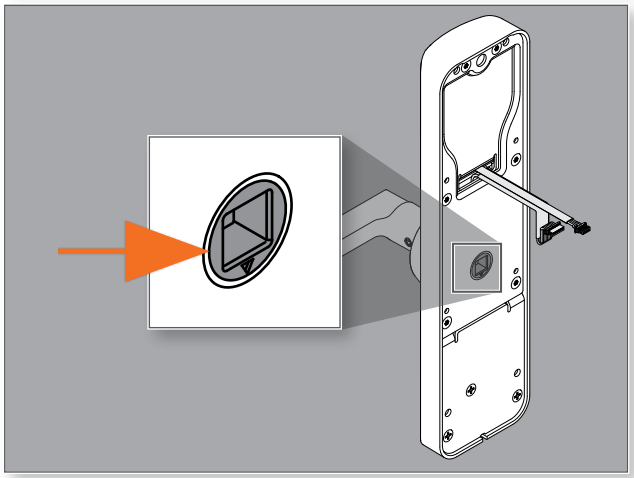

Diagnostics

Indicators

Process	Wait for indicators		Function	Device Action
	Lights	Beeps		
Initialization	3 green	3	Initialization success	—
	3 red	–	Initialization failure	—
Normal operation	1 green	1	Valid credential presented	—
	2 red	1	Invalid credential presented	—
	1 red	–	Relock	Secures clutch
	4 red	1	out of time zone	Office, storeroom, privacy, apartment
	–	–	Unlock with button	Unsecure clutch
	–	–	Lock with button	Secures clutch
	5 amber	–	Low battery	Normal functionality and delayed access control. See **Battery failure**.
	5 red	–	Critical battery	
Normal manual operation, mortise deadbolt	–	–	Unlock	User rotates thumbturn to vertical position
	–	–	Lock	User rotates thumbturn to horizontal position
FDR	2 green short	2 short	Entry successful	—
	2 red long	2 long	Entered successful but failed to start	—
	–	–	In process	—
	1 green long	1 long	Completed successfully	—
	2 red long	2 long	Complete but failed	—
	solid blue after POST completion	1	Ready for commissioning	—
	blue extinguished	–	Commissioning window timeout	1 Interior lever turn/bar press
	2 blue fast	2	DPS open to closed transition	—
	1 blue fast	1	DPS closed to open transition	—
	1 amber fast	1	REX open to closed transition	Also starts BLE advertising after release
	solid blue after REX/mode switch release	1	Ready for commissioning	—
Construction mode	5 green fast	1	Master credential created	—
	5 green fast	1	User credential created	—
	solid green until timeout	—	Waiting for user credential to be presented	—
	2 red long	—	Construction mode timeout	—
Battery failure	Battery indicator amber	—	Low battery	—
	Battery indicator red	—	Critically low battery	—

Process	Wait for indicators		Function	Device Action
	Lights	Beeps		
Wi-Fi Connected (online locks only)	Flashing purple		MAPP connected through BLE, and Wi-Fi connected while in BLE Proxy	—

Factory default reset (FDR)

Factory Default Reset (FDR) will return the device to the original, factory settings. Factory Default Reset (FDR) can be entered from any mode. The FDR event removes configurations, user and schedule databases, and requires the lock to re-commissioned. The FDR event does not remove a device from the **MAPP** site.

➔ **Note:** If there is a timeout or a failure during this process, 2 (two) red lights will light and 2 beeps will sound.

Steps	Wait for indicators	
	Lights	Beeps
1. Remove the **electronic cover**.	—	—
2. Press and hold the **mode switch** for five (5) seconds.	2 green	2
3. Rotate and release the interior lever or depress exit device three (3) times within 20 seconds of FDR requence.	1 red for each turn/ press	1 for each turn/press
4. FDR in process.	solid red	–
5. FDR completes.	1 green	1
6. Replace the electronic cover.	—	—

Door position switch (DPS)

To ensure the DPS is working properly, follow these diagnostic steps:

➔ **Note:** The lock must be in FDR mode before performing these steps. See **Diagnostics** if lock is not responding as described.

Steps	Wait for indicators	
	Lights	Beeps
1. Power lock and wait for the steady blue light.	blue	—
2. Rotate and release the lever to stop the lock from advertising.	—	—
3. Open the door.	1 blue	1
4. Close the door.	2 blue	2

Request for exit (REX)

To ensure the REX is working properly, follow these diagnostic steps:

➔ **Note:** The lock must be in FDR mode before performing these steps. See **Diagnostics** if lock is not responding as described.

Steps	Wait for indicators	
	Lights	**Beeps**
1. Power lock and wait for the steady blue light.	blue	—
2. Rotate and release the lever to stop the lock from advertising.	—	—
3. Rotate the lever.	1 amber	1
4. Release the lever.	solid blue	1

Glossary

Access Control System	A system that controls physical access via software and electronic credentials. See our PACS Alliance program for more.
Advertising	The lock state in which the lock is sending out a Bluetooth signal so that it may be commissioned. Once initiated, the lock will advertise for two (2) minutes.
BLE	Bluetooth Low Energy
Commissioning	Adding the lock into the access control system
DPS	Door position switch
FDR	Factory default reset
FDR mode	The lock state in which the lock is set to factory settings
MAPP	Mobile application. This is the application used to control access to the lock, or to commission a lock into an access control system..
POST	power on self test
REX	Request for exit

Lock properties

The following are the properties that are stored in the lock and can be called by any partner access control application.

Lock properties		
Property	**Description**	**Values (default)**
bleCredEnabled	Enables Bluetooth Low Energy credential access	(true) false
bleCredPerformance	BLE credential performance mode	0 = low (1) = normal 2 = high
bleCredRange	BLE credential range setting	integer distance levels (0)
blockConstructionMode	Prevents locking during construction mode	true (false)
deadboltState	Deadbolt position/state (device-specific enum)	integer enum (2)
doubleTapEnabled	Enables double-tap unlock feature	true (false)
enableIntLockBlink	Internal lock LED blink setting	0 (1)
extendedDelay	Delay before locking (seconds)	integer seconds (30)
keyOverrideEventEnabled	Enables event logging for key override	(true) false
lockState	Current lock state (device-specific enum)	integer enum (2)
lockingMode	Locking mode configuration (device-specific enum)	integer enum (2)
powerFailLockMode	Lock mode when power fails	0 = unlock (1) = lock
relockDelay	Delay before relocking (seconds)	integer seconds (3)
rexEventEnabled	Request-to-exit event logging enabled	(true) false
totalMotorCycles	Total motor cycle count	integer (5)
unauthUserEventEnabled	Event logging for unauthorized users	true (false)
antiPassback	Anti-passback timer/setting (milliseconds)	integer ms (1600)
noTourEnabled	Disables guard tour mode	(true) false
credDepth	Maximum stored credentials (count)	integer (750)
credentialSchedules (count)	Credential schedule entries	array of objects (downloadId)
credentials (count)	Credential records	array of objects (downloadId)
schedDepth	Maximum stored schedules (count)	integer (64)
deviceSchedDepth	Maximum stored device schedules (count)	integer (32)
deviceSchedules (count)	Device schedule entries	array of objects (downloadId)
doorClosedEventEnabled	Event logging when door closes	true (false)
doorOpened	Current door open/closed state	(true) = open false = closed

Lock properties		
Property	**Description**	**Values (default)**
doorOpenedEventEnabled	Event logging when door opens	true (false)
propDoorEventEnabled	Event logging for propped door	true (false)
proppedDoorAlertThreshold	Seconds before propped-door alert triggers	integer seconds (20)
holidaySchedDepth	Maximum stored holiday schedules (count)	integer (32)
holidaySchedules (count)	Holiday schedule entries	array of objects (downloadId)
androidHceEnabled	Enables Android Host Card Emulation NFC	(true) false
appleNfcEnabled	Enables Apple NFC credential support	(true) false
iClassCredential	iCLASS credential type setting	integer enum (1)
iso14443	ISO 14443 NFC protocol support	integer protocol level/version (2)
iso15693	ISO 15693 NFC protocol support	integer protocol level/version (1)
mf2GoEnabled	Enables MIFARE 2GO NFC credentials	(true) false
mfClassicEnabled	Enables MIFARE Classic NFC credentials	true (false)
mfDesfireEnabled	Enables MIFARE DESFire NFC credentials	(true) false
mfDesfireLightEnabled	Enables MIFARE DESFire Light NFC credentials	true (false)
nfcConfigCard	NFC configuration card enabled	(true) false
bruteForceMitEnabled	Enables brute-force mitigation	(true) false
deviceTime	Device time (Unix epoch seconds)	integer epoch (1765997381)
dstEnable	Enables daylight savings time	true (false)
dstEnd	DST end date string	string ("0001")
dstOffset	DST offset (minutes)	integer minutes (0)
dstStart	DST start date string	string ("0001")
localTime.isoDateTime	Local time in ISO 8601 format	ISO 8601 string ("2025-12-17T18:49:41.211Z")
localTime.isoDay	ISO day of week number	1 2 (3) 4 5 6 7
localTime.time	Local time (Unix epoch seconds)	integer epoch (1765997381)
timeZoneOffset	Time zone offset (minutes)	integer minutes (0)

Lock properties		
Property	**Description**	**Values (default)**
beeperSetting	Beeper sound setting	0 = off (1) = on
activeEncryption	Active Wi-Fi encryption type	0 = open (1) = WPA/WPA2
activeSsid	Current Wi-Fi SSID	string ("ORBI Canz")
appVersion	Device application firmware version	string ("2.12.0.0.3")
bootVersion	Device bootloader version	string ("2.12.0.3")
connEventsEnabled	Connection event logging enabled	true (false)
entActive	Enterprise Wi-Fi mode enabled	true (false)
entUsername	Enterprise Wi-Fi username	string (empty if none)
ipAddress	Device IP address (IPv4)	IPv4 string ("10.0.0.58")
mac	Device MAC address	MAC string ("80:c9:55:4e:64:94")
wfDiagEventFreq	Wi-Fi diagnostic event frequency (minutes)	integer minutes (720)
wfDiagEventsEnabled	Wi-Fi diagnostic events enabled	true (false)
Wi-FiEnable	Wi-Fi enabled	(true) false
Wi-FiSignalStrength	Wi-Fi signal strength (dBm)	integer dBm (negative RSSI) (-31)

Troubleshooting

To identify and replace parts, see the Service Manual or Installation Instructions at alle.co/XE360. For additional help, contact **Customer service**.

Exits	Mortise	Tubular	Problem	Cause	Solution
X	X	X	System appears to not be powered when the battery pack or battery holder are connected with fresh batteries.	Batteries not inserted correctly	Reinstall **batteries**.
X				Battery holder not fully inserted	Verify that obstructions are removed and the **battery holder** slides fully into place.
X				Battery holder damaged	Replace **battery holder**.
X				Chassis core battery terminals damaged	Replace interior assembly.
	X	X		Battery holder not connected to battery harness	Connect the **battery holder** to the wiring harness.
	X	X		Battery tray damaged	Replace **battery holder**.
	X	X		Battery harness not connected to the chassis core	Remove interior assembly and reconnect wiring harnesses.
	X	X		Damaged battery harness (wires, connectors)	Replace battery harness or interior assembly.
X	X	X		Battery voltage is critically low	Replace **batteries**.
X	X	X	Batteries become hot.	Incorrect batteries	Install correct **batteries**.
X	X	X		Batteries inserted backward	Reinstall **batteries**.
	X	X		Battery harness shorted or damaged	Replace battery harness.
X	X	X	Fails power up initialization	Reader communications not operating correctly	Remove interior assembly and reconnect wiring harnesses.
				Internal hardware/electronic failures	Replace interior assembly.
				Real time clock not operating correctly	Link the device to MAPP to synchronize internal clock (if commissioned).
				Battery voltage critically low	Replace **batteries**.
				Lock state not correct	Cycle **power**.
X	X	X	At power up, indicators on the interior but not on the exterior	Internal hardware/electronic failures	Replace interior assembly.
				Reader communications	Remove interior assembly and reconnect wiring harnesses.
				Reader cannot establish a connection with the FleX Module.	Cycle **power**.
					Remove **power**. Then disconnect and reconnect the thru-door harness. Apply power. Check MAPP for IPC failures.
					Perform **Factory default reset (FDR)** and cycle power.
X	X	X	DPS not working- when door opens	Verify the DPS functionality in FDR mode- closed to open	Remove interior assembly and reconnect **DPS** wiring harnesses. Install DPS switch and wiring harness. Install and align the DPS magnet.
X	X	X	DPS not working- when door closes	Verify the DPS functionality in FDR mode- open to closed	Remove interior assembly and reconnect **DPS** wiring harnesses. Install DPS switch and wiring harness. Install and align the DPS magnet.

Exits	Mortise	Tubular	Problem	Cause	Solution
	X	X	Lever switch (REX) not responding to lever rotation	Verify the REX functionality in FDR mode- rotated 90 degrees	Remove interior assembly and reconnect **REX** wiring harnesses.
X			Lever switch (REX) not responding to lever release	Verify the REX functionality in FDR mode- release lever	Remove interior assembly and reconnect exterior **REX** wiring harnesses.
X			Exit device switch (REX) not responding to push pad press	Verify the REX functionality in FDR mode- push exit device push pad in fully	Remove interior assembly and reconnect **REX** wiring harnesses. Verify exit device push pad switch. Verify wiring harness connections in the exit device.
X			Exit device switch (REX) not responding to push pad release	Verify the REX functionality in FDR mode- release push pad push pad	Remove interior assembly and reconnect **REX** wiring harnesses. Verify exit device push pad switch. Verify wiring harness connections in the exit device.
	X	X	Mechanical override key cylinder does not permit entry from the exterior side of the door	With key inserted and rotated, rotate exterior lever to the access control system the latch or chassis	Remove the device from the door and verify the spindles are installed.
X				With key inserted and rotated, rotate exterior lever to the access control system the exit device- pulls latch away from the strike	Remove the device from the door and verify the tailpiece actually rotates.
	X	X	Interior lever does not allow egress from the internal door side	Spindles not installed.	Remove the device from the door and verify the spindles are installed.
X	X	X	Latch is not retracting when access is granted	Motor assembly malfunction	Cycle **power**. Remove interior assembly and reconnect wiring harnesses.
				Interior spindle missing	Reinstall device correctly.
X	X	X	Advertising not starting	REX switch not functioning properly.	See **Request for exit (REX)** Remove interior assembly and reconnect rex wiring harnesses.
				Lock has already been commissioned	See **Factory default reset (FDR)**.
				FleX module is not connected properly	Reconnect **FleX Module**.
				Lock has exceeded the Advertising Time of 120 seconds	Restart Advertising. See **Commissioning**.
X	X	X	Advertising not canceling	REX switch not functioning properly.	See **Request for exit (REX)**. Remove interior assembly and reconnect rex wiring harnesses.
				FleX module is not connected properly	Reconnect **FleX Module**.
					See **Factory default reset (FDR)**.
X	X	X	Reader does not respond to credentials	Credential was placed incorrectly.	Verify placement of credential card or fob vertically or horizontally on the reader cover's symbol. See **Credentials**.
X	X	X	Reader does not respond to NFC devices (smart phone or wearable)	NFC configuration not complete.	Verify NFC configuration card has been presented to lock within first minute of power-up. See **Credentials**.

About Allegion™

At Allegion (NYSE: ALLE), we design and manufacture innovative security and access solutions that help keep people safe where they live, learn, work and connect. We're pioneering safety with our strong legacy of leading brands like CISA®, Interflex®, LCN®, Schlage®, SimonsVoss® and Von Duprin®. Our comprehensive portfolio of hardware, software and electronic solutions is sold around the world and spans residential and commercial locks, door closer and exit devices, steel doors and frames, access control and workforce productivity systems. Allegion had $3.8 billion in revenue in 2024.

For more, visit **www.allegion.com**.

CISA ■ interflex ■ LCN ■ SCHLAGE ■ SimonsVoss technologies ■ VON DUPRIN

© 2026 Allegion
115598, Rev. 08/26
www.allegion.com/us

ALLEGION™