Lock Firmware Guide

The following process applies to both BE, FE,XE360, and NDEB type locks









Important Notices

support@onequext.com

Ensure that you prioritize using cellular signal as your main method of communication to the Quext app unless under a poor service area for cellular coverage.

Important Notices

Ensure that your phone settings do not automatically lock your screen.

Android

How to Turn Off Screen Lock

- Open the Settings app on your phone.
- Tap Security or Security and Privacy. (On Samsung devices, tap Lock screen or Security and privacy first).
- Tap Screen lock or Screen lock type.
- Enter your current PIN, pattern, or password.
- Choose None to remove the lock completely, or Swipe for a basic unlock with no security.

IOS

Changing Auto-Lock Settings

- Open the Settings app on your iPhone.
- Tap on Display & Brightness.
- Scroll down and tap on Auto-Lock.
- Select Never so the screen stays on until you press the side button

Before you start

Double check you are using the
Quext IOT Admin app

❌


✅

Quext IoT

Quext IoT Admin


Before you start

Enter your email and password here

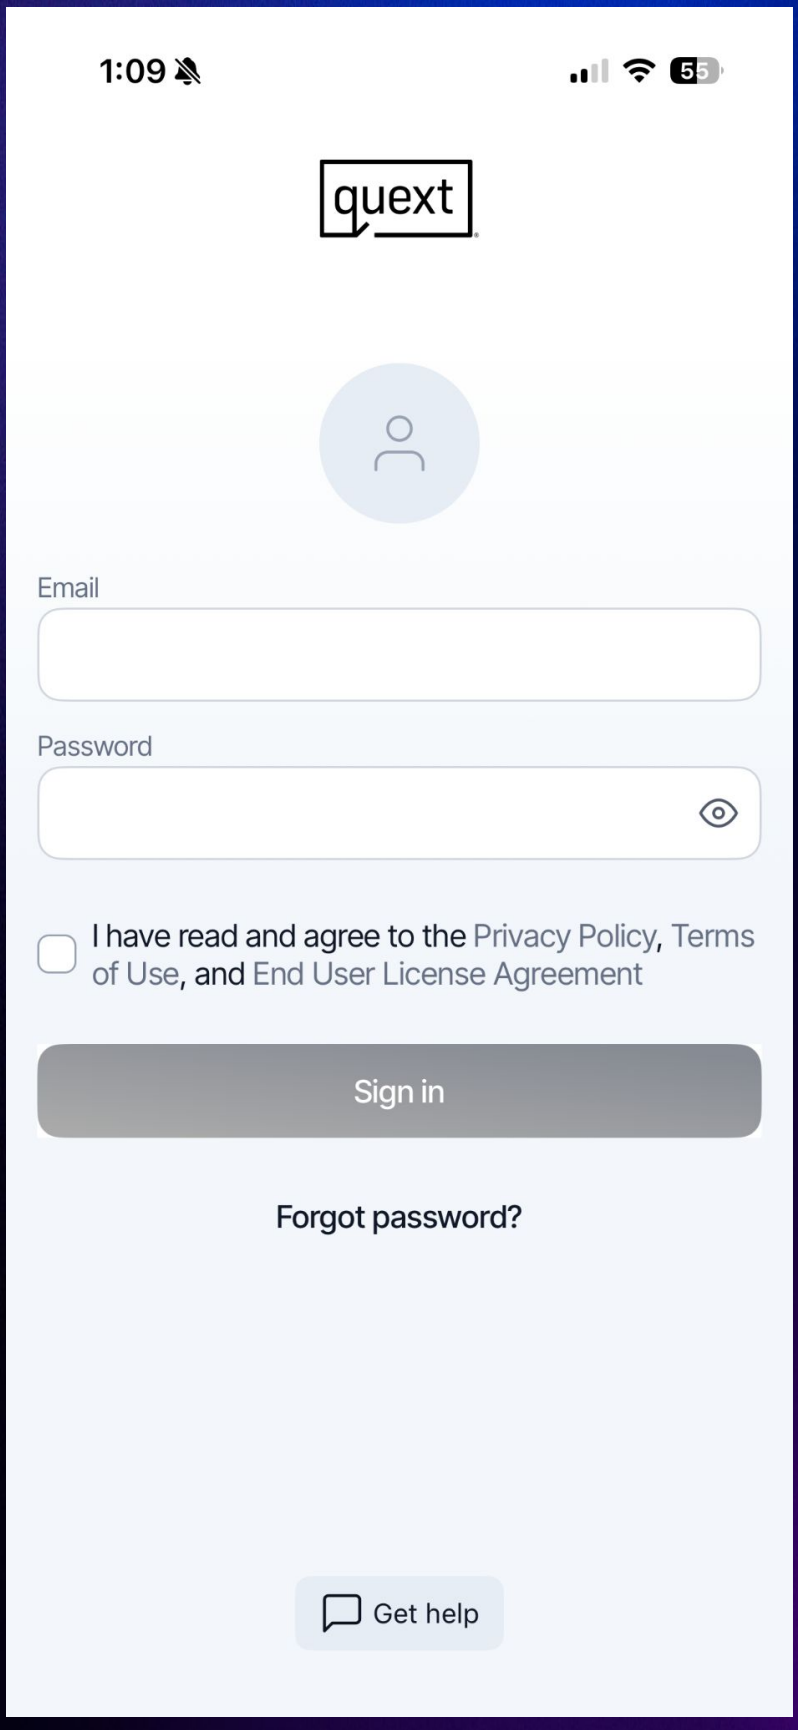


quext Updating Firmware

Once logged in tap on the service gear icon

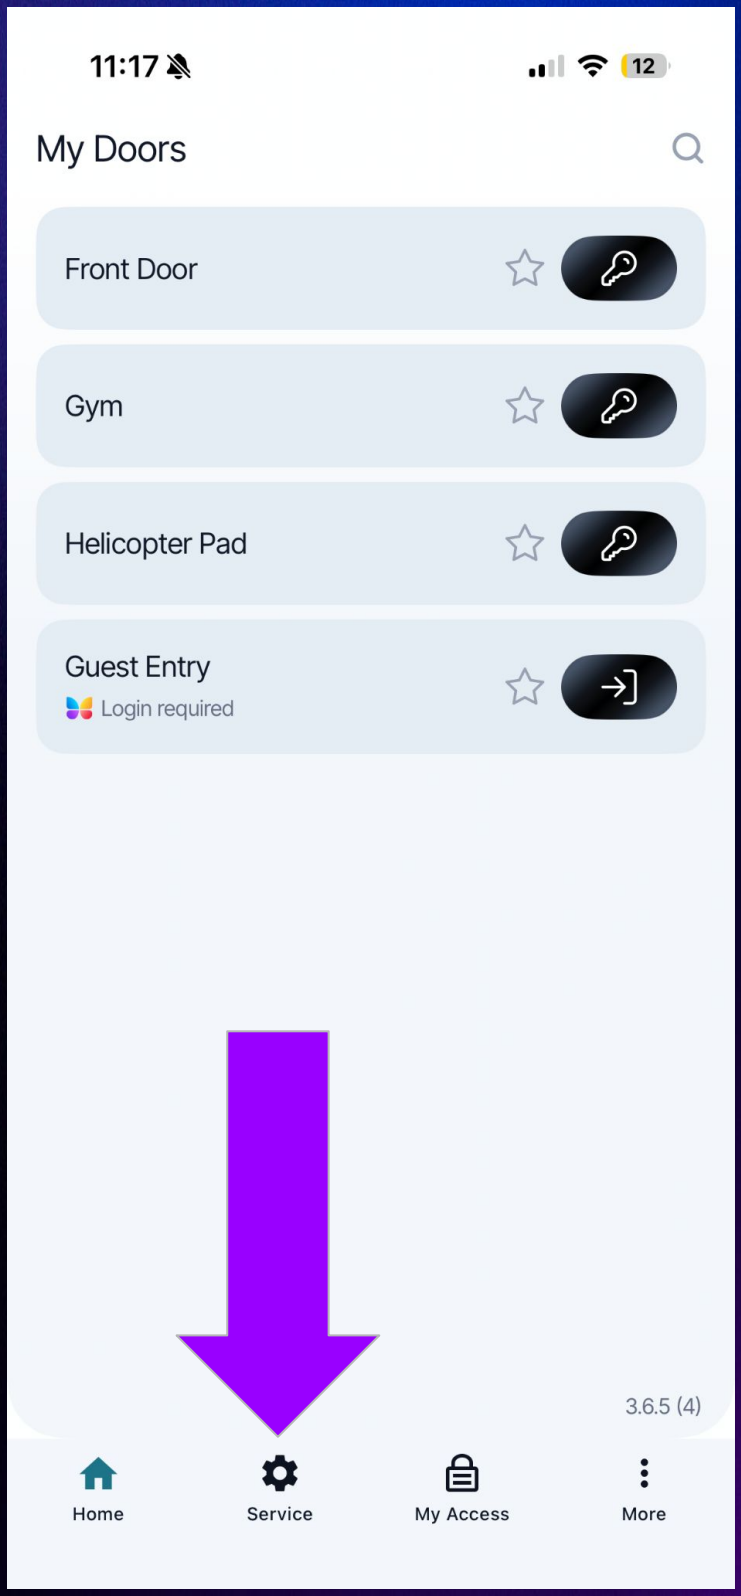


quext Updating Firmware

Select the location of your Lock.

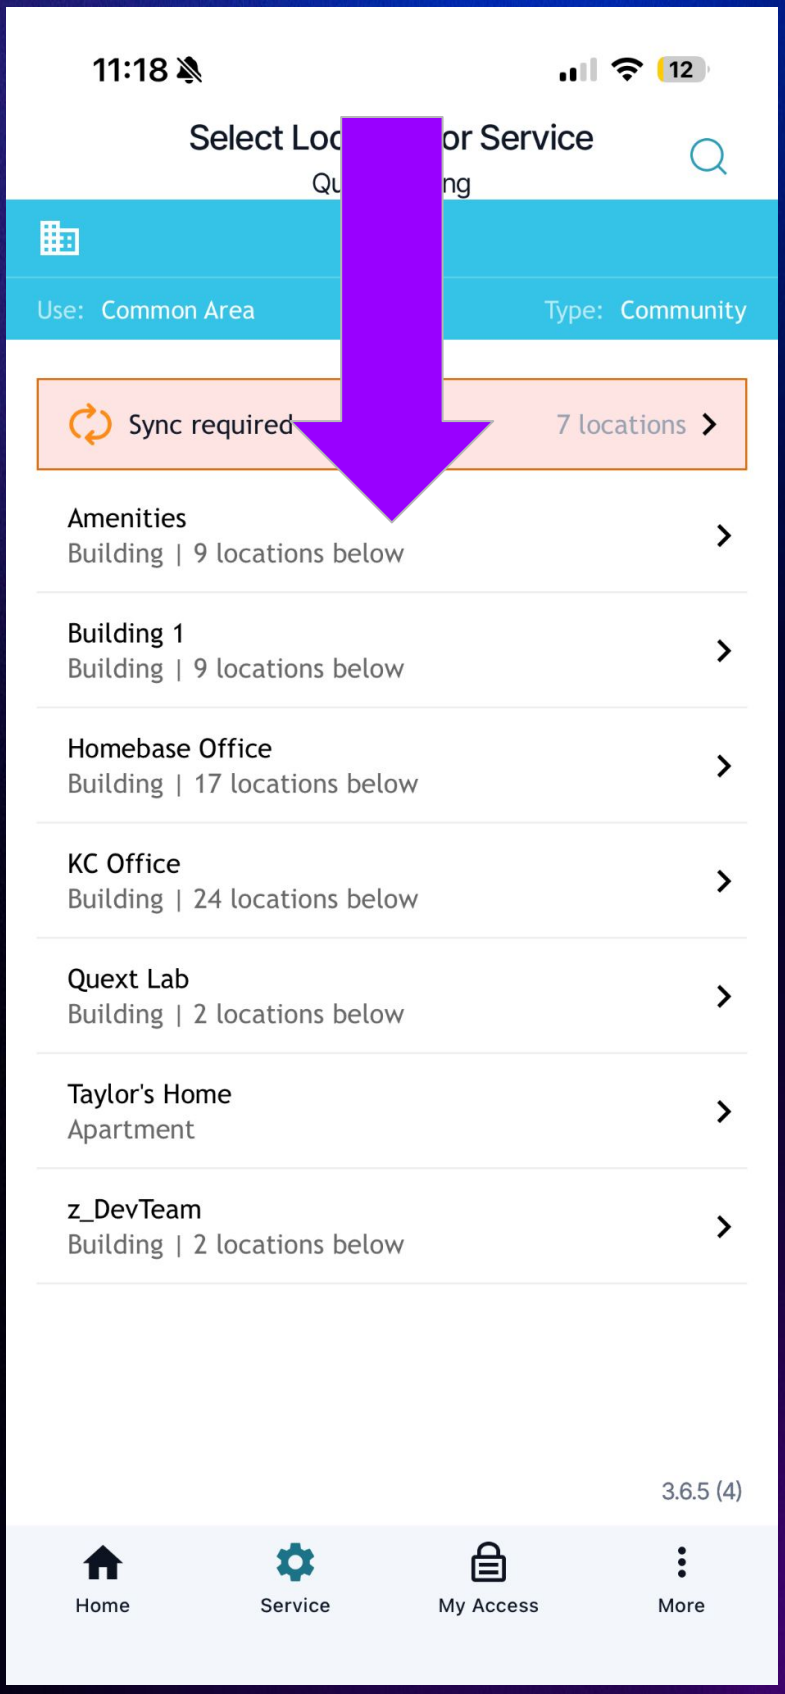


quext Updating Firmware

Select your lock then
Tap on the three dots

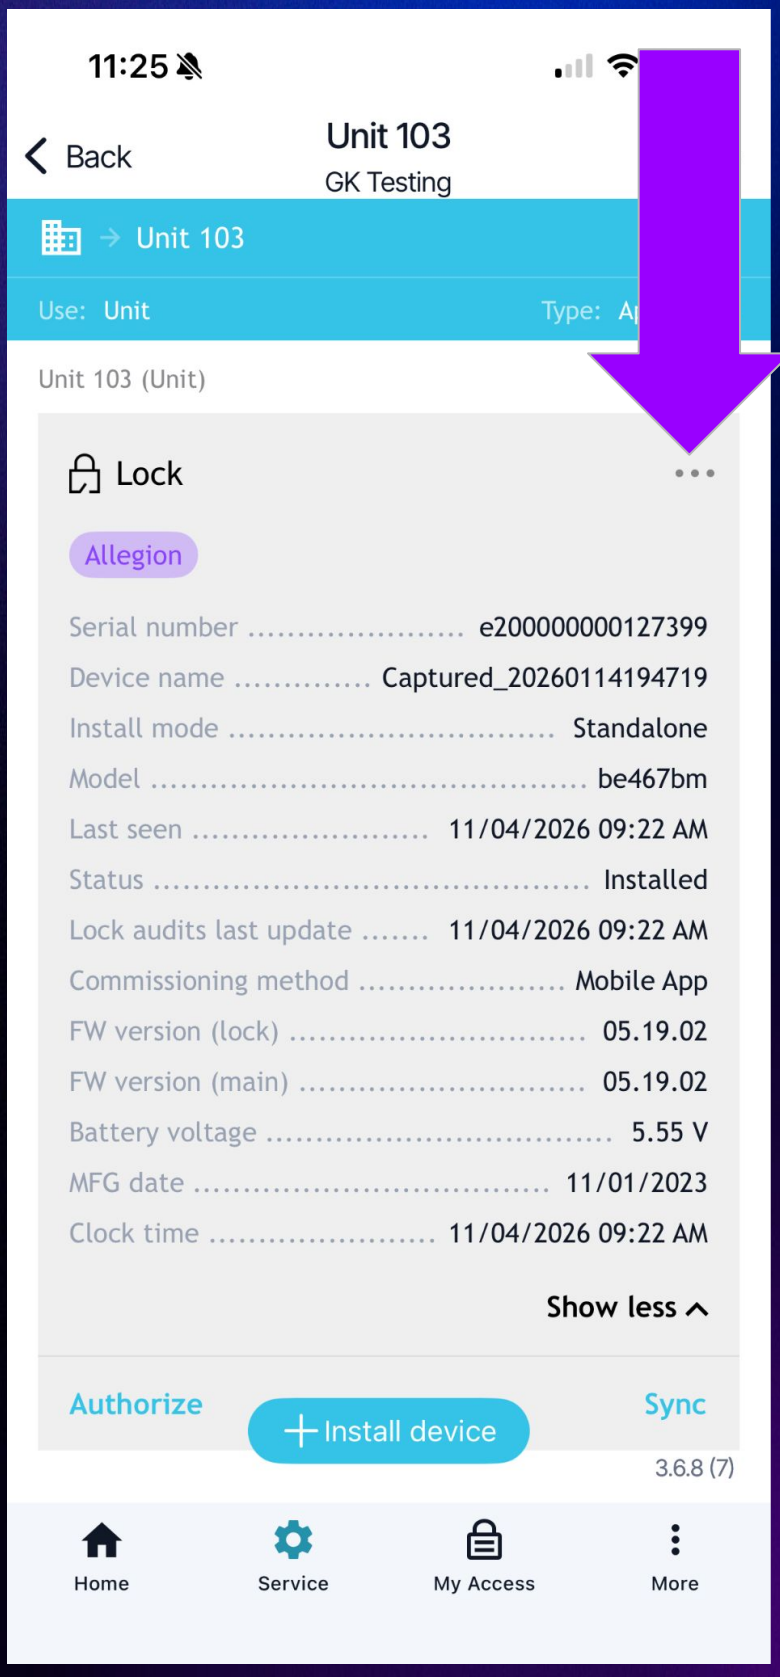


quext Updating Firmware

Select Update firmware

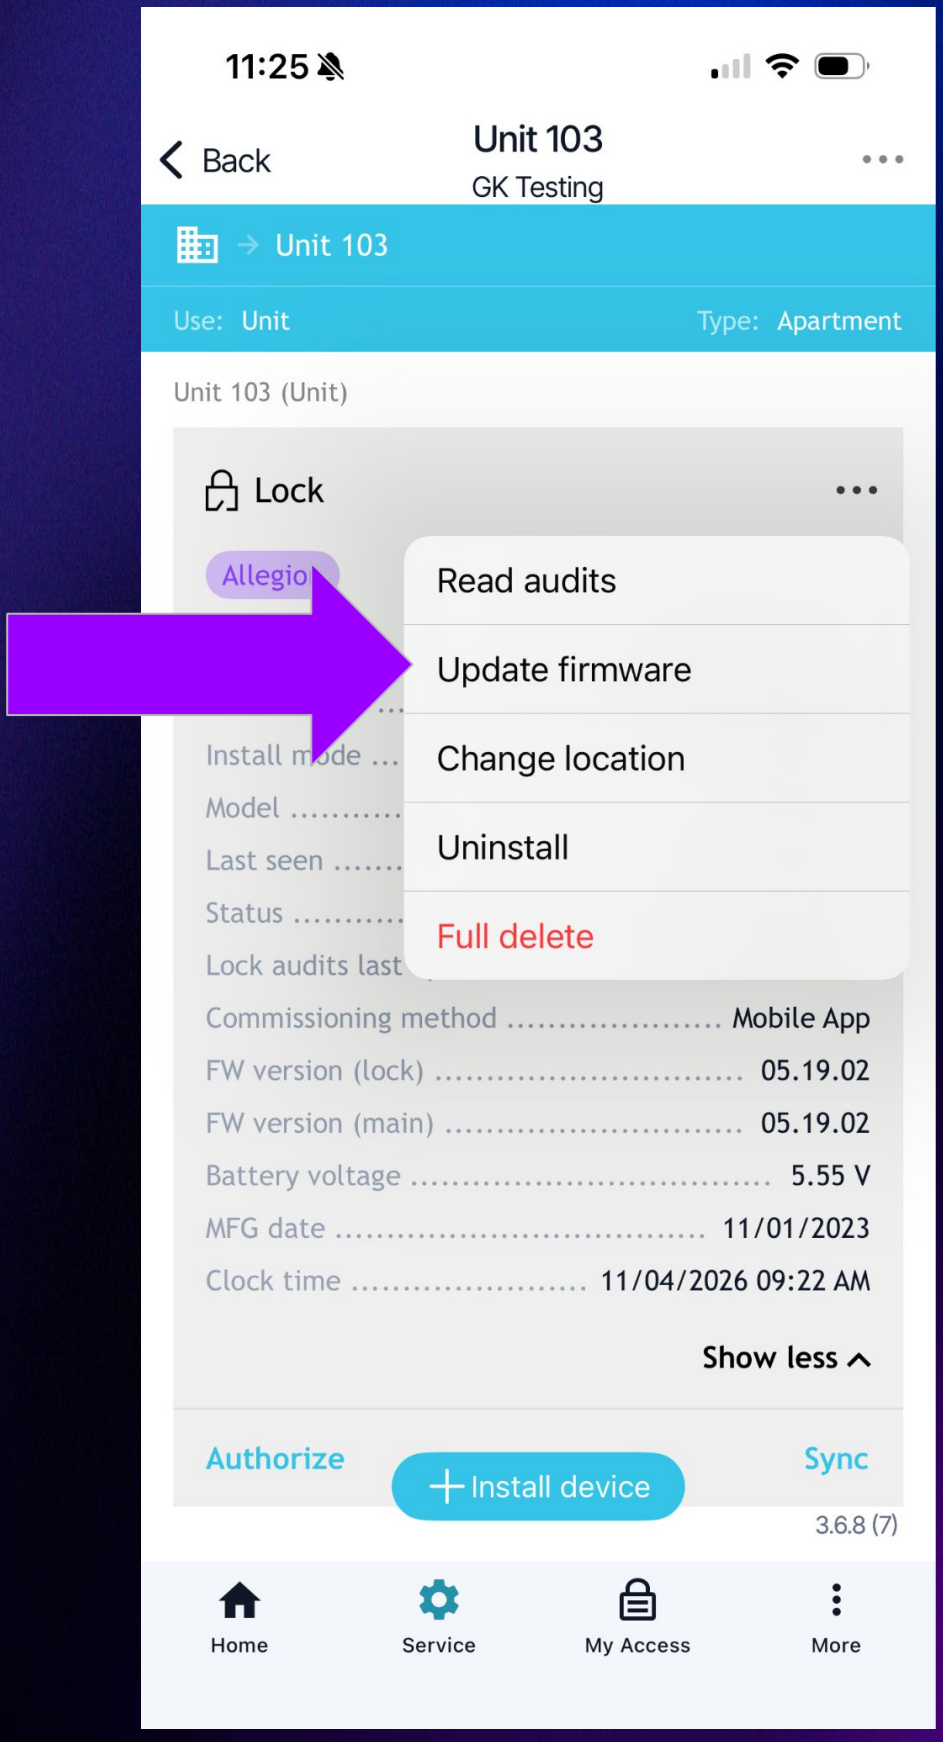


quext Updating Firmware

Tap on selected Version

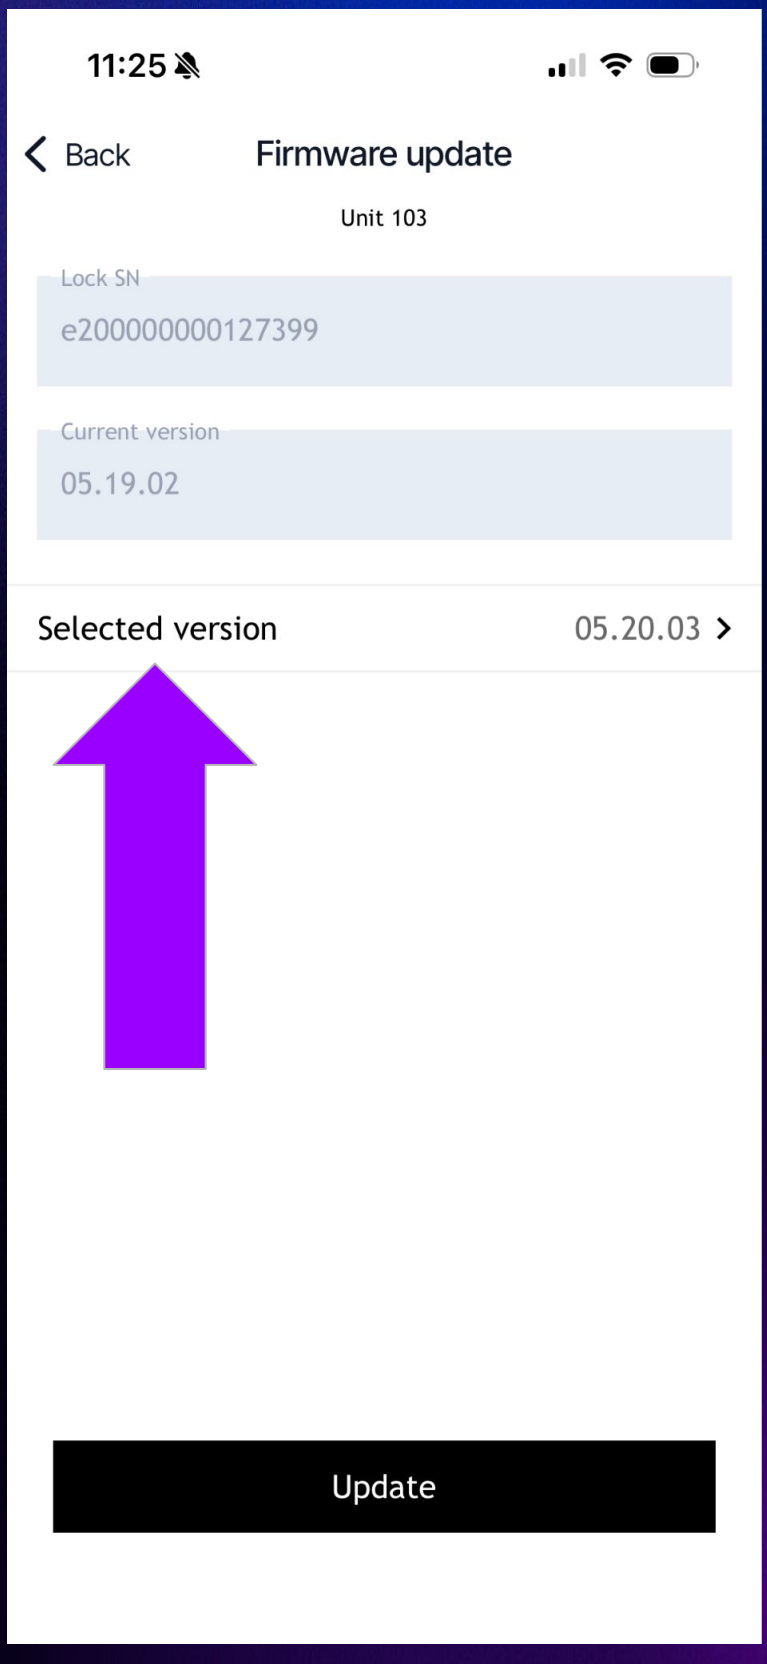


quext Updating Firmware

Select Desired Firmware version

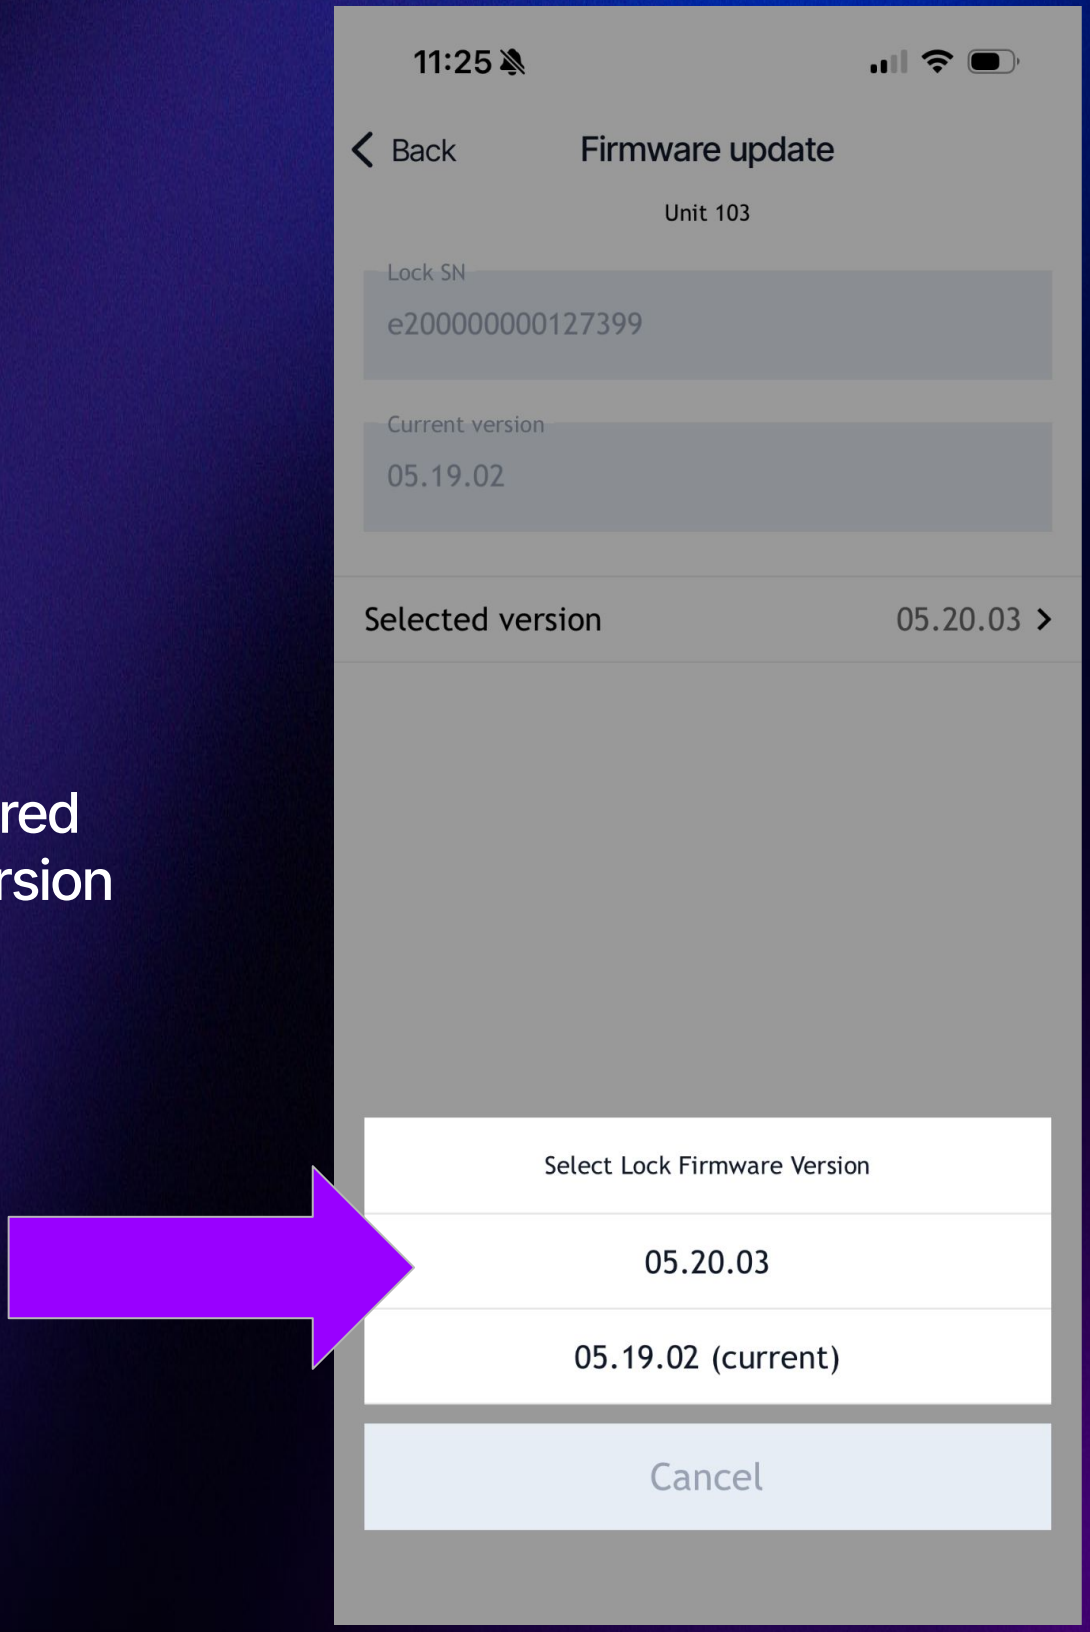

quext Updating Firmware

Wait for Update to Complete.

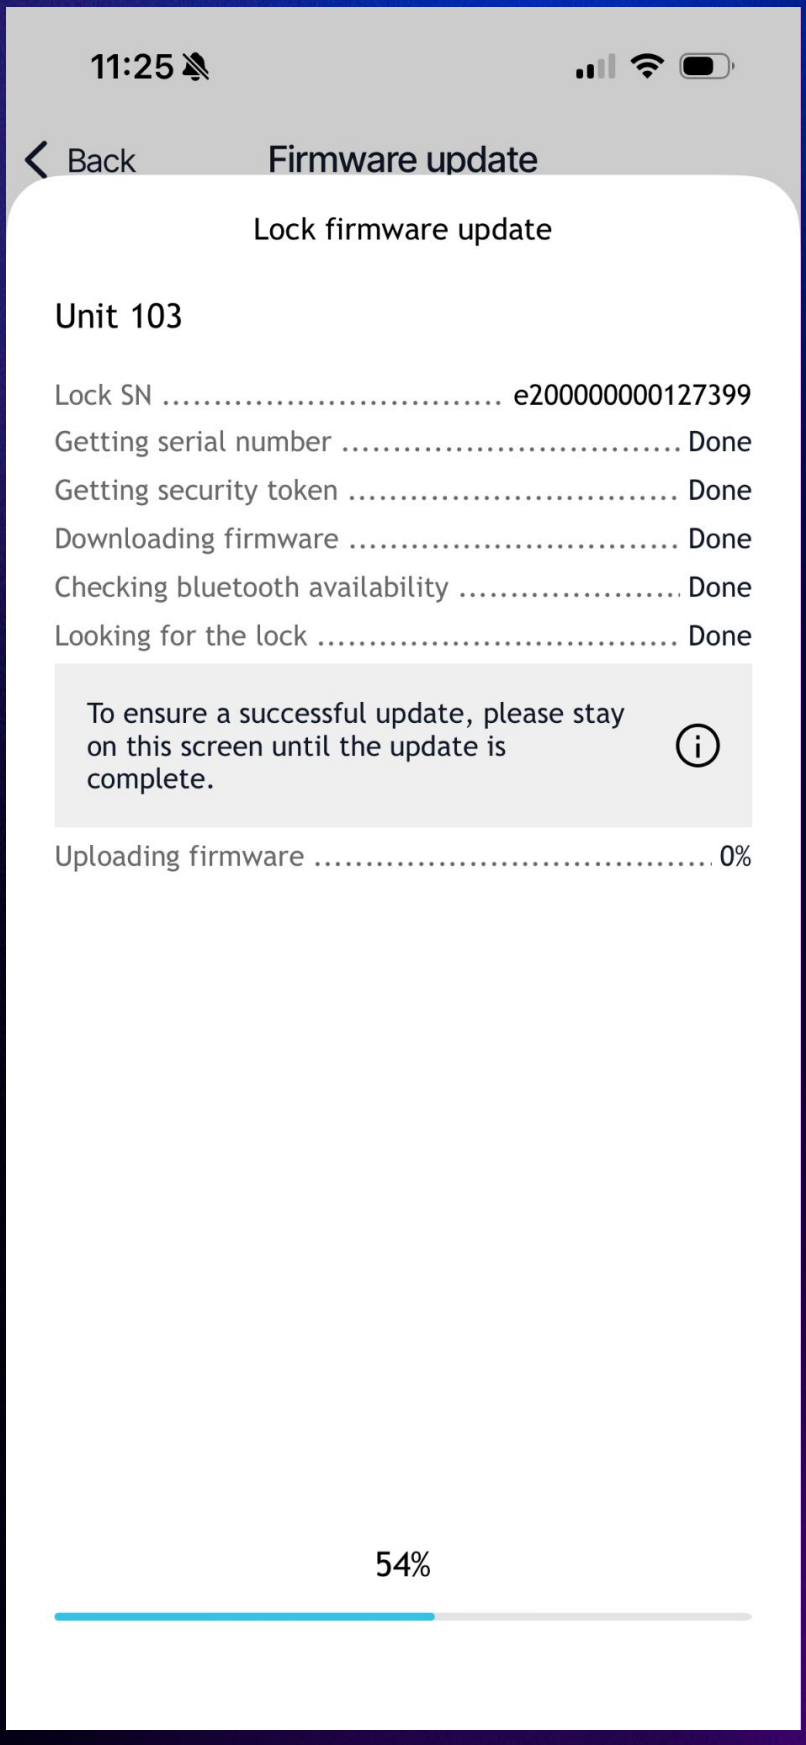

Updating Firmware

The Lock will blink Green and Red for approximately 5 - 10 min this ultimately depends on how old the current firmware the lock was previously on expect longer times if the firmware is older.



Troubleshooting

What to do if...

I don't see my invite to the app or credentials I need?

Contact Quext Support they can assist with getting you back on track with login issues and missing credentials!

support@onequext.com