Lock onboarding Guide



Guide Overview

Tap a section to navigate:

- **Before you start:** Confirm you are logged into the Quext Admin portal.
- **Onboarding:** How to add the locks within the app.
- Syncing: how to update the locks after onboarding.
- Test the lock
- How to Factory reset
- How to factory Reset XE360
- How to Factory Reset Card readers
- Spec Sheets
- Installation info
- **Troubleshooting:** FAQ and contact support





Pro Tip this guide applies to all locks depicted on this screen



Important Notices

support@onequext.com

Whenever you delete a lock from the Quext app you will need to reach out to support to receive assistance in fully clearing out the lock from the system before you can continue using that same lock in the app.

Reach out to support when wiring is completed on RC card readers software settings may need changed before it can be expected to work.

Important Notices

Ensure that your phone settings do not automatically lock your screen.

Android

How to Turn Off Screen Lock

- Open the Settings app on your phone.
- Tap Security or Security and Privacy. (On Samsung devices, tap Lock screen or Security and privacy first).
- Tap Screen lock or Screen lock type.
- Enter your current PIN, pattern, or password.
- Choose None to remove the lock completely, or Swipe for a basic unlock with no security.

IOS

Changing Auto-Lock Settings

- Open the Settings app on your iPhone.
- Tap on Display & Brightness.
- Scroll down and tap on Auto-Lock.
- Select Never so the screen stays on until you press the side button

Important Notices

Ensure that you prioritize using cellular signal as your main method of communication to the Quext app unless under a poor service area for cellular coverage.

Before you start

Double check you are using the
Quext IOT Admin app

❌


✅

Quext IoT

Quext IoT Admin


Before you start

Enter your email and password here

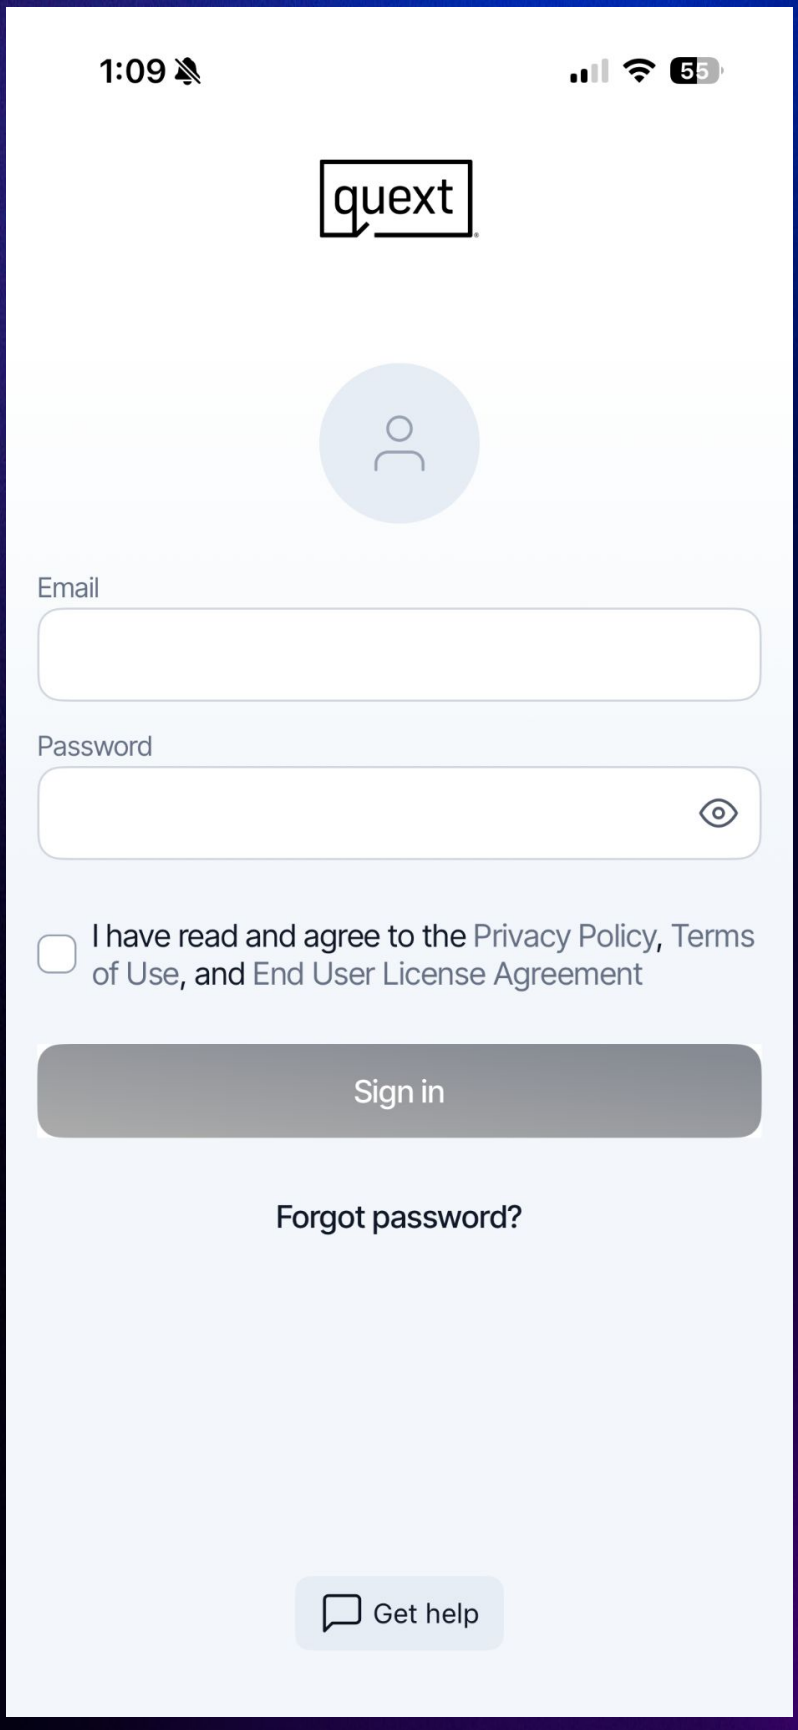


quext Onboarding

Once logged in tap on the service gear icon

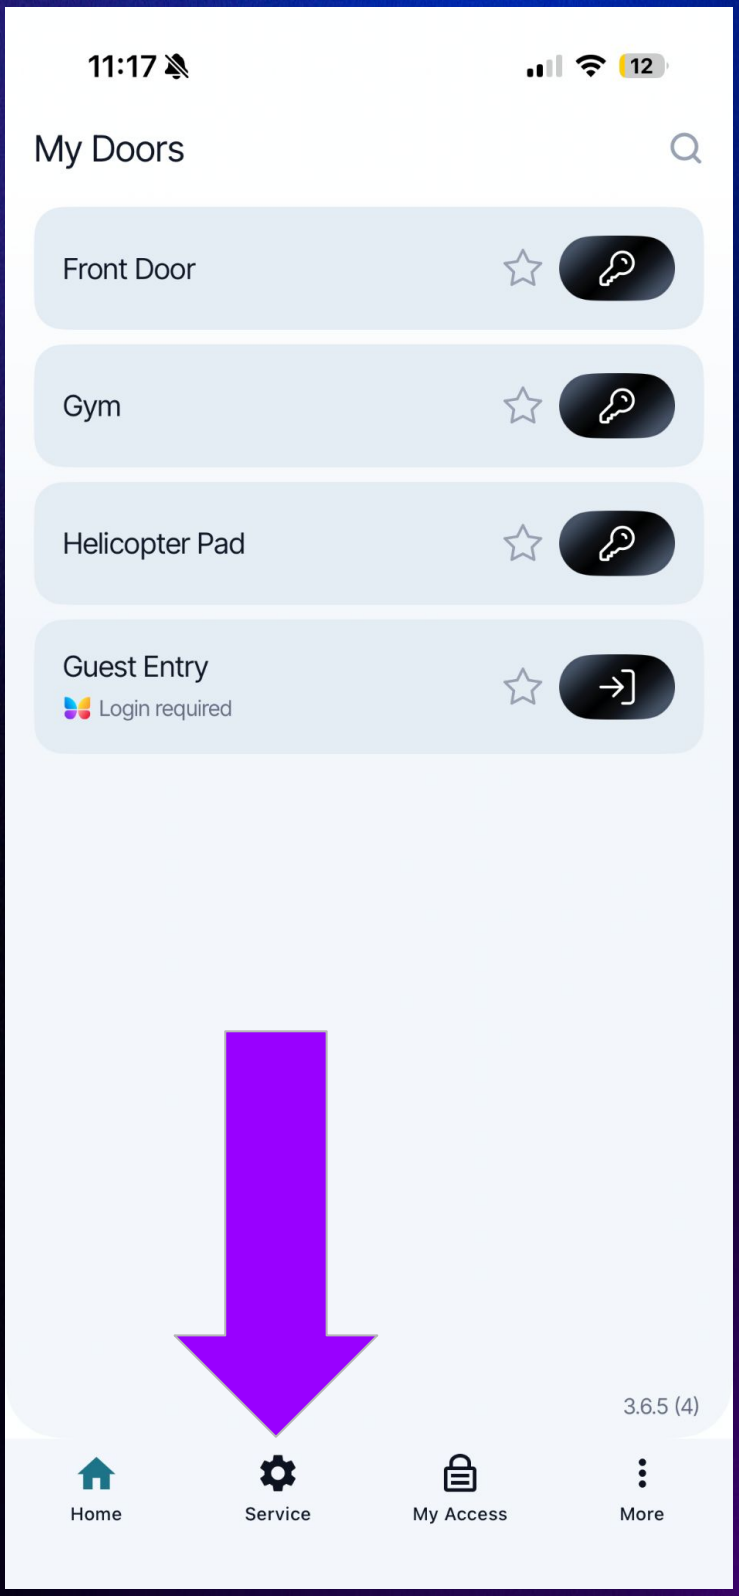


quext Onboarding

Select the location your Lock will be onboarded to.

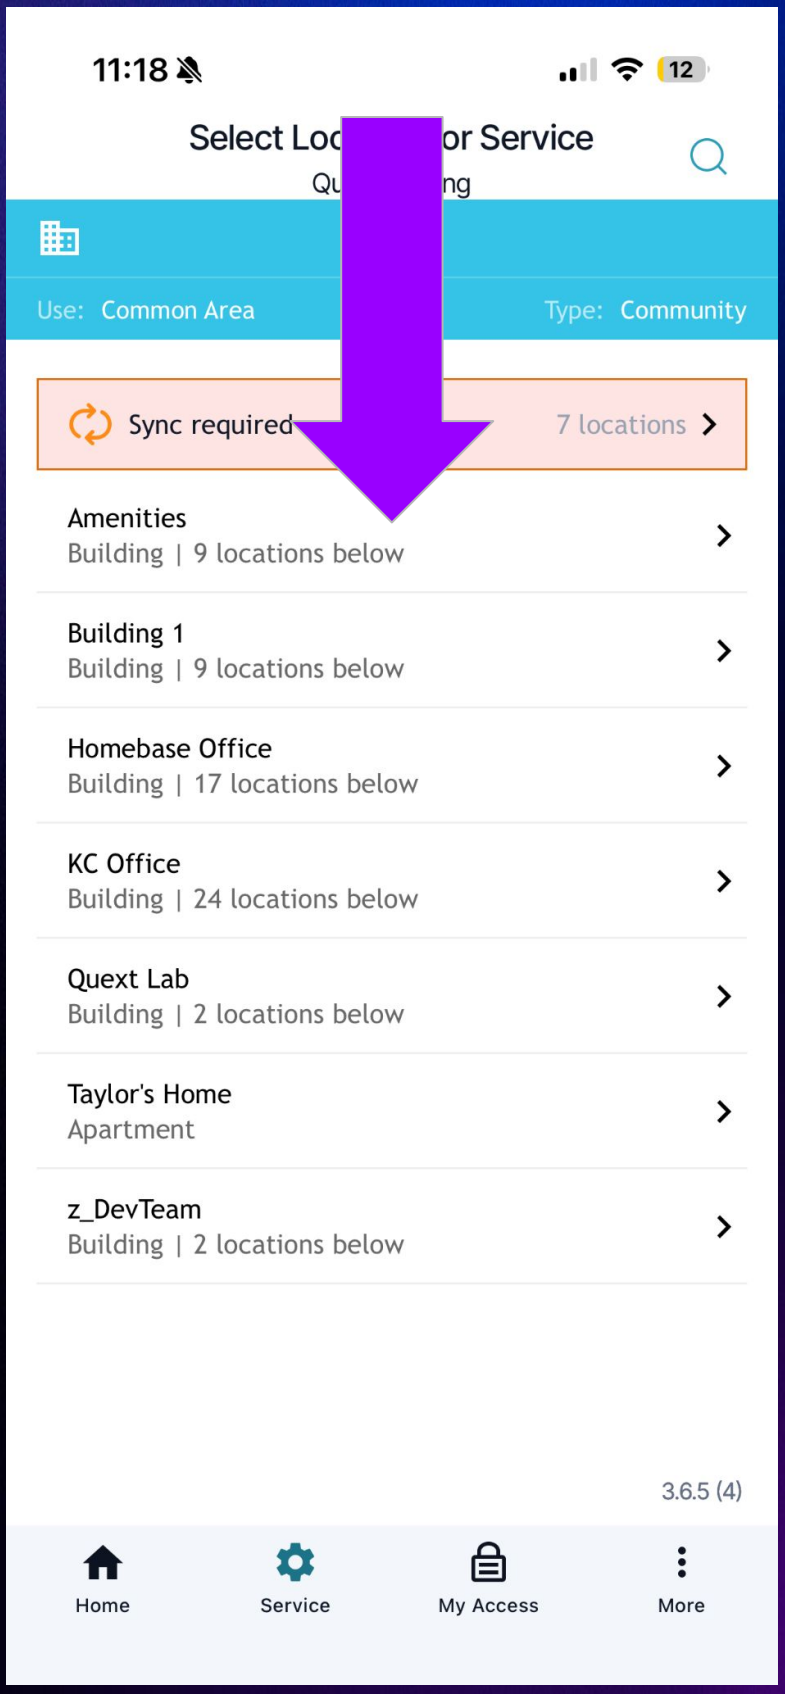

quext Onboarding


Tap on the install device button on the bottom of the screen

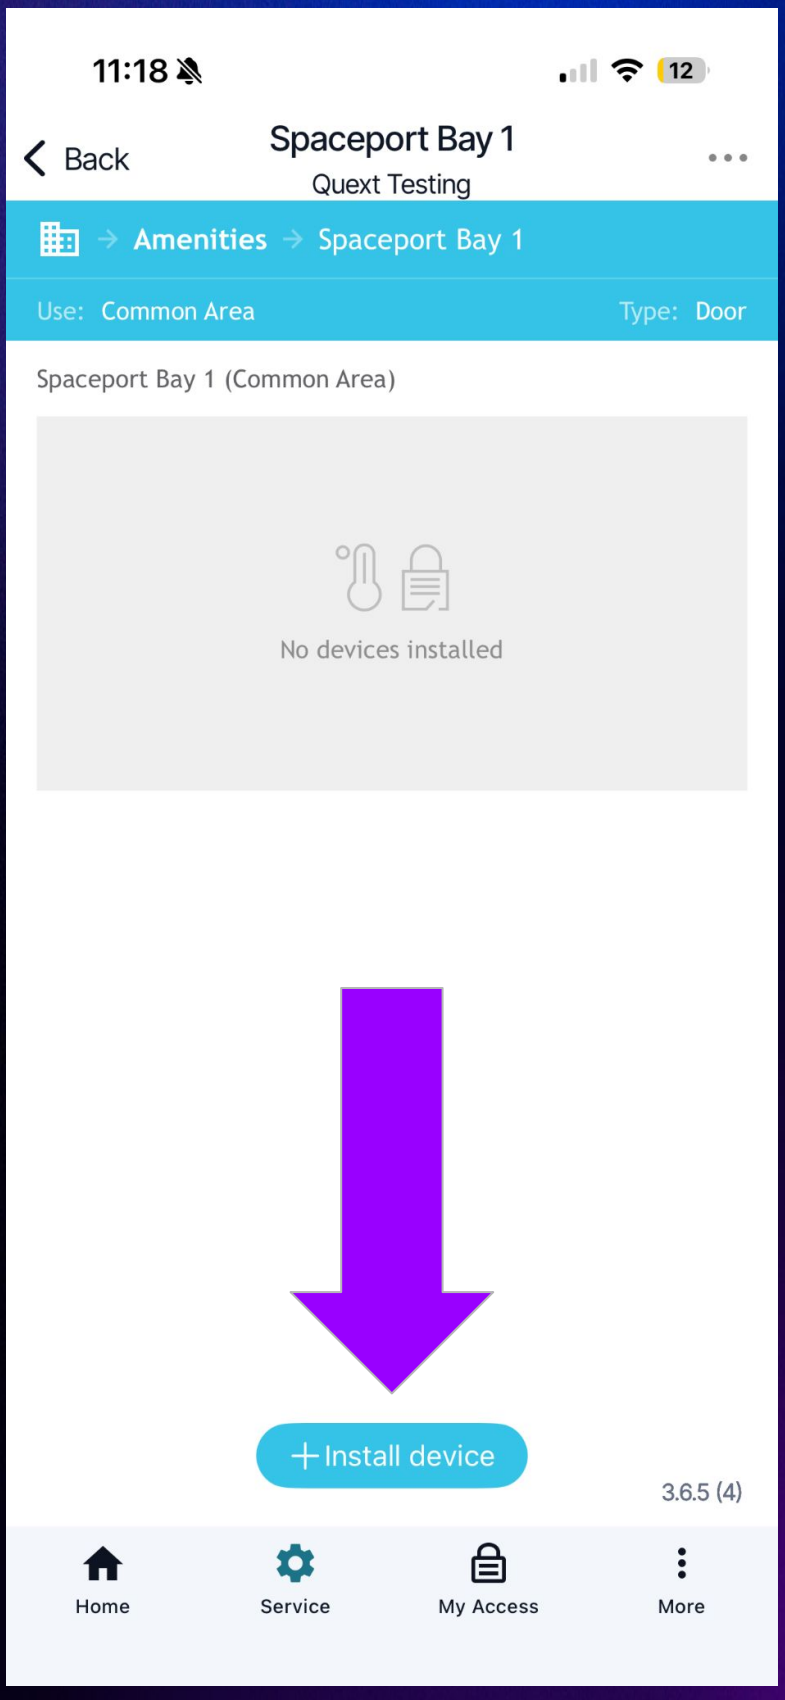

quext Onboarding

Select lock from the pop up menu.


Locks this button is used for:
XE360 all models
NDEB
BE467
FE410
RC Card readers (all models)

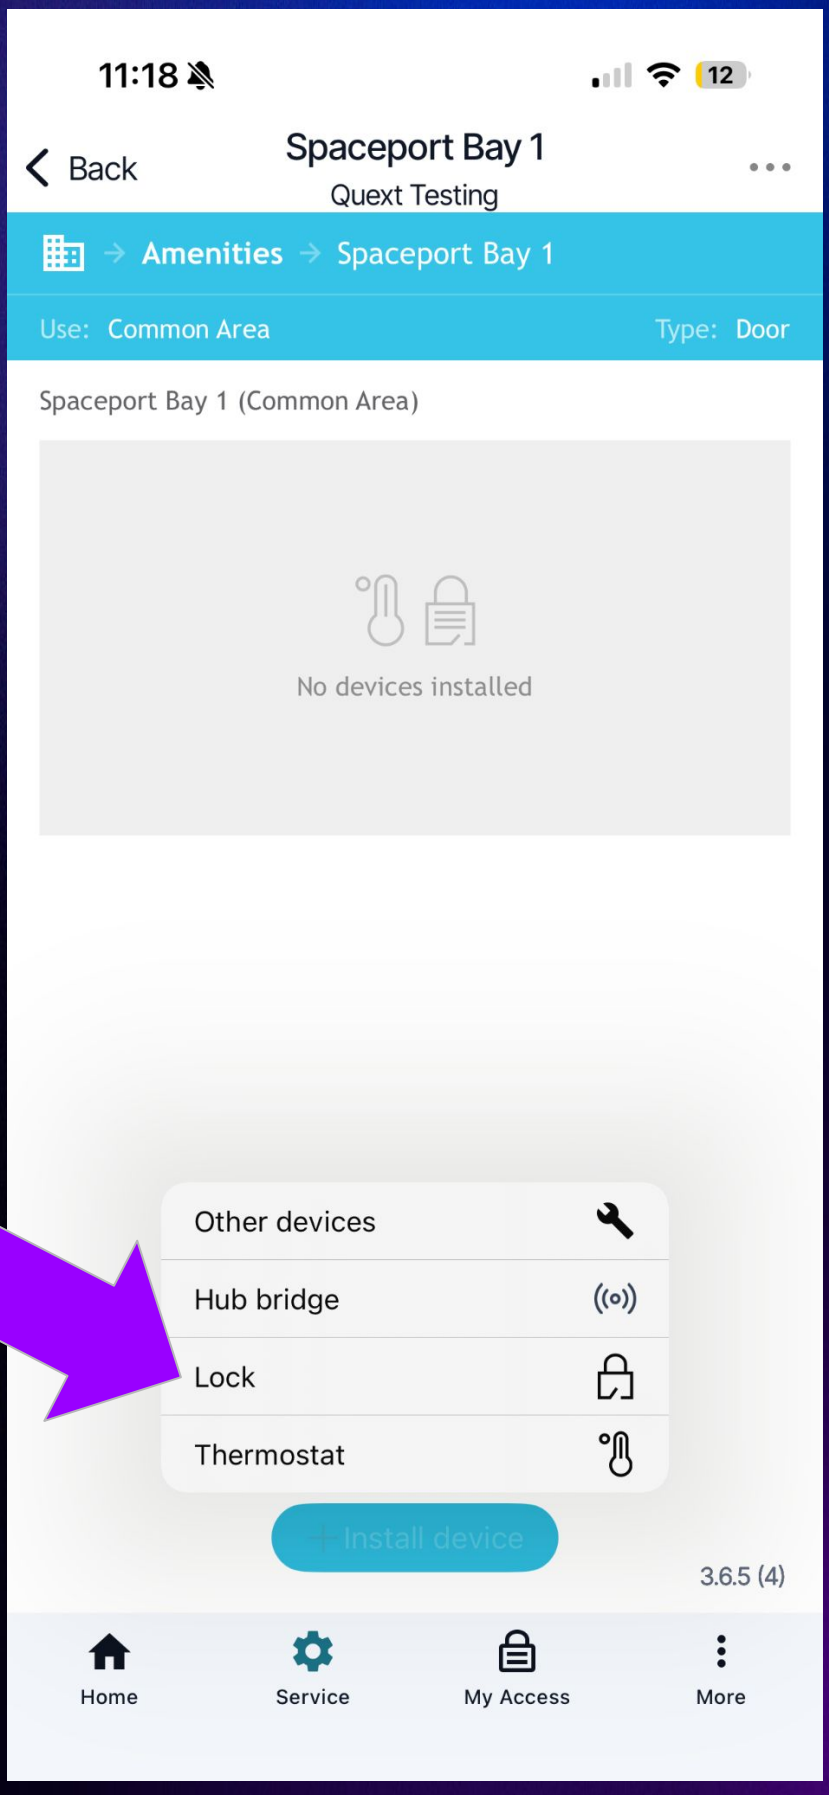

quext Onboarding


Locate the locks serial number barcode sticker. .


Place it in the scan box with your app.

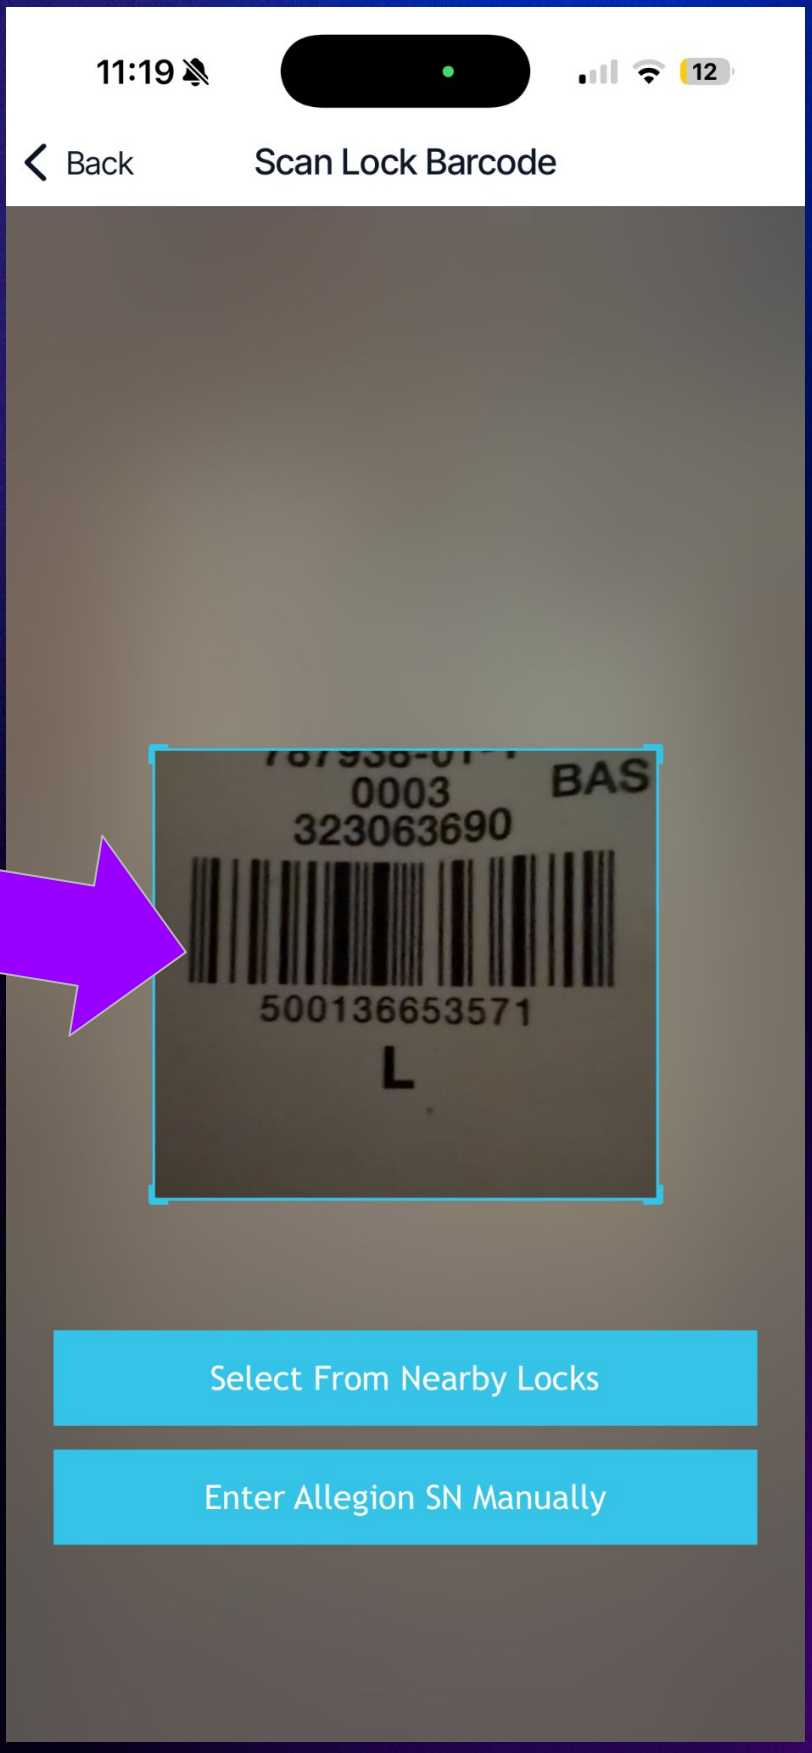

quext Onboarding


Select the Connectivity mode for the lock

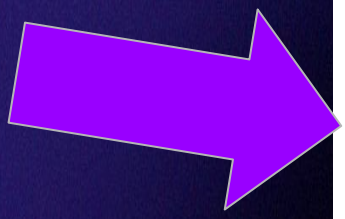

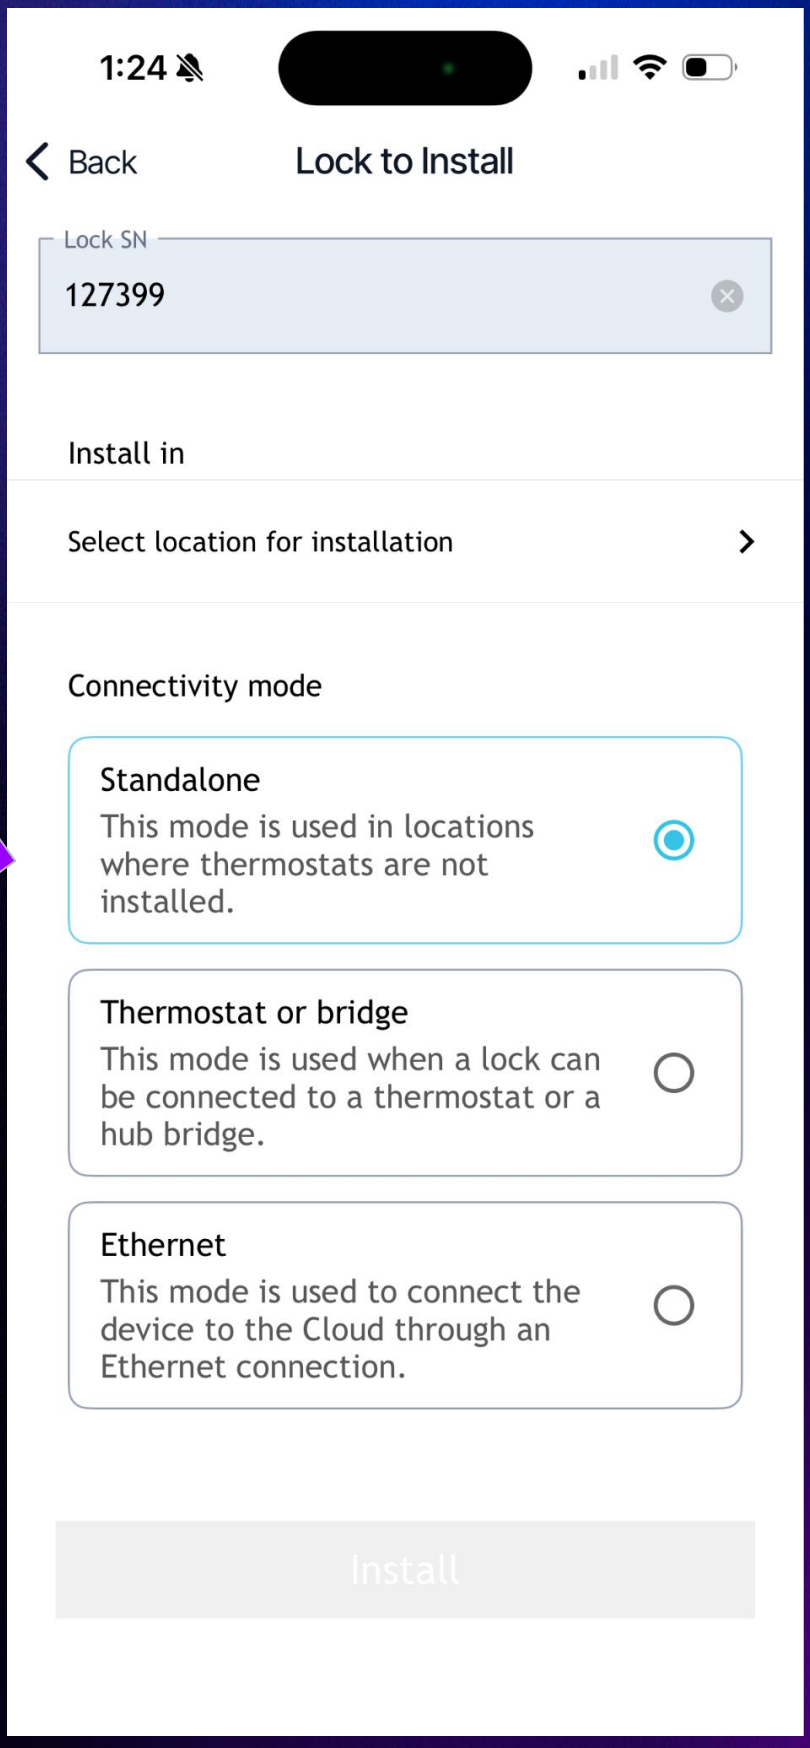


quext Onboarding

If Applicable select the location for the local if multiple locations exist.

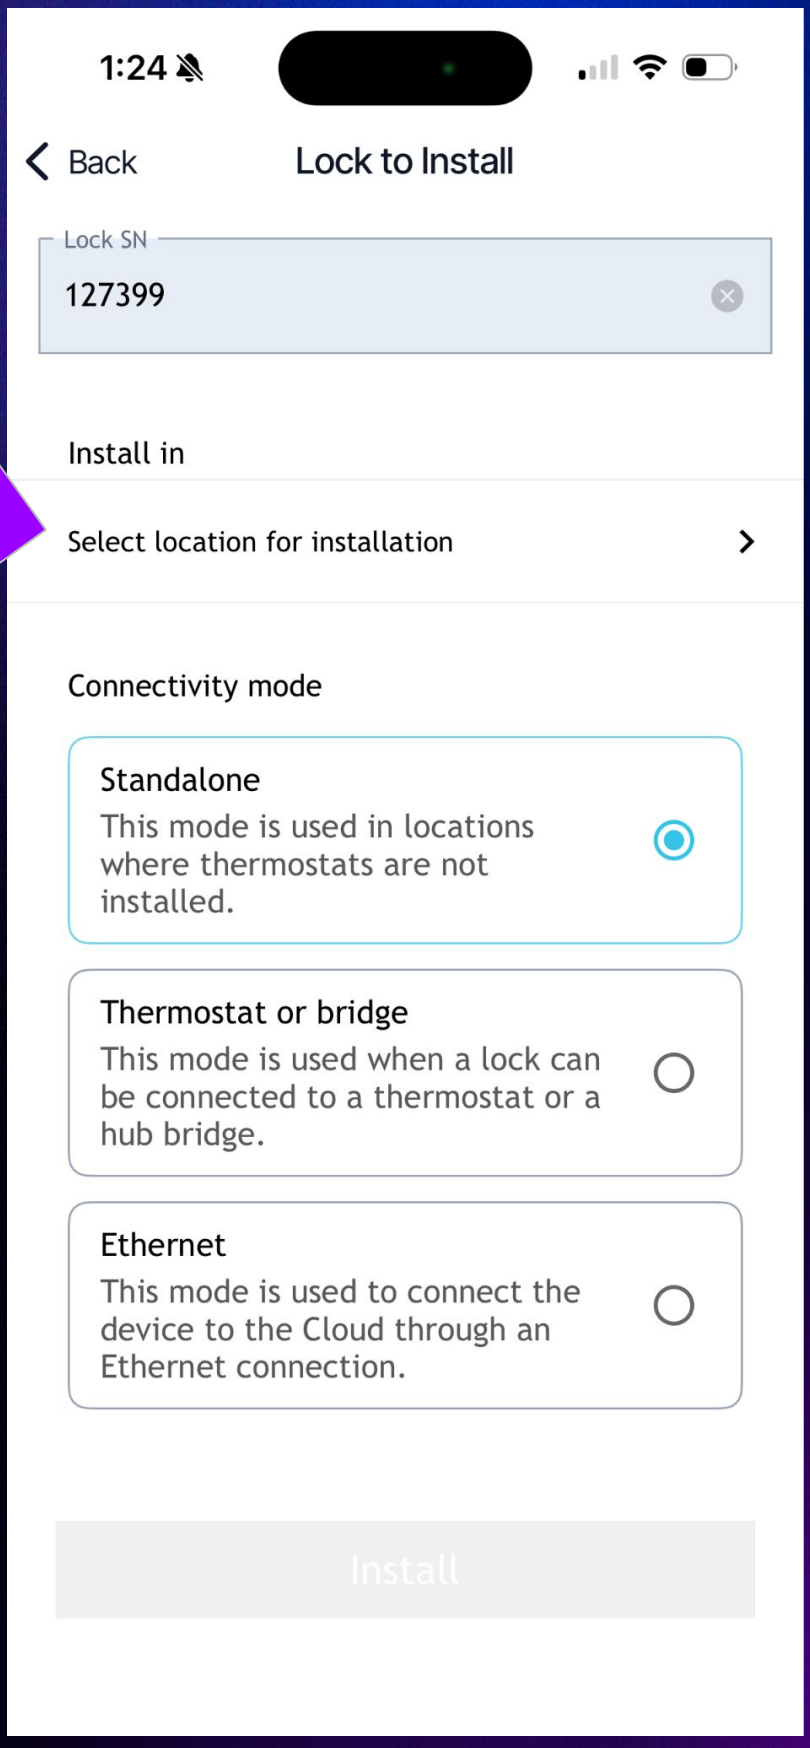

quext Onboarding


You should see this screen as soon as the camera catches the bar code Confirm the location is correct and tap install!

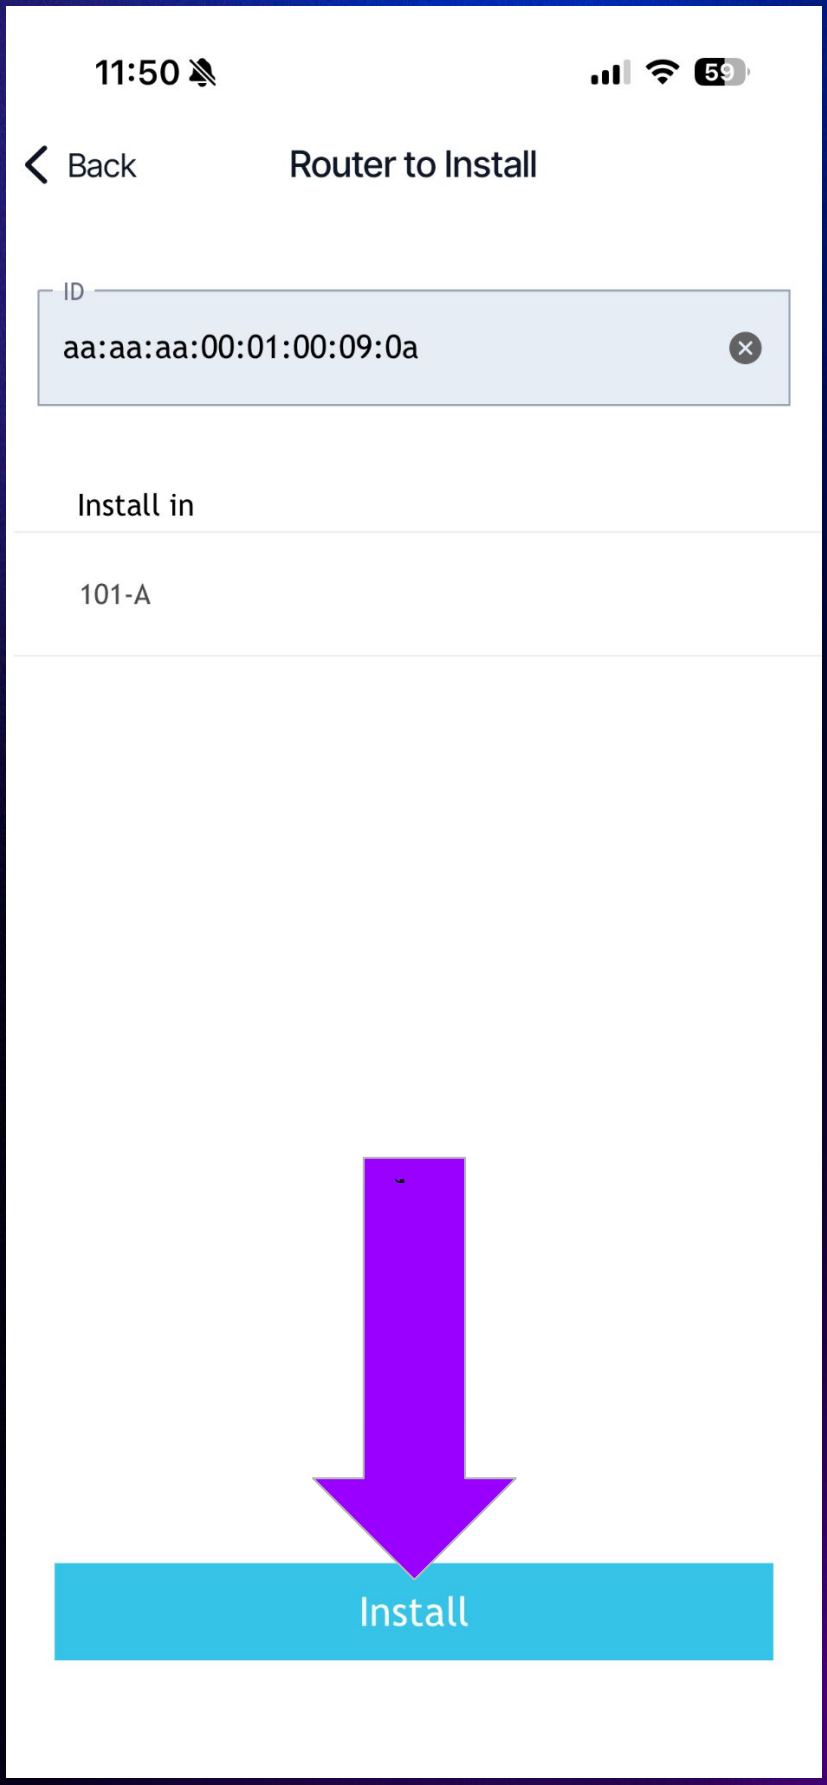

At this point the app will automatically add the lock for you to the app and you are just waiting for the process to complete!

Syncing


Once successful you should see this screen.

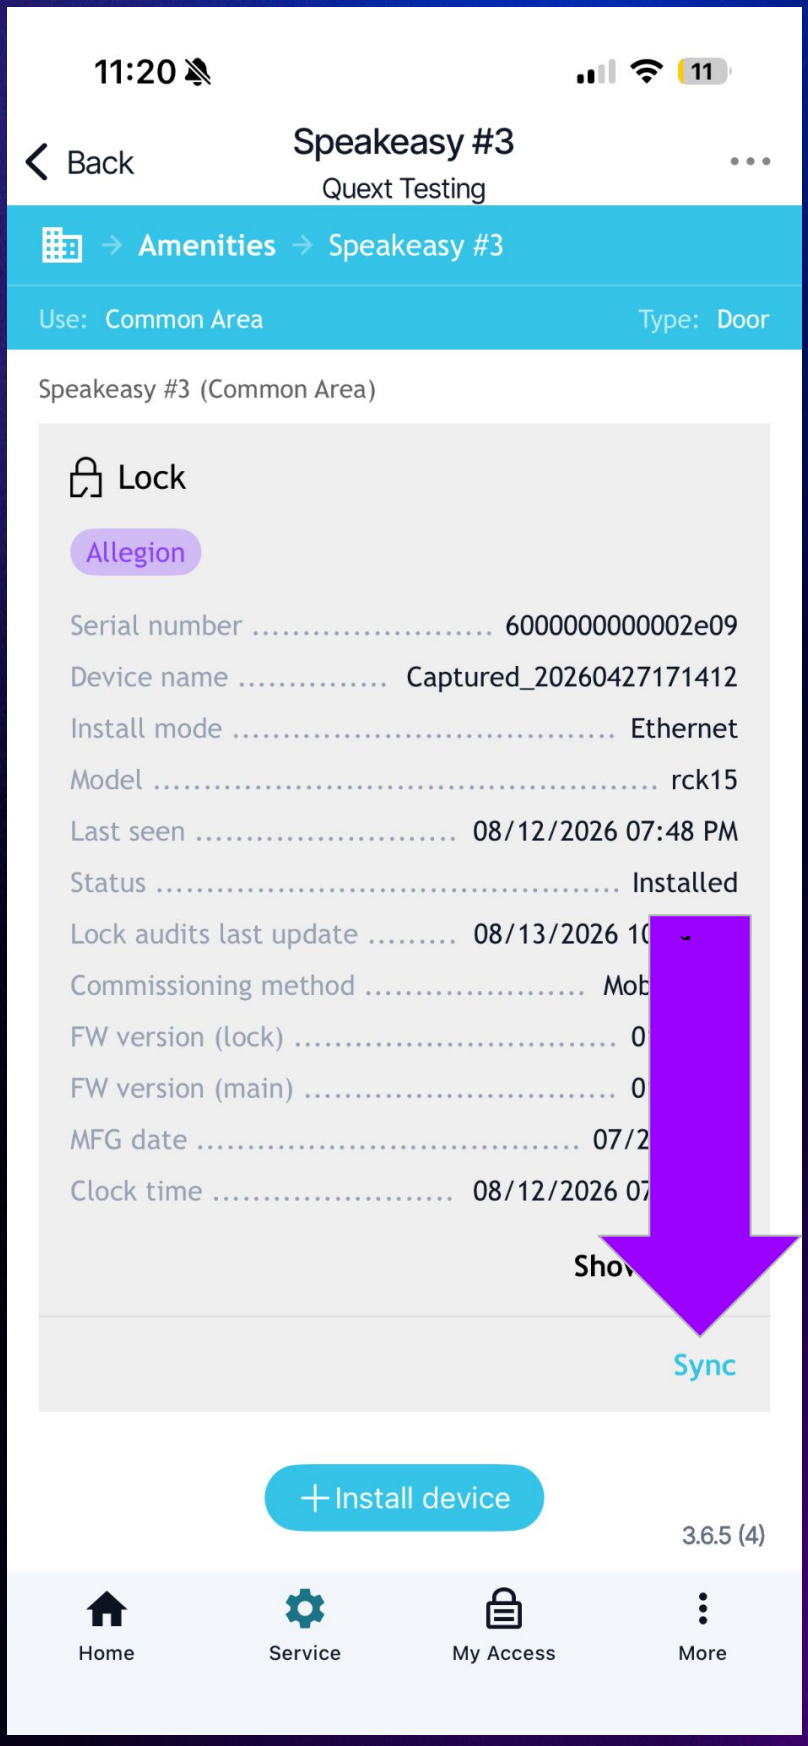


Tap on the sync button to sync the lock.

quext Testing

Navigate back to the Home screen by tapping Home.

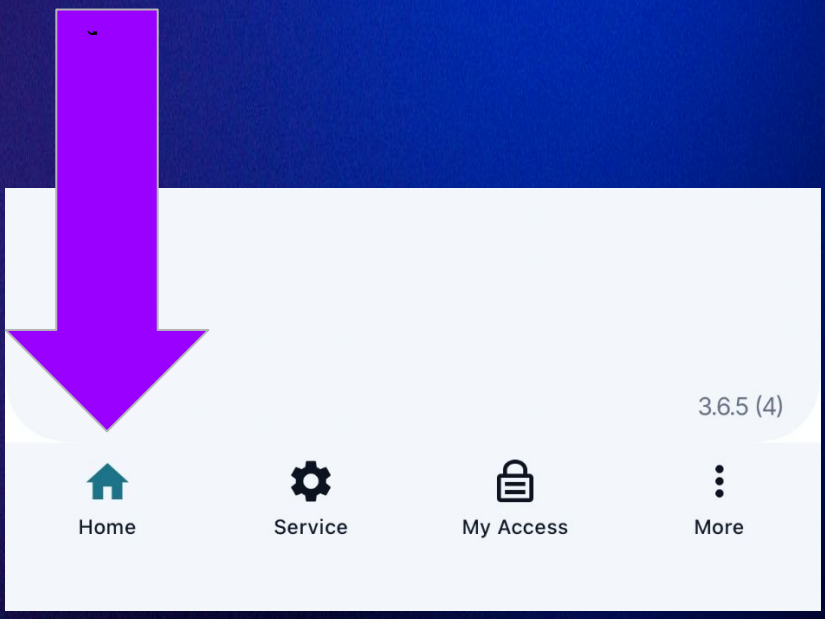


Then you can tap on the key symbol to test your lock!

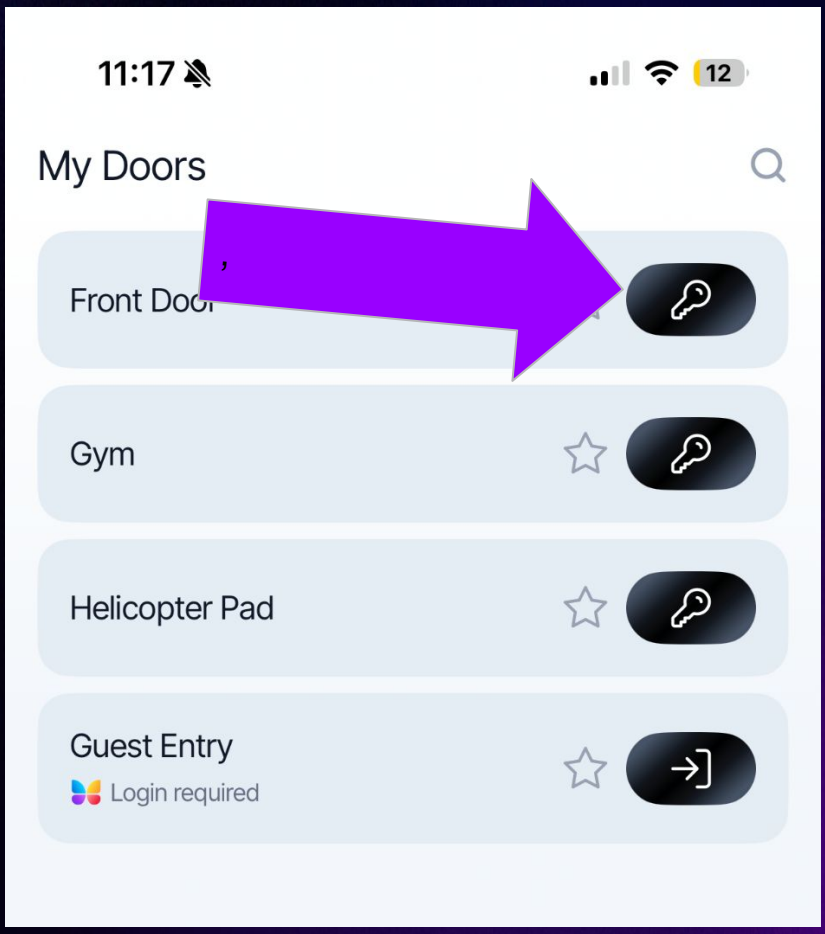

quext

Testing


Wait for the lock to respond.

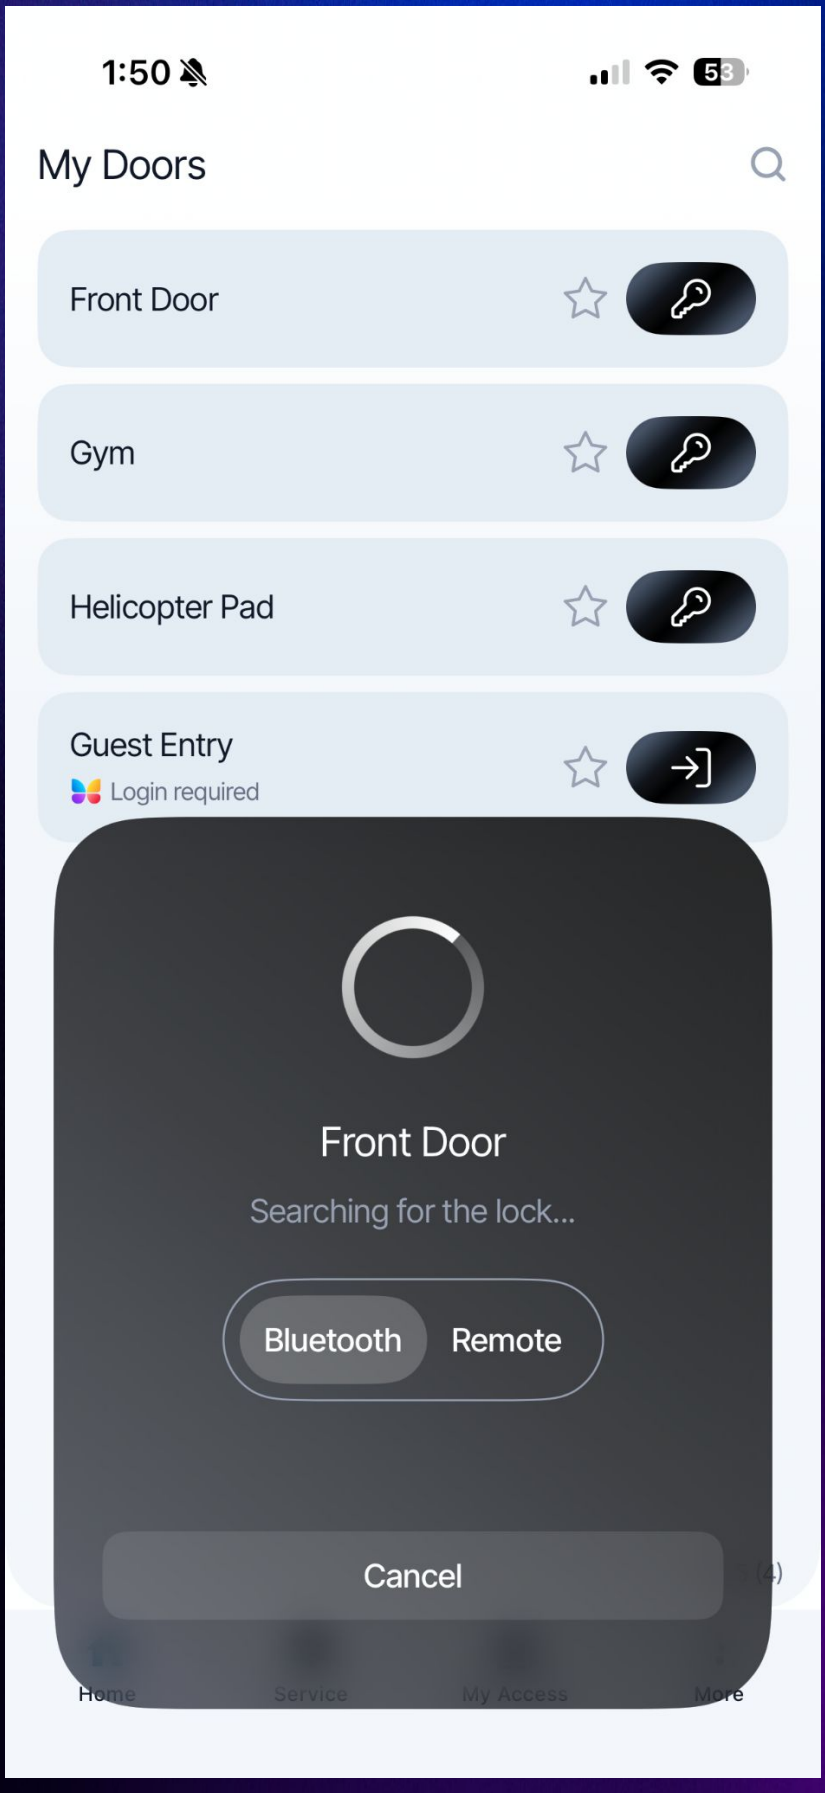

quext

Testing

If you see this screen, now you can unlock or lock the door!

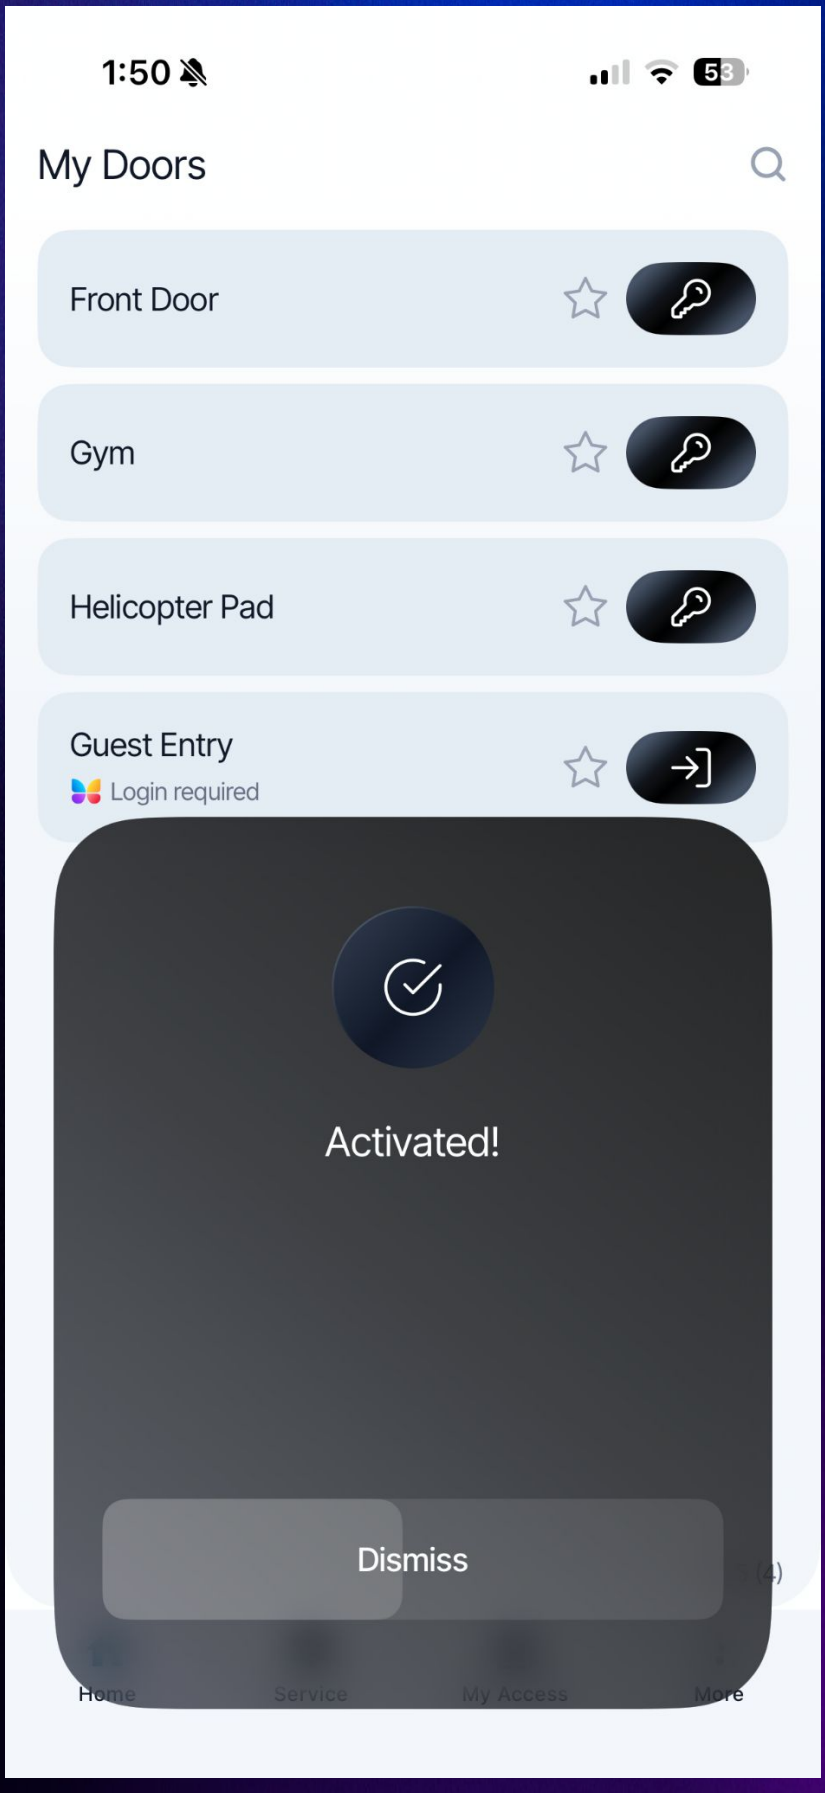

quext

SUCCESS ✅

Congrats you have completed the onboarding!



Spec Sheet Links for Locks and Card Readers

- Schlage_Reader_Controller_User_Guide_013562.pdf (includes door prep)
- Schlage_XE360_Exit_Trim_Data_Sheet_115590.pdf
- Schlage_XE360_Mortise_Data_Sheet_115589 (1).pdf
- BE Schlage_Control_Mobile_Data_Sheet_113252 (1).pdf
- Schlage_NDE Lock_Data Sheet.pdf
- Schlage_XE360-Series_User_Guide_115598

Door Prep

- XE360cut sheet (1).pdf
- Schlage_NDEB_Door_Manufacturer_Template_013553.pdf
- Unit Locks Schlage-Control-BE467F-door-prep-template-RB117.pdf
- Wood Door Schlage_XE360-Series_Template_XE101_115873.pdf
- Metal Door Schlage-FE410-Control-Smart-Interconnected-Lock-Door-Prep-Template-RF124-1.pdf
- Wood Door Schlage-FE410-Control-Smart-Interconnected-Lock-Door-Prep-Template-RF123-1.pdf

Installation info and need to knows

Shipping Timeline:

1-2 weeks for onboarding into Homebase;
2-6 weeks for shipping (hardware dependent).

Hardware Guidelines by Product

Card Readers

- Provided pre-configured for specific locations, labelled, and ready for installation. (Homebase Specific)
- Includes RB1224 Relay (for wet contact) and 18/4 Pigtail for door hardware wiring.

Locks (BE467, FE410, XE360)

- Homebase Sites: Pre-configured and labelled by Quext; ready for site installation.
- Quext Sites: Installed and configured onsite by the Quext team (unless otherwise contracted).
- XE360 Compatibility: Falcon 25, Von Duprin 98/99/22. Crash bars not provided.

Technical Specifications & Links

- Wiring Diagrams: RC Schlage Card Reader Folder

Installation Expansion

- Connectivity: CAT6 required for all readers (POE/Data) to recieve power. The card reader cannot supply power to anytning over 12V.
- Wiring Path: Hardware Tie-in typically at door. IDF/Electrical room tie-ins require 18/4 wiring.

Important: Readers use Dry Contacts. If Wet Contacts are needed (via RB1224), notify the Project Manager to adjust backend configuration.

Factory Reset Process

How to Factory Reset BE/FE Locks

🔒 Factory Reset the Lock

A. Remove one battery from lock (unscrew backplate to access)
B. wait 5-10 seconds
C. Replace battery
D. Wait for beep
E. Turn deadbolt twice.
F. (2) short beeps and (1) long beep means *success*!



How to reset NDE locks

🔒 Factory Reset the Lock (FDR)

A. Remove one battery
B. wait 5-10 seconds
C. Replace battery
D. Using the provided pin hold down the reset button for 7 seconds until you hear the beeps
E. Turn the backside handle 3 times every time you turn the handle it will beep on the third beep you will hear:
F. 2 beeps and one long beep means success!



Pro Tip ✨
After resetting an NDE or LE Lock wait 30 seconds for the lock to power on and this has proven to assist with the onboarding process to avoid needing to repeat resetting the NDE or LE.

Factory Reset Process

How to Factory Reset XE360

- Press and hold the mode switch for five (5) seconds.
  You will see 2 green lights and hear 2 beeps
- Rotate and release the interior lever or depress exit device three (3) times within 20 seconds of FDR requence. 1 red light for each turn/ press 1 beep for each turn/press
- FDR in process the lock will have solid red light
- FDR completes. 1 green 1 beep
- Replace the electronic cover.



Factory Reset Process RC's



Network reset

Press and hold the reset button until one green LED flash and one short beep, (approx. five secs.) then release. Successful network reset is indicated by one LED flash and one short beep. A network reset reestablishes the network connection using the current network settings. The certificate file and domain routing information is reestablished prior to reforming the connection to the host access control system.

*Note:

As of May 2021, hold the button longer than 7 seconds for the first two beeps, but release before 14 seconds, otherwise the FDR process is cancelled.

Pro Tips 💫

- Locate the small reset button on the back of the Reader itself you will need a very thin pin to reach it.
- Once it goes into the power on process. You may continue with the onboarding process.

Factory Reset Process RC's



Factory default reset

Press and hold the reset button until two green LED flashes and two beeps (approx. 10 secs.), then release. Successful factory default reset is indicated by a long steady green light and long beep. A Factory Default Reset (FDR) will return the Reader Controller settings to the original settings as shipped from the factory. Removes configurations, databases, and requires the lock to be re-captured. A FDR will not remove the device from your ENGAGE account.

*Note:

As of May 2021, hold the button longer than 7 seconds for the first two beeps, but release before 14 seconds, otherwise the FDR process is cancelled.

Pro Tips 💫

- Locate the small reset button on the back of the Reader itself you will need a very thin pin to reach it.
- Once it goes into the power on process. You may continue with the onboarding process.

Troubleshooting

What to do if...

I don't see my invite to the app or credentials I need?

Contact Quext Support they can assist with getting you back on track with login issues and missing credentials!

support@onequext.com

Troubleshooting

What to do if...

support@onequext.com

The lock I just Installed is not responding to the app or the fob what do I do now?

Ensure your phone is running the latest version of its software and you have Bluetooth on.

As a last resort delete the lock you are having issues with from the Quext App and then reach out to support to have them delete the lock from their side then perform another Factory Reset (FDR) as described here. And repeat the Onboarding process from slide 5 through slide 11.

Then try Syncing or engaging the lock to unlock it!

Troubleshooting

What to do if...

support@onequext.com

The lock I just installed won't complete the Sync step?

In this instance the solution is again deleting the lock you are having issues with from the Quext App and then reach out to support to have them also delete the lock on their end, then perform another Factory Reset (FDR) as described here. And repeat the Onboarding process from slide 5 through slide 11.

Then try Syncing or engaging the lock to unlock it!