Installation of Performance Monitor in Windows

1. Download and unpack https://ci.appveyor.com/api/buildjobs/ya2o02uo3hpt8hil/artifacts/pcm-all.zip

2. Download the free RealTemp utility package from http://www.techpowerup.com/realtemp/ or any other free utility that uses the open-source WinRing0 driver
3. Copy WinRing0.dll, WinRing0.sys, WinRing0x64.dll, WinRing0x64.sys files from there into the PCM.exe binary location, into the PCM-Service.exe location and into c:\windows\system32
4. Run the PCM.exe tool from command line (admin)
5. Execute '"PCM-Service.exe" -Install' from this directory (admin)
6. Execute 'net start pcmservice' (admin)
7. Start Performance Monitor in Windows (Note: Need to find “Performance Monitor” in your own language if your OS is not in English)

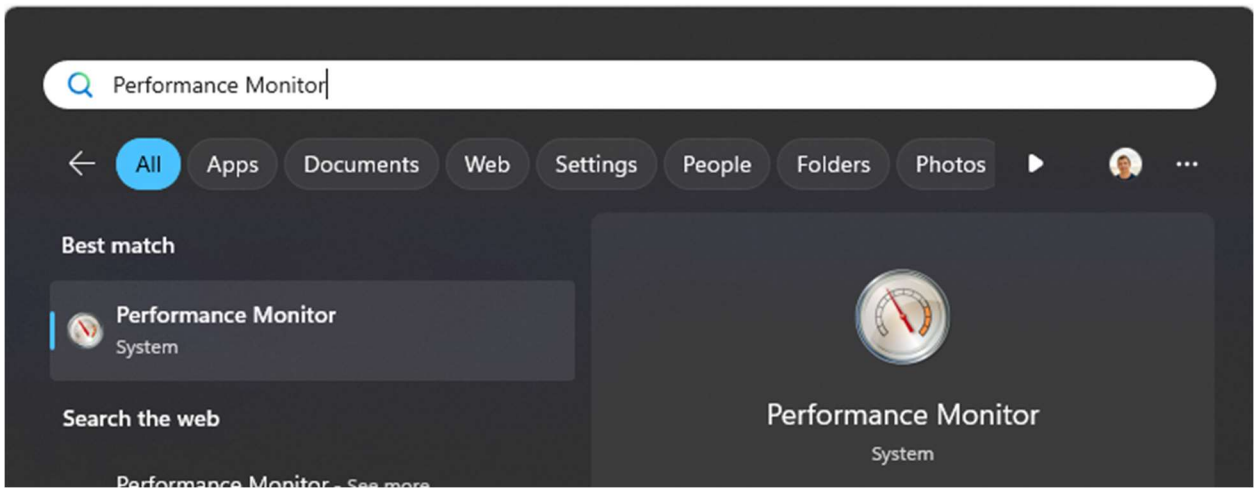

8. Click “+” and select PCM Socket Counter

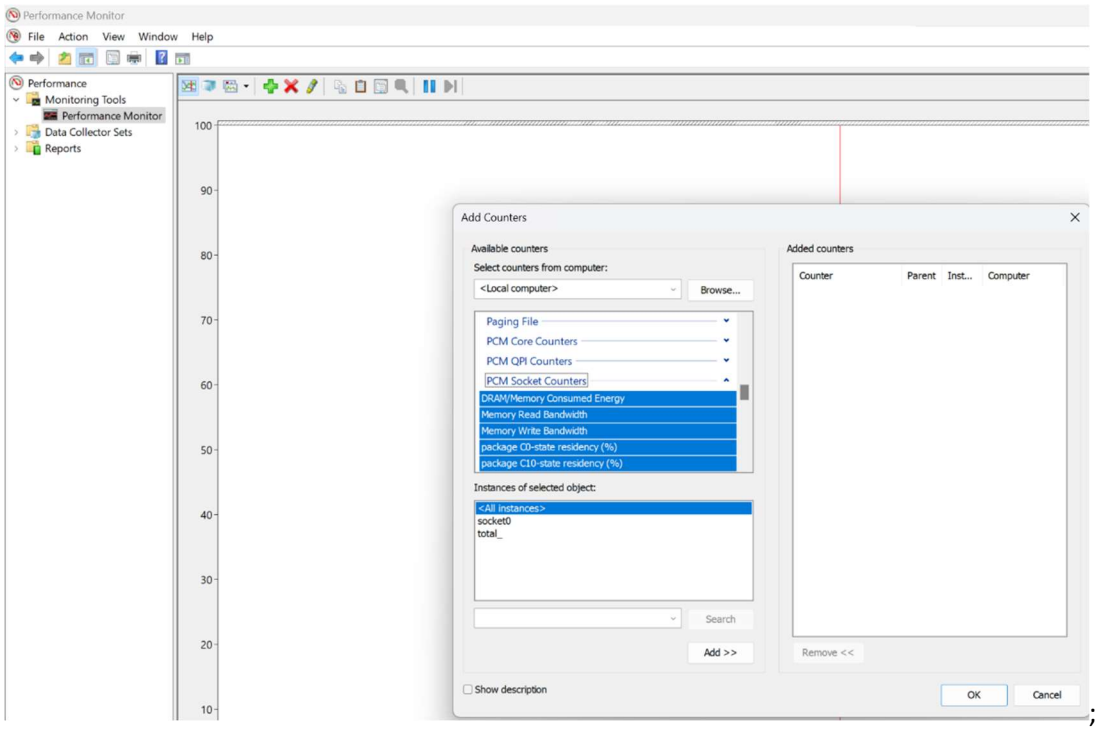

;p

9. Select Package/Socket Consumed Energy and total and it to “Added counter”

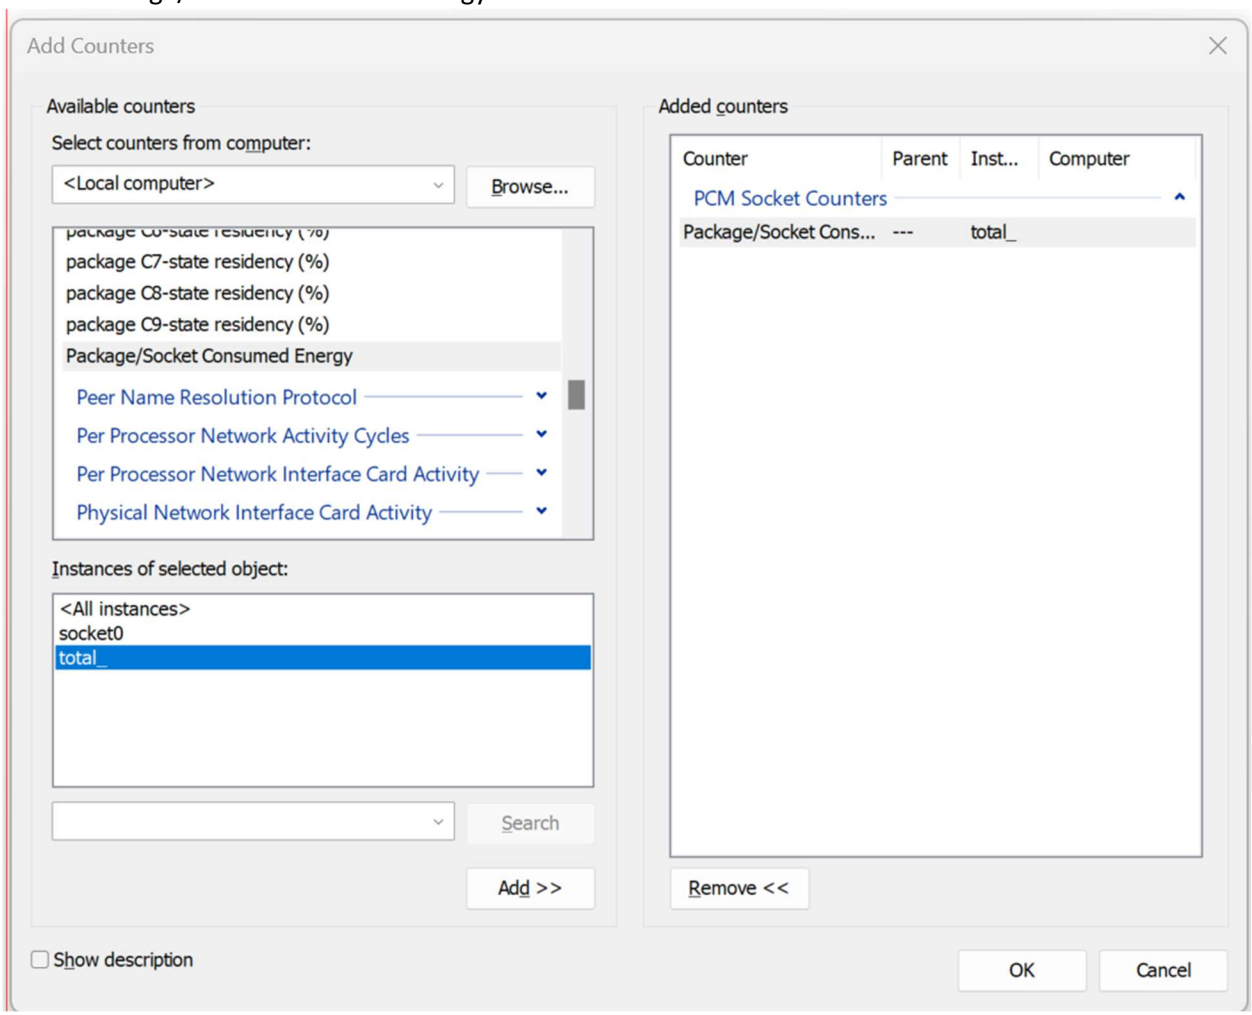

10. You can monitor power consumption now

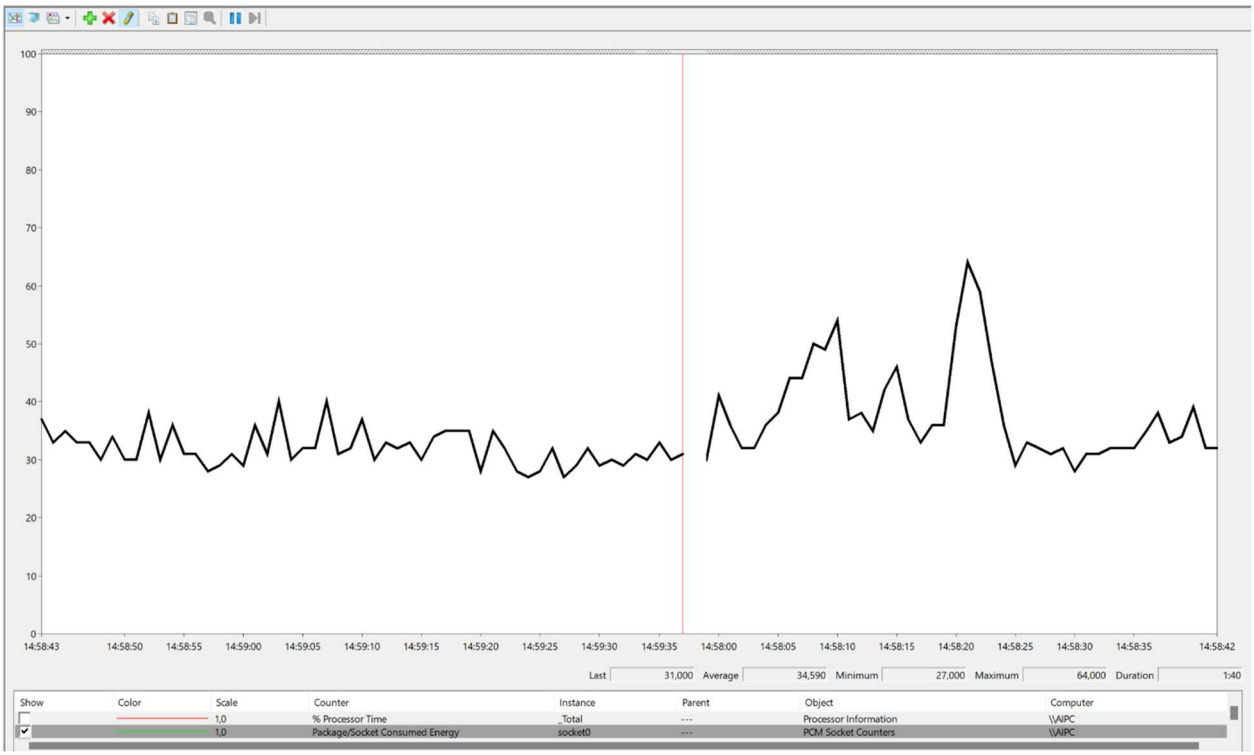
100
90
80
70
60
50
40
30
20
10
0
14:58:43
14:58:50
14:58:55
14:59:00
14:59:05
14:59:10
14:59:15
14:59:20
14:59:25
14:59:30
14:59:35
14:58:00
14:58:05
14:58:10
14:58:15
14:58:20
14:58:25
14:58:30
14:58:35
14:58:42
Last 31,000 Average 34,590 Minimum 27,000 Maximum 64,000 Duration 1:40
Show Color Scale Counter Instance Parent Object Computer
1,0 % Processor Time _Total --- Processor Information \\AIPC
1,0 Package/Socket Consumed Energy socket0 --- PCM Socket Counters \\AIPC