Test Logs

(Default Threshold for Overcurrent 16A Over Voltage 220V RMS, *Random Selection*)

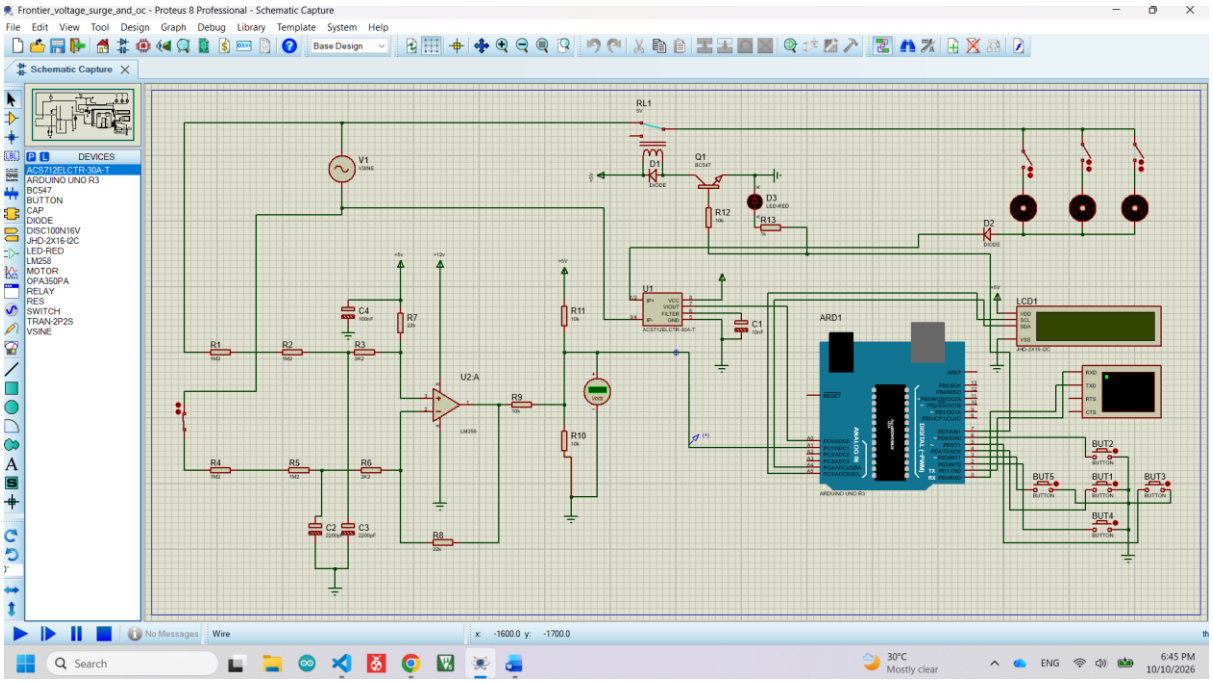


Figure 1. The project is in the simulation software Proteus.

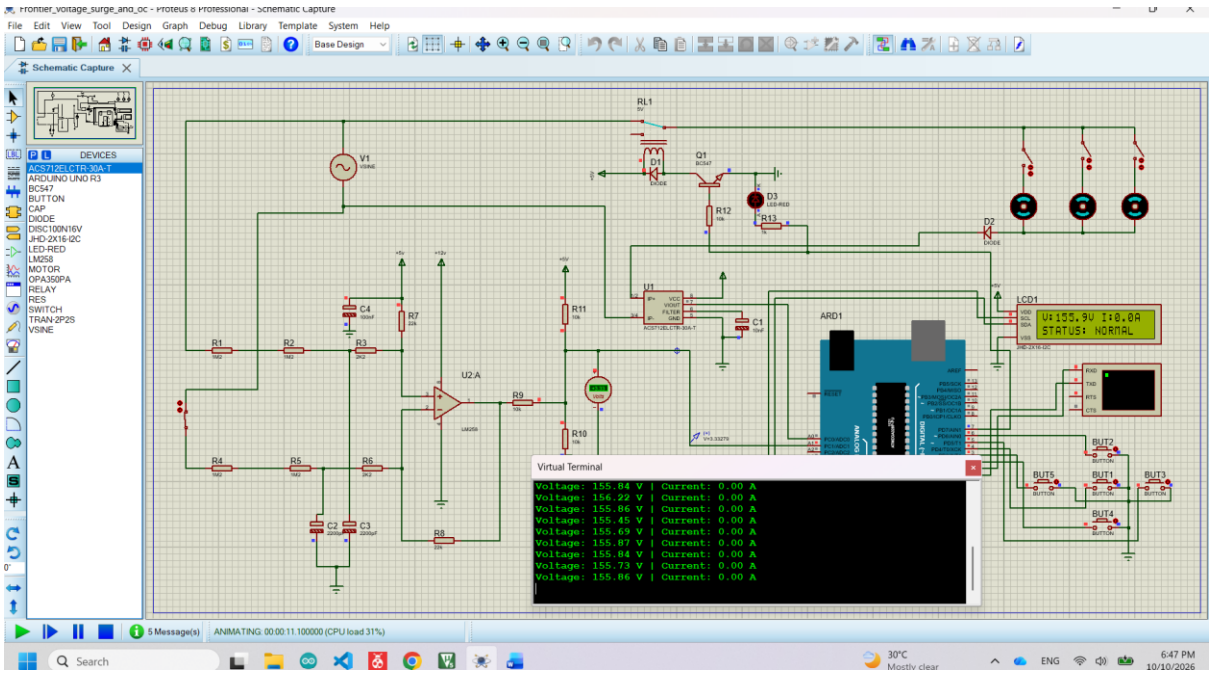


Figure 2. The project is running when no Load Active. The Display is showing the source voltage (156V) and load current (0A) as well as the Status: Normal. The serial monitor also showing the current and voltage.

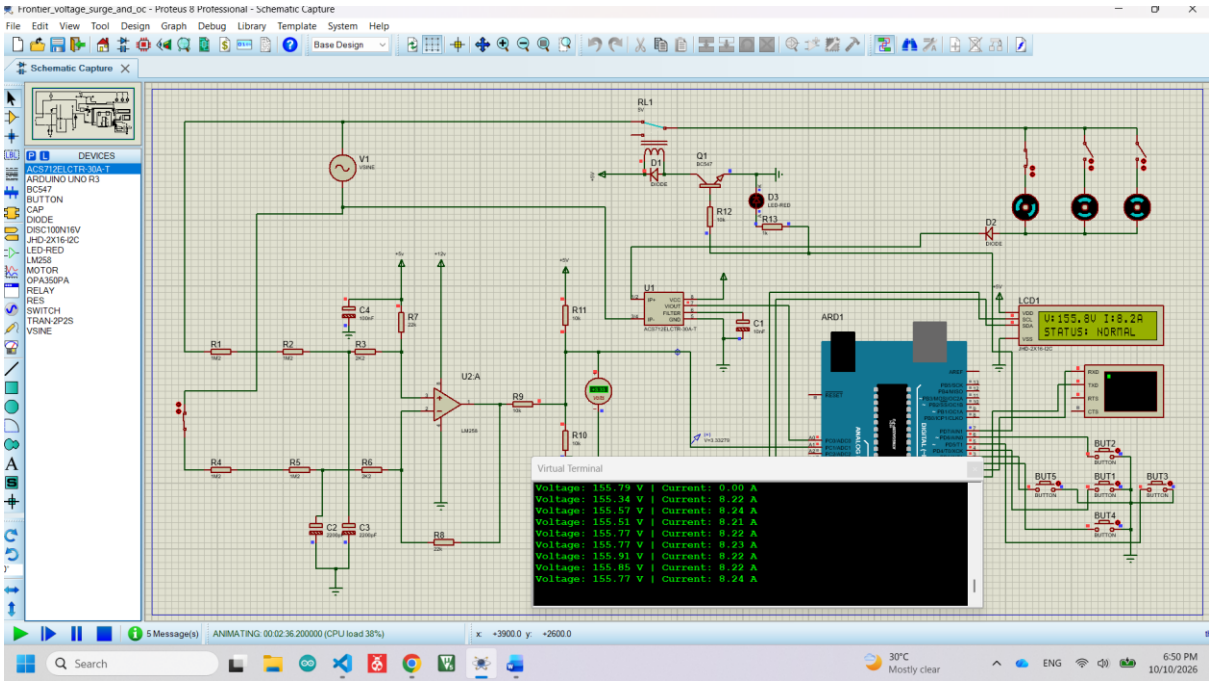


Figure 3. The project is running when one Load Active. The Display is showing the source voltage (156V) and load current (8.2A) as well as the Status: Normal. The serial monitor also showing the current and voltage.

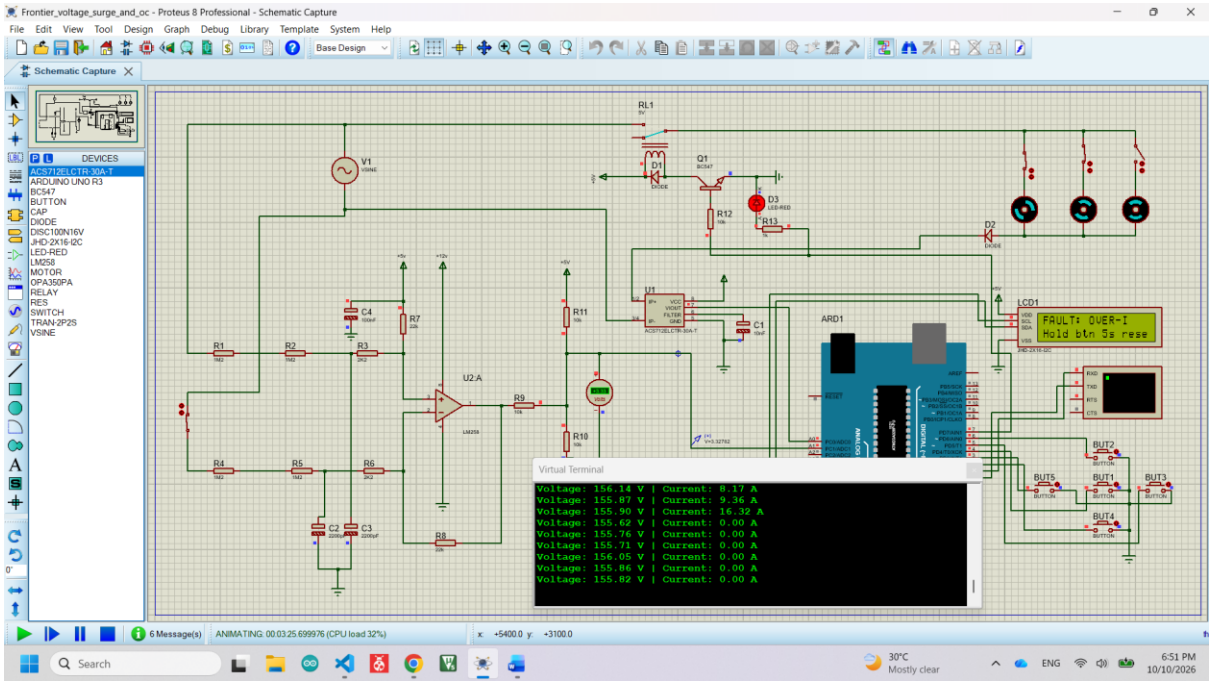


Figure 4. The project is running when two Load Active. The Display is showing the Fault type: over Current. It also shows "Hold btn 5s reset" means the reset approach. The serial monitor also showing the current and voltage. The third row of it show the current consumption (16.3A) when it was detected as overcurrent fault. The fault LED is ON and the relay trigged and isolated the LOAD.

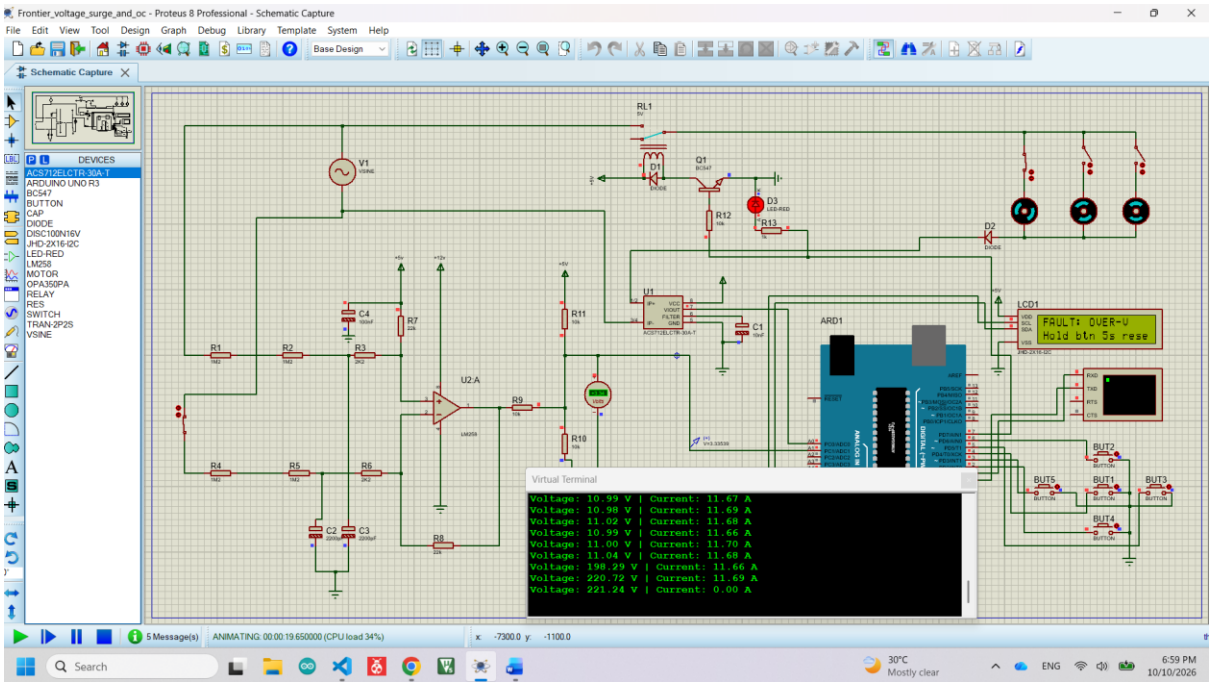


Figure 5. The project is running when single Load Active. The Display is showing the Fault type: over voltage. It also shows "Hold btn 5s reset" means the reset approach. The serial monitor also showing the current and voltage. The 8th row of it show the overvoltage (220.12) when it was detected as overcurrent fault. The fault LED is ON and the relay trigged and isolated the LOAD.

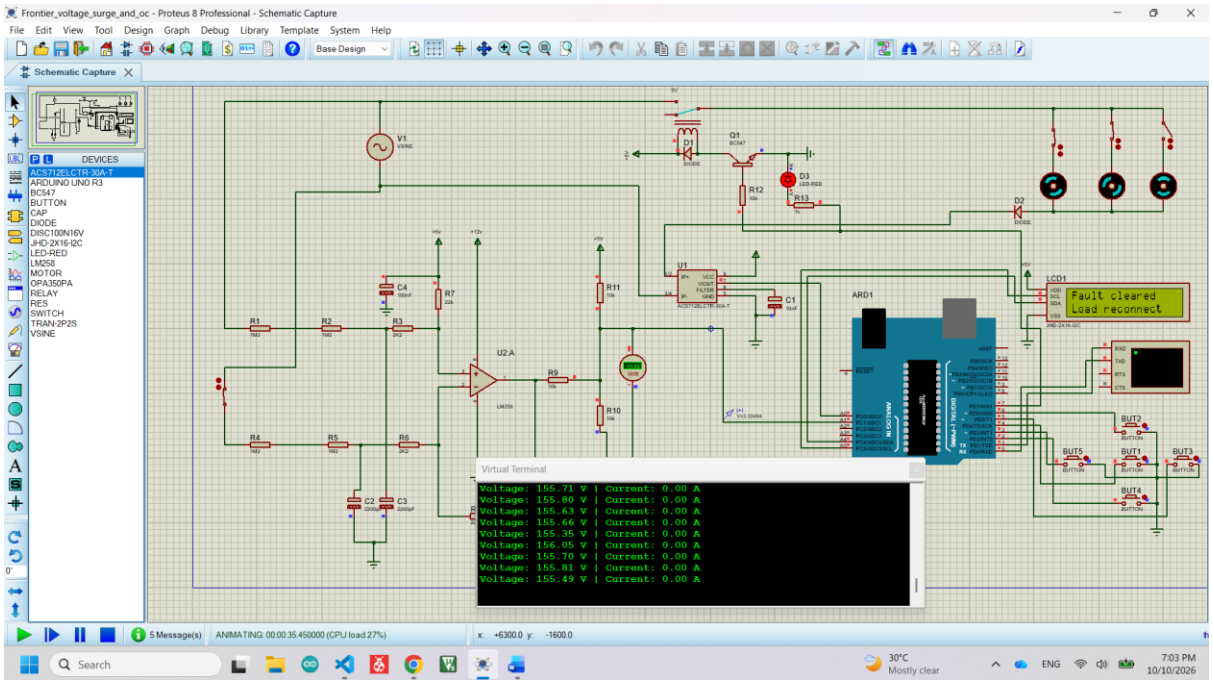


Figure 6. Fault reset andLoad Reconnected due to 5S press of any button.

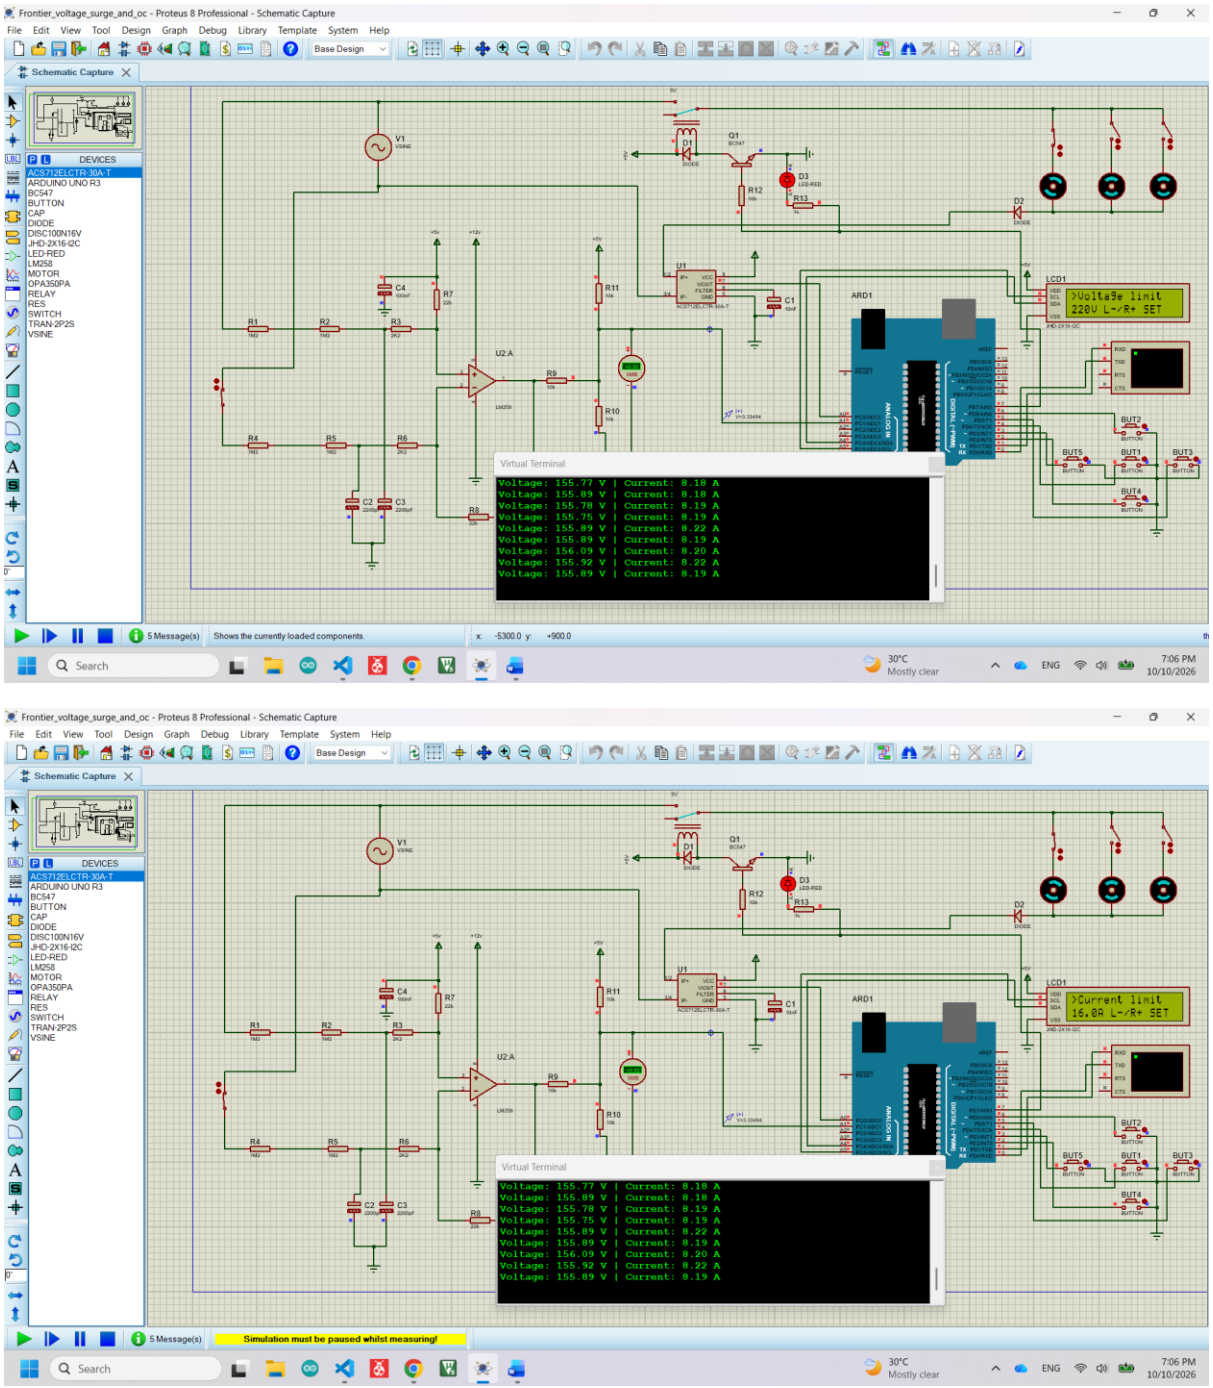


Figure 7. Menu settings due to 5S press of any button when it is in normal operation.