
Cancel

To correct an error or change a selection, scan the bar code below.




Cancel


Modes of Operation (continued)

- **Parameter Batch Mode** - When Parameter Batch Mode is enabled, the digital scanner stores parameter bar code data intended for the cradle. When the digital scanner is inserted into a cradle, the batched parameter data is sent over the cradle contacts, and the mode is disabled. This may be needed when the cradle and/or digital scanner is configured with its radio turned off.

If a bar code is scanned while batch data is transmitted it is appended to the end of the batched data; parameter bar codes are not stored.




***Normal**
(00h)




Out of Range Batch Mode
(01h)



Standard Batch Mode
(02h)




Cradle Contact Batch Mode
(03h)

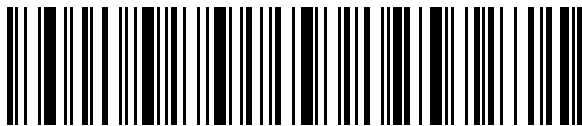


Enter Batch Mode

Modes of Operation (continued)

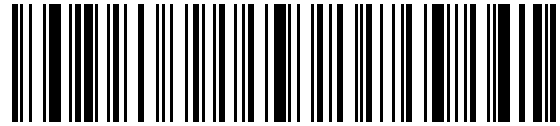

Send Batch Data

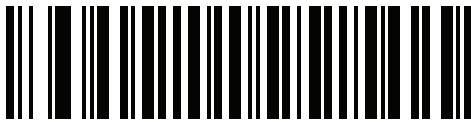

Batch Only Mode



Enter Parameter Batch Mode



Exit Parameter Batch Mode

Persistent Batch Storage


Parameter #1399

SSI # F8h 05h 77h


When the digital scanner is configured for Persistent Batch Storage, batch data is stored in non-volatile memory and preserved even when the digital scanner is powered down. This parameter is Disabled by default.



NOTE Frequently storing batch data with this setting *Enabled* will shorten the life of the non-volatile memory.



* Persistent Batch Disable
(0)

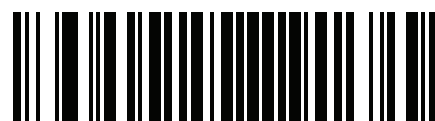

Persistent Batch Enable
(1)